




Martens Solar Lamp Post & Planter Instruction Manual

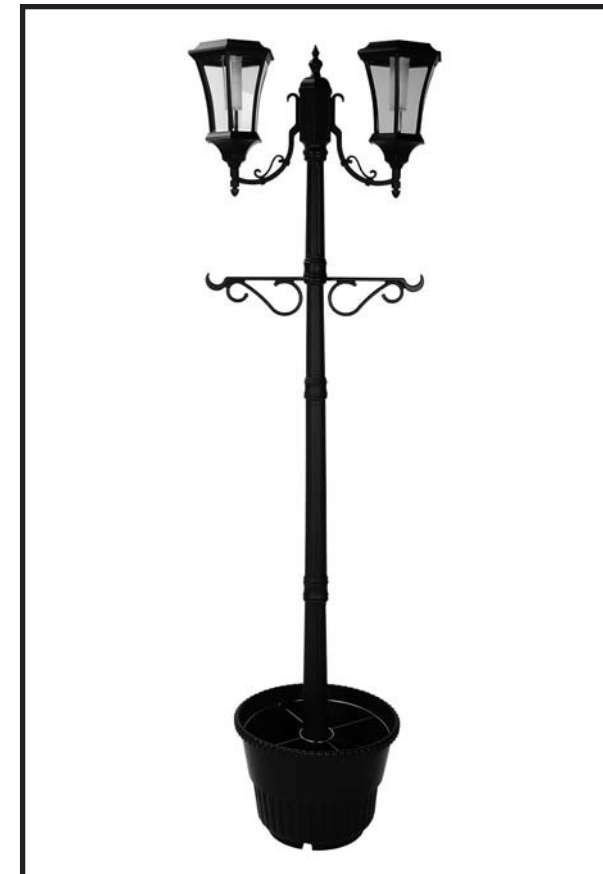

Model No. 302007

Limited Warranty

World Factory Inc. Products for Home Use

World Factory, Inc. (Seller) warrants to the original Buyer only, that this Sunergy Product will be free from defects in material and workmanship for a period of one (1) year from date of purchase. SELLER'S SOLE OBLIGATION AND BUYER'S EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE THE REPAIR OR REPLACEMENT OF PARTS, WITHOUT CHARGE, WHICH ARE DEFECTIVE IN MATERIAL OR WORKMANSHIP. ANY PARTS AS DETERMINED BY THE SELLER WHICH HAVE BEEN MISUSED; ABUSED OR DAMAGED EITHER DIRECTLY OR INDIRECTLY FROM REPAIRS OR ALTERATIONS ATTEMPTED BY UNAUTHORIZED PERSONS; IMPROPER MAINTENANCE, NEGLIGENCE OR ACCIDENT ARE NOT COVERED BY THIS LIMITED WARRANTY. This warranty does not apply to damage, heat-induced coloration changes, scratching or alteration due to normal use or weathering. To make a claim under this Limited Warranty, you must return the complete product with proof of purchase, transportation prepaid, to any World Factory, Inc. authorized service center. Call 1-888-422-7800 or visit: ezreplacement.com for the location of the nearest authorized service center.

Additional Limitations

THIS LIMITED WARRANTY DOES NOT APPLY TO ACCESSORY OR CONSUMABLE ITEMS, INCLUDING BATTERIES, RELATED TO THIS PRODUCT. ALL IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE (1) YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS, ARISING FROM THE SALE OR USE OF THIS PRODUCT.

If any provision of this Limited Warranty is for any reason held to be invalid or unenforceable, such provision shall not affect any other provision herein, this Limited Warranty shall be construed as if such invalid and/or unenforceable provision had never been contained herein.

This warranty gives you special legal rights, and you may also have other rights which vary from state to state.

This Warranty contains the entire agreement between Seller and Buyer and supersedes any and all prior agreements, arrangements, or understandings between the parties relating to product warranty.

Due to ongoing product development
the actual product or products may vary from
the illustrations or photos shown within this manual.

For Manuals, Replacement Parts or Customer Service visit:
www.ezreplacement.com



NOTE: This product is intended for residential, non-commercial use.

WARNING

This product can expose you to lead, a chemical known to the state of California to cause cancer, birth defects and/or other reproductive harm.
For more information go to www.p65warnings.ca.gov/product

Made in China

©2018 J&JGlobal, LLC

Distributed by:

J&J Global, LLC

Carrollton, TX 75006

Read the instructions and precautions before use of this product

Please keep this instruction manual for future reference

For warranty information, please refer to the back page of
this instruction manual.

PARTS & HARDWARE LIST

PART #	DESCRIPTION	QUANTITY
A	Lantern Head	2
B	Metal Hanger	1
C	Upper Post	2
D	Middle Post	1
E	Lower Post	1
F	Planter Base Support Ring	1
G	Lamp Post Base	1
H	Upper Planter	1
I	Bottom Planter Base	1
J	Screw	3
K	Flat Washer	3
L	Hex Nut	3
M	Acorn Nuts	3
N	Hex Bolt	3
O	J Bolt	3
P	Mounting Plate	1

Care Instructions

1. Clean any dirt and debris from the solar panels. the panels cannot recharge if light is obstructed. Use a soft cloth to clean the panels. Do not use abrasives or chemicals that might scratch or damage the UV coating.
2. In a region where snow and ice are likely, and the light assembly is covered with snow for an extended period of time the batteries will require recharge for at least 8 hours.

Recycling

Please dispose of batteries properly.
Consult your local telephone listings for a battery recycling center in your area.



Ambient temperature
maximum 40°C (105°F)



Do not dispose of
batteries in
household waste



Do not throw
batteries into water




Protect batteries
against heat and fire
risk of explosion



Recycling

Parts Detail

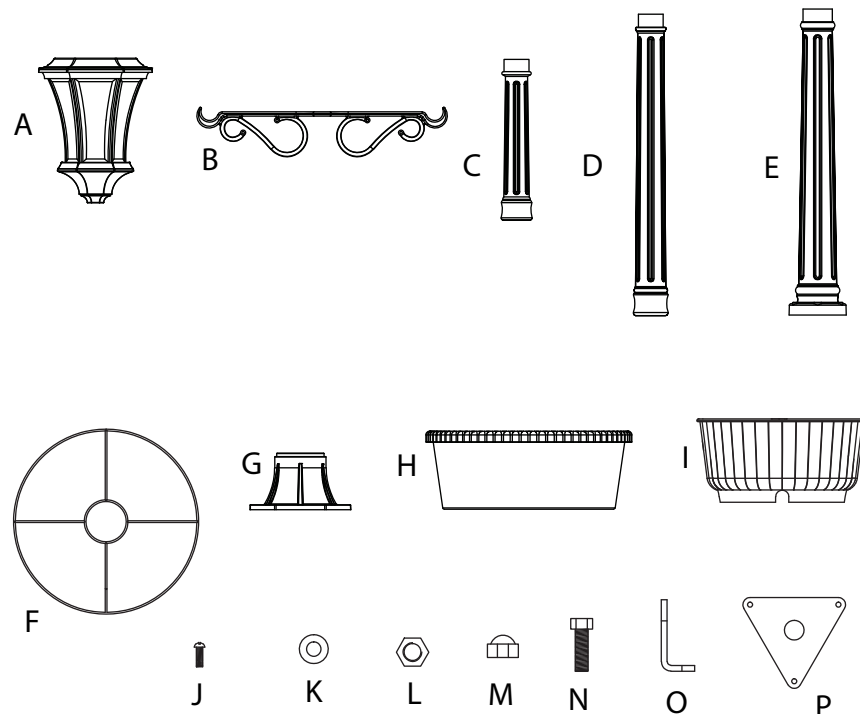


Carefully remove the contents from the package. If any parts are missing do not attempt to use the product until they have been obtained and correctly installed.

Battery Replacement

NOTE: The batteries in your solar lantern come preinstalled from the factory.

1. (SEE FIGURE 7) Remove the screws from the top of the lantern head (A). Battery compartment is located under the top of the lantern head.
2. Carefully lift the lantern top off the housing.
3. Remove old batteries.
4. Replace old batteries with new ones of the same rating. Reference polarity direction inside battery compartment.
5. Replace the solar panel on the housing and secure with screws retained from step 1.
6. The rechargeable batteries need to be fully charged before operating light assembly. See "Operating Solar Light" to restore solar light assembly to full operation.

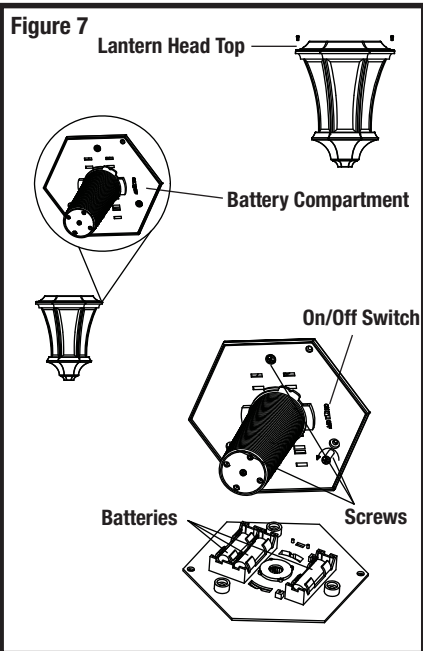

OPERATING SOLAR LIGHT

Instructions For First Time Use

Allow lantern to charge for at least 8 hours in full sunlight with the ON/OFF switch in the OFF position. The ON/OFF switch is located under the solar panel (See Figure 7, page 5). Once the batteries are fully charged, set the ON/OFF switch to ON. If the lantern doesn't turn on after initial charging, ensure batteries are making contact with the terminals.


Where To Place the Solar Light

Place the solar light in an area where it will receive direct sunlight for at least 8 hours per day. The number of hours light is illuminated is directly proportional to the number of hours of sunlight it receives. If the light is placed in a shaded area, it will not be able to fully charge and its burn time will be limited. Do not place the light near other outdoor lighting like porch or streetlights. These may fool the sensor and keep the light from coming on, or cause it to turn off automatically.

ASSEMBLY INSTRUCTIONS

Lantern Assembly

1. (SEE FIGURE 1) Thread lantern head (A) onto lantern bracket (B) and turn clockwise to tighten.
2. Repeat with the other lantern head (A).


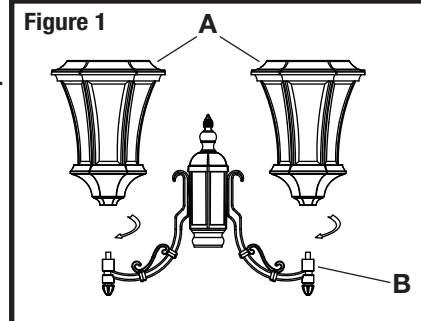


Planter Base Assembly

Note: If using ground mounting instead of planter base mounting refer to "Ground Mounting" on page 3.

1. (SEE FIGURE 2) Attach lamp post base (G) to bottom planter (I) using hex bolts (O), mounting plate (Q), flat washer (L), and hex nut (M). Make sure the mounting plate, flat washer and hex nut are secured to the hex bolt on the underside of the bottom planter base (I).
2. (SEE FIGURE 3) Attach the upper planter (H) to the bottom planter base (I) by lining up the 4 tabs and pulling the top planter base up until tabs snap into place. Turn the upper planter clockwise to lock the tabs into place.


Note: It may be necessary to put pressure on the bottom planter base when pulling the top planter base up and turning.

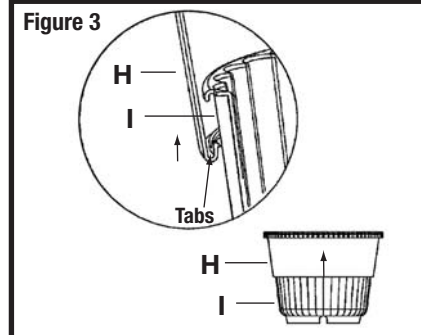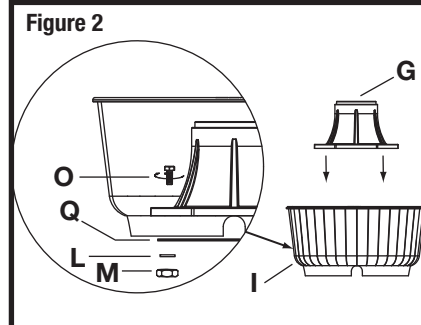

Support Ring Assembly


1. (SEE FIGURE 4) Attach lower post (E) to post base (G) using screws (K) in 3 places. Lower the support ring (J) down the post until it rests on the top of the upper planter (H). To complete the solar lamp post with planter go to "Lamp Post Assembly" steps 2, 3 and 4 on page 4.

⚠ CAUTION: To prevent product damage or personal injury from tip-over, lamp post planter base must be placed on a flat, level surface and be filled with 4 in. (minimum of 20 lbs.) of gravel or stone.

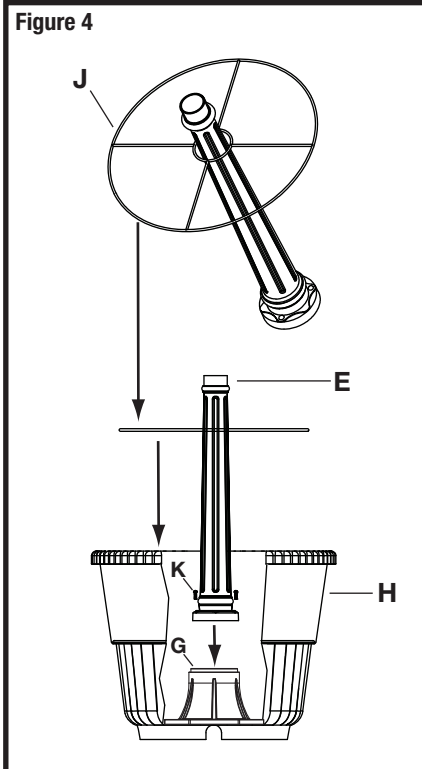

Alternate Ground Mounting

1. (SEE FIGURE 5) Thread hex nut (M) onto the J-bolt (P). Make sure the hex nut is threaded down the J-bolt far enough for the top of the J-bolt to fit through the mounting plate (Q) and the lamp post base (G) with enough threads to secure the base to the J-bolts with acorn nuts (N). Repeat the step for other J-bolts.
 2. Using the mounting plate (Q) as a guide insert the J-bolts with hex nuts into a wet concrete pad until the hex nuts are below pad level.
 3. Place the mounting plate (Q) onto the J-bolts forming a mounting bracket.
 4. Align the lamp post base (G) holes with the J-bolts and secure with the acorn nuts (N).
- Note: Refer to "Lamp Post Assembly" on page 4.

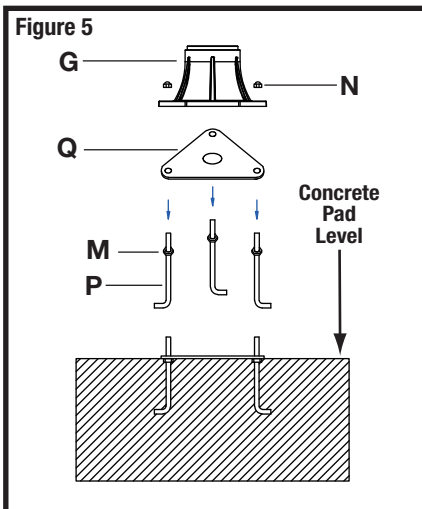

Lamp Post Assembly

1. (SEE FIGURE 6) Attach lower post (E) to lamp post base (G) using 3 screw (K) if you have not already done so in "Support Ring Assembly" on page 3.
2. Attach the middle post (D) to the lower post (E) turnimng clockwise.
3. Attach the upper post (C) to the middle post (D), turning clockwise.
4. Place the plant hanger (F) on the upper post (C). Attach the second upper post (C) to the first upper post, turning clockwise.
5. Attach the lantern assembly (B) to the upper post (C), turning clockwise.

⚠ CAUTION: Balance weight on the plant hanger, by adding weight to both ends to avoid putting stress on the piece. Suggested maximum weight on the hanger is approximately 15 total pounds.

