

Limited Warranty

J & J Global, LLC (Seller) warrants to the original Buyer only, that each product will be free from defects in material and workmanship for a period of one (1) year from date of purchase. SELLER'S SOLE OBLIGATION AND BUYER'S EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE THE REPAIR OR REPLACEMENT OF PARTS, WITHOUT CHARGE, WHICH ARE DEFECTIVE IN MATERIAL OR WORKMANSHIP. ANY PARTS AS DETERMINED BY THE SELLER WHICH HAVE BEEN MISUSED; ABUSED OR DAMAGED EITHER DIRECTLY OR INDIRECTLY FROM REPAIRS OR ALTERATIONS ATTEMPTED BY UNAUTHORIZED PERSON; IMPROPER MAINTENANCE, NEGLIGENCE OR ACCIDENT ARE NOT COVERED BY THIS LIMITED WARRANTY. This warranty does not apply to damage, heat-induced coloration changes, scratching or alteration due to normal use or weathering. To make a claim under this Limited Warranty, email contact@ezreplacement.com or visit www.ezreplacement.com for warranty questions and claims.

Additional Limitations

THIS LIMITED WARRANTY DOES NOT APPLY TO ACCESSORY OR CONSUMABLE ITEMS RELATED TO THIS PRODUCT. ALL IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE (1) YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS, ARISING FROM THE SALE OR USE OF THIS PRODUCT.

If any provision of this Limited Warranty is for any reason held to be invalid or unenforceable, such provision shall not affect any other provision herein, this Limited Warranty shall be construed as if such invalid and/or unenforceable provision had never been contained herein.

This warranty gives you special legal rights, and you may also have other rights which vary from state to state.

This warranty contains the entire agreement between Seller and Buyer and supercedes any and all prior agreements, arrangements, or understandings between the parties relating to product warranty.

Due to ongoing product development the actual product or products may vary from the illustrations or photos shown within this manual.

**For Manuals, Replacement Parts or Customer Service visit:
www.ezreplacement.com**

This product is intended for residential, non-commercial use.


WARNING

This product can expose you to lead, a chemical known to the state of California to cause cancer, birth defects and/or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MADE IN CHINA
©2020 J & J Global, LLC
Distributed By:
J & J Global, LLC
Irving, TX 75038



Customer Service Made EZ!

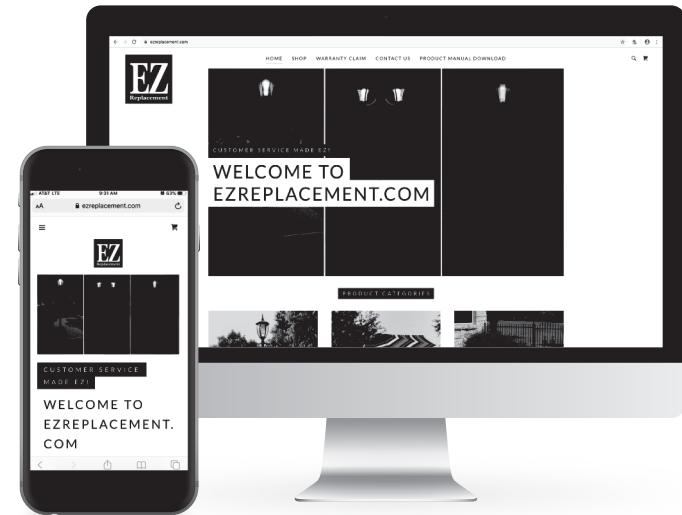

- User Friendly Interface
- Download Product Manuals
- Email your questions or concerns
- File Warranty Claim
- Follow-up within 24 Hrs
- Parts Ship within 48 Hrs.



Parts distribution made from our Carrollton, TX warehouse facility

ATTENTION!

**Please do not return this product to the retailer.
If you are missing or have damaged parts please email
contact@ezreplacement.com Or Call 877-477-2264**



REAL WORK BACKPACK SPRAYER

SKU: 307004G



Read the instructions and precautions before use of this product

Please keep this instruction manual for future reference

For warranty information, please refer to the back page of this instruction manual.

General Safety Rules

1. Always wear protective clothing, gloves, eye protection and respirator.
2. Always point nozzle in a safe direction.
3. Always release pressure and clean sprayer after use and before storage.
4. Never open bottle until pressure has been released
5. Do not put face or body over pump or pressure release valve when operating pump or valve.
6. Follow manufacturers' instructions for mixing, storage and safe disposal of product being used.
7. Use with Agricultural chemicals only. Do not use flammable, caustic or corrosive solutions.
8. Do not use in windy conditions
9. Keep out of reach of children.

 Read and understand all instructions. Failure to follow all instructions listed below may result in serious personal injury.


7

Spraying

To start spraying, depress the trigger lever (A) on the spray wand handle.

To stop spraying, release the trigger lever.


For continuous operation, depress the trigger lever and slide the thumb button (B) backward to lock-on position. The sprayer will continue to operate until the thumb button is pushed forward and released.

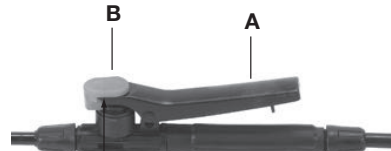

8

RealWork sprayer is supplied with multiple spray nozzles providing a variety of spray patterns for different applications:

Single Conical Spray = A
 Double Conical Spray = B
 Flat Spray = C
 4 Hole Adjustable = D

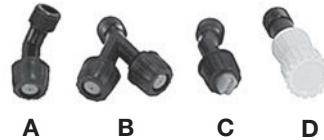

Name/Pattern	Flow Rate GPM	Adjustment	Application
Single Conical Spray	.184 ~ .224	N/A	Multi purpose plants, shrubs and crops at short range
Double Conical Spray	.343 ~ .423	N/A	Wide angle plants, shrubs and crops at short range
Flat Spray	.132 ~ .158	Rotation	Low to medium plants and crops at short range
4 Hole Adjustable	.158 ~ .264	Jet thru Fine Mist	Trees, shrubs & bushes at spot & longer range

Maintenance And Storage

1. Empty unused chemical products from tank. Operate pump with the trigger depressed to purge any residual product from pump, hose and wand. Dispose of chemicals and waste water in accordance to the chemical product manufacturer's instructions.

2. Rinse tank with water to remove chemical residue. Refill with several quarts of clean water.

3. Using the clean water, operate pump with the trigger depressed to rinse the pump, hose, wand and nozzle. Repeat steps 1 to 3 until clean.

Note.: Mild soap and water may be used if necessary.

4. Allow all parts to dry before storage. Store sprayer in a dry area out of the reach of children.


5. Periodically, lubricate pump the pump seals and other moving parts with petroleum jelly or water proof grease.

Package Contents

A

Tank & Pump Assembly


x1

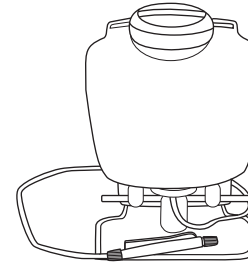

B

Pump Handle


x1

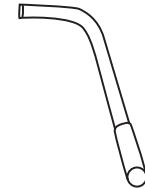

C

Sprayer Wand

 
x1

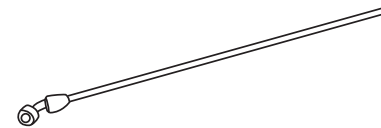

D

Double Conical Spray Nozzle

 x1



E

Flat Spray Nozzle

 
x1



F

4 Hole Adjustable Nozzle


x1



G

Shoulder Strap

 x2

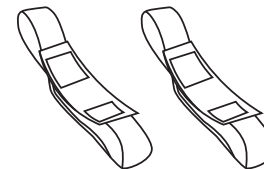


1

Attach the Wand

Rotate wand nut (A) counter clockwise to loosen.

Insert the wand shaft (B) through the nut (A), collet (C), O-ring (D) and into the handle (E) until it bottoms.

Rotate wand nut clockwise to secure wand.

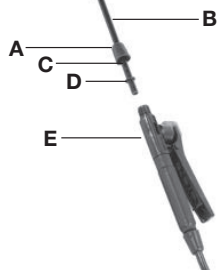


4

Shoulder Strap Installation

Hook strap buckle (A) to the lower outside edge of tank frame (B).

Adjust strap length by sliding adjusting buckle (C) as necessary.

Slide should pads (D) to the desired location.

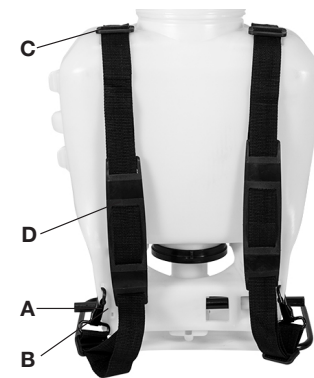


2

Attaching & Changing Nozzles

Rotate nozzle nut (A) counter clockwise to loosen.

Slide the nozzle connector (B) over the wand shaft (C) until it bottoms.

Rotate the nozzle to the desired angle and secure with nozzle nut (A).

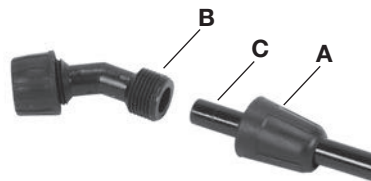

5

Filling the Tank

In a separate container, mix chemical product according to the manufacturer's instruction for use in a pressure sprayer.


Rotate tank cap (A) counterclockwise to loosen. Remove the cap.

Pour chemical mixture through strainer in the tank opening to fill tank.

Replace tank cap, rotate clockwise to tighten.

CAUTION: Water soluble powders must be thoroughly dissolved into solution to avoid damage to pump. Clean thoroughly and lubricated sprayer after using these products.

CAUTION: Do not exceed "Max Fill" line on the tank.

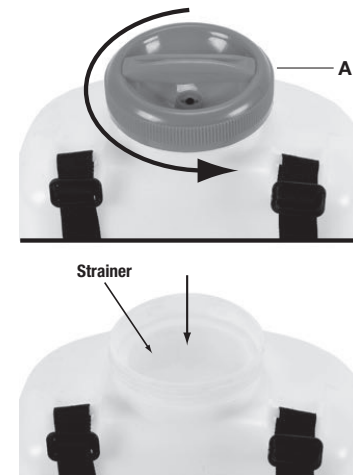


3

Pump Handle Installation

Slide the pump handle (A) over the pump shaft (B) at the desired angle.

CAUTION: Pump handle is a slip fit on the pump shaft and may be installed on the left or right sides of the sprayer and indexed different angles to suite the user.

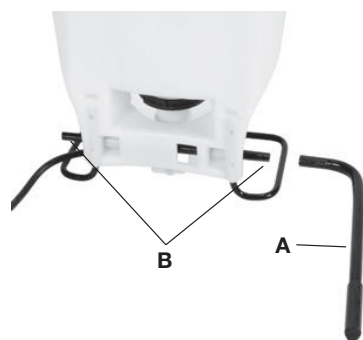

6

Pressurize the Tank

Prime the pressure chamber with liquid by pumping the handle (A) up and down slowly until resistance is felt.

Continue pumping the handle up and down, to pressurize the air in the chamber, until the handle stops or a very firm resistance is felt.

3. Pump handle occasionally during operation to maintain an adequate spray pattern and uniform material delivery.

