

Limited Warranty

J & J Global, LLC (Seller) warrants to the original Buyer only, that each product will be free from defects in material and workmanship for a period of one (1) year from date of purchase. SELLER'S SOLE OBLIGATION AND BUYER'S EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE THE REPAIR OR REPLACEMENT OF PARTS, WITHOUT CHARGE, WHICH ARE DEFECTIVE IN MATERIAL OR WORKMANSHIP. ANY PARTS AS DETERMINED BY THE SELLER WHICH HAVE BEEN MISUSED; ABUSED OR DAMAGED EITHER DIRECTLY OR INDIRECTLY FROM REPAIRS OR ALTERATIONS ATTEMPTED BY UNAUTHORIZED PERSON; IMPROPER MAINTENANCE, NEGLIGENCE OR ACCIDENT ARE NOT COVERED BY THIS LIMITED WARRANTY. This warranty does not apply to damage, heat-induced coloration changes, scratching or alteration due to normal use or weathering. To make a claim under this Limited Warranty, email contact@ezreplacement.com or visit www.ezreplacement.com for warranty questions and claims.

Additional Limitations

THIS LIMITED WARRANTY DOES NOT APPLY TO ACCESSORY OR CONSUMABLE ITEMS RELATED TO THIS PRODUCT. ALL IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE (1) YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS, ARISING FROM THE SALE OR USE OF THIS PRODUCT.

If any provision of this Limited Warranty is for any reason held to be invalid or unenforceable, such provision shall not affect any other provision herein, this Limited Warranty shall be construed as if such invalid and/or unenforceable provision had never been contained herein.

This warranty gives you special legal rights, and you may also have other rights which vary from state to state.

This warranty contains the entire agreement between Seller and Buyer and supercedes any and all prior agreements, arrangements, or understandings between the parties relating to product warranty.

Due to ongoing product development the actual product or products may vary from the illustrations or photos shown within this manual.

 
For Manuals, Replacement Parts or Customer Service visit:
www.ezreplacement.com

This product is intended for residential, non-commercial use.

⚠ WARNING

This product can expose you to lead, a chemical known to the state of California to cause cancer, birth defects and/or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MADE IN CHINA
©2020 J & J Global, LLC
Distributed By:
J & J Global, LLC
Irving, TX 75038

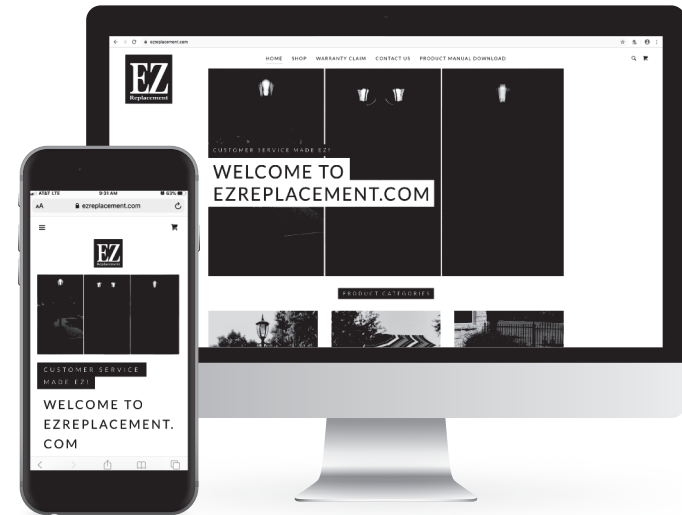

- User Friendly Interface
- Download Product Manuals
- Email your questions or concerns
- File Warranty Claim
- Follow-up within 24 Hrs
- Parts Ship within 48 Hrs.



Parts distribution made from our Carrollton, TX warehouse facility

ATTENTION!

Please do not return this product to the retailer.
If you are missing or have damaged parts please email
contact@ezreplacement.com Or Call 877-477-2264



REAL WORK 2 Gallon Sprayer

SKU: 307017



Read the instructions and precautions before use of this product

Please keep this instruction manual for future reference

For warranty information, please refer to the back page of this instruction manual.

General Safety Rules

1. Always wear protective clothing, gloves, eye protection and respirator.
2. Always point nozzle in a safe direction.
3. Always release pressure and clean sprayer after use and before storage.
4. Never open bottle until pressure has been released
5. Do not put face or body over pump or pressure release valve when operating pump or valve.
6. Follow manufacturers' instructions for mixing, storage and safe disposal of product being used.
7. Use with Agricultural chemicals only. Do not use flammable, caustic or corrosive solutions.
8. Do not use in windy conditions
9. Keep out of reach of children.

Warning:

- Always wear protective clothing, gloves, eye protection and respirator.
- Always point nozzle in a safe direction.
- Always release pressure and clean sprayer after use and before storage.
- Follow manufacturers' instructions for mixing, storage and safe disposal of product being used.
- Use with Agricultural chemicals only.
- Do NOT use in windy conditions.



Read and understand all instructions. Failure to follow all instructions listed below may result in serious personal injury.

Maintenance And Storage

 
1. Empty and clean tank, pump and wand after each use with mild soap and water. Spray soap and water solution through nozzle, hose and controller to remove all traces of chemicals.
2. Rinse thoroughly inside and out with clean water. Spray clean water through nozzle, hose and controller.
3. Allow all parts to dry before storage. Store sprayer in a dry area out of reach of children.
4. Once a year, lubricate pump O-ring with petroleum jelly or water proof grease.

Package Contents

A

Tank & Pump Assembly


x1

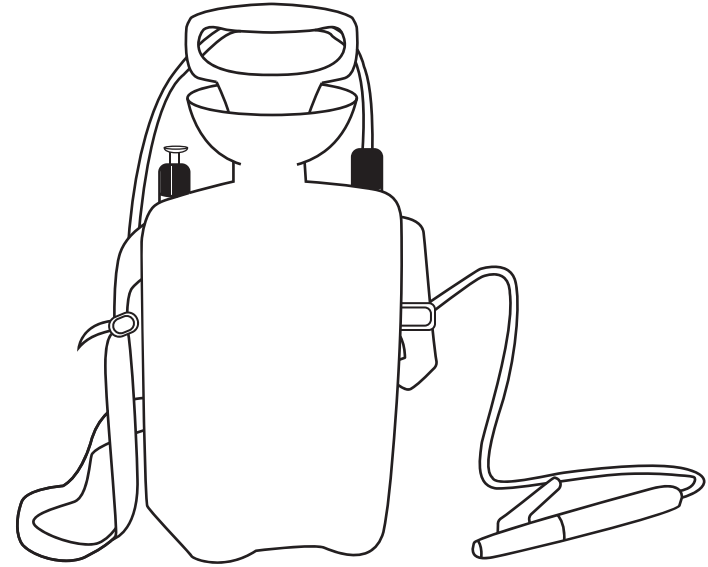

B

Sprayer Wand

 x1

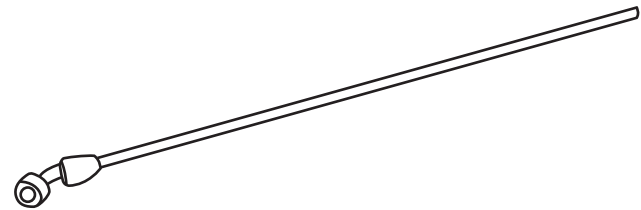


1

Attach the Wand

Rotate wand nut (A) counter clockwise to loosen.

Insert the wand shaft (B) through the nut (A), collet (C), O-ring (D) and into the handle (E) until it bottoms.

 Rotate wand nut clockwise to secure wand.

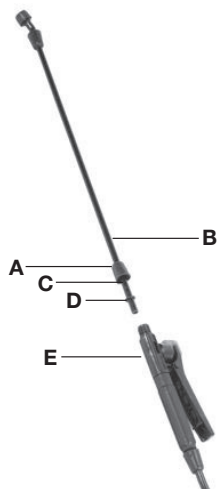


4

Spraying

1. To start spraying, depress the thumb lever (A) on the controller.

2. To stop spraying, release the thumb lever.

 3. For continuous operation, depress and slide the thumb lever forward to lock-on position. The sprayer will continue to operate until thumb lever is pulled backward and released.

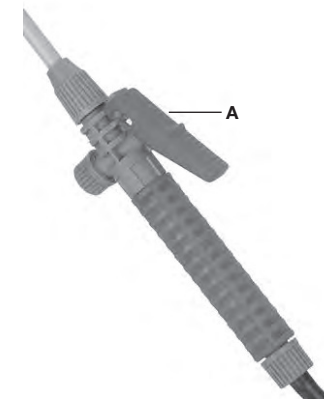

2

Operation

Filling The Tank

1. With the pump handle (A) in the down position, rotate counterclockwise to loosen. Remove the pump.

Warning: Do not open bottle until pressure has been released.

2. Fill tank according to the manufacturer's instruction for the chemical being used.

Caution: Do not exceed "Max Fill" line.

3. Replace the pump. Rotate handle clockwise to tighten.

 


5

Nozzle Adjustment

1. To adjust the spray pattern, rotate the nozzle (A):
Clockwise = Jet Counterclockwise = Fine Mist

CAUTION: Do not adjust the nozzle with the thumb lever depressed. Do not unscrew the nozzle completely.

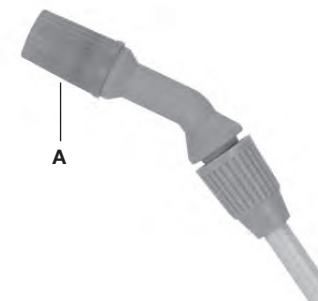

3

Pump Handle Installation

1. To release the pump, rotate handle (A) to the central "unlock" position and lift up.

Note: use caution not to loosen the pump from the tank.

2. Pump the handle up and down approximately 20-30 times to pressurize the tank.

3. Lower the pump handle and rotate to the "locked" position.



6

Pressure Release

1. To Release pressure, lift up on the top of the pressure release valve (A).

