Limited Warranty

J & J Global, LLC (Seller) warrants to the original Buyer only, that each product will be free from defects in material and workmanship for a period of one (1) year from date of purchase. SELLER'S SOLE OBLIGATION AND BUYER'S EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE THE REPAIR OR REPLACEMENT OF PARTS, WITHOUT CHARGE, WHICH ARE DEFECTIVE IN MATERIAL OR WORKMANSHIP. ANY PARTS AS DETERMINED BY THE SELLER WHICH HAVE BEEN MISUSED; ABUSED OR DAMAGED EITHER DIRECTLY OR INDIRECTLY FROM REPAIRS OR ALTERATIONS ATTEMPTED BY UNAUTHORIZED PERSON; IMPROPER MAINTENANCE, NEGLECT OR ACCIDENT ARE NOT COVERED BY THIS LIMITED WARRANTY. This warranty does not apply to damage, heat-induced coloration changes, scratching or alteration due to normal use or weathering. To make a claim under this Limited Warranty, email contact@ezreplacement.com or visit www.ezreplacement.com for warranty questions and claims.

Additional Limitations

THIS LIMITED WARRANTY DOES NOT APPLY TO ACCESSORY OR CONSUMABLE ITEMS RELATED TO THIS PRODUCT. ALL IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE (1) YEAR FROM DATE OF PURCHASE. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS, ARISING FROM THE SALE OR USE OF THIS PRODUCT.

If any provision of this Limited Warranty is for any reason held to be invalid or unenforceable, such provision shall not affect any other provision herein, this Limited Warranty shall be construed as if such invalid and/or unenforceable provision had never been contained herein.

This warranty gives you special legal rights, and you may also have other rights which vary from state to state.

This warranty contains the entire agreement between Seller and Buyer and supercedes any and all prior agreements, arrangements, or understandings between the parties relating to product warranty.

Due to ongoing product development the actual product or products may vary from the illustrations or photos shown within this manual.

For Manuals, Replacement Parts or Customer Service visit: www.ezreplacement.com



This product is intended for residential, non-commercial use.

WARNING

This product can expose you to lead, a chemical known to the state of California to cause cancer, birth defects and/or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MADE IN CHINA

©2018 J & J Global, LLC Distributed By: J & J Global, LLC Carrollton, TX 75006




Biometric Safe Instruction Manual



Model No. 401010, 401012

Read the instructions and precautions before use of this product

For warranty information, please refer to the back page.		
Do Not Return This Product to Retailer Visit Ezreplacement.com or Contact 903.851.1498		
○ Defective	O Did Not Like Product	Other
Not as Described	O Incorrect Color	

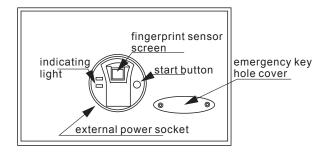

Open the safe for first time

Remove the emergency key hole cover, insert emergency key and turn it right to end, then can open the safe. Take out the emergency key and close the cover, the safe is still locked.

Install batteries

Remove the battery box cover at the backside of door and install batteries properly (The system powdered by 4xAA batteries). Then close battery box cover. The safe box is still locked now. To press the start button, the fingerprint sensor flashes in red (for 5 seconds), please place your finger on the sensor immediately (Note: At initial state, any finger can open the safe). The green light turns on, the safe will open automatically.

Input personal fingerprint


When opening, please press the red reset button at the right backside of door, then the fingerprint sensor screen will flashes in red. Please put the finger on the sensor immediately. If the buzzer sounds a beep and green light turns on, it mean the first time fingerprint was accepted. Don't move away the finger, the buzzer will sounds two beeps. If the green light turns off, it means the personal fingerprint is accepted successfully. This system can collect 120 different fingerprints and input fingerprint is same as above step.

Close the safe

When unlocked, please close the door and press the start button. The green light turns on, the safe will locked automatically.

Open the safe by personal fingerprint

Press the start button, the fingerprint sensor screen will flash in red. Please put the finger on the sensor timely (At initial state, any finger can open the safe). When green light turns on, the safe will open automatically.

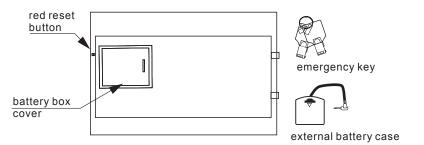

Low-battery warning

If press start button, the red light turns on and the buzzer alarms. It means the system is in low-battery status. Please change fresh batteries timely.

External battery case

When the safe is in low-battery status, you can use the external battery case to power and open the safe. The external power socket is located at the left fingerprint panel.

Emergency system

When system power off, please use emergency key to open the safe. Remove the emergency key hole cover, and insert the key into the hole and turn it to right to end to open the safe. (Note: Please always keep the emergency key outside the safe)

Resume initial state

When opening, please take off one of battery and press start button to release power. Hold on the red reset button firmly and install battery again. The buzzer sounds a beep, please don't loose hand. 5 seconds, the system sounds two beeps, the green light turns on, it means the system is resume initial state (Any fingerprint can open the safe).