

1. The extension conveyor can be stored flush to the side of the Mulch Mate, by locking the pin in the front most bracket on the conveyor.



2. If you want to use the Mulch Mate with a wheelbarrow and do not want to use the extension conveyor, you can slide the conveyor back further and lock it with the rear locking bracket in the hole at the back of the track system.



MULCH MATE®

Extension Conveyor Operators Manual

3. The extension conveyor can be used at the halfway pulled out position to add ~3ft of extra length for dispensing material from the side of the Mulch Mate.



4. Before fully pulling out the extension conveyor, attached the cam straps to the front bearing bracket hole



5. The extension conveyor can be pulled out to its max position as shown below. Make sure the pull pins are engaged and the cam straps are attached and tightened to keep the conveyor level and supported. This will add ~4.5ft of extra length for dispensing material from the side of the Mulch Mate.



6. From the fully pulled out position, the angle of the extension conveyor can be adjusted by lifting the conveyor and tightening the straps to the desired height. This can add up to 15" of extra height for dispensing material.

