



DIAGNOSTIC MODE 4400

GETTING TO 6 ICON SCREEN

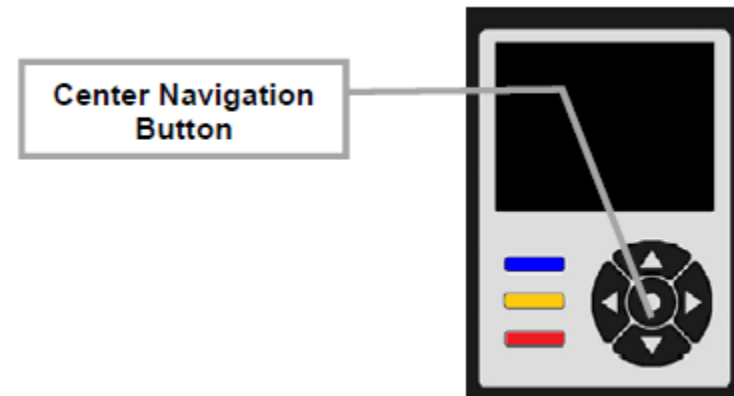

PUSH AND HOLD CENTER BUTTON FOR 5-8 SECONDS

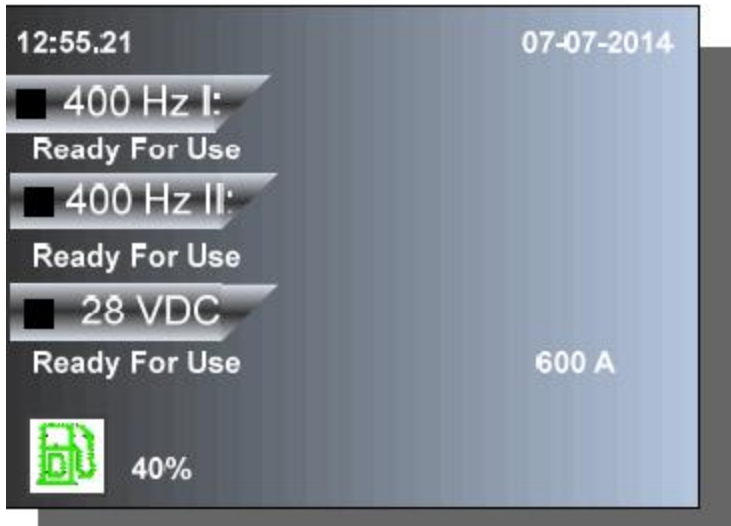


6 ICON SCREEN/ SET UP



1. USE ARROW KEYS TO SELECT THE SETUP ICON TOP RIGHT
2. PRESS CENTER BUTTON


Setup – Menu structure

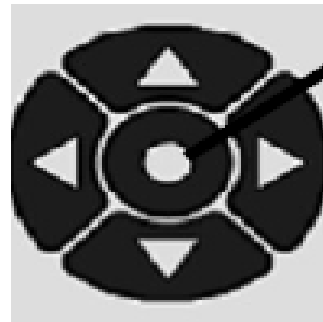

DIAGNOSTIC MODE




1. USE AROW KEY DOWN TO HIGHLIGHT DIAGNOSTIC MODE
2. PRESS CENTER BUTTON.

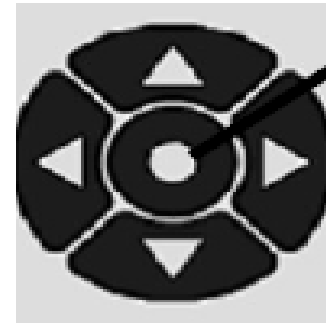

DIAGNOSTIC MODE



1. HIGHLIGHT DISABLED
2. USE THE ARROW KEY DOWN TO SELECT THE FUNCTION YOU WANT.
3. ONCE HIGHLIGHTED PRESS THE CENTER BUTTON
4. USE THE LEFT ARROW TO GOTO THE SIX ICON SCREEN

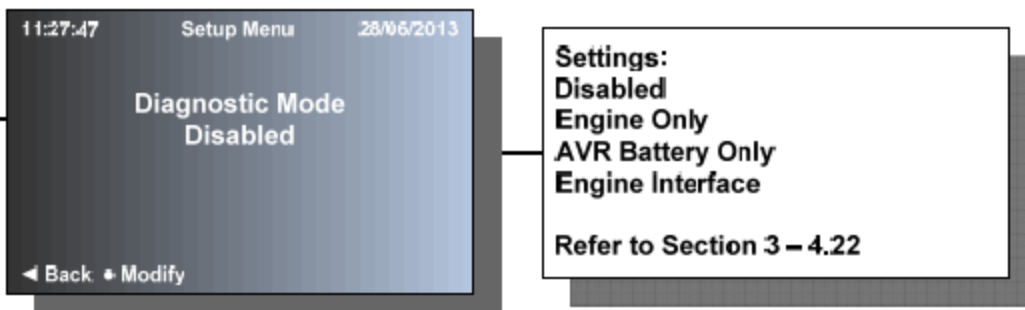

DISABLED: IS THE STANDARD SETTING:

ENGINE ONLY: WILL ONLY RUN THE ENGINE NO GENERATOR OUTPUT



AVR BATTER ONLY: WILL SUPPLY BATTERY VBOLTAGE TO GENERATOR

ENGINE INTERFACE: WILL SUPPLY BATTERY VOLTAGE TO THE ECM FOR USE WHEN USING CUMMINS SERVICE TOOLS.

GETTING TO 6 ICON SCREEN

1. USE ARROW KEYS TO SELECT THE HOME ICON TOP LEFT
2. PRESS CENTER BUTTON

Setup – Menu structure

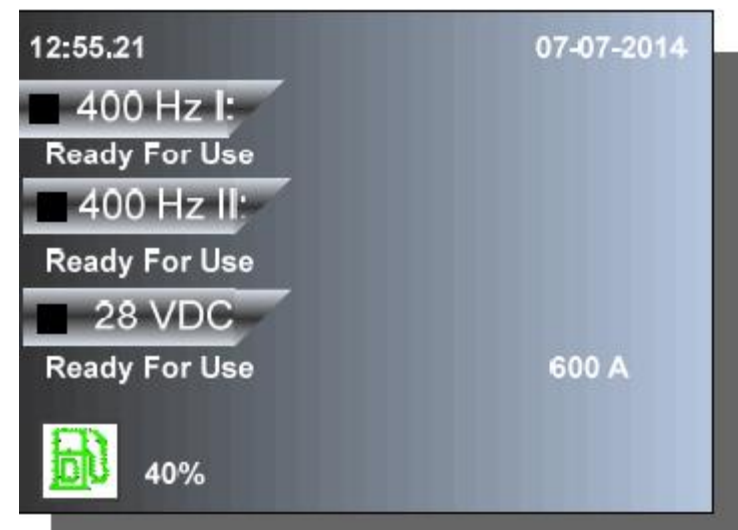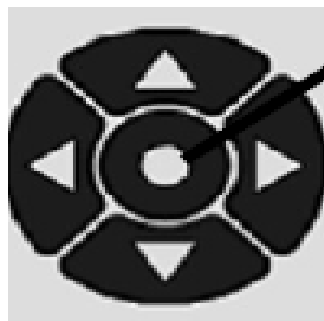

PRESS START BUTTON



PRESS START BUTTON TO START DIAGNOSTIC



WHEN FINISHED GOTO BACK TO DIAGNOSTIC MODE AND SELECT DISABLED