# Chapter 3 Illustrated Parts List Table of Contents

Section 1: Introduction	
1. Using the Parts List	
Section 2: Illustrated Parts List	3
Fig 3-2 Control Panel	5
Fig 3-4 Fuel Tank	6
Fig 3-5 Aircraft Adapter	
Fig 3-6 Coolant System	3
Fig 3-7 Exhaust System	
Section 3: List by Part Number	10
Section 4: List by Name	

#### **Section 1: Introduction**

#### 1. Using the Parts List

The parts list is divided into three sections: the first is a pictorial guide, which allows the user to find the desired part in the illustrations and read off the part number directly. The second section is an alphanumeric list sorted by part number, and the third is the same list sorted by name.

#### **Section 2: Illustrated Parts List**

Fig 3-1 Panels



October 2005 ©2005 Spencer Manufacturing



©2005 Spencer Manufacturing

Fig 3-2 Control Panel

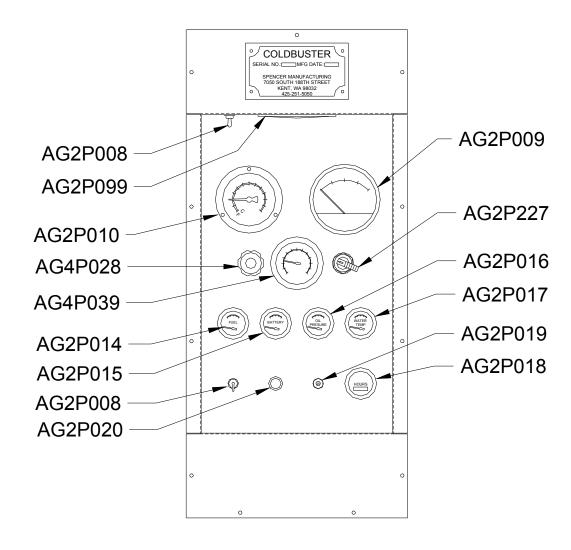
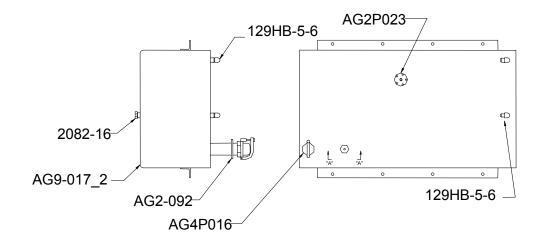


Fig 3-4 Fuel Tank



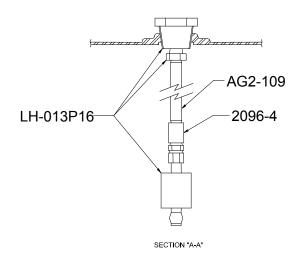


Fig 3-5 Aircraft Adapter



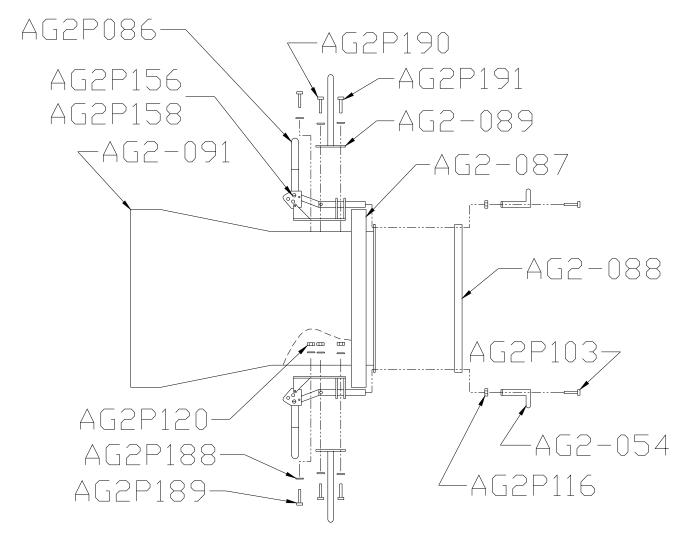


Fig 3-6 Coolant System

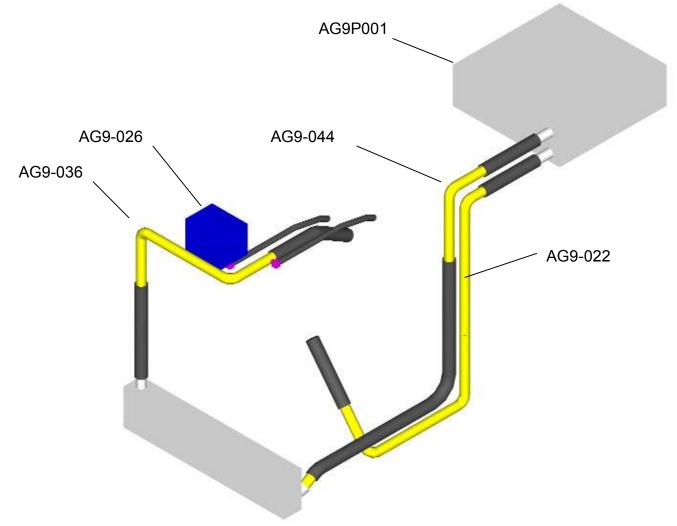

©2005 Spencer Manutacturing

Fig 3-7 Exhaust System

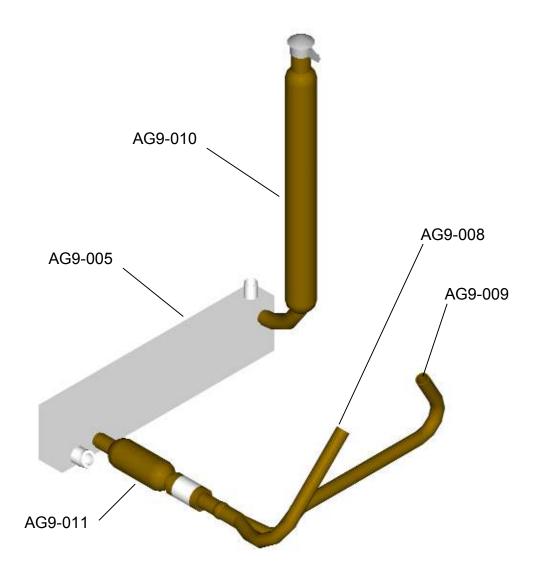

#### **Section 3: List by Part Number**

Part Number	Name
2021-2-4	Fitting, Adapter
2024-2-4	Adapter
129HB-5-6	Fitting, 90deg
AG10-040	Battery Tray
AG10-041	Plate, ECM Mount
AG10-048	Mount, Air Filter
AG10P003	Mount, Isolation
AG10P005	Latch, Door
AG10P008	Exhaust Clamp, 2"
AG2-006	Panel, Rear Top
AG2-007	Panel, Rear
AG2-008	Door, Rear
AG2-009	Door, Front Right Side
AG2-011	Panel, Upper Side
AG2-012	Panel, Side Louvered
AG2-013	Panel, Lower Side
AG2-016	Plate, Valve
AG2-018	Plate, Lower Air Chamber
AG2-027	Plate, Upper Air Chamber
AG2-031	Arm, Valve Plate
AG2-038	Blower Access Cover
AG2-043	Mount, Air Control Cable
AG2-054	"L" Hook
AG2-066	Door, Rear Side
AG2-067	Door, Front Left Side
AG2-070	Half-Nipple
AG2-080	I.D. Plate
AG2-087	Bumper, Adapter
AG2-088	Seal, Adapter
AG2-089	Handle, Adapter
AG2-091	Spinning, Adapter
AG2-092	Spill Ring, Fuel
AG2-107	Blower Wheel
AG2-109	Nipple, 1/4" NPTx6" Long
AG2-112	Filter Stop
AG2-114	Plate, PTO Cover
AG2-115	Duct Clamp (not shown)
AG2P008	Switch
AG2P009	Gauge, Pressure
AG2P010	Gauge, Temperature
AC2D012	Floobor

AG2P009	Gauge, Pressure
AG2P010	Gauge, Temperature
AG2P013	Flasher
AG2P014	Gauge, Fuel
AG2P015	Voltmeter
AG2P016	Gauge, Oil Pressure
AG2P017	Gauge, Water Temperature
AG2P018	Hour Meter

A C O D O 4 O	Oinsuit Danalus OFA
AG2P019	Circuit Breaker, 25A
AG2P020	Push Button, Momentary
AG2P022	Rod End
AG2P023	Sender, Fuel Level
AG2P026	Sender, Oil Pressure
AG2P027	Sender, Coolant Temp
AG2P029	Reflector, Red
AG2P030	Reflector, Amber
AG2P032	Bearing, Cam Roller
AG2P034	Air Delivery Duct, 12" x 20' Canvas with wire reinforcement
AG2P039	Bumper, Door
AG2P044	Undercarriage Assy
AG2P084	Filter, Air, High Velocity Metal
AG2P085	Seal, Door
AG2P086	Adapter Clamp Assembly
AG2P099	Panel Light
AG2P168	Clamp, muffler 21/2"
AG2P201	Decal, 15mph max
AG2P215	Hose, 5/8" Heater
AG2P219	Light, Interior
AG2P227	Switch, 4 Position Rotary
AG2P233	Rubber Boot, Toggle Switch
AG2P234	Terminal, Toggle Switch
AG2P235	Hose, 1/4"
AG2P238	Hose Insert
AG2P239	Paint, Fedex White
AG4-003	Panel, Center Top
AG4P008	Bushing, Taper Lock
AG4P012	Battery Box
AG4P013	Battery
AG4P016	Cap, Fuel Fill, Red
AG4P039	Tachometer
AG4P053	Reducer
AG9-005	Heat Exchanger, Exhaust
AG9-008	Exhaust Header, LH
AG9-009	Exhaust Header, RH
AG9-010	Muffler
AG9-011	Flex Connection
AG9-017 2	Fuel Tank
AG9-022	Tube, Coolant Return
AG9-026	Surge Tank
L	, ,
AG9-027	Panel, Front
AG9-030	Panel, Front Top
AG9-031	Flywheel
AG9-034	Adapter, Flywheel Cover
AG9-036	Tube, Coolant, Engine Outlet
AG9-038	Panel, Control
AG9-039	Panel, Fuel Fill
ACC 040	Llast Chiald Control Danal

Heat Shield, Control Panel

Guard, Fan

AG9-040

AG9-043

Elbow, Coolant Tube
Plate, Duct Chamber Top
Door, Right Front
Door, Left Front and Right Rear
Door, Rear
Heat Exchanger, Coolant
Drive Coupling
Plate, Cover
Filter, Air
Elbow, Air Intake
Tube, Air Intake
Clamp, 3" Band
Insert Adapter
Light, Warning
Relay
Hose, Coolant 1.5"
Hose, Coolant 1.75"
Sight Glass
Cable, Air Supply Control
Cable, 41" Battery
Cable, 66" Battery

#### **Section 4: List by Name**

Name	Part Number
"L" Hook	AG2-054
Adapter	129HB-5-6
Adapter Clamp Assembly	AG2P086
Adapter, Flywheel Cover	AG9-034
Air Delivery Duct, 12" x 20' Canvas with wire reinforcement	AG2P034
Arm, Valve Plate	AG2-031
Battery	AG4P013
Battery Box	AG4P012
Battery Tray	AG10-040
Bearing, Cam Roller	AG2P032
Blower Access Cover	AG2-038
Blower Wheel	AG2-107
Bumper, Adapter	AG2-087
Bumper, Door	AG2P039
Bushing, Taper Lock	AG4P008
Cable, 41" Battery	AG9P021
Cable, 66" Battery	AG9P022
Cable, Air Supply Control	AG9P020
Cap, Fuel Fill, Red	AG4P016
Circuit Breaker, 25A	AG2P019
Clamp, 3" Band	AG9P008
Clamp, muffler 2½"	AG2P168
Decal, 15mph max	AG2P201

Door, Front Left Side	AG2-067
Door, Front Right Side	AG2-007
Door, Left Front and Right Rear	AG9-049
Door, Rear	AG2-008
Door, Rear	AG2-008 AG9-050
Door, Rear Side	AG2-066
·	AG2-000 AG9-048
Door, Right Front	
Drive Coupling	AG9P003 AG2-115
Duct Clamp (not shown) Elbow, Air Intake	AG2-115 AG9P006
·	
Elbow, Coolant Tube	AG9-044 AG10P008
Exhaust Clamp, 2"	
Exhaust Header, LH	AG9-008
Exhaust Header, RH	AG9-009
Filter Stop	AG2-112
Filter, Air	AG9P005
Filter, Air, High Velocity Metal	AG2P084
Flasher	AG2P013
Flex Connection	AG9-011
Flywheel	AG9-031
Fuel Tank	AG9-017_2
Gauge, Fuel	AG2P014
Gauge, Oil Pressure	AG2P016
Gauge, Pressure	AG2P009
Gauge, Temperature	AG2P010
Gauge, Water Temperature	AG2P017
Guard, Fan	AG9-043
Half-Nipple	AG2-070
Handle, Adapter	AG2-089
Heat Exchanger, Coolant	AG9P001
Heat Exchanger, Exhaust	AG9-005
Heat Shield, Control Panel	AG9-040
Hose Insert	AG2P238
Hose, 1/4"	AG2P235
Hose, 5/8" Heater	AG2P215
Hose, Coolant 1.5"	AG9P015
Hose, Coolant 1.75"	AG9P016
Hour Meter	AG2P018
I.D. Plate	AG2-080
Insert Adapter	AG9P009
Latch, Door	AG10P005
Light, Interior	AG2P219
Light, Warning	AG9P013
Mount, Air Control Cable	AG2-043
Mount, Air Filter	AG10-048
Mount, Isolation	AG10P003
Muffler	AG9-010
Nipple, 1/4" NPTx6" Long	AG2-109
Paint, Fedex White	AG2-109 AG2P239
·	AG2P239 AG2P099
Panel Light	
Panel, Center Top	AG4-003

Panel, Control	AG9-038
Panel, Front	AG9-027
Panel, Front Top	AG9-030
Panel, Fuel Fill	AG9-039
Panel, Lower Side	AG2-013
Panel, Rear	AG2-007
Panel, Rear Top	AG2-006
Panel, Side Louvered	AG2-012
Panel, Upper Side	AG2-011
Plate, Cover	AG9P004
Plate, Duct Chamber Top	AG9-047
Plate, ECM Mount	AG10-041
Plate, Lower Air Chamber	AG2-018
Plate, PTO Cover	AG2-114
Plate, Upper Air Chamber	AG2-027
Plate, Valve	AG2-016
Push Button, Momentary	AG2P020
Reducer	AG4P053
Reflector, Amber	AG2P030
Reflector, Red	AG2P029
Relay	AG9P014
Rod End	AG2P022
Rubber Boot, Toggle Switch	AG2P233
Seal, Adapter	AG2-088
Seal, Door	AG2P085
Sender, Coolant Temp	AG2P027
Sender, Fuel Level	AG2P023
Sender, Oil Pressure	AG2P026
Sight Glass	AG9P019
Spill Ring, Fuel	AG2-092
Spinning, Adapter	AG2-091
Surge Tank	AG9-026
Switch	AG2P008
Switch, 4 Position Rotary	AG2P227
Tachometer	AG4P039
Terminal, Toggle Switch	AG2P234
Tube, Air Intake	AG9P007
Tube, Coolant Return	AG9-022
Tube, Coolant, Engine Outlet	AG9-036
Undercarriage Assy	AG2P044
Voltmeter	AG2P015