

nipoori® ORB



USER MANUAL

www.nipoori.com

Table of Contents

- Important Safety Information ----- 2
- Product Caution ----- 2
- Safety Warnings ----- 2
- Warranty ----- 3
- Pre-Installation (Hardware Included) ----- 4
- Product Assembly ----- 6
- Care and Cleaning ----- 13

Important Safety Information

Product Caution (Before You Start)

- Before you start, make sure you have the right tools, plenty of space, and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent scratching.
- Check the pack to ensure you have all the parts listed.
- Strictly follow each step in the installation manual.
- Ensure that the product is fully assembled as illustrated before use.

Safety Warnings

- Please keep children out of the assembly area before assembly.
- Some parts may contain sharp edges, so wear protective gloves if necessary during assembly.
- Do not use or store this product in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using the product until repairs are made and/or factory replacement parts are installed.
- Do not tighten screws until the product is fully assembled.
- When not in use, secure the product in a cool and covered location.
- Check your local regulations prior to using this item, as some municipalities have restrictions and requirements.
- For outdoor use only; not for commercial use.
- Do not use on wood decks or any wooden surface.
- Keep flammable or combustible items away from the grill.
- Not for use by children; always keep children and pets at a safe distance from the grill.
- Use extreme caution when in use, as exterior parts (including the cover, cooking grate, handle ring, and skewers) can become extremely hot and unsafe to touch with unprotected hands.
- Use the fire stick with caution and always use a heat-resistant pad or glove when handling it.
- Make sure all parts are completely cool before cleaning.
- Do not move the grill when it is in use.
- Please use the provided fire stick to put the cooking grate on.

Limited Manufacturer's Warranty

Nipoori warrants to the purchaser that this product is free of defects in materials and workmanship for 2 years under normal use. The warranty does not apply to damages caused by acts of God, neglect, alteration, accidental damage, hostile environments, improper installation, or installation not in accordance with the manual's instructions.

This warranty is non-transferable and shall be deemed void under any of the following circumstances:

- The product is used for commercial or rental purposes.
- Fading or discolouration of the exterior surface arises due to exposure to chemicals, oils, fat/grease, or temperatures exceeding 400°C.

All warranty claims must be accompanied by the warranty and original purchase receipt from an authorised representative. The warranty term commences on the date of purchase and is not subject to extension due to any repair or replacement made during its lifetime. Nipoori and its Authorised Service Agents reserve the right to replace or repair the product free of charge within the warranty period, provided it is delivered to the Service Department or Authorised Service Agents and freight charges both ways are paid by the owner. No liability will be accepted for loss or damages in transit.


Pre-Installation

Read all instructions before assembly. To avoid damaging the product, assemble it on a soft, non-abrasive surface such as a carpet or cardboard. Refer to the accessories guide during installation to ensure parts are installed in the correct directions. Wear safety goggles and always follow the manufacturer's instructions when using power tools.


Hardware Included




A

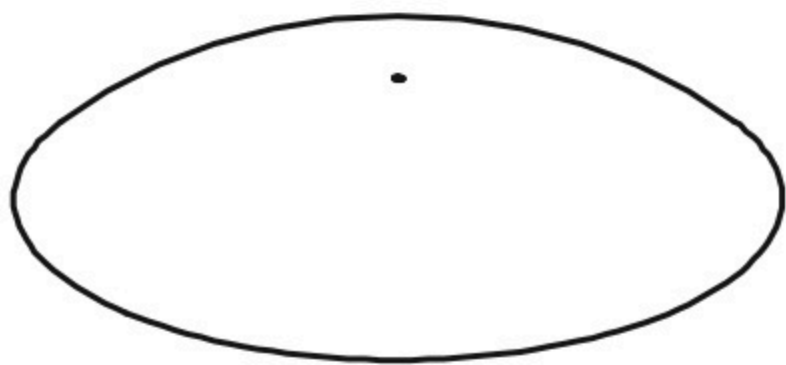


B

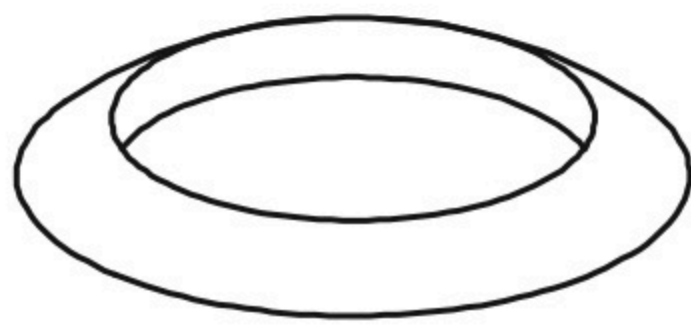


C

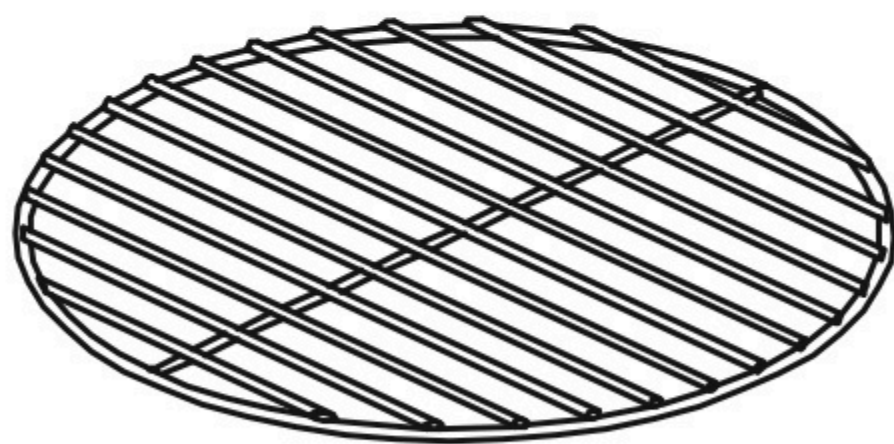


D

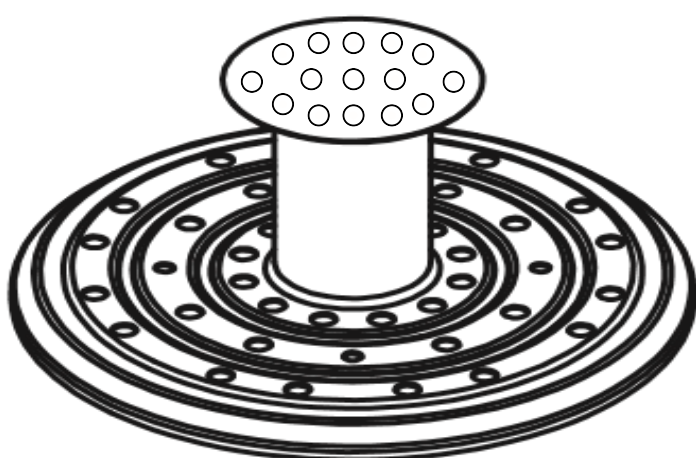


E

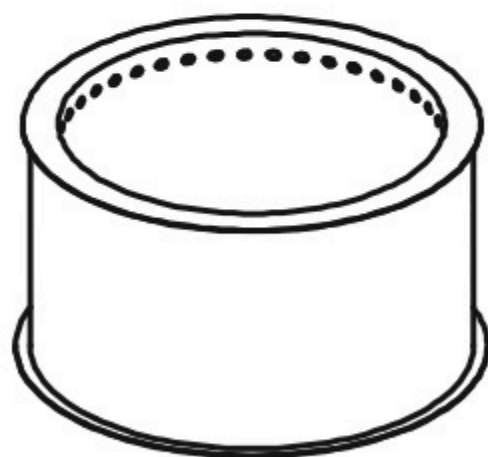


F

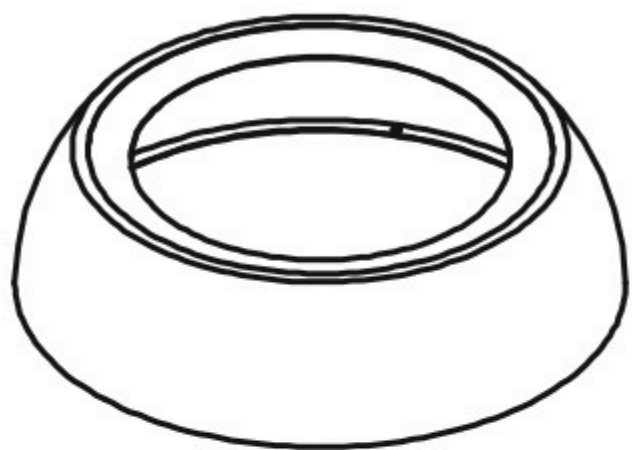


G

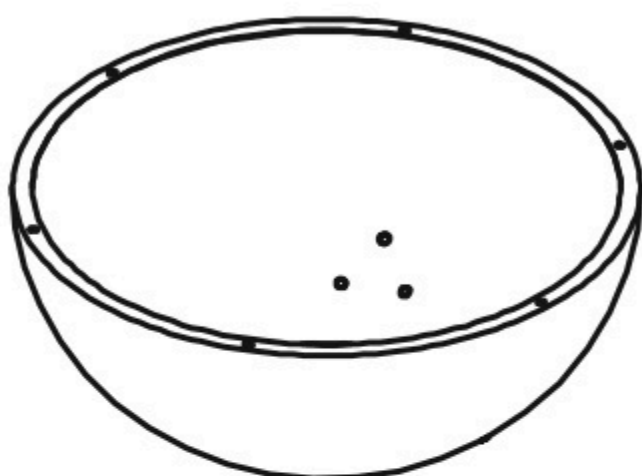


H

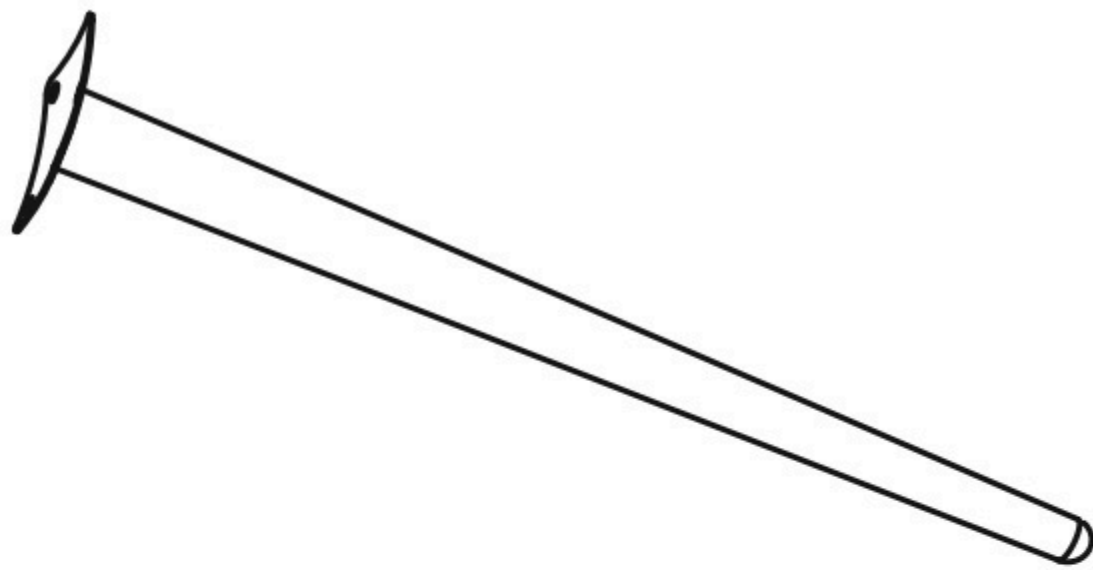

J – 3pcs legs

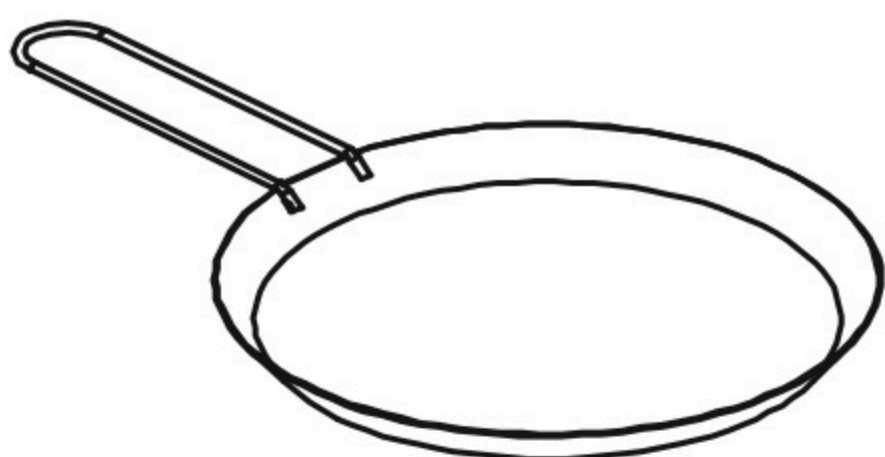


K

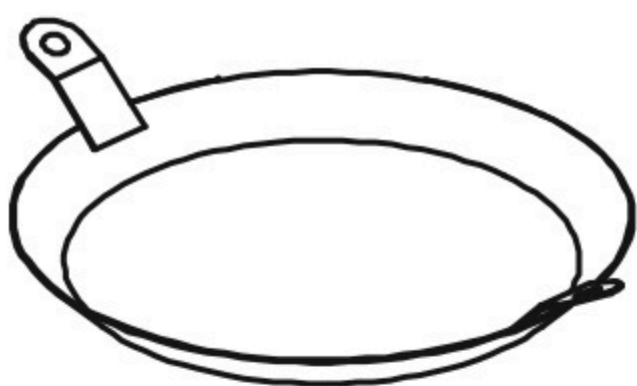

M




N

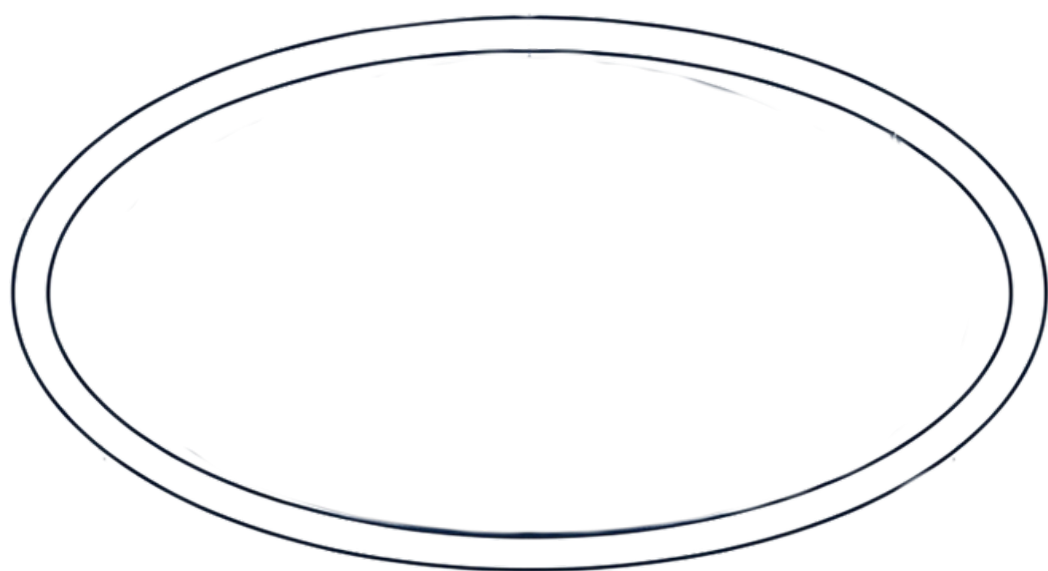


P



R

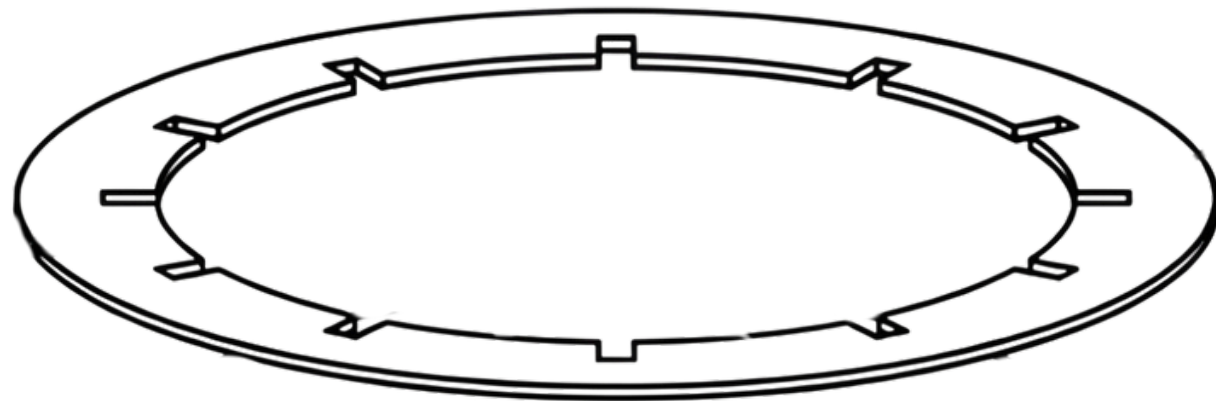

S

 

T

Hardware Included



1

(19PCS)



2

(19PCS)



3

(1PCS)



4

(1PCS)



5

(6PCS)




6

(1PCS)



7

(1PCS)

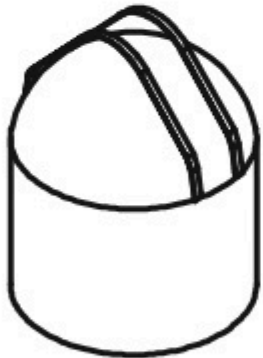


8

(1PCS)

	Description	
A	Handle Ring	1
B	Cover	1
C	Windshield	1
D	Cooking Grate	1
E	Charcoal Tray	1
F	Inner Barrel	1
G	Upper Ball	1
H	Lower Ball	1
J	Legs	3
K	Ash Pan	1
M	Ash Pan Holder	1
N	Fire Stick	1
P	Tubular Ring	1
R	Brackets to attached Tubular Ring	3
S	Skewer Ring	1
T	Skewers	6



	Part	
1	Bolt (M6*12)	19
2	Nut M6	19
3	Nut M5	1
4	Washer	1
5	Hexagon Bolt (M6*12mm)	6
6	M6 Allen Wrench	1
7	M6*M5 Wrench	1
8	Grill Cover	1

Hardware Included


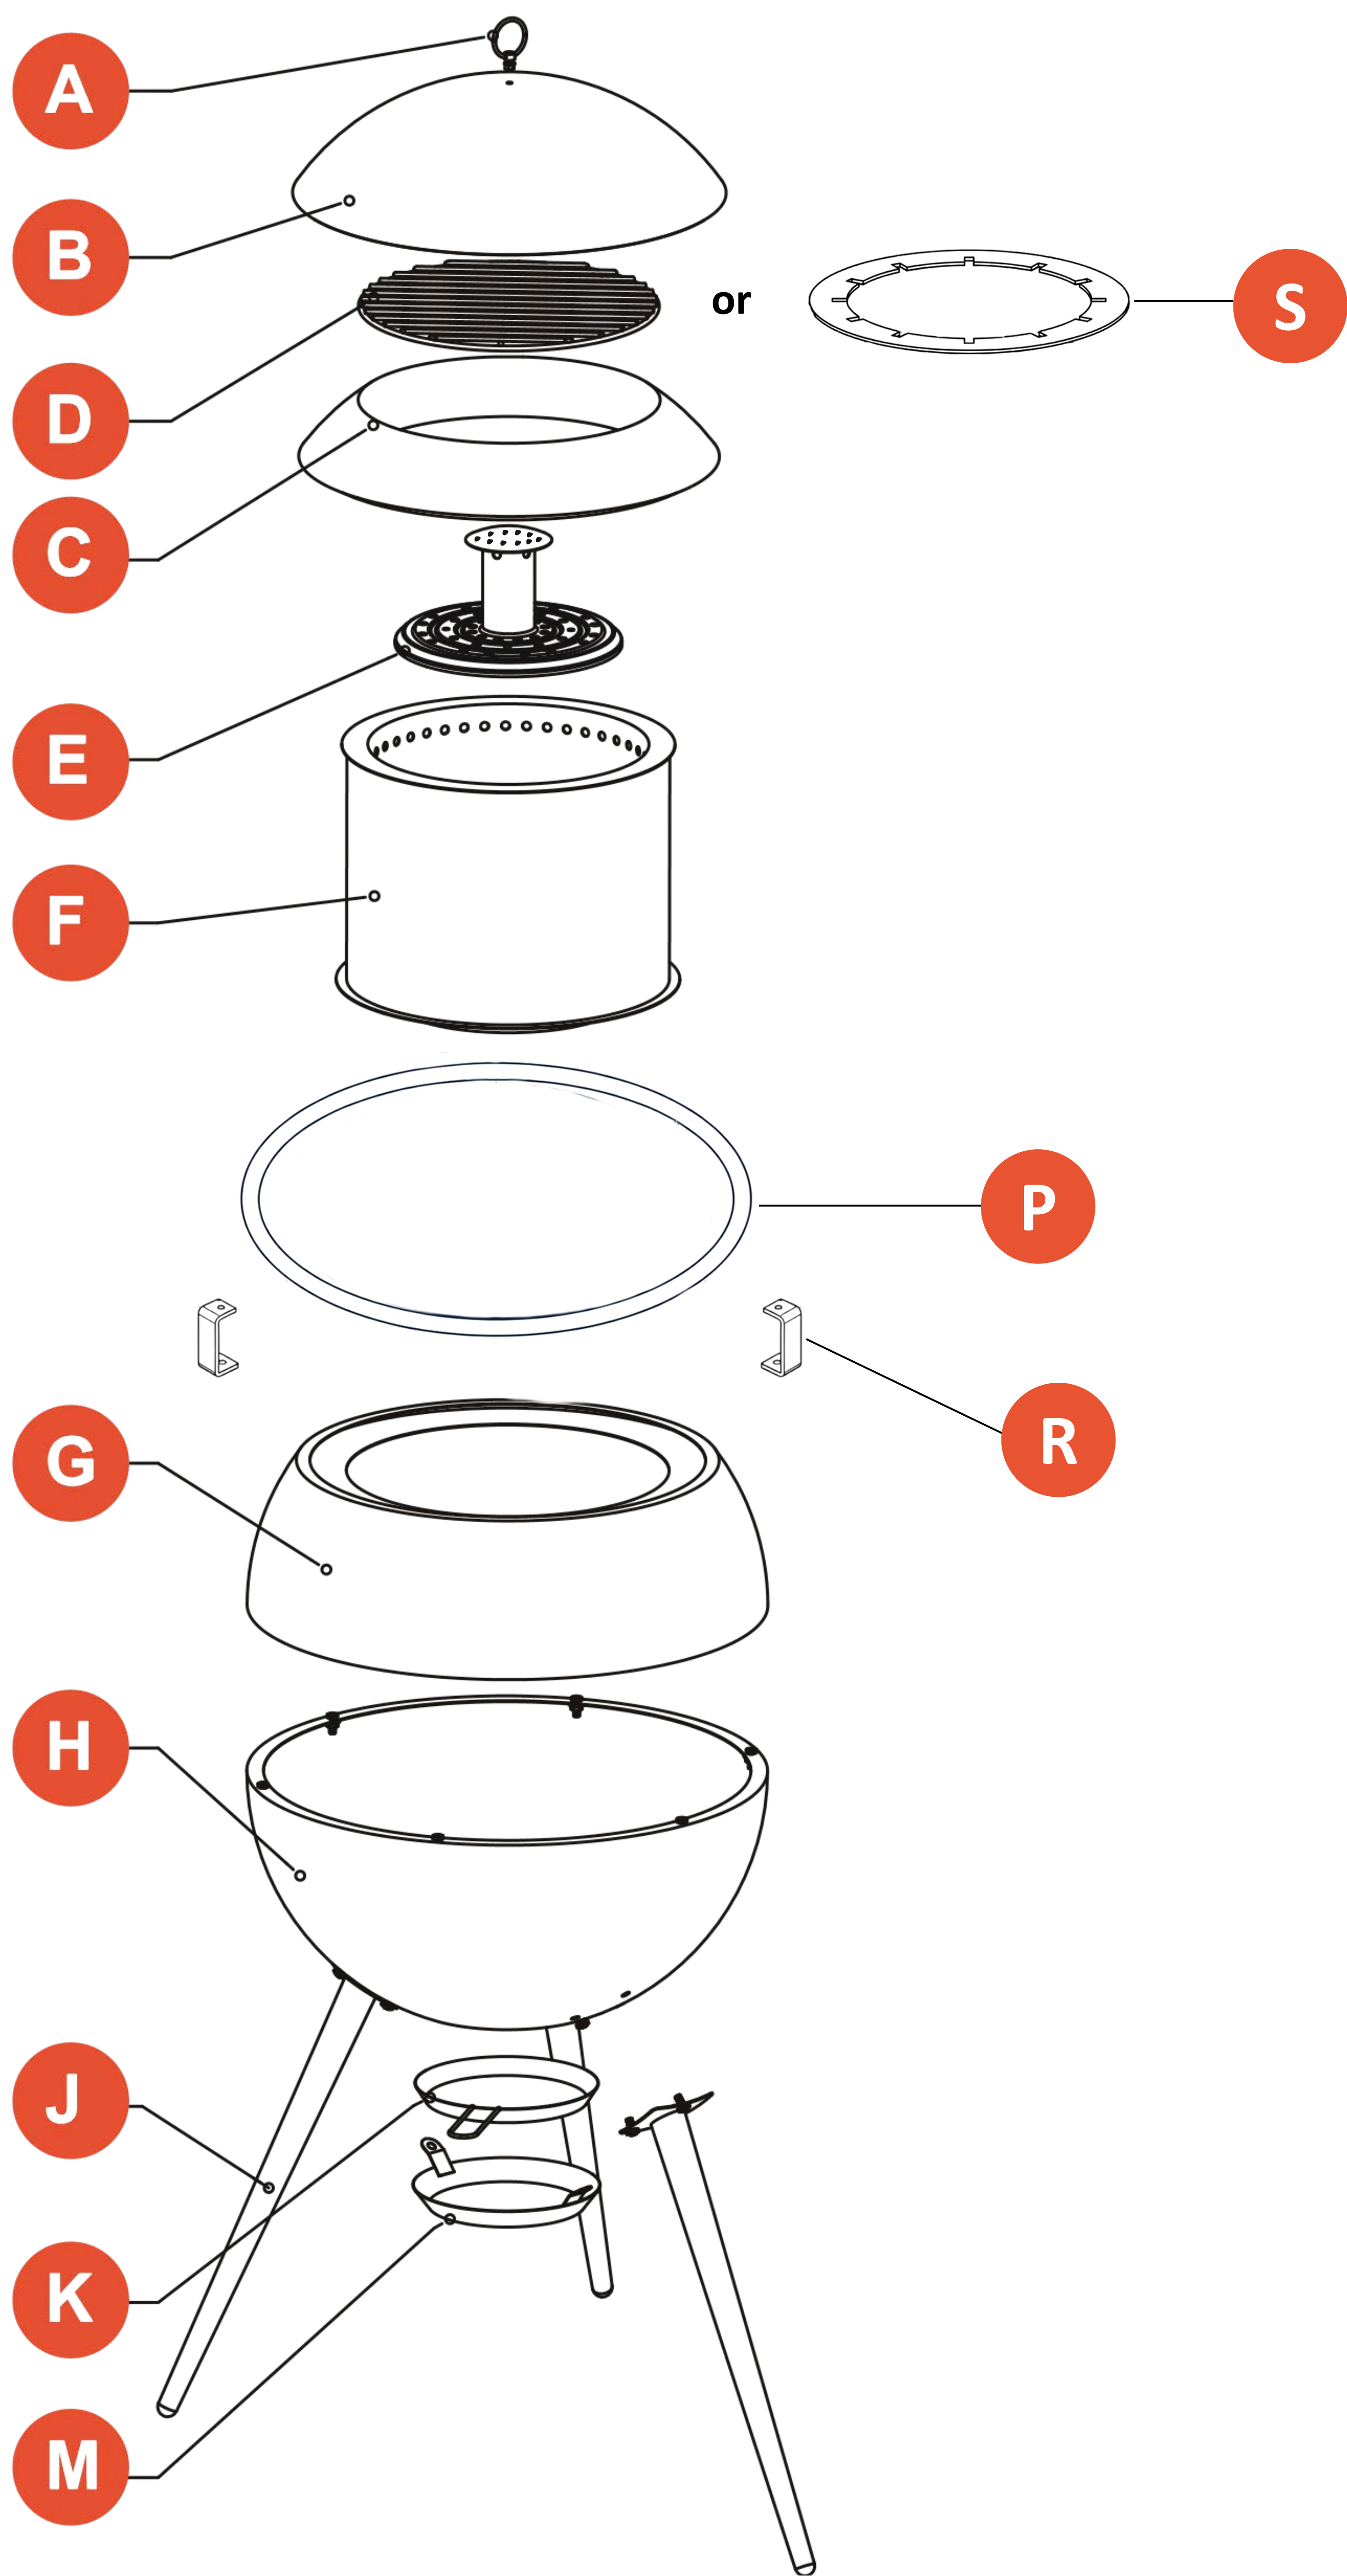


STEP 1

Attach Handle Ring (A) to Cover (B) using washer (4) and nut (3).

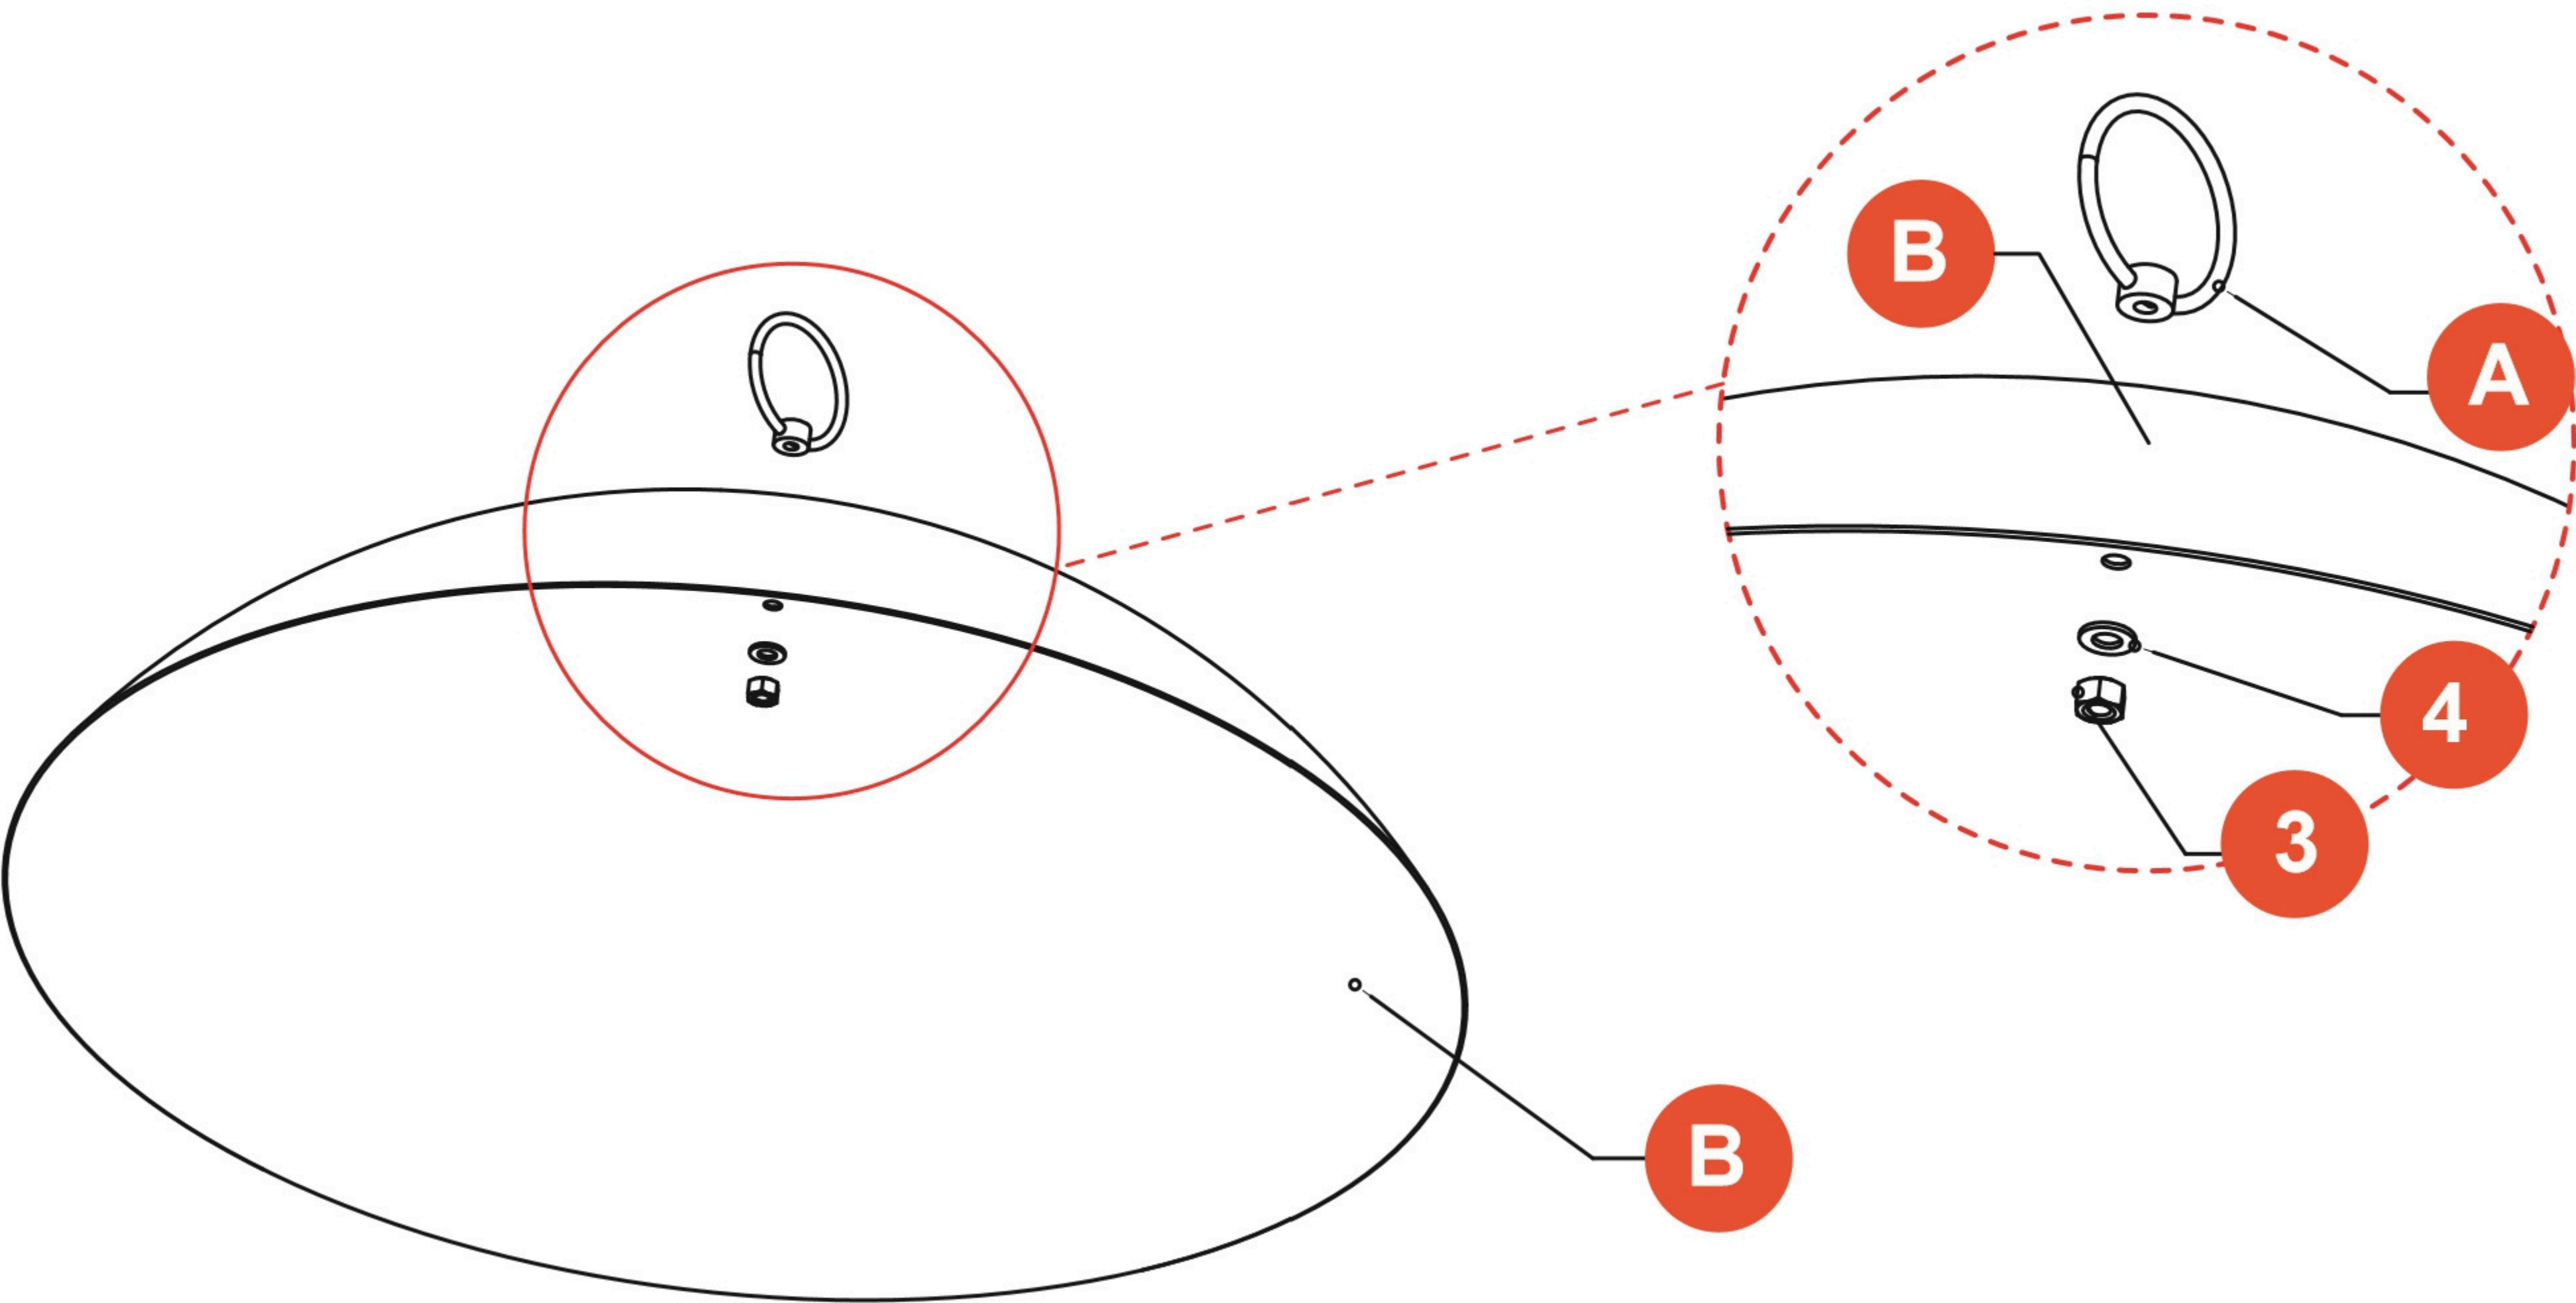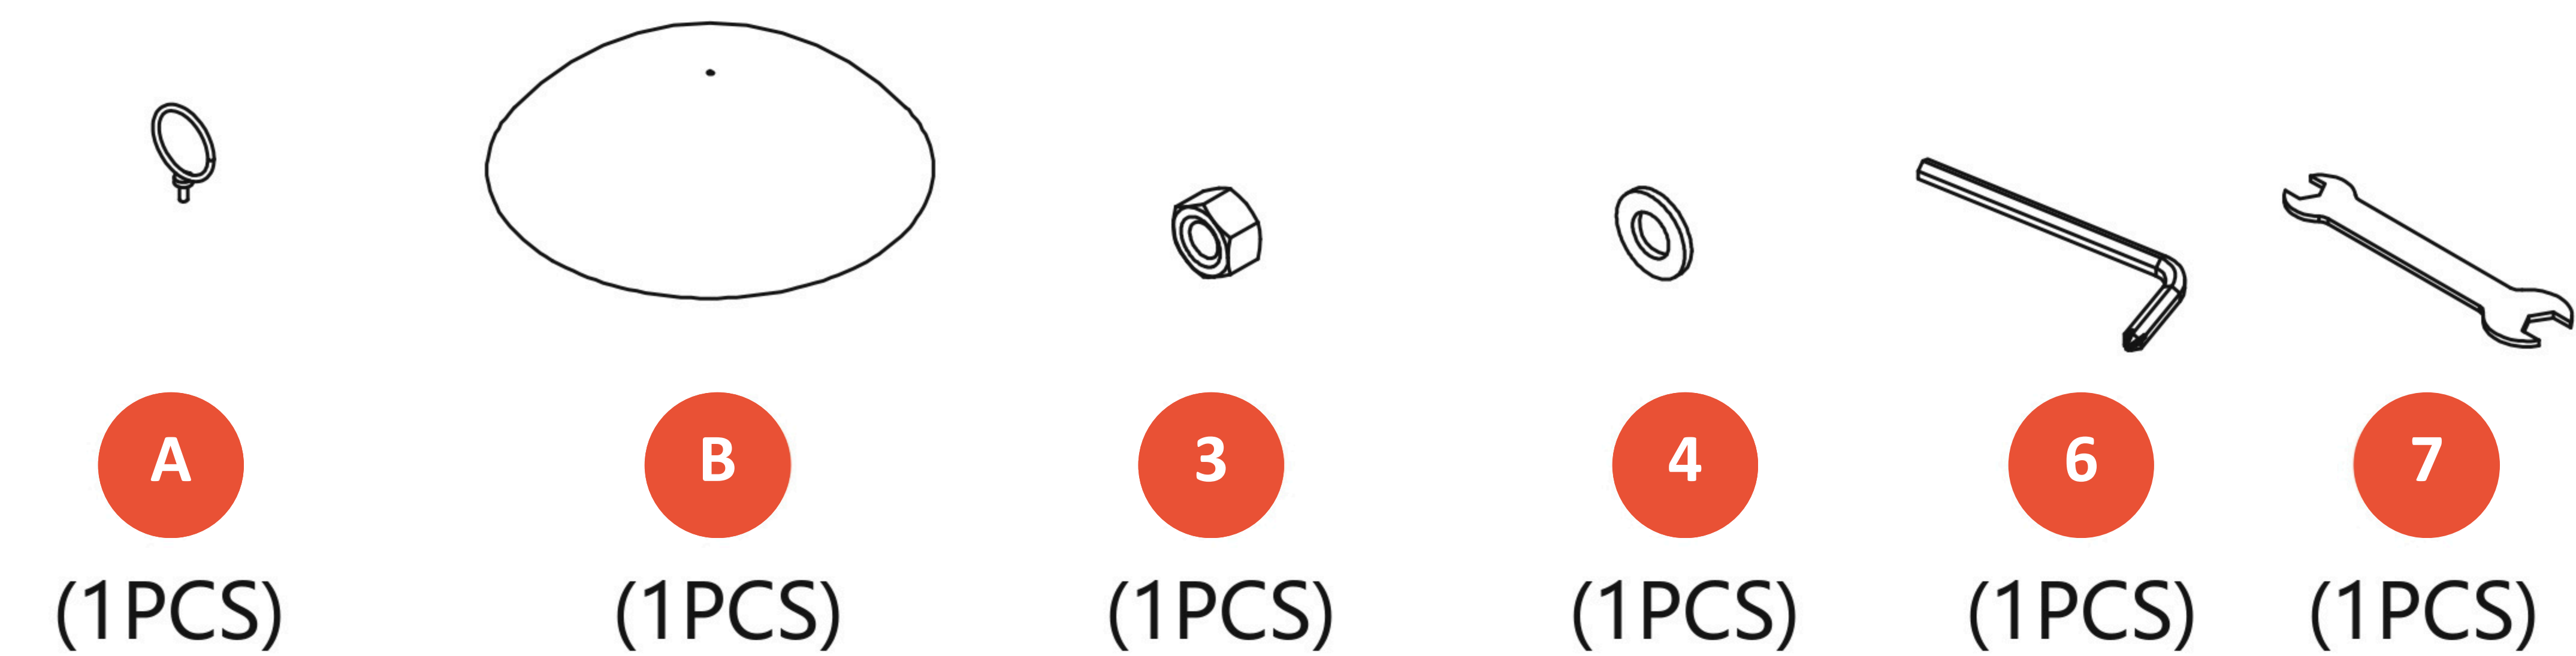


STEP 2
Attach three Legs (J) to the Lower Ball (H) using screw (1) and nut (2).

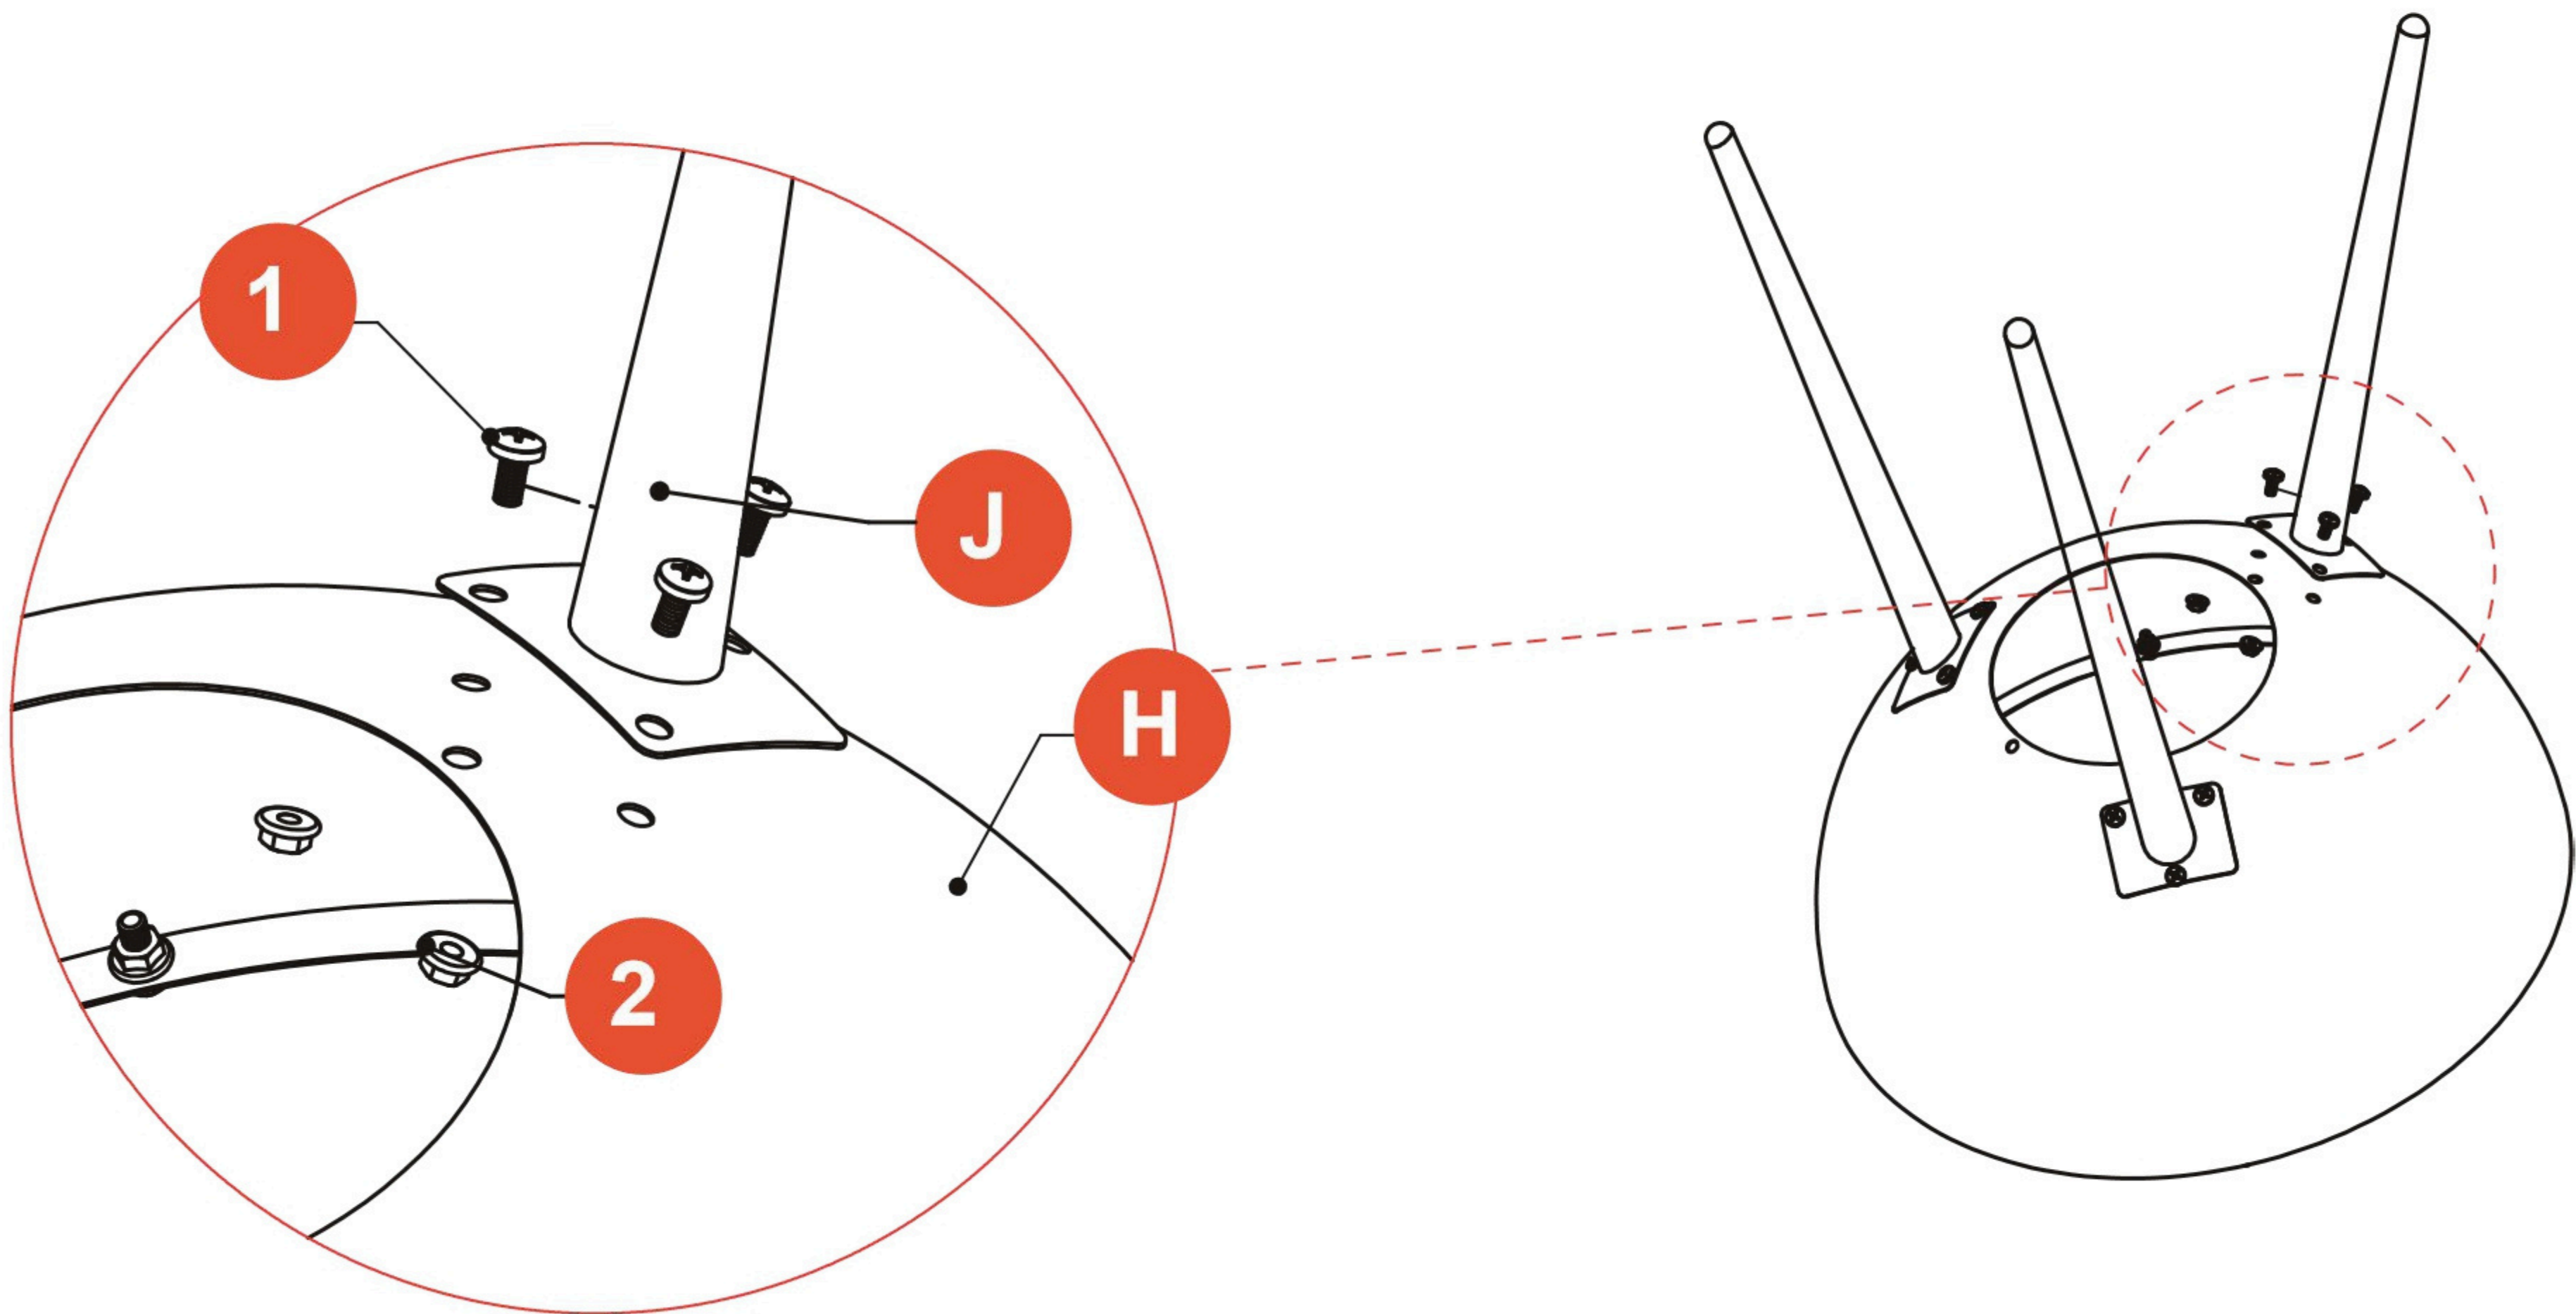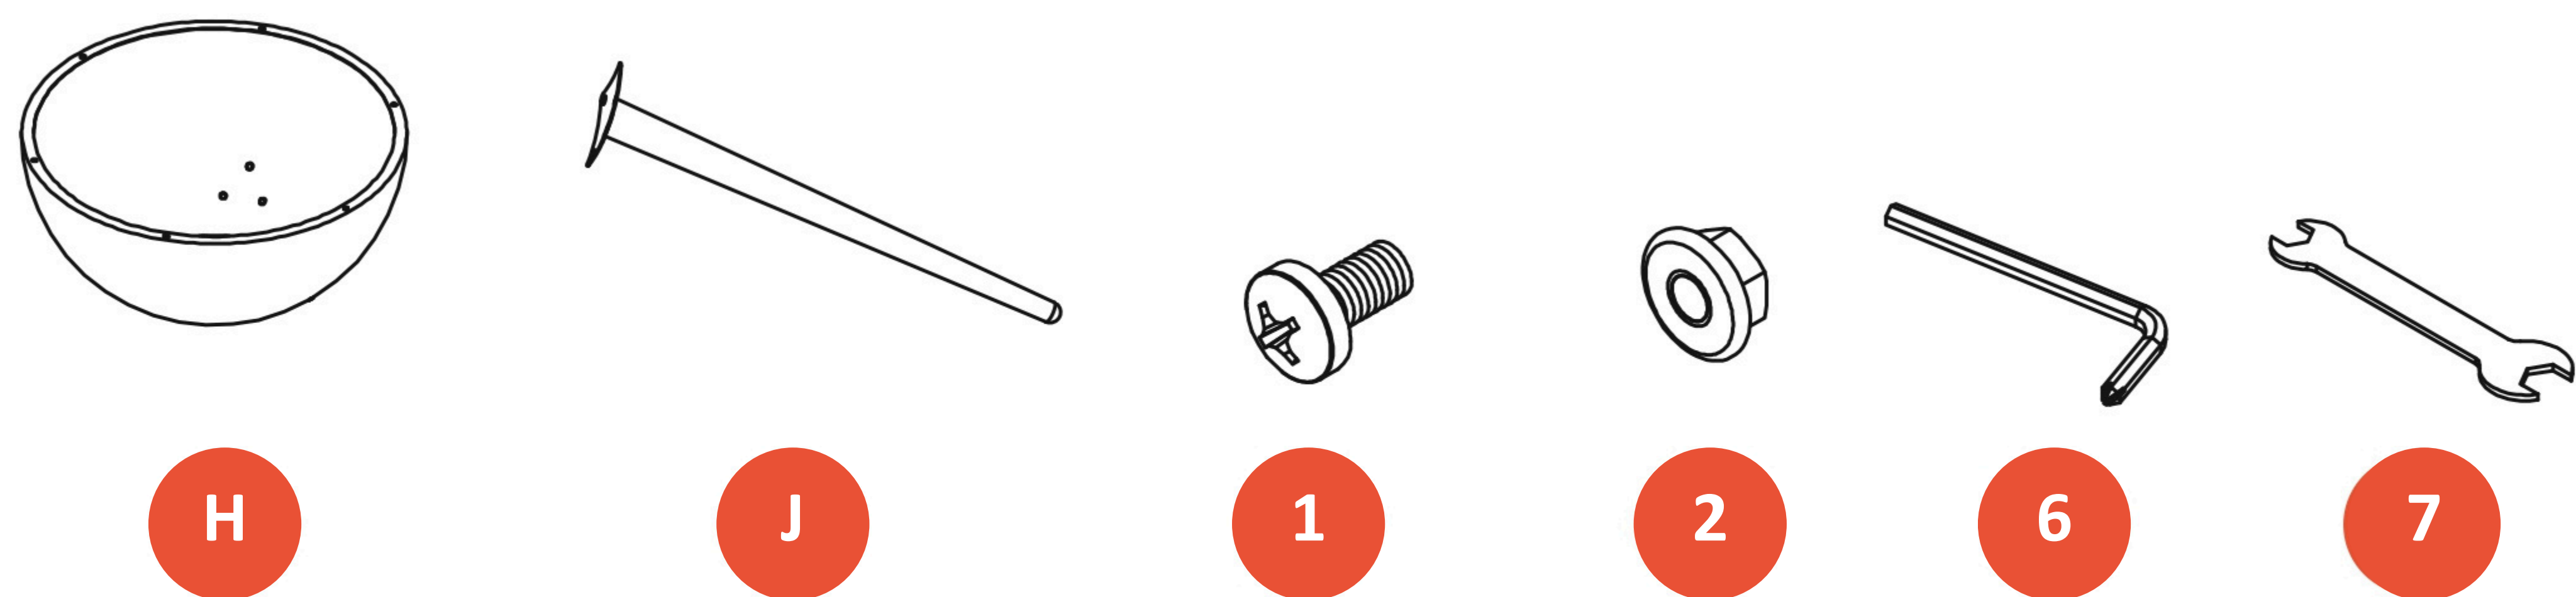



STEP 3

Turn the H upside down. Attach the Ash box holder (M) to it using screw (1) and nut (2).

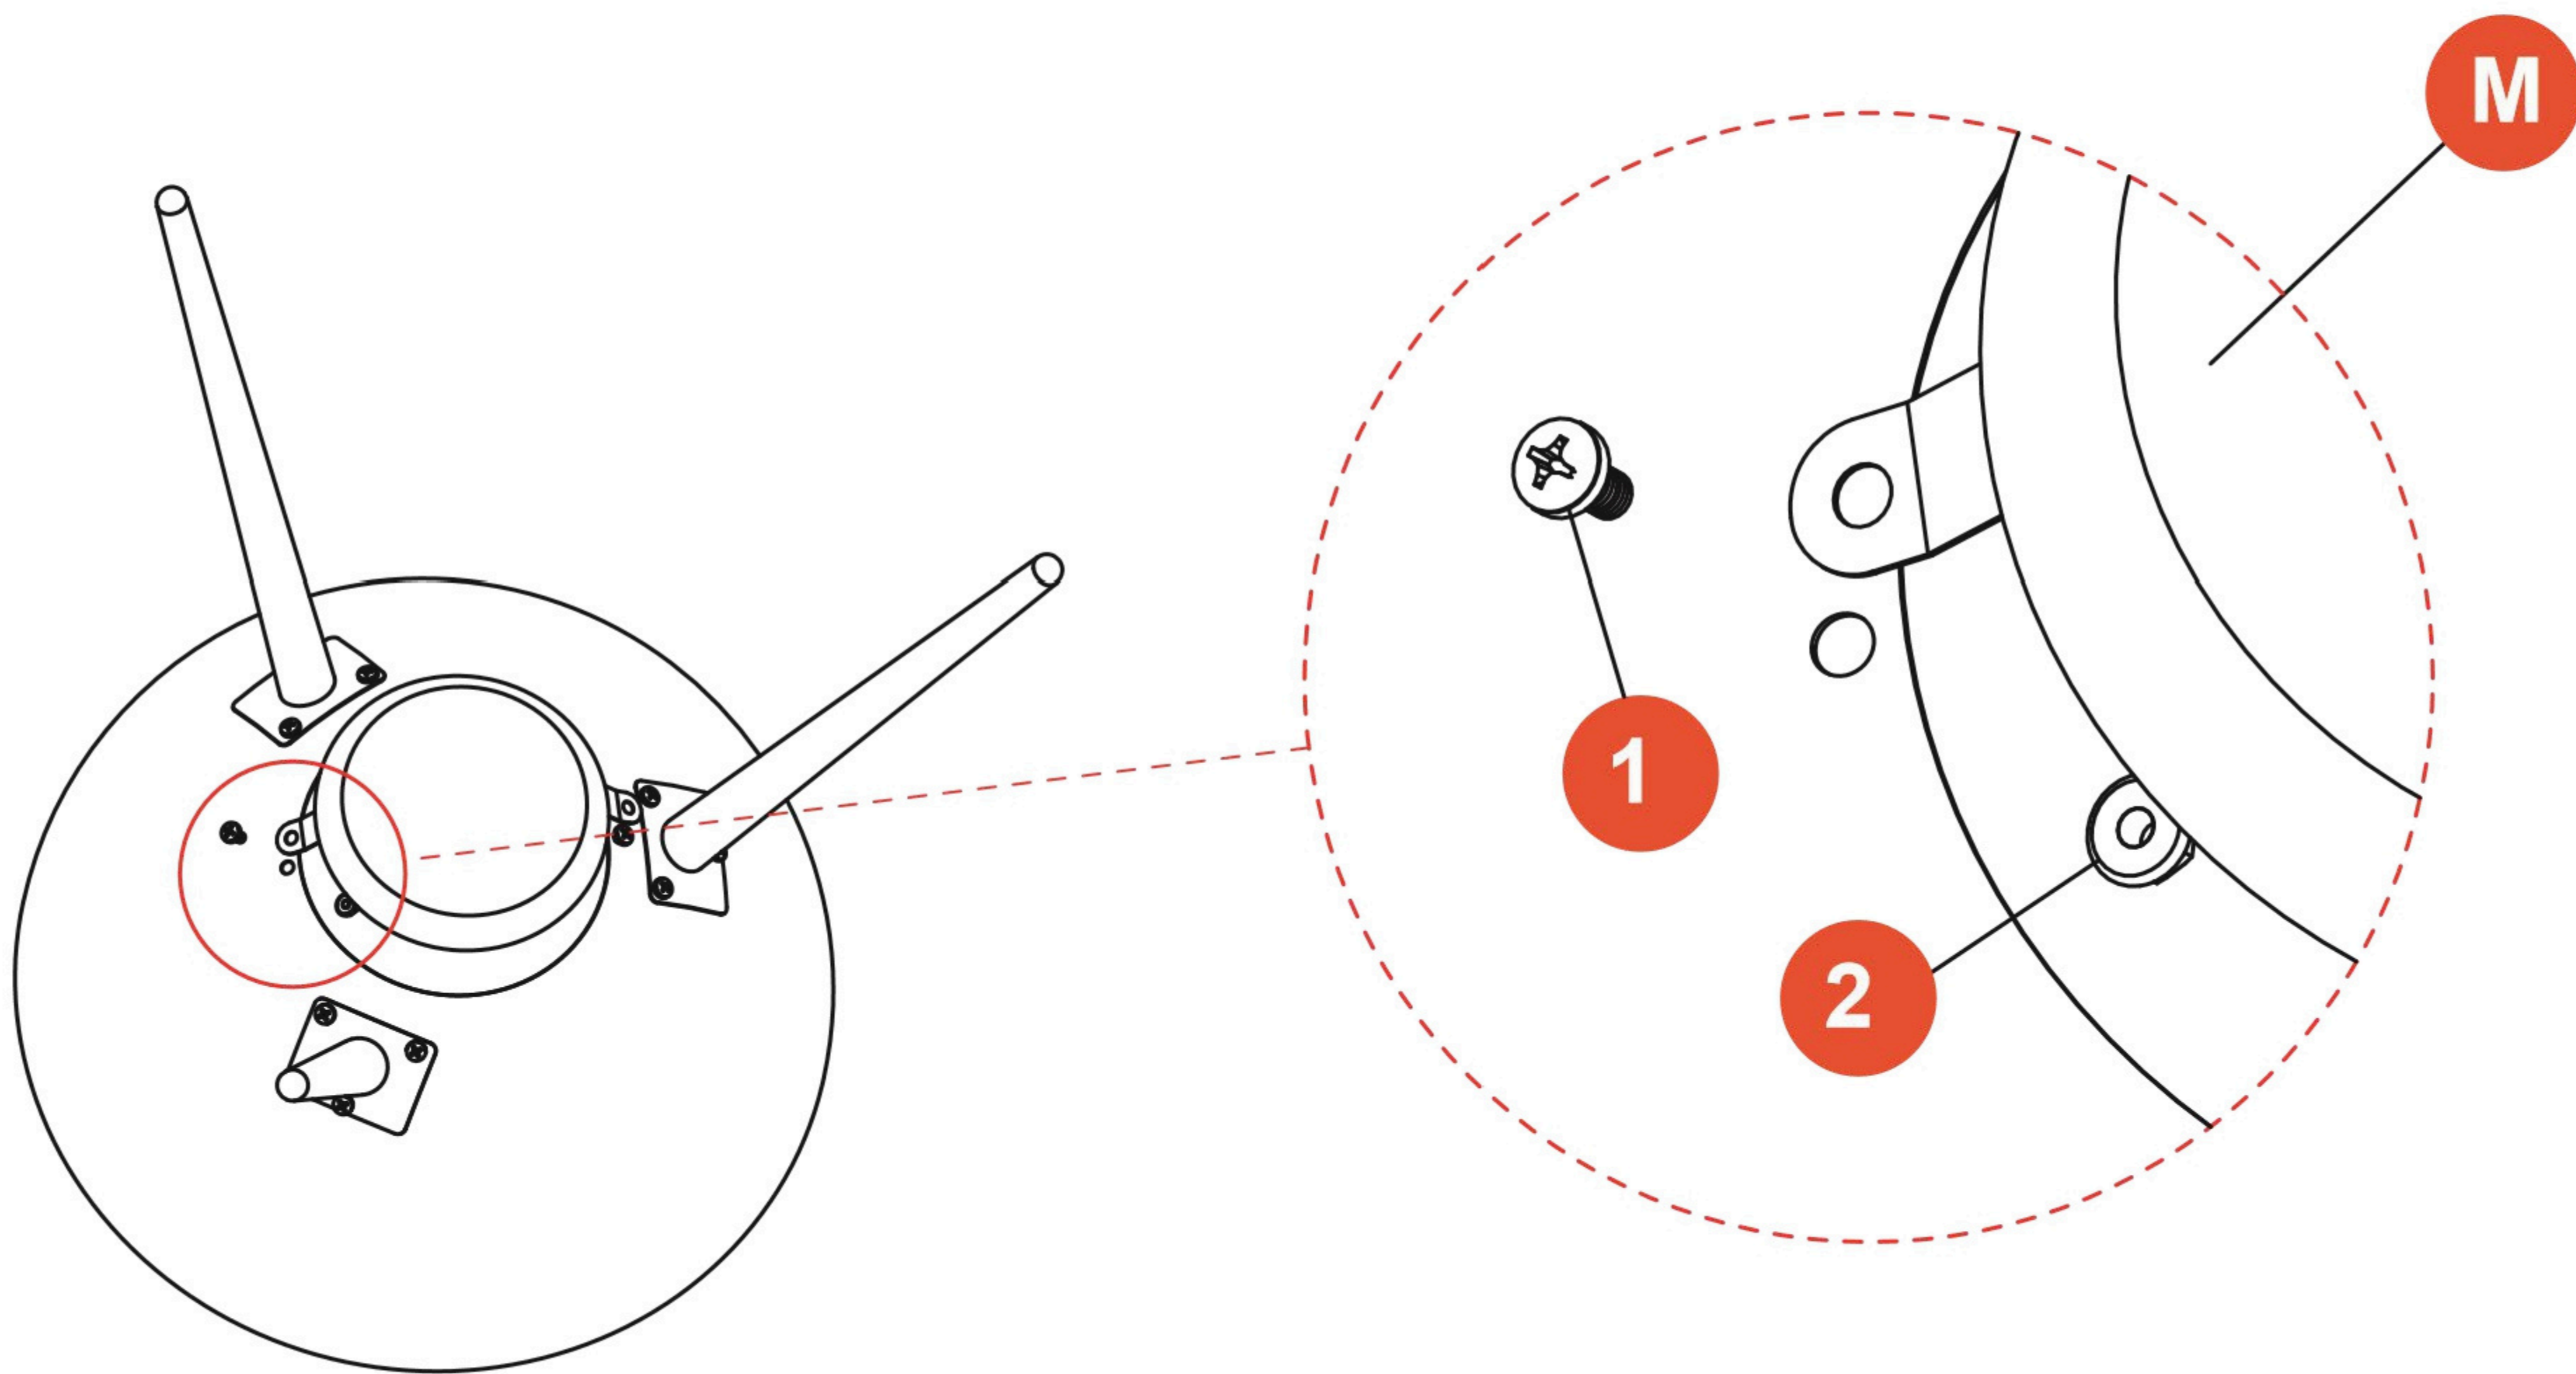


STEP 4

Turn over the assembled parts (H, M, J). Place part (G) onto (H), align the screw holes, and secure with screw (5) and nut (2).
Attach part (R) to part (P), then screw it onto part (G).

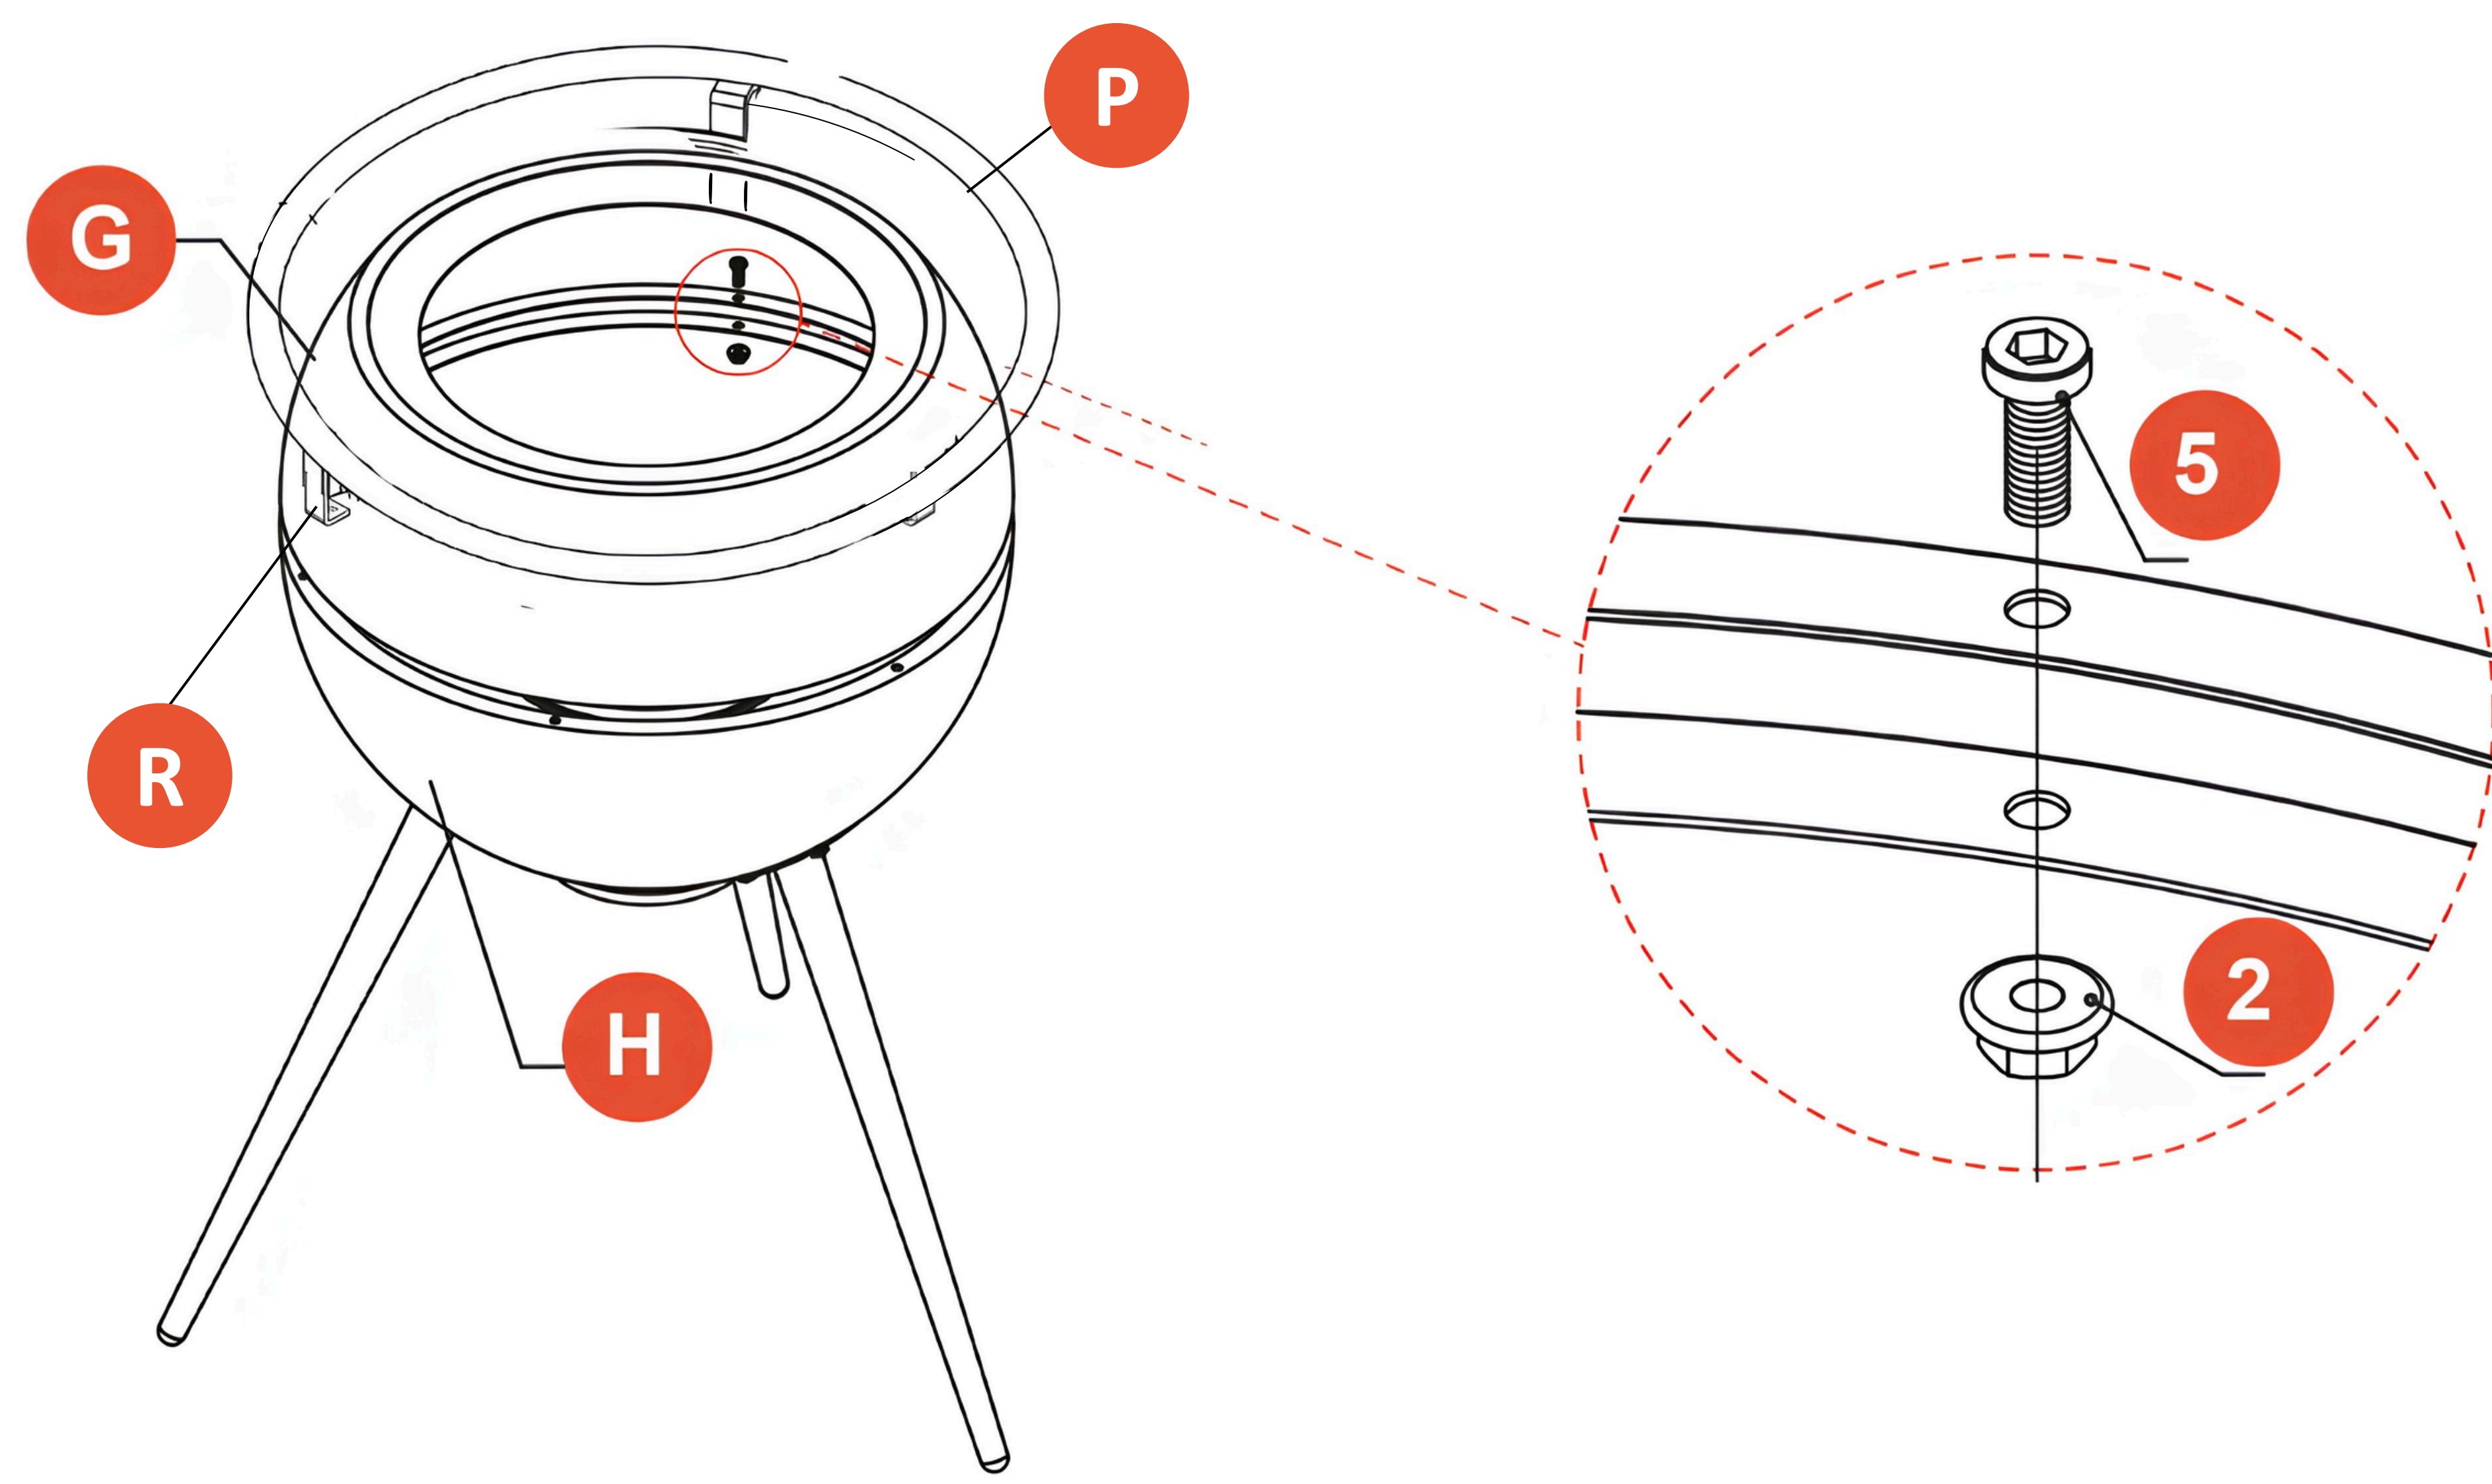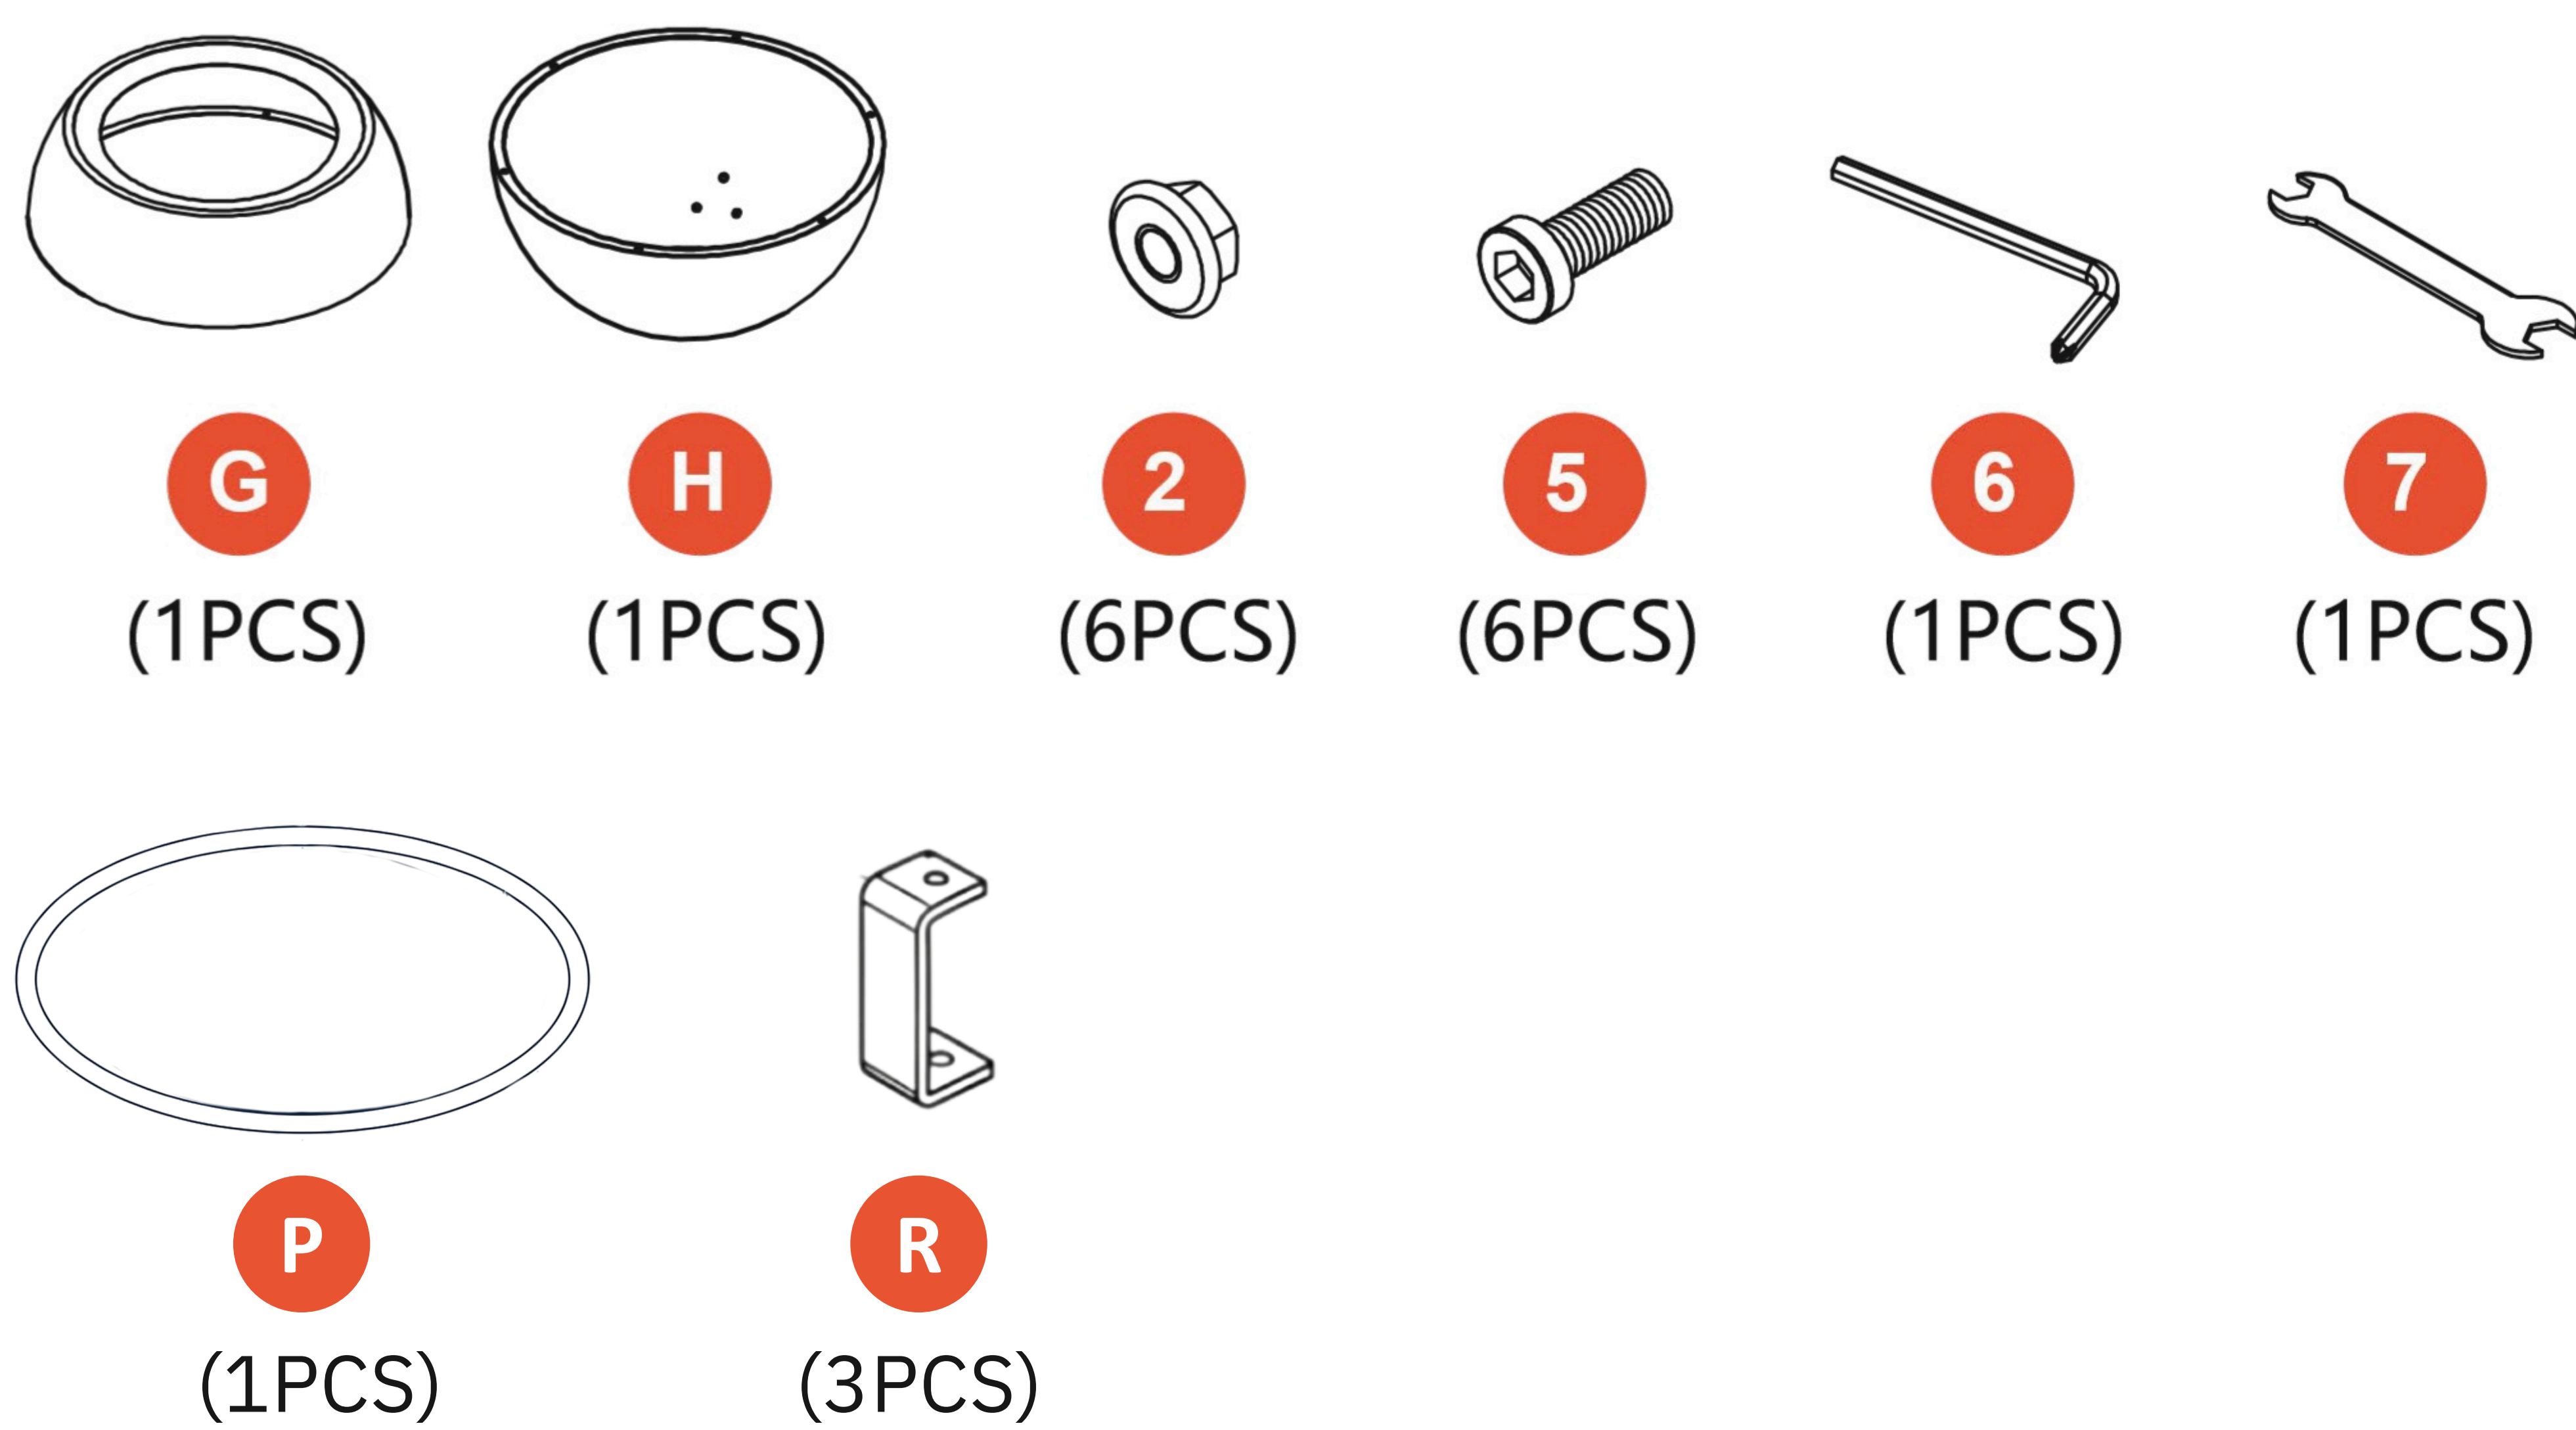


STEP 5

Place parts (F,E,C,D) into the fire pit in order. Cover with part (B), then insert part (K) into part (M).

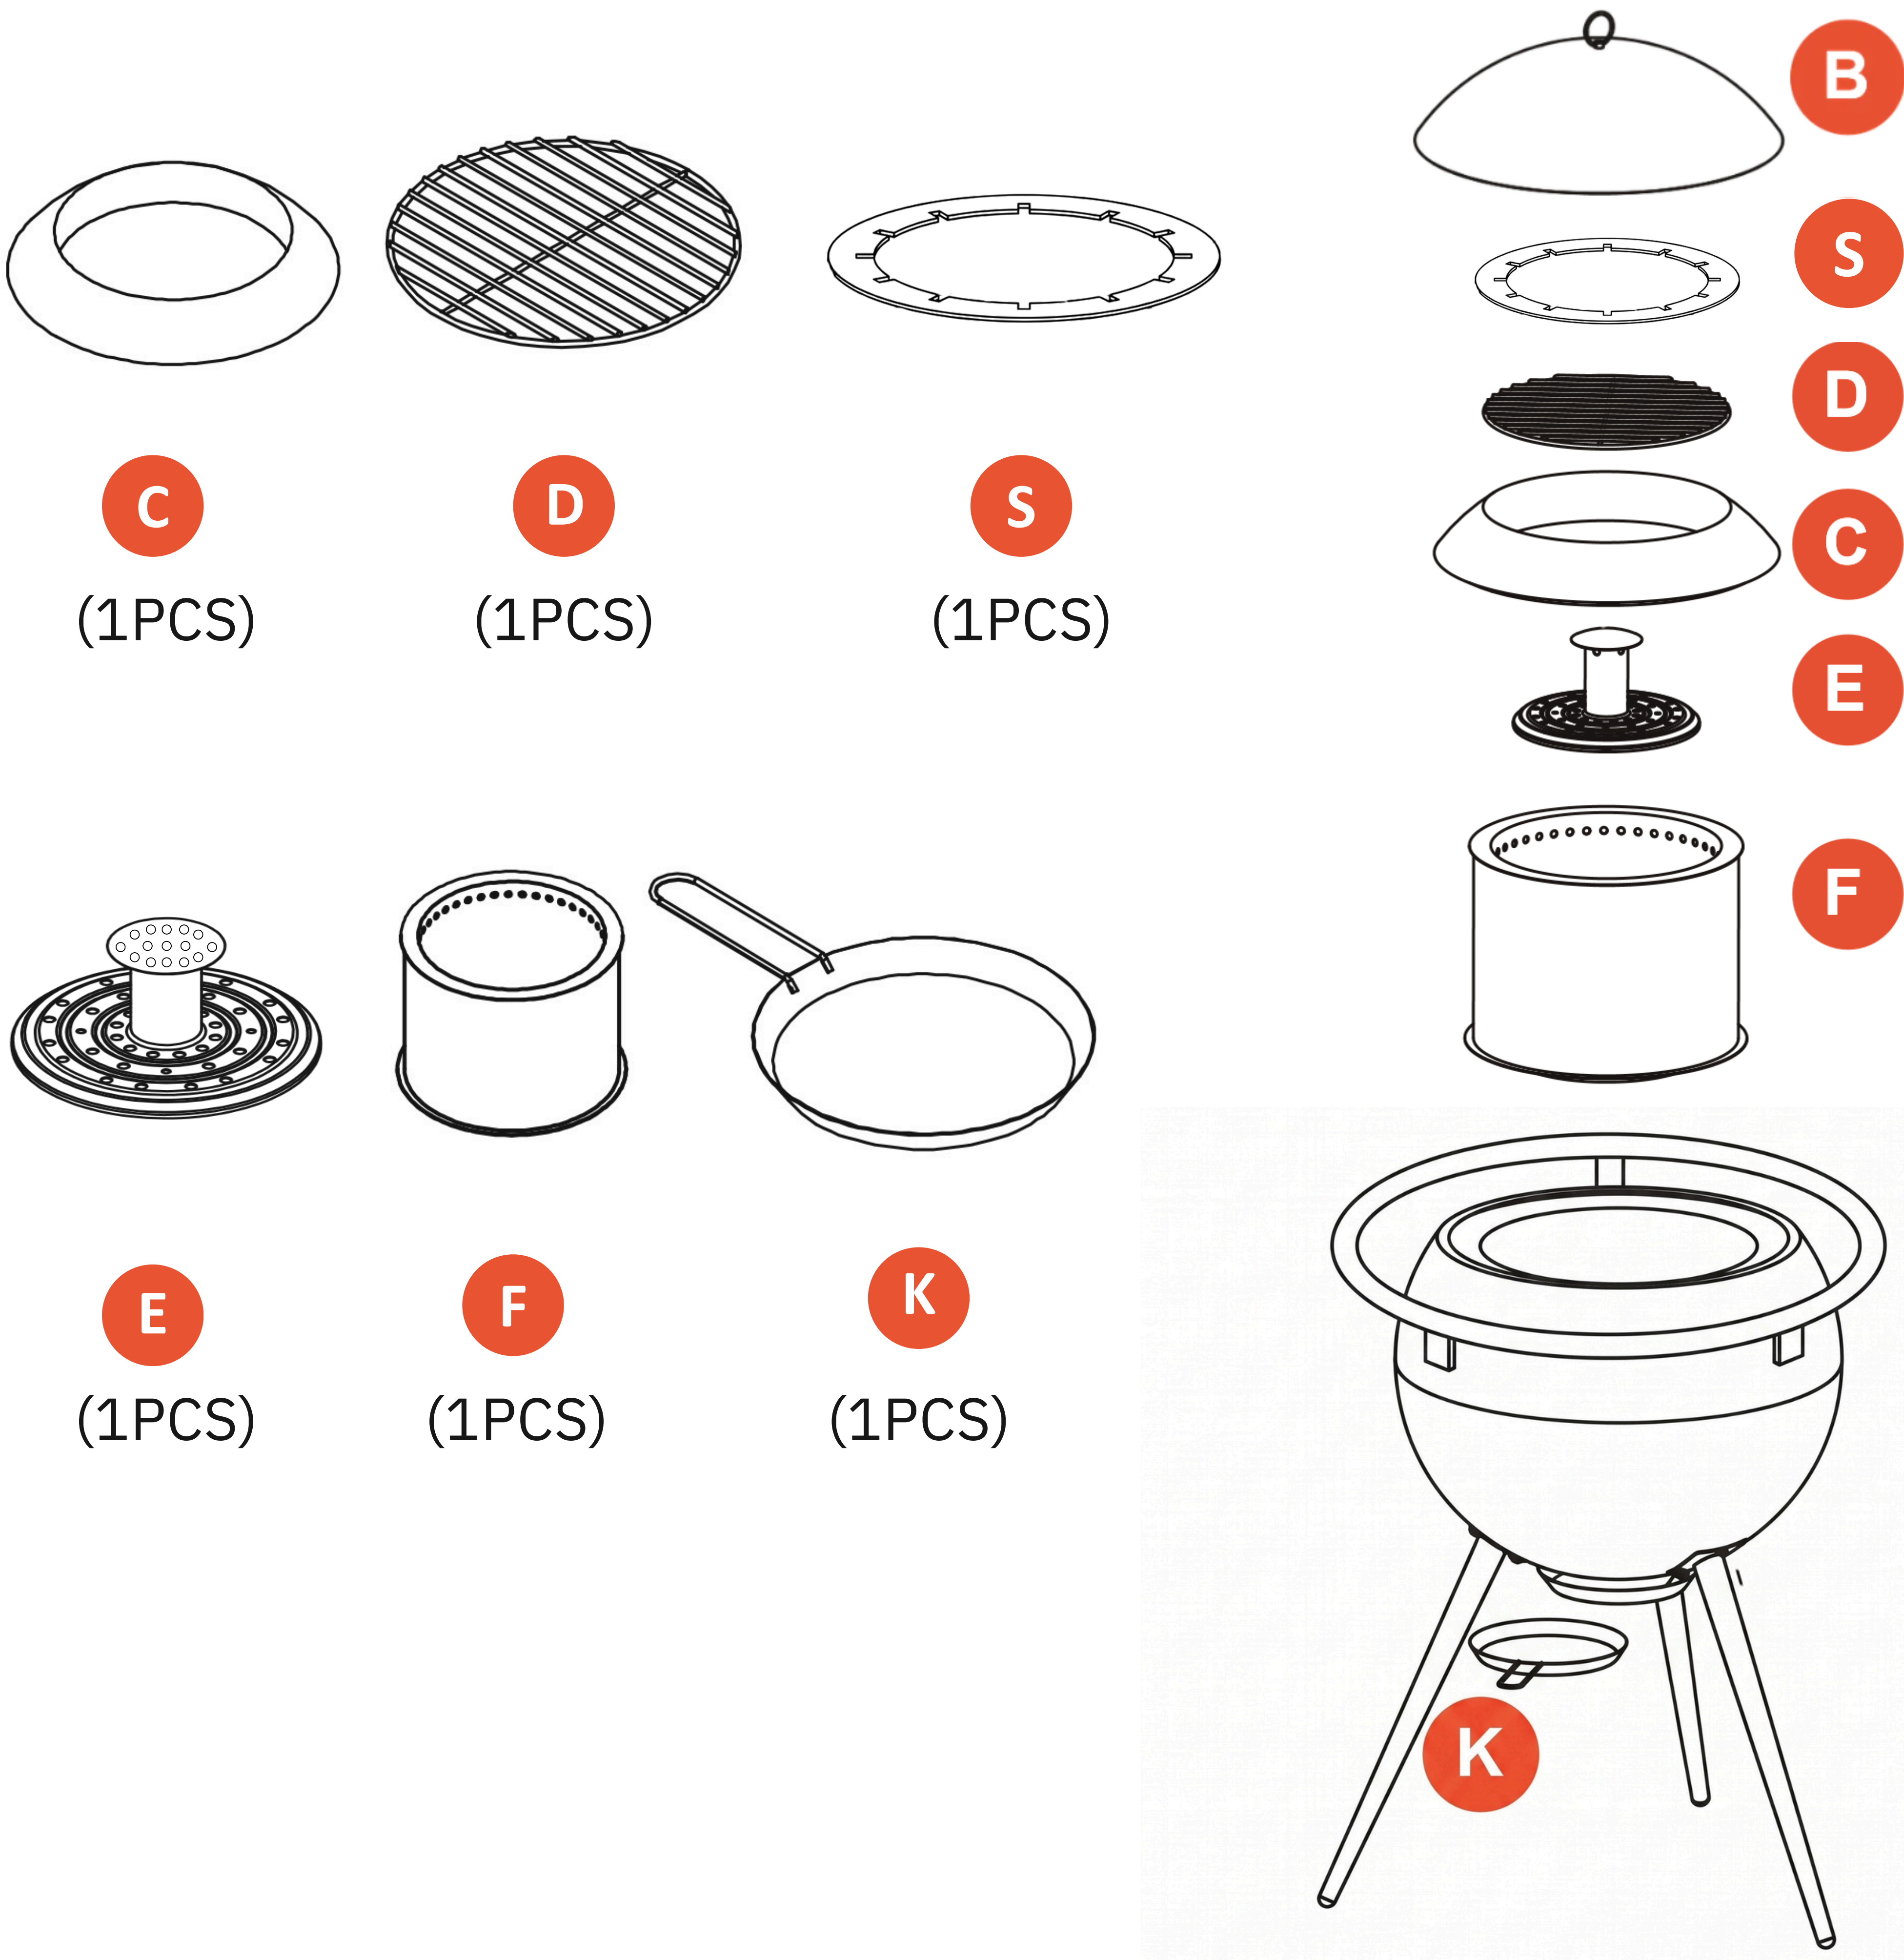

STEP 6

After use, put on the dust cover and fasten the straps. Please make sure the charcoal fire has been completely extinguished before covering with the dust cover.

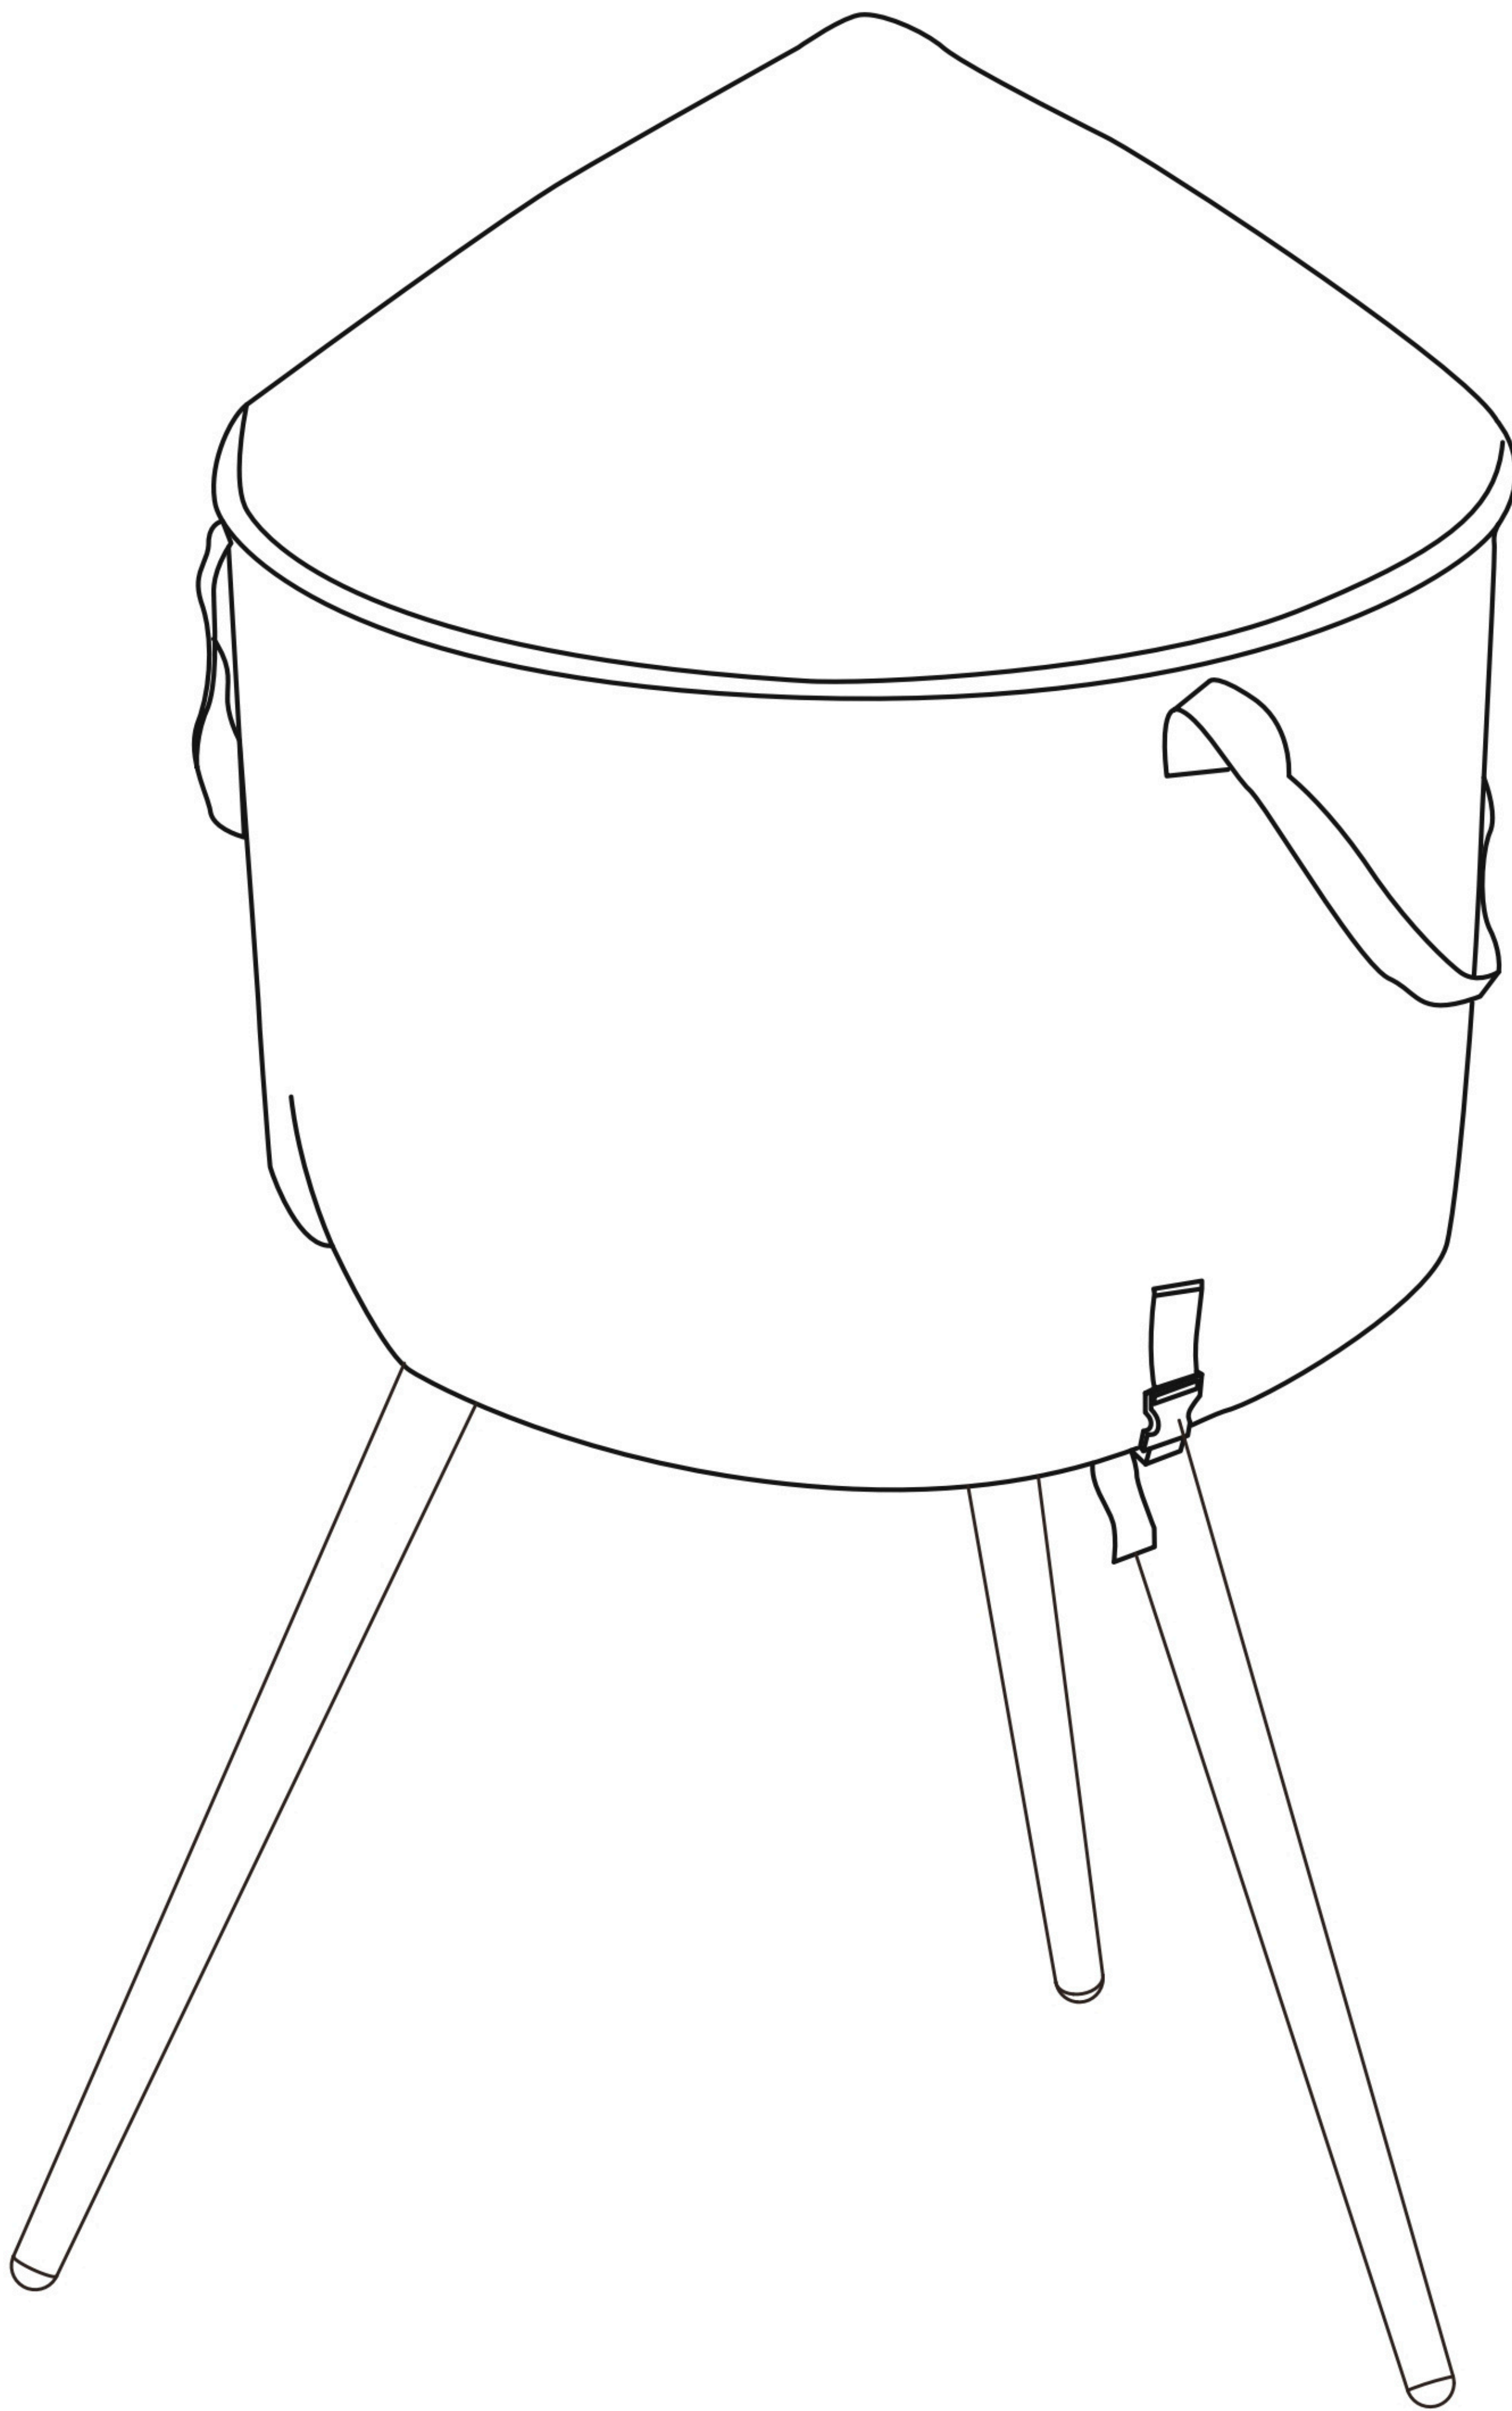

Please make sure that charcoal fire has been completely put down before storing away the grill.

Care and Cleaning

If cleaning is required, gently wash your Grill with a sponge using mild, environmentally friendly soap and water. Do not use bleach, chemicals, abrasive cleaners or wire brushes when cleaning your cooking pit. Do not use power washer. After cleaning, rinse well and allow to air dry.

To repair any scratches, nicks or chips on the exterior surface, use a matching touch-up paint that is suitable for metal, outdoor and high temperature use.


Cleaning and care of the Cooking Grate.

After cooking, allow any accumulated residue to burn off. This reduces the amount of cleaning required for the grill and inside of the cooking pit. Once the fire and embers have died down and cooled off, gently brush any loose particles from the grate with a grill brush. Do not attempt while the grate is hot! Let it cool first. For a more thorough cleaning, you can use a mild soap and water and gently scrub the grate with fine steel wool.


Remove ashes from the bottom of the Ash Tray.

It is important to remove the accumulated ashes from the ash tray when they are cool. Ashes absorb moisture and may promote premature rusting and will also prevent the proper air flow required for grilling.

Some Parts and Features

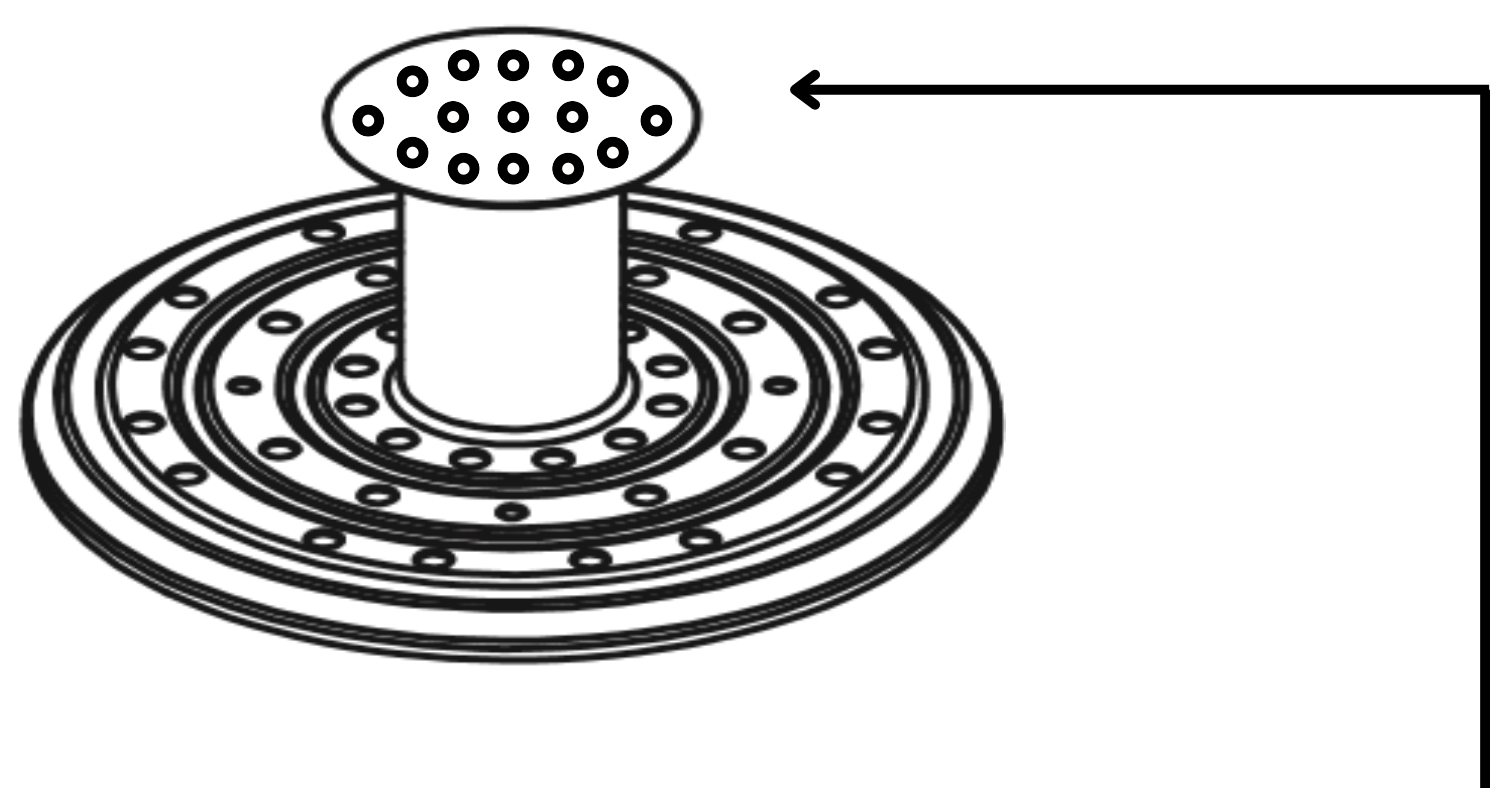

The holes here can be used to hold skewers in a standing position, so the skewers won't fall off while grilling.

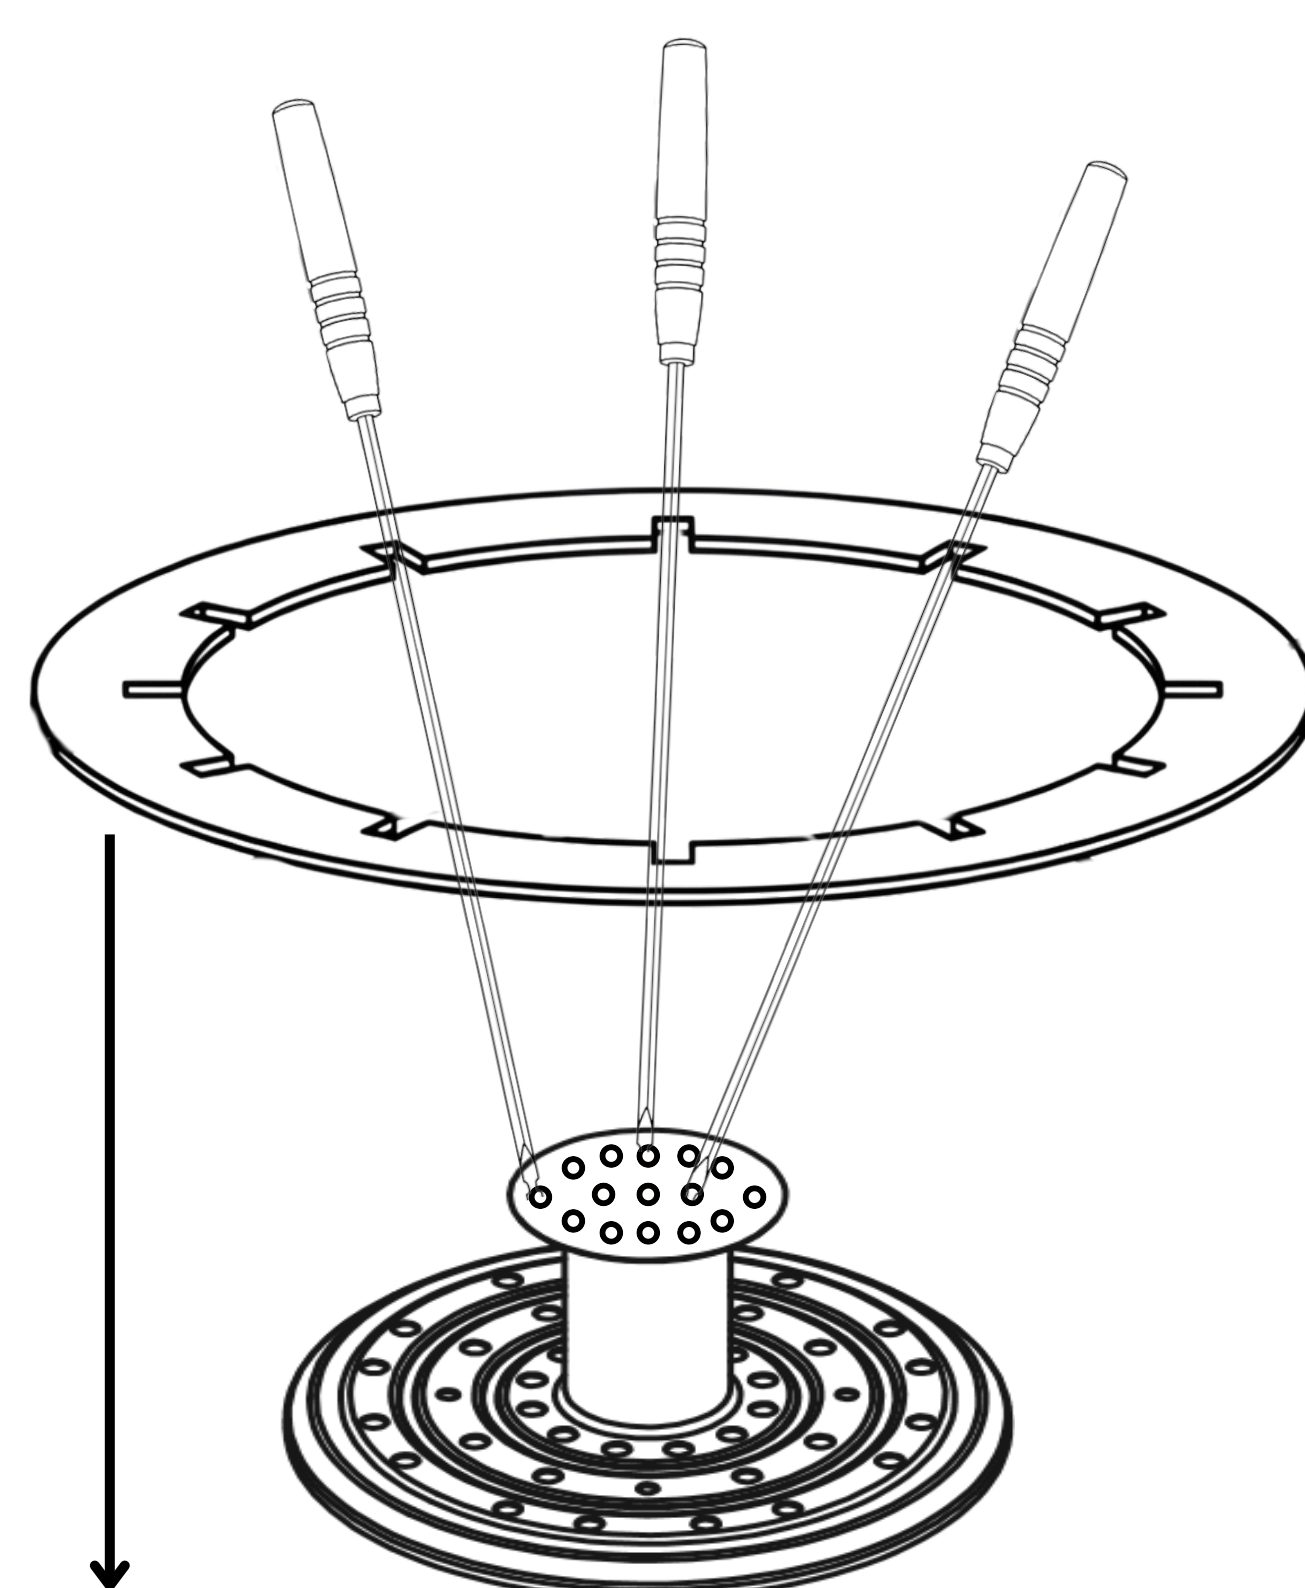

The top ring helps hold the skewers upright.

