



WALL CONTROL PANEL

DESCRIPTION

Created to optimize both product performance and homeowner comfort. Offers simplified control for ease of use.

MODES

The control panel provides the following operating modes:


- Turning unit off
- Minimum speed
- Medium speed
- Maximum speed

COMPATIBILITY

Compatible with all Frigate HRV/ERV models.

WIRING DIAGRAM

HRV/ERV EXTERNAL TERMINAL

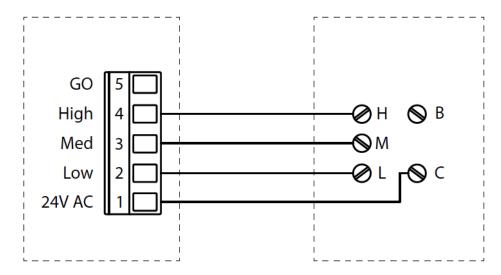





516-256-3131



HVAC Manufacturer's Representive