


1 – DIP-SWITCH SETTING FOR THE SELECTION OF THE TRANSMISSION CODE


1.1 – Remove the back cover:

Remove the small cover present in the back part of the remote.

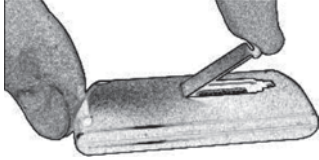

1.2 – Setting of Dip Switch code:

Copy from the receiver or from another working remote the dip-switch sequence.

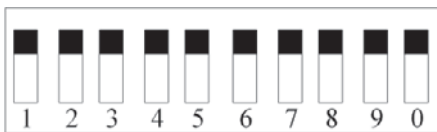

Repeat the procedure by starting at point 1 for each remote requiring programming.

1.3 – Close the small back cover

Re-position the small cover in the back of the remote.

2 – LOW BATTERY & REPLACING THE BATTERY

2.1 – Indication of low battery:

If the blinking of the transmission LED is slow while pressing a button on the remote, this means that the battery is low.

2.2 – Battery replacement:

- Unscrew the screw located on the back side of the cover.
- Open the remote by forcing the two half shells apart.
- Replace the battery with an equivalent model (model 3V CR2032).
- Close the cover, paying particular attention to the right insert of the keys. Tighten the screws on the back of the cover.

