

## CODING YOUR NEW REMOTE TO YOUR MOTOR CONTROL BOARD

1. Access the control board of your Stagnoli automation
2. With the control board LC-Display already in the start/status menu;
  - > Press the 'E' button three (3) times;
  - > The LC-Display will scroll the text: 'push', indicating the system is in the learn mode
3. Take your new remote and press the button you wish to be stored for 1 second;
  - > The LC-Display shows the text 'ok' indicating success
4. Repeat this step twice to exit programming;
  - > Press & Hold for 3 seconds, then release the 'E' button
  - Note: if you do nothing, after 30 seconds the Display will automatically return to the start/status menu
5. To store other remote controls, repeat from step 1



## BATTERY REPLACEMENT

- If the battery is low, the LED will wink every time the button is pushed
- CR2032 3V Lithium battery
- Please replace the battery ensuring polarity (+/-) is correct
- The old battery must be disposed according to the local environmental regulations
- Electrolyte contained in the batteries is extremely irritating for eyes and skin. If you come into contact with it, wash immediately with water and consult a doctor

