


Creative Touch Interactive Flat Panel Displays

Cleaning and maintenance



With touch screens, you will want to clean and sanitise your screen. Due to the protective coatings on the Optoma Creative Touch Interactive Flat Panels, you must follow these steps to look after your display so that it remains protected.

Everyday Cleaning

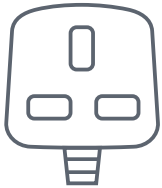

Turn off and unplug the IFP.



Wipe screen and frame clean with dry, lint free microfiber cloth.

Anti-bacterial Cleaning



Turn off and unplug the IFP.



Spray second microfiber cloth with 99.5% alcohol solution.



Put on and use protective gloves.



Wipe screen, frame and accessories. Make sure they are dry before use.



Wipe screen with dry, lint free microfiber cloth to remove any particles.



Discard or thoroughly clean gloves and cloths.

DO NOT:




Use harsh chemicals or any glass or surface cleaner.



Spray anything directly on to the screen.



Wet or moisten your microfiber cloth.

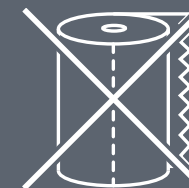

Use paper towels or anything that may scratch the screen.