

Aluminum EZ Table for Tire

EZTRUNK™ ASSEMBLY

MANUAL

#1900 0096

MAKE IT EZ

Print the latest manual &
Watch the EZTRUNK Video



Scan QR CODE for Video &
PDF MANUALS



Customer Service

Any question? WE ARE HERE TO HELP!

Text or Call **203-901-0055** / Call **203-591-9060**

 
EMAIL US: SERVICE@EZTRUNK.NET

7 days a week 8:30 am EST

WE CAN HELP YOU!

PO# :

Please read instructions fully before beginning assembly



NO	Illustration	Description	Part#	QTY.
1		EZ Table	19000096	1
2		Tire Support Bar	1900009601	1 Pre Installed
3		Short Leg-Left	1900009602	1 Pre Installed
4		Short Leg-Right	1900009603	1 Pre Installed
5		Long Leg	1900009604	1 Pre Installed
6		Thumb Turn Bolt	06081	3 Pre Installed
7		Webbing Strap	1900009605	1 Pre Installed

WARNING:

EZ Table is NOT to be used as a step, or seat. Using the table as either could result in bodily injury or damage to table.

ALWAYS remove table before driving.

EZ Table Max load capacity is: 50lbs(when table is installed properly)

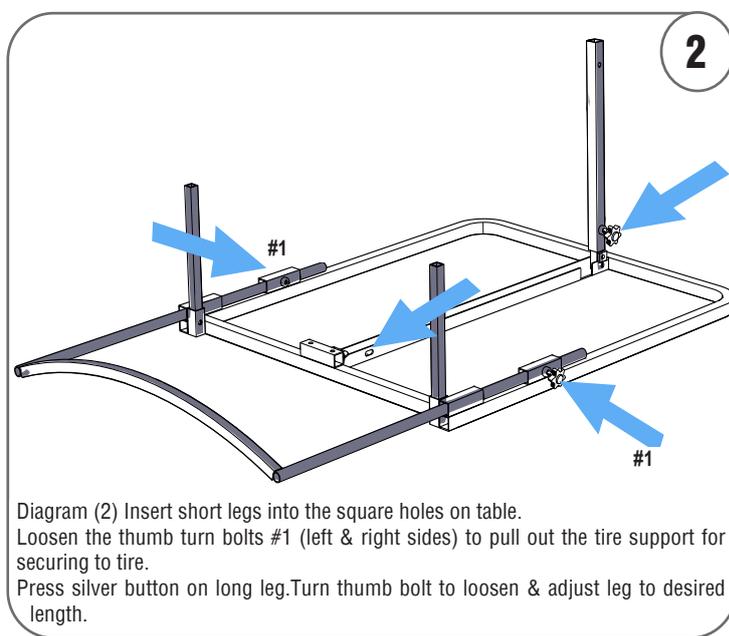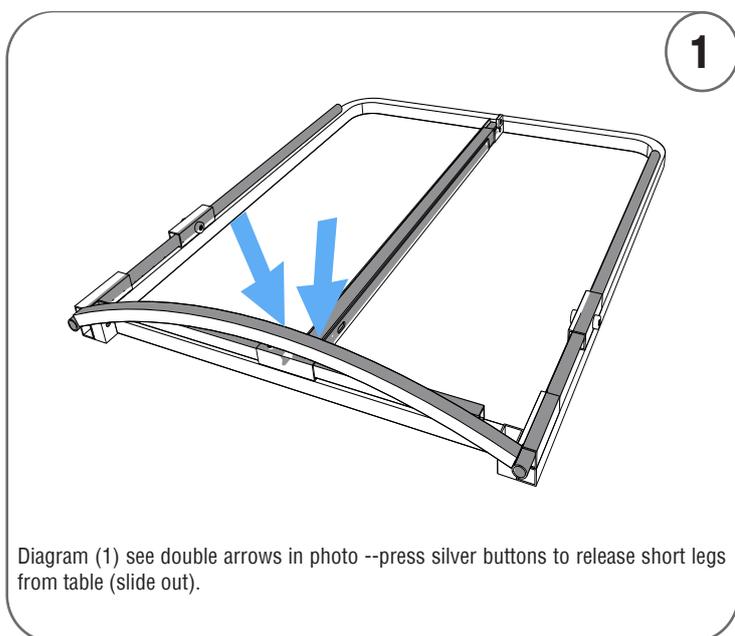

BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON EZTRUNK.NET



3

Diagram (3) Place table over tire. Hold table in place with pressure and hand pull the support bar towards you to make a secure tight fit. Then tighten the thumb bolt on each side of table.



4

Diagram (4) Take hook side of webbing and feed through Hole #1 & #2 hooking onto Hole #3. Then adjust webbing tight with fastener to secure tightly to the vehicle tire.



5

Diagram (5) Loosen the thumb turn bolt on center leg and adjust accordingly to the correct height. Tighten bolt to secure. Test stability & positioning by pushing down on all four corners. Table should not move and be secure.



6

Pull the bottom of buckle to release the hook. Follow opposite steps to remove the EZ table from tire.

Customer Service

Any question? WE ARE HERE TO HELP!

Text or Call 203-901-0055 / Call 203-591-9060

EMAIL US: SERVICE@EZTRUNK.NET

7 days a week 8:30 am EST

WE CAN HELP YOU!