# RAZOR JL- JLU- JT Aluminum Tube Doors EZTRUCK™ ASSEMBLY

## MANUAL


#1918 0092 #1918 0094


#### MAKE IT EZ

Print the latest manual & Watch the EZTRUNK Video



Scan QR CODE for Video & PDF MANUALS

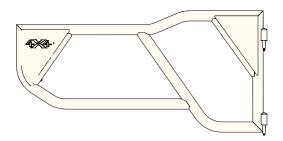

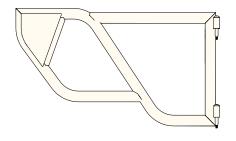

# **Customer Service**

Any question? WE ARE HERE TO HELP!

Text or Call 203-901-0055 / Call 203-591-9060 EMAIL US: SERVICE@EZTRUNK.NET

7 days a week 8:30 am EST

### **WE CAN HELP YOU!**

PO#:

#### BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON EZTRUNK. NET


#### Please read instructions fully before beginning assembly

NO	Illustration	Description	Part#	2Dr QTY. #1918 0092	4Dr QTY #1918 0094
1		Driver / Left Front Door	1918009FD	1	1
2		Passenger / Right Front Door	1918009FP	1	1
3		Driver / Left Rear Door	1918009RD	\	1
4		Passenger / Right Rear Door	1918009RP	\	1
5		Driver Side Front Door Latch	8009DFL	1	1
6		Passenger Side Front Door Latch	8009PFL	1	1
7	long mounting plate	Driver Side Rear Door Latch	8009DRL	\	1
8	long mounting plate	Passenger Side Rear Door Latch	8009PRL	\	1
9		Hinge Bolt M8x20	28201	4	8+1 extra
10		Hinge Lock Nut M8	10082	4	8
11	0	Metal Washer	1508012	8+1 extra	16+2 extra
12		Wrench	#13	1	1
13		Allen Wrench	#5	1	1
14		Allen Wrench #4	#4	1	1


**WARNING** This product is intended to provide added "off-road" convenience and utility to your vehicle. This product is not intended to provide occupant containment or protection in the event of an accident or rollover. Further, "on road" use may involve increased risk of serious injury in the event of side-impact accidents. To reduce risk from these types of injuries: Always wear seat belt and shoulder harness for all vehicle occupants. Keep arms and body inside vehicle. Drive safely, read and understand all manufacturers warnings and product instructions before installation. Periodically check and adjust all latches and fasteners, Failure to do so could result in the doors not latching securely.

CUSTOMER SERVICE: SERVICE@EZTRUNK.NET
Text & Call: 203-901-0055 / Call 203-591-9060

#### BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON EZTRUNK. NET

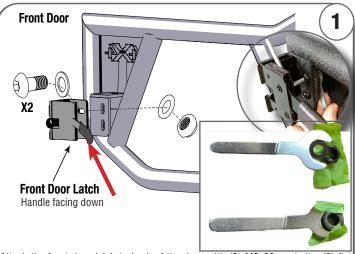

Attach the front door latch to back of the door with (2) M8x20mm bolts, (2) flat washer and (2) lock nut.DO NOT FULLY TIGHTEN hardware. Tap washer and nut on wrench to easy access back of door looking bracket.

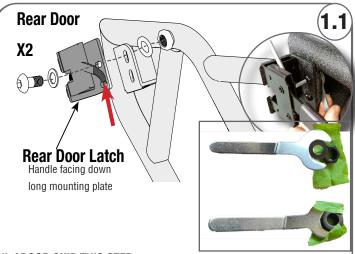

JL 2D00R SKIP THIS STEP. Attach the rear door latch to back of the door with (2) M8x20mm bolts, (2) flat washer and (2) lock nut.D0 NOT FULLY TIGHTEN hardware. Tap washer and nut on wrench to easy access back of door looking bracket.



**CAUTION!** To avoid risk of injury latch mechanism must be properly adjusted before use. Inspect and adjust the door latch alignment to the door striker loop on the vehile. Check next step for adjust latch. Do not use door/latch if damaged.



The rubber stop should not hit the jeep while adjusting. Open the latch by lift the latch handle up. Align the lock to the vehicle striker. Leave a little space between the Jeep and the lock. Make sure the lock hits the sticker in the middle. Then tighten the lock. Adjust again if needed.



Adjust the rubber stop so the doors do not move when driving. Turn the rubber to adjust. Adjust the 2 screws if needed.

