



ENGINEERED FOR MOTION



TC-CK1-SBE-2.0

INTERSECTOR MICROWAVE VEHICLE MOTION SENSOR

PRODUCT MANUAL

Software version 2.0

The information contained in this document are proprietary to MS Sedco, Inc. Information stated in this document are not to be distributed to people other than those expressly accepted by MS Sedco.

TABLE OF CONTENTS

SECTION & DESCRIPTION	PAGE
Table of Contents	ii
List of Figures	iii
List of Tables	iv
1 General Information	1
1.1 Theory of Operation	1
1.2 General Description	1
1.3 Glossary	1
2 Select Mounting Location	4
2.1 Mounting Pole Selection	4
2.2 Mounting Height	5
2.3 Offset Angle	6
2.4 Tilt Angle	6
2.5 Mounting Sensor for Accurate Bicycle Classification	7
2.6 Mounting Examples	7
2.6.1 Mounting Example 1: Stop Bar Detection / Advanced Detection	7
2.6.2 Mounting Example 2: Advanced Only Detection	7
2.6.3 Mounting Example 3: Departure Detection	8
2.6.4 Mounting Example 4: Wrong Way Detection	9
3 Sensor Installation	11
3.1 Tool Requirements	11
3.2 TC-CK1-SBE-2.0 Ethernet Cable Termination	11
3.3 TCIB / Cabinet Ethernet Cable Termination	13
3.4 Connecting Equipment	13
3.4.1 TC-CK1-SBE-2.0	14
3.4.2 TCIB	15
3.4.3 TCIB-UNI	15
4 TC-CK1-SBE-2.0 Configuration Setup	16
4.1 Equipment Needed	16
4.2 Hardware Configuration	16
4.3 Laptop Ethernet Configuration	17
4.4 TC-CK1-SBE-2.0 Setup Configuration	20
5 TC-CK1-SBE-2.0 Settings Customization	21
5.1 Sensor Information	21
5.2 Initial Setup	22
5.2.1 Set RF Channel	23
5.2.2 Offset Angle	23
5.2.3 Unit Selection	24
5.2.4 Emulated Presence and Automated OZP	24
5.3 Zone Configuration	24
5.3.1 Opto Outputs	25
5.3.2 Zone Location and Size Adjustment Parameters	26
5.3.3 Zone Activation Timing Parameters	27
5.3.4 Vehicle Classification Parameters	28

TABLE OF CONTENTS

SECTION & DESCRIPTION	PAGE
5.3.5 Speed Condition Parameters.....	28
5.3.6 Departure Detection.....	29
5.3.7 Zone Description.....	29
5.3.8 Vehicle Count.....	29
5.4 Settings Tab.....	29
5.4.1 TC-CK1-SBE-2.0 Portal Page Declutter Options.....	30
5.4.2 Rain Failsafe Feature	32
5.4.3 Bike Classification Sensitivity Adjustment.....	34
5.4.4 Simulation Mode	34
5.4.5 Zone Clear Feature.....	34
5.5 Vehicle Table	35
6 TC-CK1-SBE-2.0 Grid View.....	36
6.1 Grid View Markings	37
6.2 Zone Rendering	37
6.3 Vehicle Rendering	37
6.4 Set Display Area.....	38
6.5 Opto Outputs	38
7 Download and Upload TC-CK1-SBE-2.0 Settings	40
7.1 Download TC-CK1-SBE-2.0 Settings.....	40
7.2 Upload TC-CK1-SBE-2.0 Settings	40

LIST OF FIGURES

FIGURE & DESCRIPTION	PAGE
Figure 1: Mounting Location Pictorial	4
Figure 2: Offset Angle Illustration	6
Figure 3: Tilt Angle Pictorial	6
Figure 4: Stop Bar Detection with Advanced Detection.....	7
Figure 5: Advanced Only Detection	8
Figure 6: Departure Detection	8
Figure 7: Wrong Way Detector Placement Option 1 - At the Intersection	9
Figure 8: Wrong Way Detector Placement Option 2 - Along the Approach	10
Figure 9: Quick Connect Assembly Diagram.....	11
Figure 10: Ethernet Cable Preparation Pictorial.....	11
Figure 11: EIA / TIA 568B Standard Wiring	12
Figure 12: Insert Wires into Load Bar and Trim.....	12
Figure 13: Inserting Load Bar into RJ-45	13
Figure 14: Modular Plug Termination Tool Example	13

LIST OF FIGURES

FIGURE & DESCRIPTION	PAGE
Figure 15: Securing Weather Sealed Connector to RJ-45 Cable.....	14
Figure 16: Mating Ethernet Cable to Sensor	14
Figure 18: Minimum Intersector Setup Configuration	16
Figure 19: Recommended Intersector Setup Configuration	17
Figure 20: Select Control Panel - Windows 10.....	17
Figure 21: Select Network and Sharing Center - Windows 10	18
Figure 22: Select “Change Adapter Settings”	18
Figure 23: Select the Ethernet Port to Customize	19
Figure 24: Ethernet Properties Selection	19
Figure 25: Internet Protocol Version 4 (TCP/IPv4) Properties Customization	20
Figure 26: TC-CK1-SBE-2.0 Portal Page - Sensor Information	21
Figure 27: Initial Setup Screen Shot.....	22
Figure 28: Zone Configuration Fields	25
Figure 29: Zone Size Definition	27
Figure 30: Settings Tab.....	30
Figure 31: Target Setup Table and Vehicle Table Declutter View	31
Figure 32: Vehicle Table Visible and Target Setup Table Decluttered	32
Figure 33: Rain Intensity Factor to Rainfall Rate Graph.....	33
Figure 34: Vehicle Table	35
Figure 35: TC-CK1-SBE-2.0 Grid View	36
Figure 36: Download and Upload TC-CK1-SBE-2.0 Settings	40

LIST OF TABLES

TABLE & DESCRIPTION	PAGE
Table 1: Tilt Angle Starting Matrix	5
Table 2: View Distance based on Tilt Angles	5

GENERAL INFORMATION

THEORY OF OPERATION:

The TC-CK1-SBE-2.0 uses microwave radar to identify, classify, and track vehicles by position and speed. This information is overlaid in an X-Y coordinate system, allowing users to set up detection zones. Detection of a vehicle in a user-defined zone will produce a signal to the assigned TCIB-UNI output. Users can associate unique outputs, time delays, or output delays with individual zones.

The TCIB card monitors whether the sensor is functioning and provides a means for end users to set up zones via a connection to a laptop computer. It also provides the outputs to the control panel and includes LEDs that allow end users to verify operation without having to connect a laptop.

GENERAL DESCRIPTION:

The TC-CK1-SBE-2.0 is a radar vehicle motion tracking and presence sensor designed for intersection control. The TC-CK1-SBE-2.0 offers several advantages when compared to cameras or loop detectors:



- Detection is not affected by weather¹
- Immune to sunrise / sunset or post-rain glare
- Not susceptible to in-road breakage
- Multiple lanes can be covered by a single unit
- Easily installs to corner signal poles and signal mast arms
- No privacy concerns
- Reduces construction costs

Through its user interface, the TC-CK1-SBE-2.0 allows users to visually track vehicles as they approach the intersection and allows easy setup of detection zones to provide programmable inputs to a traffic control cabinet. The interface also provides the ability to verify that the system is functioning properly, or to troubleshoot the system.

GLOSSARY:

SENSOR / TC-CK1-SBE-2.0: MS Sedco radar sensor for motion and presence detection. This sensor operates similarly to the motion-only sensor (TC-CK1-VMS), but provides additional features to emulate presence for vehicles that come to a stop in the sensor's detection area.

TRAFFIC CABINET INTERFACE BOARD (TCIB): MS Sedco detector rack interface board that is compatible with NEMA, 170, 179, and 2070 cabinets. At least 1 TCIB is required to communicate with the controller in the cabinet and power the sensor. There are 6 different

¹ Up to 2 inches of rain per hour

GENERAL INFORMATION *(continued)*

types of TCIBs:

- **TCIB-2.1 (primary):** Provides 2 outputs and uses a single slot in the detector rack
- **TCIB-2.1 (secondary):** Provides 2 additional outputs and uses a single slot in the detector rack
- **TCIB-4.1 (primary):** Provides 4 outputs and uses a single slot in the detector rack
- **TCIB-4.1 (secondary):** Provides 4 additional outputs and uses a single slot in the detector rack
- **TCIB-4.2 (primary):** Provides 4 outputs and uses two slots in the detector rack
- **TCIB-4.2 (secondary):** Provides 4 additional outputs and uses two slots in the detector rack

TCIB-UNI: Provides the same functionality as a TCIB, but has a built-in Ethernet Switch (ESW) and another portal page that displays other TCIB-UNIs and TC-CK1 sensors on the Ethernet network, as well as some built-in applications for configuring the Intersector System.

TC-CK1-SBE-2.0 / INTERSECTOR SYSTEM: The combination of MS Sedco equipment necessary to detect moving vehicles and register activations to the traffic cabinet. Typically, this system includes a TC-CK1-SBE-2.0 and a TCIB-UNI with optional secondary TCIB card. Additional equipment required to properly operate these units may also be included. Examples include an Ethernet Cable Extender (ECX), External POE power supply (TCIPI-4), and/or TCIB Card Cage (TCIB-CC).

BORESIGHT / GUN-SITE: Centerline of the radar beam, designated by raised plastic moldings on the front cover of the sensor.

AZIMUTH ANGLE: Angle, in degrees, that comprises the radar beam's / detection coverage's "left – right" boundary. The radar beam's boundary is the "pie-wedge" that is centered at the radar's boresight.

OFFSITE ANGLE: Angle, in degrees, between the centerline of the radar's beam and the flow of traffic in the region of interest.

ELEVATION ANGLE: Angle, in degrees, of the radar beam's "up – down" boundary.

Tilt Angle: Angle, in degrees, the radar is tilted up or down. Unless explicitly stated, tilt angles are relative to the natural slope / grade of the road.

TILT ANGLE: Angle, in degrees, the radar is tilted up or down. Unless explicitly stated, tilt angles are relative to the natural slope / grade of the road.

TC-CK1-SBE-2.0 PORTAL PAGE: The webpage that is displayed in your web browser when the TC-CK1-SBE-2.0 is connected to the Setup Port of the TCIB, a laptop is connected to the Laptop Ethernet Port, and the laptop network settings are configured for the Intersector System. This webpage consists of five main parts: SENSOR INFORMATION, TARGET SETUP TABLE, SETTINGS TAB, VEHICLE TABLE, and TC-CK1-SBE-2.0 DATA DISPLAY.

SENSOR INFORMATION: This section of the TC-CK1-SBE-2.0 Portal Page provides general information about the connected sensor (TC-CK1-SBE-2.0). This section consists of mostly read-only fields with basic information (sensor model number, software versions, and an operation timer), as well as user description field. This portion of the TC-CK1-SBE-2.0 Portal

GENERAL INFORMATION *(continued)*

Page also displays error notifications if the system has an internal failure that would prevent the sensor from operating optimally.

TARGET SETUP TABLE: This section of the TC-CK1-SBE-2.0 Portal Page provides the user the ability to customize the following characteristics of each zone (up to 8):

- Location of the zone relative to the sensor
- Time criteria a vehicle must be in the zone prior to activation
- Activation time following a vehicle activating the zone
- Count of vehicles meeting the activation criteria passing through the zone
- Correlation of zone activation to actual Opto Output on the TCIB
- Size / Classification of a vehicle required to activate the zone
- Minimum and/or maximum speed of a vehicle required to activate the zone
- Toggle for emulated vehicle length
- Vehicle travel direction required to activate the zone

ZONE: User-defined detection area that is customizable, based on the desired activation criteria.

VEHICLE CLASSIFICATION: Generically, vehicle classification refers to the type of vehicle being referred to. In the Vehicle Table, a numerical value is assigned to each tracked object to represent its relative size, which defines how the sensor distinguishes classification automatically. Classifications include:

- **VEHICLE:** Any object capable of being tracked by the radar sensor.
- **BIKE:** An object being tracked by the radar that is smaller in size / radar cross section, and whose speed never exceeds 18 mph (29 kmph).
- **CAR:** An object being tracked by the radar that is larger in size / radar cross section, and/or any vehicle whose speed exceeds 18 mph (29 kmph) in the detection coverage area.

SETTINGS TAB: Menu of TC-CK1-SBE-2.0 Portal Page declutter options and advanced TC-CK1-SBE-2.0 settings. Menu options are hidden until the “Settings” button is selected from the TC-CK1-SBE-2.0 Portal Page.

VEHICLE TABLE: The real-time numerical data values for vehicles being tracked by the radar. Information displayed in this table are typically used by more advanced users during initial zone setup, and is therefore hidden by default. To view the table, enable the “Vehicle Table” checkbox in the Settings Tab.

TC-CK1-SBE-2.0 DATA DISPLAY: The real-time visual display of TC-CK1-SBE-2.0 zones, graphical representation of vehicles being tracked by the radar, multiple display options and the Opto-Output activation display.

SELECT MOUNTING LOCATION

If an Intersection Pre-Analysis performed by MS Sedco is available, utilize the mounting specifications provided in the analysis. Please contact your distributor or MS Sedco if clarifications or deviations from the Intersection Analysis is needed.

If an Intersection Pre-Analysis is not available, continue with the content in this section.

MOUNTING POLE SELECTION:

Selecting the best location to mount the sensor is vital for optimal performance of the TC-CK1-SBE-2.0. The sensor should be mounted on a metal support pole or mast arm at a mounting height of 14 to 20 feet. The regions of desired detection should be between 50 to 600 feet from the sensor, and the offset angle between -15 to +15 degrees. If mounting on a mast arm, the sensor should be mounted within 10 feet of the support pole or before the first signal light, whichever distance is shorter. Figure 1 below provides an illustration of the acceptable mounting locations. Wooden support poles are not recommended as installation locations due to the high variability in their stability over temperature and humidity.

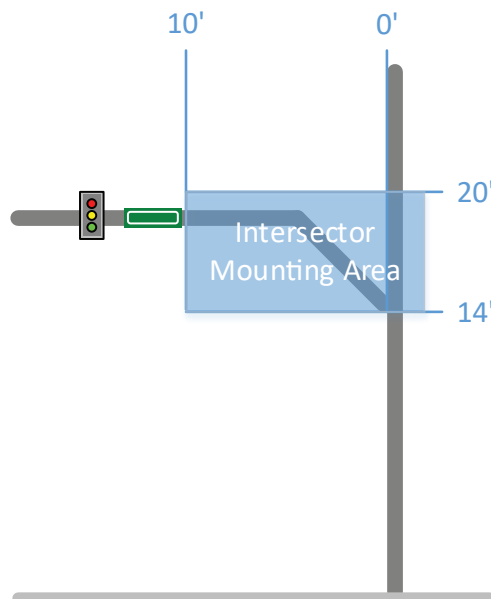


Figure 1: Mounting Location Pictorial

In addition to basic TC-CK1-SBE-2.0 setup optimization locations, the location selected should also minimize environmental radar interference objects, such as trees with branches or large signs that would block the radar and its desired coverage area.

SELECT MOUNTING LOCATION *(continued)*

MOUNTING HEIGHT:

The sensor should be mounted high enough to reduce occlusions from large vehicles and meet area minimum mounting height requirements, but low enough to get proper stop bar coverage with minimizing tilt angle for shorter stop bar distances. The table below provides theoretical values of starting tilt angle (relative to road slope / grade) values based on Mounting Height and Stop Bar Distance².

Table 1: Tilt Angle Starting Matrix

Tilt Angle (Deg.)		Distance to Front of Zones (ft)								
		60	70	80	90	100	110	120	130	140+
Mounting Height (ft)	14	-8	-6	-3	-2	-1	0	0	0	0
	15	-9	-7	-4	-3	-1	0	0	0	0
	16		-8	-5	-3	-2	-1	0	0	0
	17		-9	-6	-4	-3	-1	0	0	0
	18			-7	-5	-4	-2	-1	0	0
	19			-8	-6	-5	-3	-2	0	0
	20			-8	-7	-6	-3	-3	-1	0

The table below illustrates the maximum detection distance in relation to mounting height and distance to stop bar based on the tilt angles and mounting heights from the previous table.

Table 2: View Distance based on Tilt Angles

View Dist. (ft)		Distance to Front of Zones (ft)								
		60	70	80	90	100	110	120	130	140+
Mounting Height (ft)	14	100	133	267	401	600	600	600	600	600
	15	95	122	215	286	600	600	600	600	600
	16		114	183	305	458	600	600	600	600
	17		107	162	243	324	600	600	600	600
	18			147	206	257	515	600	600	600
	19			135	181	217	363	544	600	600
	20			142	163	190	382	382	600	600

² Tilt angles provided in Table 1 are recommended starting values. Actual results will depend on the environment of the installation site, and may need to be adjusted during setup to optimize performance.

SELECT MOUNTING LOCATION *(continued)*

OFFSET ANGLE:

If an Intersection Pre-Analysis from MS Sedco is available, find a “landmark” that aligns with the center line of the sensor. If such a natural landmark is not readily available, use a traffic cone to mark the spot where the centerline of the radar meets the side of the road if a cone is available and it is safe to do so. Once a landmark is located or a cone is placed, use the gun site on the top of the sensor to aim the unit left or right until the center of the unit aligns with the landmark.

If an Intersection Pre-Analysis is not available, visualize the detection coverage region. Using the gun site on the front of the sensor, aim the unit left/right until the center of the desired detection zone lines up in gun-sites³. See the figure below.

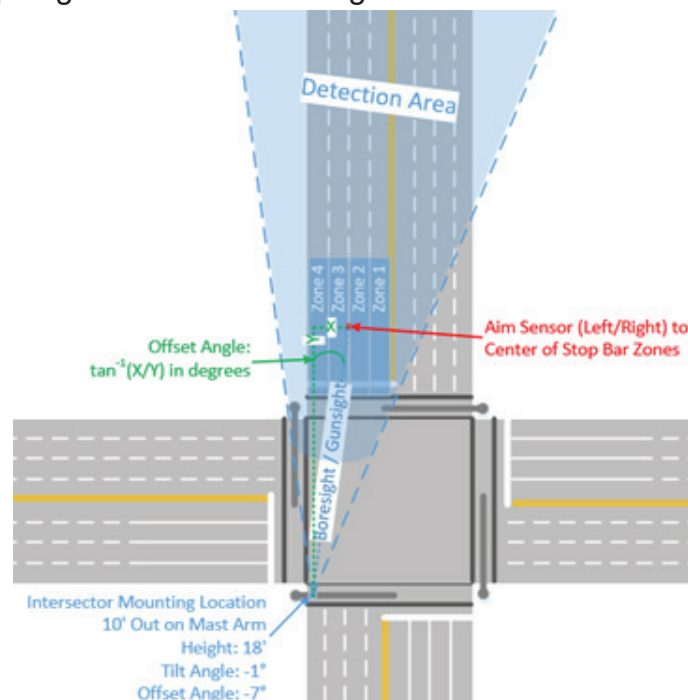


Figure 2: Offset Angle Illustration

TILT ANGLE:

After setting the Offset / Azimuth Angle, set the tilt angle of the unit using an angle-meter to the value determined in Table 1 + natural road slope / grade. Note: If bicycle detection is necessary, increase the tilt angle by -2° to -3°.

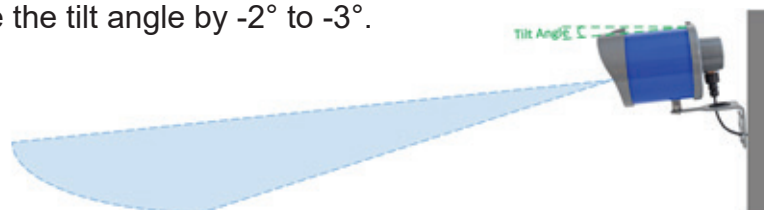


Figure 3: Tilt Angle Pictorial

³ The alignment of offset / azimuth angle is a recommended starting position. Actual results will depend on the environment of the installation site, and may need to be adjusted during setup to optimize performance.

SELECT MOUNTING LOCATION *(continued)*

MOUNTING SENSOR FOR ACCURATE BICYCLE CLASSIFICATION:

Sensor mounting is crucial for accurate bicycle classification. For best results for bike classification, the TC-CK1-SBE-2.0 should be installed at a mounting height between 16 and 20 feet, an offset angle between 0 and ± 10 degrees, and an additional tilt angle of approximately 3 degrees downward (to a maximum of -9 degrees) relative to the slope of the road.

MOUNTING EXAMPLES:

The subsections below provide guidance for common installation applications for the TC-CK1-SBE-2.0. Note that the guidelines stated above should be followed. These examples are meant to be guidelines and for reference only.

Mounting Example 1: Stop Bar Detection / Advanced Detection

The first example in the figure below demonstrates the scenario where advanced detection is used and stop bar detection is required. The TC-CK1-SBE-2.0 is mounted such that the vehicles are approaching it with a minimum offset angle, and the front of the stop bar zone(s) are at least 60 feet from the sensor.

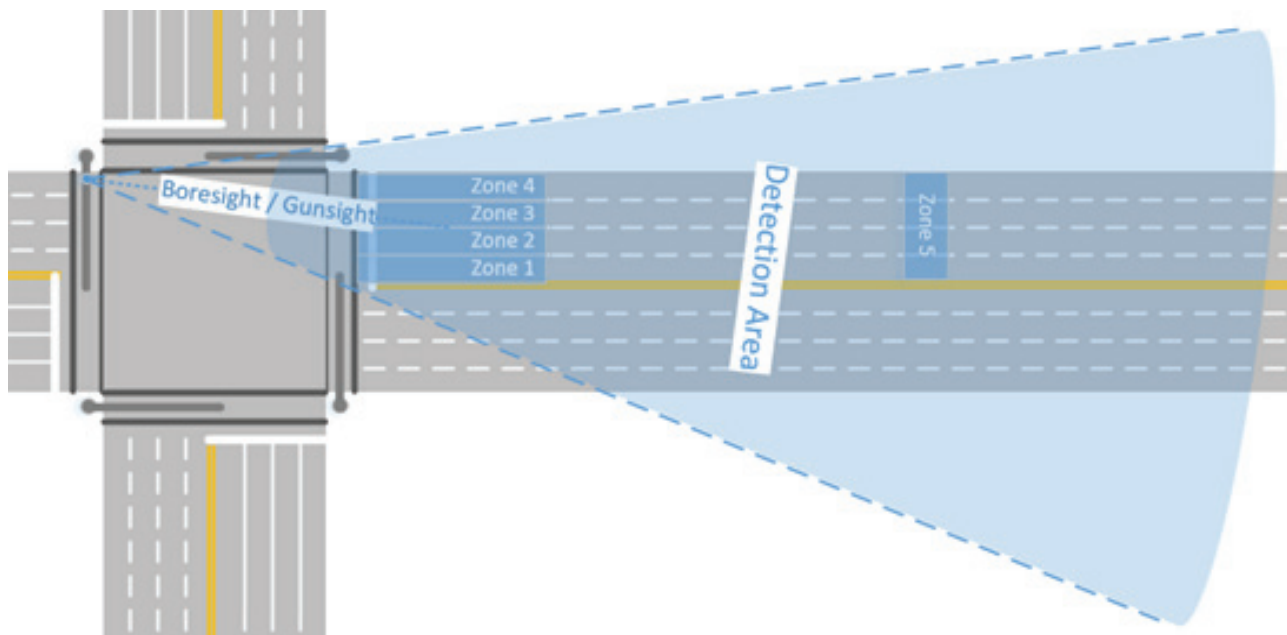


Figure 4: Stop Bar Detection with Advanced Detection

Mounting Example 2: Advanced Only Detection

The next example in the figure below demonstrates the scenario where detection is set back from the stop bar by at least 60 feet, and the region of interest is on the approach with typical traffic going toward the intersection. The most common application for this is advance

SELECT MOUNTING LOCATION *(continued)*

detection on a main street. In this scenario, the sensor is mounted on the “back side” of the intersection to limit the potential for occlusions. This location also reduces the distance needed for detection farther down the approach.

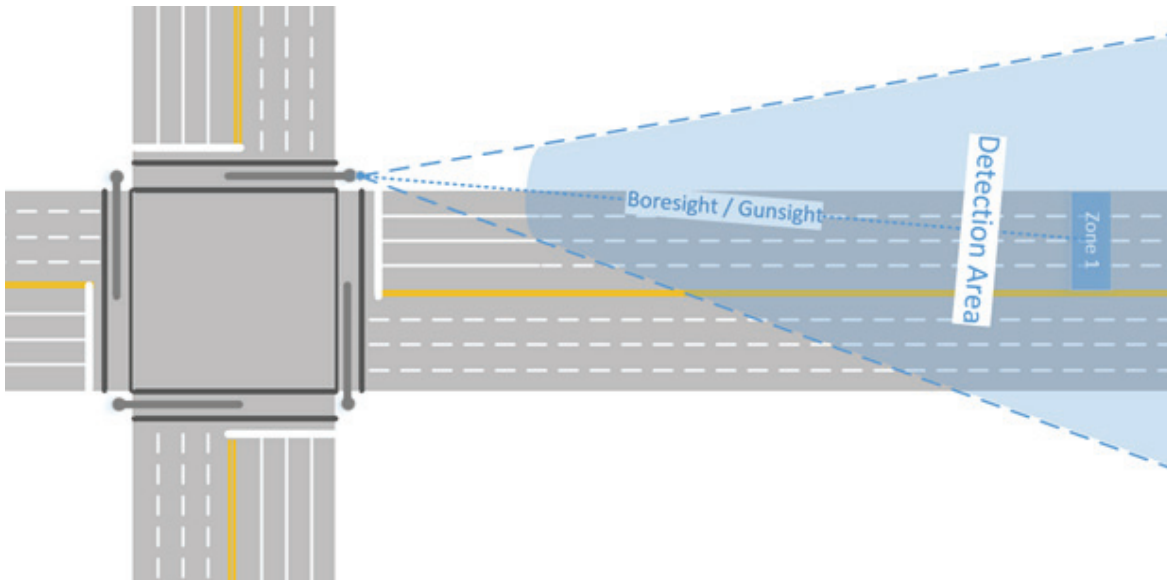


Figure 5: Advanced Only Detection

Mounting Example 3: Departure Detection

A third common use case for the TC-CK1-SBE-2.0 is for Departure Detection. This is common in managed corridors where zone activation(s) are used to “count” the number of vehicles proceeding to the next intersection. In this situation, the sensor is also mounted on the “back side” of the intersection to minimize occlusions. This sensor is mounted to minimize the offset angle to track vehicles moving in the lanes leaving the intersection. In this situation, zones should be set to “pulse” so the output is activated for each vehicle, as well as put in “Departure” detection.

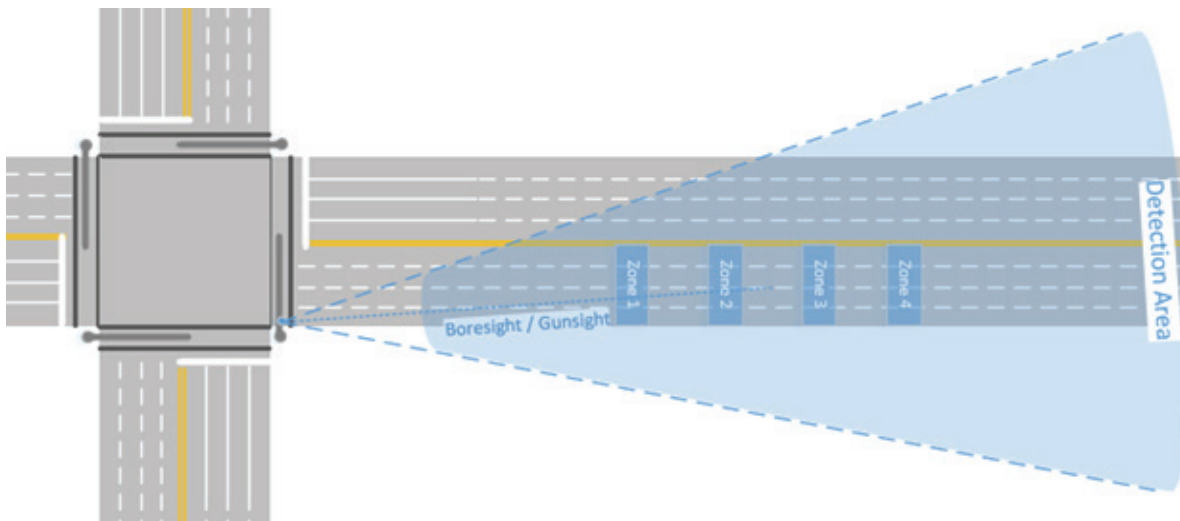


Figure 6: Departure Detection

SELECT MOUNTING LOCATION *(continued)*

Mounting Example 4: Wrong Way Detection

The final common use case for the TC-CK1-SBE-2.0 is wrong way detection in common wrong-way driving conditions, such as one-way streets on city streets or exit ramps coming from major highways or freeways. The TC-CK1-ESW's ability to track individual vehicles and customize multiple, resizable zones with speed settings makes the TC-CK1-SBE-2.0 a valuable tool in wrong way detection systems.

Sensor placement, and subsequent zone placements, ultimately depend on the desired detection trigger points for the final systems. There are two common methodologies for determining zone placement. The first method emphasizes detection at the stop bar. This allows wrong-way drivers to be detected immediately to attempt to minimize the distance they travel the wrong direction. Care must be taken with this type of detection for scenarios where erratic wrong-way motion is common around the stop bar that can cause false activations. Erratic wrong-way motions in this case can include pedestrians moving around at bus stops or cross walks by the stop bar or cars backing up to drive into a different lane. The second method is to place detection farther down the approach to guarantee any activation is for true wrong-way drivers. Care should be taken to place zones far enough from the stop bar that the erratic wrong-way motions are minimized or not present, yet wrong-way drivers do not proceed too far along the approach before being notified of their wrong-way driving.

Since the TC-CK1-SBE-2.0 can activate for approach or departing motion, there are multiple mounting options for the sensor, and each option is optimized for reducing Ethernet cable runs to the controller. Note that for either option, the TC-CK1-SBE-2.0 should be mounted such that detection starts at least 60 feet from the sensor, mounted to reduce the tilt angle required, and should avoid as much cross-traffic that could cause occlusions as possible.

Option 1 is depicted in the figure below. This mounting option is common in situations where the wrong-way detection system is installed in the intersection's cabinet. Note that any zones used in this orientation for wrong-way detection should have their "Depart" checkboxes enabled.

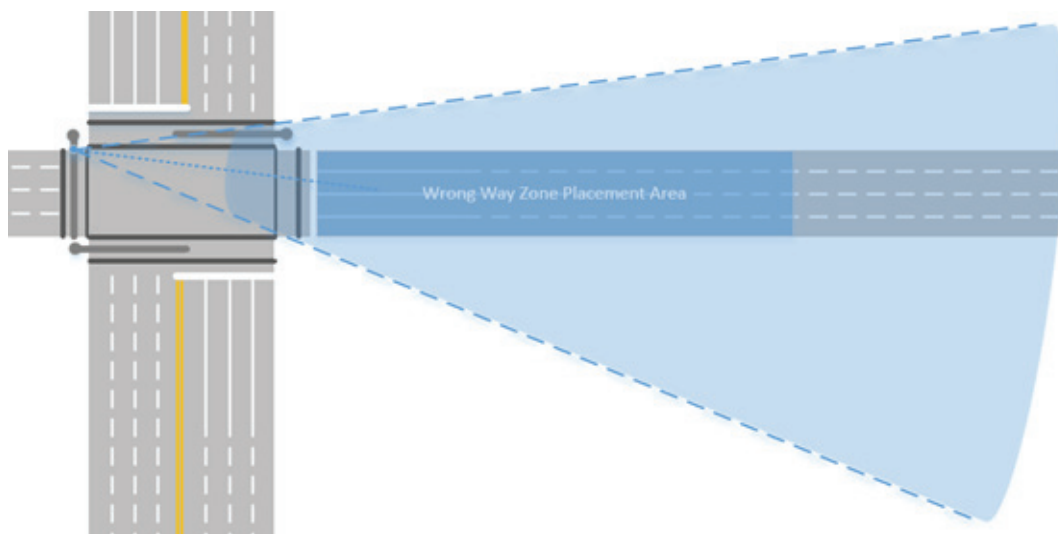


Figure 7: Wrong Way Detector Placement Option 1 - At the Intersection

SELECT MOUNTING LOCATION *(continued)*

Option 2 is depicted in the figure below. This mounting option is common in situations where the TC-CK1-SBE-2.0 is included in a separate wrong-way detection system where the controller not installed in the intersection's cabinet. In this application, all zones should keep the "Depart" checkboxes disabled since the wrong-way motion would be approaching the sensor.

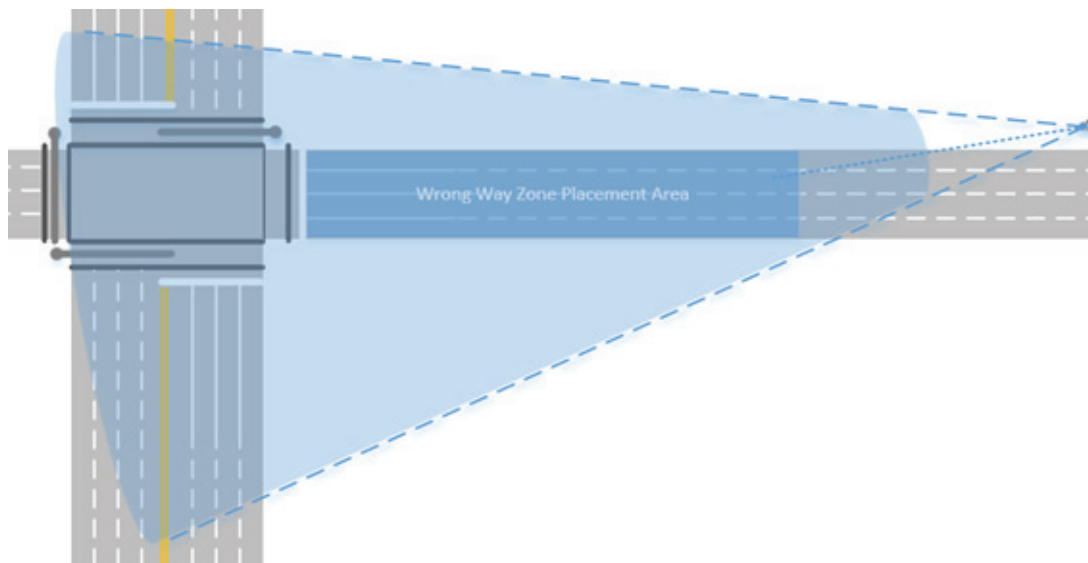


Figure 8: Wrong Way Detector Placement Option 2 - Along the Approach

The number of zones, their placements, and customizable options should be determined based on the wrong-way detection controller. The list below provides best practices found over time:

- If there is a bend along the approach (such as a clover exit ramp), the optimal sensor placement is the location that keeps the most amount of road in the radar beam "wedge".
- Using multiple zones activating in a sequence tends to filter wrong-way false detections due to erratic wrong-way motion common around a stop bar.
- Minimum speed threshold can assist in filtering pedestrians and road or lawn maintenance crews that may pass through the zone on wrong-way motion. Industrial lawn mowers typically drive anywhere from 5 to 13 miles-per-hour.

SENSOR INSTALLATION

Connection of the sensor to the traffic cabinet is accomplished using an Ethernet cable. The cable should be routed through a quick connect assembly that is then connected to the sensor. The other end of the cable is routed to the traffic cabinet and plugs into the TCIB.

TOOL REQUIREMENTS:

To properly install the TC-CK1-SBE-2.0, it is necessary to have the following tools on hand:

- Angle Meter (Digital Preferred)
- 7/16" Box Wrench or Socket
- Modular Plug Termination Tool (Crimp Tool)
- Ethernet Cable Tester
- "Screw Pack" Included with the TC-CK1-SBE-2.0

TC-CK1-SBE-2.0 ETHERNET CABLE TERMINATION:

The TC-CK1-SBE-2.0 utilizes a quick connect that consists of a Shielded Cat. 5e RJ45 Plug, a load bar, and a Plug Housing Assembly. The figure below shows an exploded view of this assembly.

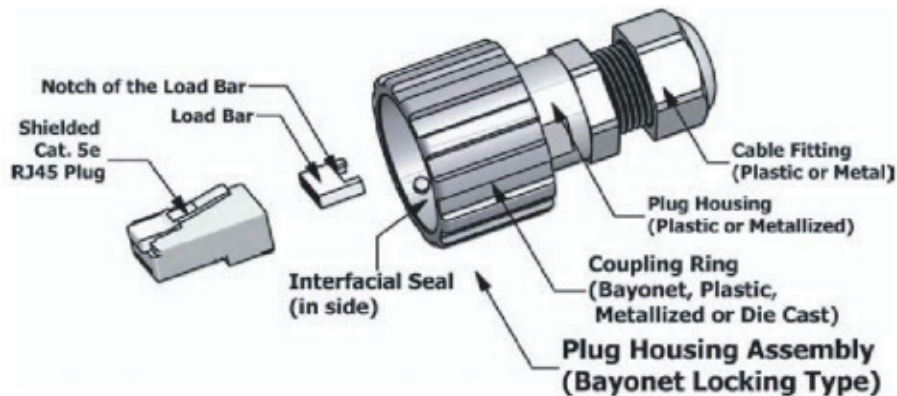


Figure 9: Quick Connect Assembly Diagram

1. It is necessary to prepare the cable and insert it through the housing prior to attaching the load bar and Ethernet connector (RJ45 plug). Using Cat. 5e direct burial cable, strip the insulation jacket back by approximately 25 millimeters to expose the conductor wires. See the figure below.

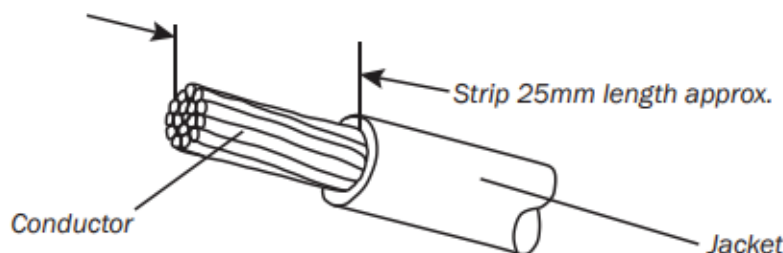


Figure 10: Ethernet Cable Preparation Pictorial

SENSOR INSTALLATION (continued)

- Slide the Coupling Ring, Plug Housing, and Cable Fitting over the Cat. 5e cable such that the Cable Fitting end is toward the spool and the Coupling Ring is toward the cut end of the cable.
- Conductors should be untwisted and aligned side by side for an RJ45 connector. The figure below shows the EIA/TIA 568B standard that is common for USA applications. For regions that use the EIA/TIA 568A standard, reverse the green and orange pairs on both ends of the Ethernet cable.
- Once all wires are aligned and straightened, trim wires so they are all approximately 20 millimeters. Be careful not to remove the insulation of individual conductors.

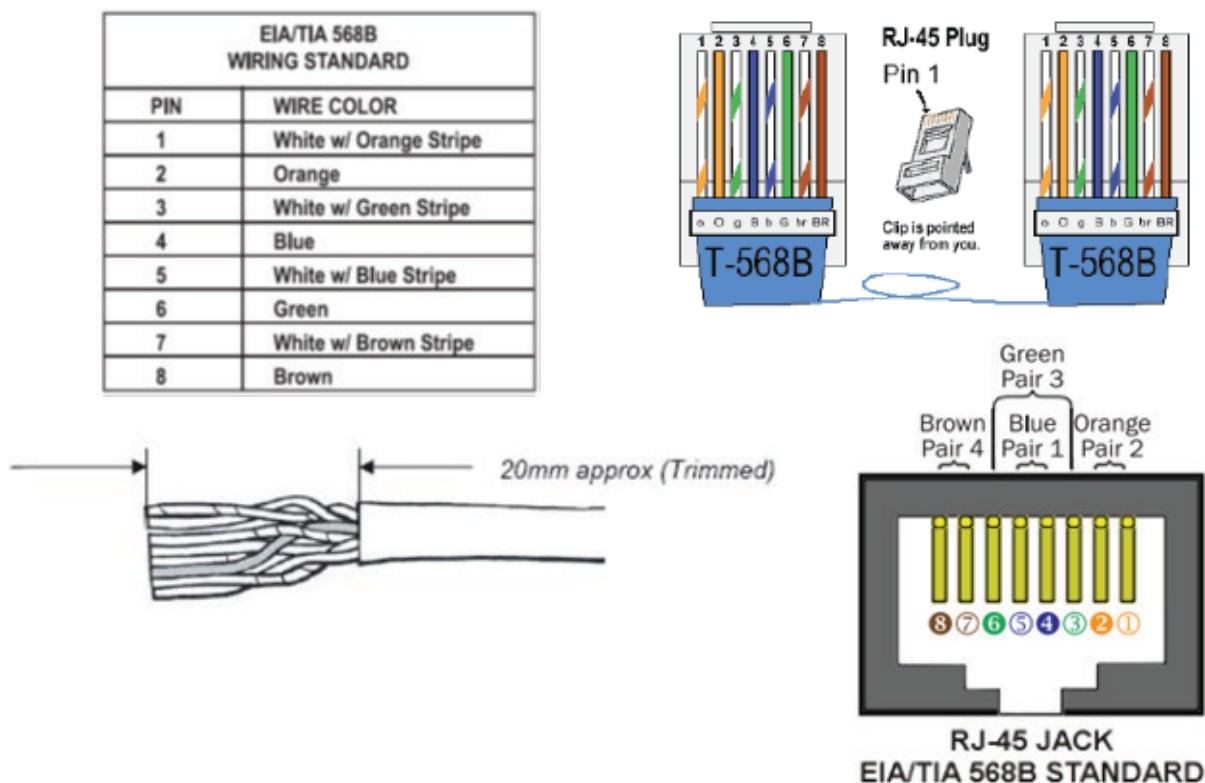


Figure 11: EIA / TIA 568B Standard Wiring

- After inserting the wires into the appropriate positions of the load bar, slide the cable to a point where the cable jacket hits the notch of the load bar. Trim the remaining wire ends to approximately 5 millimeters in length, and then retract the cable, leaving approximately 1 millimeter of wire tips. See the figure below.

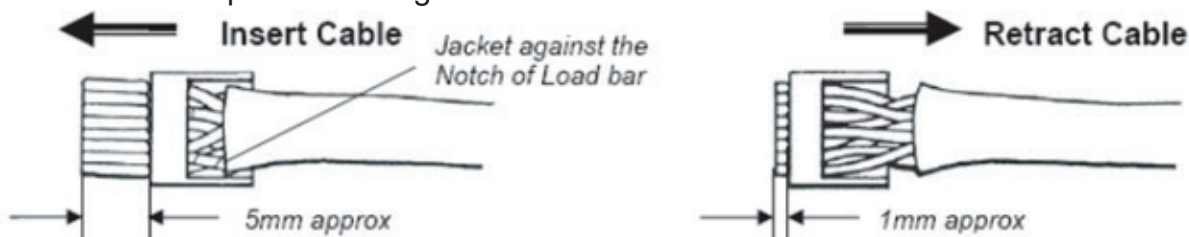


Figure 12: Insert Wires into Load Bar and Trim

SENSOR INSTALLATION *(continued)*

6. Insert the wired load bar into the RJ45 plug all the way until the wire tips are sealed against the inside wall of the plug housing. See the figure below. NOTE: No wires should be exposed when the plug is fully in place.

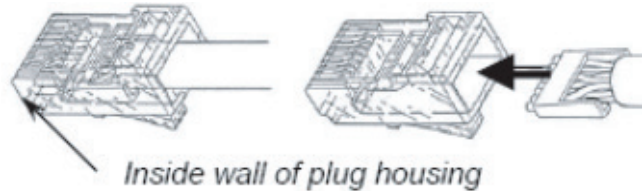


Figure 13: Inserting Load Bar into RJ-45

7. Terminate the cable and the RJ-45 plug with a modular plug termination tool similar to the one shown in the figure below.

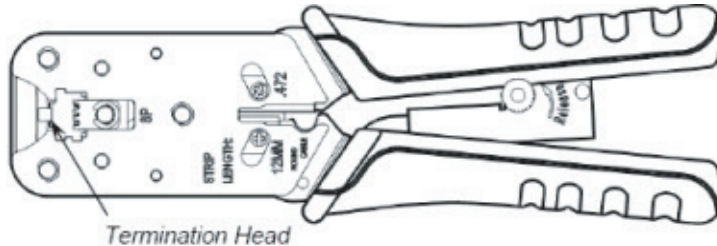


Figure 14: Modular Plug Termination Tool Example

TCIB / CABINET ETHERNET CABLE TERMINATION:

1. Route the Cat. 5e Ethernet cable to the Detector Rack of the traffic cabinet. If installing more than one sensor at once, it may be helpful to designate which cable goes to each sensor. Common methods include masking tape with markings, varying colored electrical tape, or varying number of stripes of electrical tape.
2. Terminate the Ethernet cable with an RJ-45 similar to the method described in the previous section, but without the quick connect assembly shell. Note that this Ethernet cable should be “straight through”, which means that the wire color convention selected for Step 4 above should be followed in the cabinet as well.

CONNECTING EQUIPMENT:

Once the Ethernet cable has been terminated on each end, use the Ethernet Cable Tester to verify the cable was built properly. Note that if an ECX is inline, separate Ethernet tests need to be performed: one on the Ethernet cable from the TCIB to the ECX, and then another test performed on the cable between the ECX and the TC-CK1-SBE-2.0.

Once the Ethernet cabling has been verified, connect the Ethernet cable to its respective component following the steps in the subsections below.

SENSOR INSTALLATION *(continued)*

TC-CK1-SBE-2.0:

1. Depress the locking tab of the RJ-45 plug and align it with the wide slot of the plug housing shown in Detail A of the figure below.
2. Gently pull the cable until the plug is fully seated. Hold the plug in position and rotate cable fitting until tightened to a torque of 3.4 Nm (30 lb-in) as shown in Detail B of figure 15.

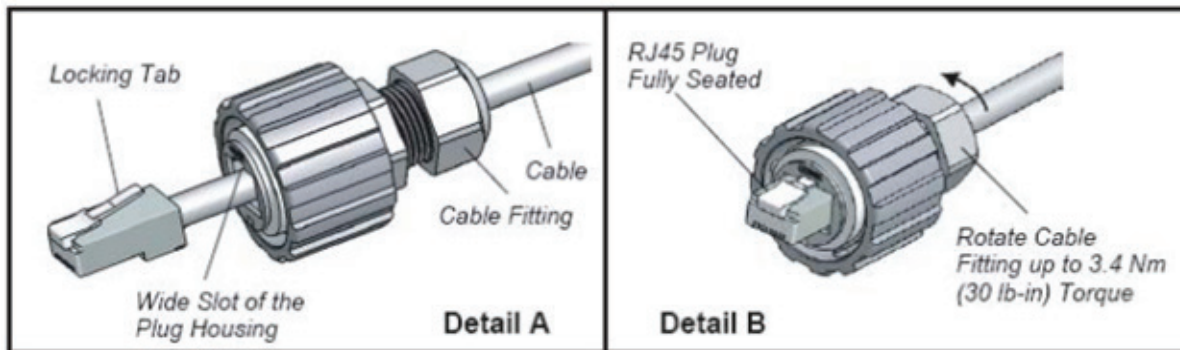


Figure 15: Securing Weather Sealed Connector to RJ-45 Cable

3. Once the quick connector assembly is completed, attach the cable to the sensor. Remove the protective cover from the sensor receptacle assembly by gently rotating the cover counter clockwise.
4. Apply dielectric grease to the interior of the sensor's receptacle assembly.
5. Gently insert the assembled plug (Bayonet) into the jack adaptor of the RJ45 receptacle. Align the 3 keys of the bayonet coupling ring with the 3 channels of the receptacle, then rotate the bayonet coupling ring until the 3 keys "click" into the bayonet channels.

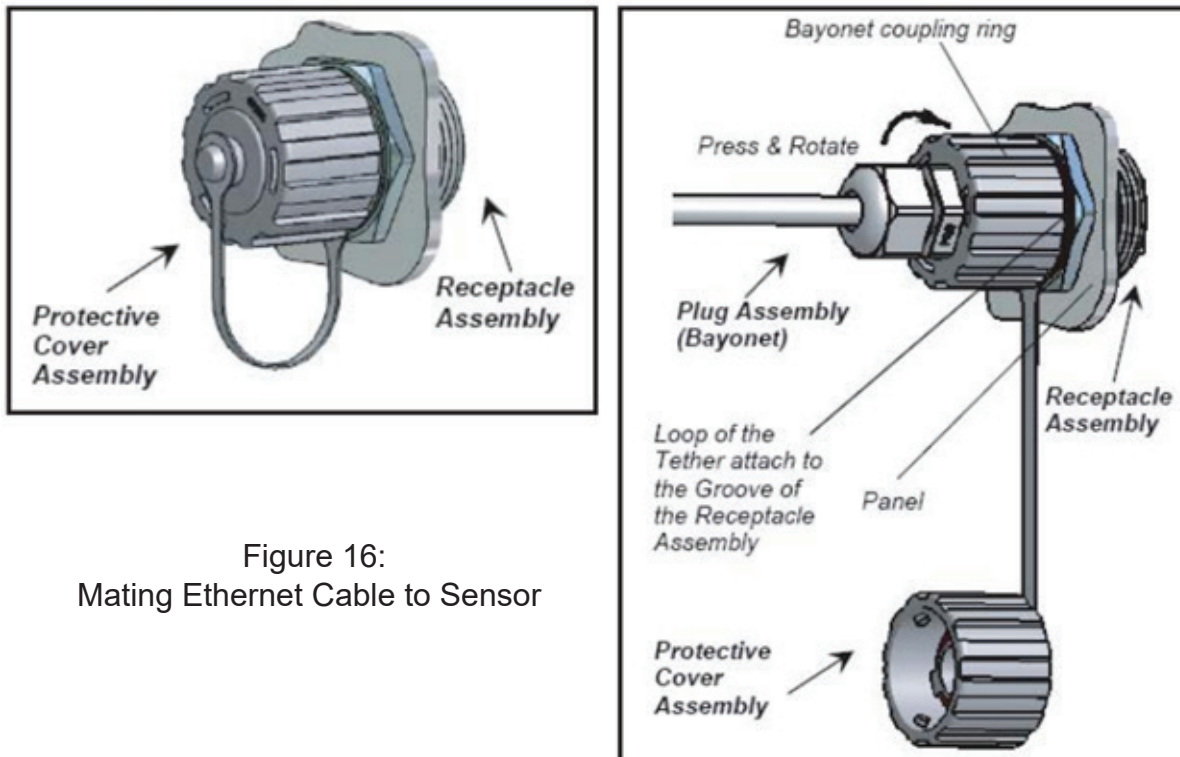


Figure 16:
Mating Ethernet Cable to Sensor

SENSOR INSTALLATION *(continued)*

TCIB:

Follow the instructions from this section if using a standard TCIB. If using a TCIB-UNI, proceed to the next sub-section.

1. Plug the TCIB into the Detector Rack of the traffic cabinet.
 - a. If using a TCIB-4.1 or -4.2, ensure that it is plugged into an even slot.
 - b. If using a TCIB-2.1, plug the card into any desired slot.
2. Ensure proper power is applied to the Detector Rack. The Intersector System operations on 12 to 24 VDC. If a TCIP-4 is not being used, the power supply to the Detector Rack must be capable of supplying 1 Amp of current to each TCIB card.
3. Apply dielectric grease into the "Sensor / Operational" Ethernet port.
4. If the TC-CK1-SBE-2.0 is already set up, connect the Ethernet Cable into the "Sensor / Operational" Ethernet port. By default, the TCIB will be in recall for 120 seconds (2 minutes) and then go into operational mode where the outputs would only activate based on zone activations.
5. If the TC-CK1-SBE-2.0 is not set up yet, move the Ethernet cable into the "Setup" port of the TCIB until setup is complete. Note that the TCIB will remain in recall until the sensor is communicating through the "Sensor / Operational" Ethernet port.

TCIB-UNI:

Perform the actions in this section if the installation uses a TCIB-UNI. If the installed used a standard TCIB, perform the steps in the subsection above, and then proceed directly to Section 4.

1. Plug the TCIB-UNI into the Detector Rack of the traffic cabinet.
 - a. If using a TCIB-UNI-4.1 or -4.2, ensure that it is plugged into an even slot.
 - b. If using a TCIB-UNI-2.1, plug the card into any desired slot.
2. Ensure proper power is applied to the Detector Rack. The Intersector System operations on 12 to 24 VDC. If a TCIP-4 is not being used, the power supply to the Detector Rack must be capable of supplying 0.75 Amp of current to each TCIB-UNI card.
3. Apply dielectric grease into the "**24V* / Intersector" Ethernet port.
4. Connect the Ethernet Cable to the TC-CK1-SBE-2.0 into the "**24V* / Intersector" Ethernet port. By default, the TCIB-UNI will be in recall for 120 seconds (2 minutes), and then go into operational mode where the outputs would only activate based on zone activations.

TC-CK1-SBE-2.0 CONFIGURATION SETUP

EQUIPMENT NEEDED:

The following equipment is recommended for configuring the TC-CK1-SBE-2.0:

- Laptop with the following features:
 - o Configurable Ethernet settings
 - o Modern web browser (Google Chrome, Mozilla Firefox, Internet Explorer, and/or Edge)
- 1x Regular Ethernet Cable; length should be long enough to reach from the Detector Rack to the laptop shelf

The following equipment is highly recommended, but optional, for setting up the TC-CK1-SBE-2.0 if using the TC-CK1-SBE-2.0 with a standard TCIB (not TCIB-UNI):

- Ethernet switch with at least 3 available ports
- 1 additional Regular Ethernet Cable
- 1 “Safe” Ethernet Cable (pins 4, 5, 7, and 8 are disconnected)
 - o If using a 100BaseT Ethernet switch, this can be substituted for an additional regular Ethernet cable

HARDWARE CONFIGURATION:

Prior to following the instructions in this section, install the Intersector system per the instructions in Section 3. Make sure to connect the TC-CK1-ESW’s Ethernet cable to the “SETUP” port of the TCIB or the “*24V* / Intersector” port of the TCIB-UNI.

If the setup uses a TCIB-UNI, connect the laptop’s Ethernet port to an available, non-sensor Ethernet port on any networked TCIB-UNI card.

If a standard TCIB is being used and only the minimum required equipment is available, connect the laptop’s Ethernet port to the “LAPTOP” port of the TCIB using the Regular Ethernet Cable. See the block diagram below.

 


Figure 18: Minimum Intersector Setup Configuration

If a standard TCIB is being used and an Ethernet switch and additional cables are available, perform the following steps. See the figure below for a block diagram.

1. Connect the Ethernet switch’s power cable to an available power source in the cabinet.
2. Using one of the Regular Ethernet Cables, connect the Ethernet port of the laptop to an available port of the Ethernet switch.
3. Using the other Regular Ethernet Cable, connect the “LAPTOP” port of the TCIB to an available port of the Ethernet switch.

TC-CK1-SBE-2.0 CONFIGURATION SETUP *(continued)*

- Using the “Safe” Ethernet Cable, connect the “SENSOR / OPERATIONAL” port of the TCIB to an available port of the Ethernet switch.

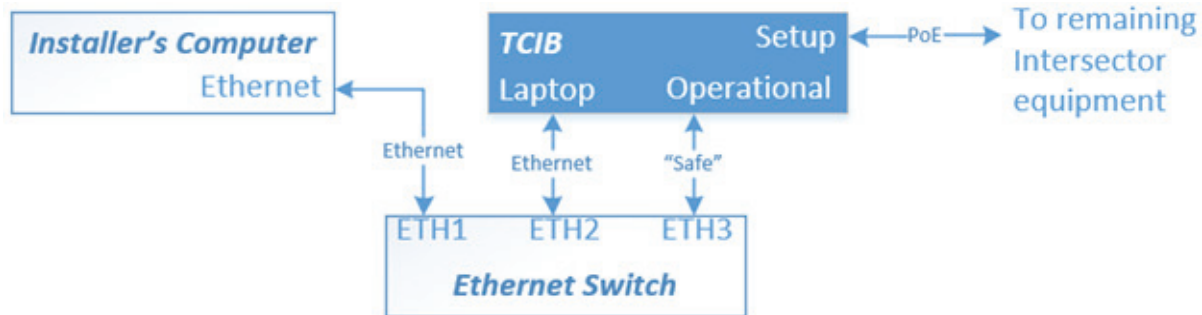


Figure 19: Recommended Intersector Setup Configuration

LAPTOP ETHERNET CONFIGURATION:

Prior to configuring the TC-CK1-SBE-2.0, the laptop must have a dedicated IP Address.

- Select the START button in the lower left of the computer's desktop
- Select either “Settings” or “Windows System” depending on operating system, and open “Control Panel”.

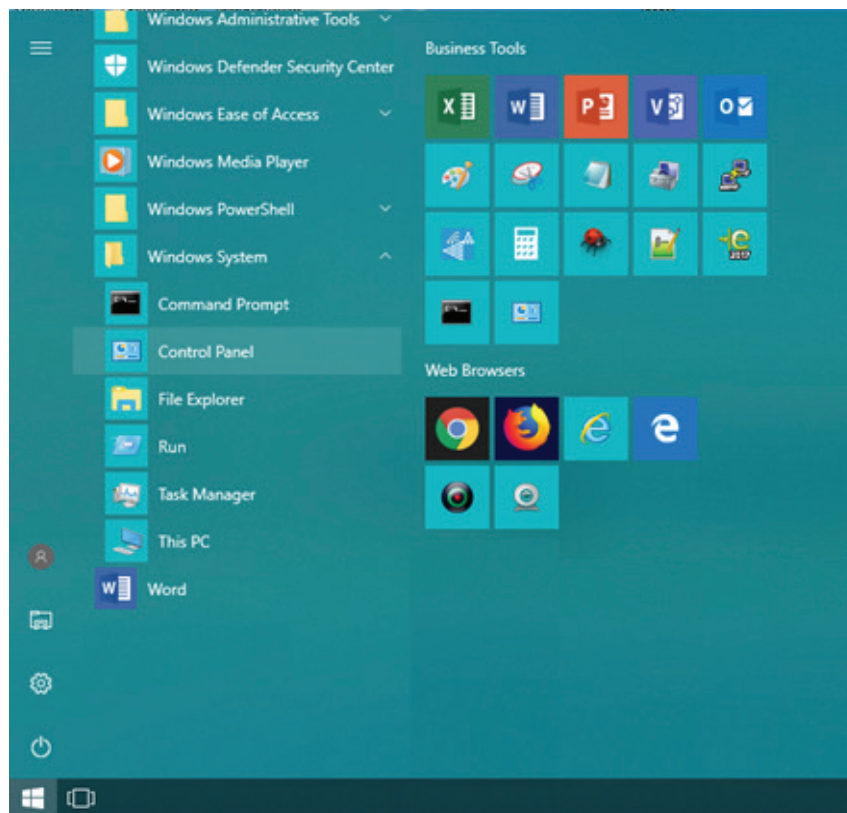


Figure 20: Select Control Panel - Windows 10

TC-CK1-SBE-2.0 CONFIGURATION SETUP *(continued)*

- Find the Network and Sharing option based on the laptop's operating system.

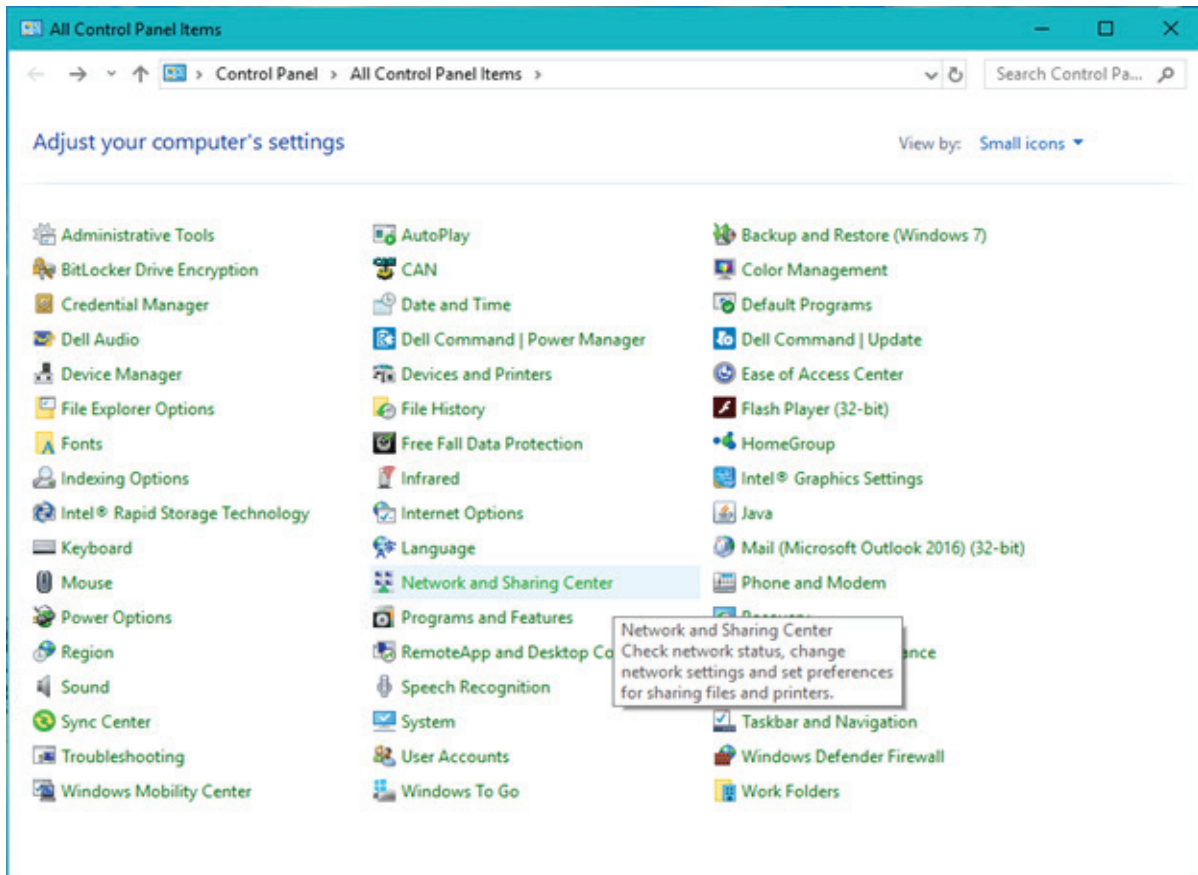


Figure 21: Select Network and Sharing Center - Windows 10

- Select the "Change Adapter Settings" option based on the laptop's Operating System.

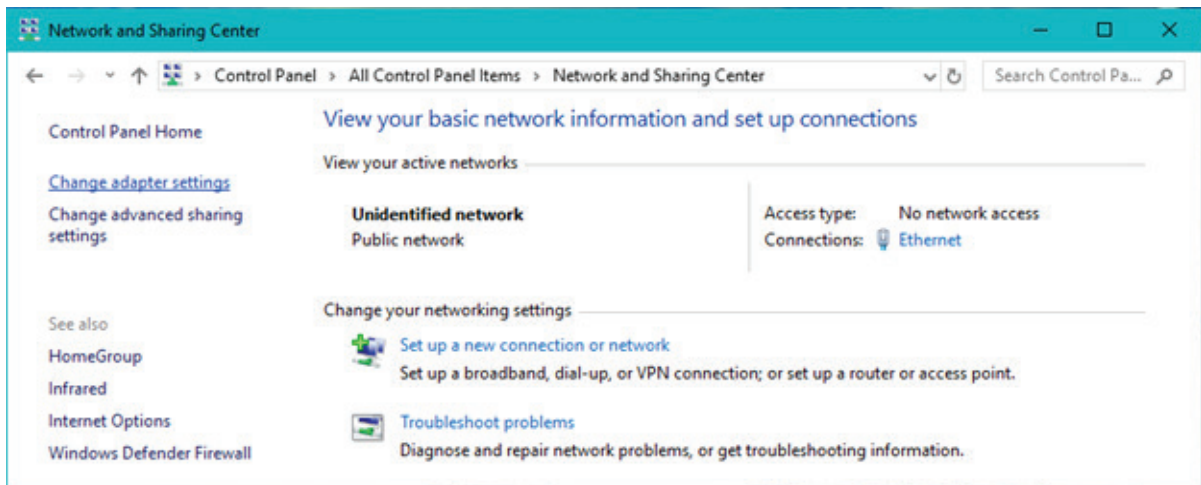


Figure 22: Select "Change Adapter Settings"

TC-CK1-SBE-2.0 CONFIGURATION SETUP *(continued)*

5. Right click the Ethernet port to configure the Ethernet settings for Intersector setup, and select the “Properties” option. Note: this can also be done by double clicking the Ethernet port and clicking “Properties” from the pop-up window.

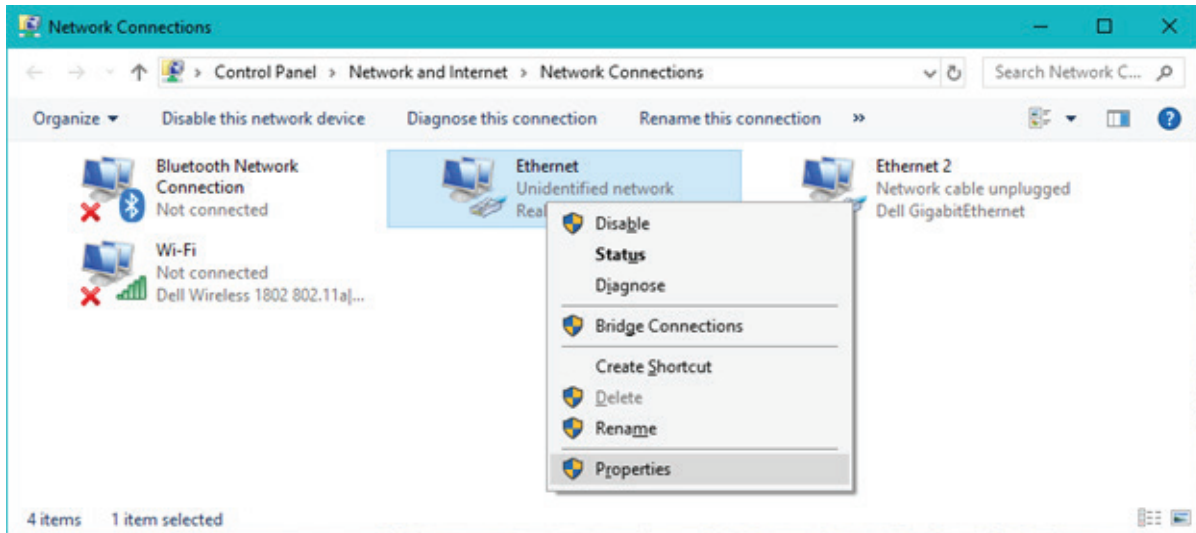


Figure 23: Select the Ethernet Port to Customize

6. In the window that appears, click the “Internet Protocol Version 4 (TCP/IPv4)” so that it is highlighted and check marked. Then click the “Properties” button under the window.

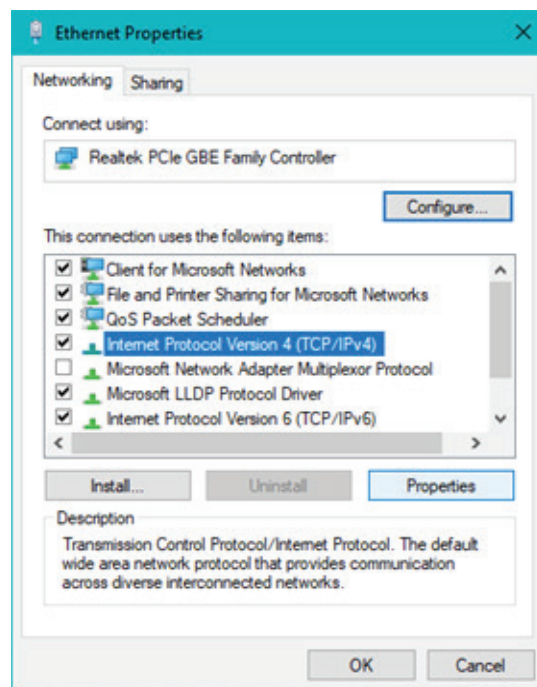


Figure 24: Ethernet Properties Selection

TC-CK1-SBE-2.0 CONFIGURATION SETUP *(continued)*

7. Select the “Use the following IP address:” option. To communicate with a default TC-CK1-SBE-2.0, set the Subnet mask to 255.255.255.0 and an IP address of 192.168.0.xxx where xxx is a number between 2 and 255 other than 90, 98, 100, or any other IP addresses that may already be on the network



Figure 25: Internet Protocol Version 4 (TCP/IPv4) Properties Customization

8. Click “OK” in the Internet Protocol Version 4 (TCP/IPv4) and Ethernet Properties windows once the Ethernet settings are set up.

The laptop should be ready to program the TC-CK1-SBE-2.0. Programming instructions appear in Section 5 of this document.

TC-CK1-SBE-2.0 SETUP CONFIGURATION:

The Intersector System has other tools available for advanced setup and software updating. These tools include an “IP Address Set” application that can update the IP Address for each Intersector system component, as well as a “Bootloader” application to update software in each Intersector component if changes to product software is available after delivery. If using a TCIB-UNI card, these applications are built in to the TCIB-UNI Portal Page, and instructions to use these features can be found in the TCIB-UNI manual. If a standard TCIB is being used, standalone desktop application versions of these applications are available upon request from MS Sedco.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION

This section provides instructions for basic setup of a TC-CK1-SBE-2.0 when a TC-CK1-SBE-2.0 Settings file is not available. If the installation of the TC-CK1-SBE-2.0 is a replacement of a previous TC-CK1-SBE-2.0 that is version 2.0x or higher, and an TC-CK1-SBE-2.0 Settings file is available, proceed to the Upload TC-CK1-SBE-2.0 Settings section. This section assumes that the laptop and Intersector System is set up per the instructions from the previous section.

SENSOR INFORMATION:

The following parameters are used to provide information to the user about the status of the sensor.

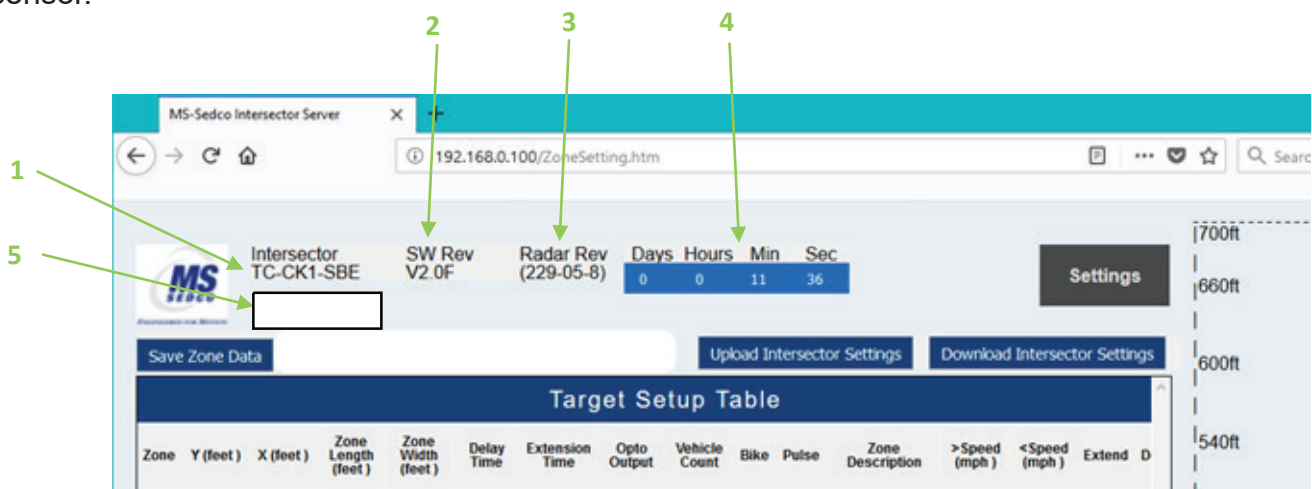


Figure 26: TC-CK1-SBE-2.0 Portal Page - Sensor Information

- Model Number:** First line is the product line (Intersector), and the second line is the model number. For this product, the model number is TC-CK1-SBE-2.0.
- Software Revision Number:** Software version number for the logic processor inside the sensor.
- Radar Firmware Revision Number:** Firmware version number for the radar algorithm processor inside the sensor.
- Operation Timer:** A timer amount that displays the amount of time the sensor has been operational. This timer increments every second on the user interface and can be used to determine whether the laptop's Ethernet connection to the sensor is operating properly.
- Sensor Malfunction Notification:** If no issues are detected on the sensor, this area should remain blank. If there are any detected malfunctions or known reasons the sensor would not operate properly, a message will be displayed in this area in bold red text. Example error messages include, "Sensor Error", "Sensor Interference", and "Error Flag". "Sensor Error", and "Error Flag" displays for critical system malfunction and will result in the Intersector System going into recall. The other error messages are not critical failures, so recall will not be initiated, but a maintainer should service the unit should either of these messages display for a period lasting longer than 3 cycles.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION (continued)

INITIAL SETUP:

This section provides instructions for the initial setup of the TC-CK1-ESW. The items in this section should be completed prior to building zones. It is also recommended to have a crew on standby to make physical adjustments as needed throughout the alignment process.

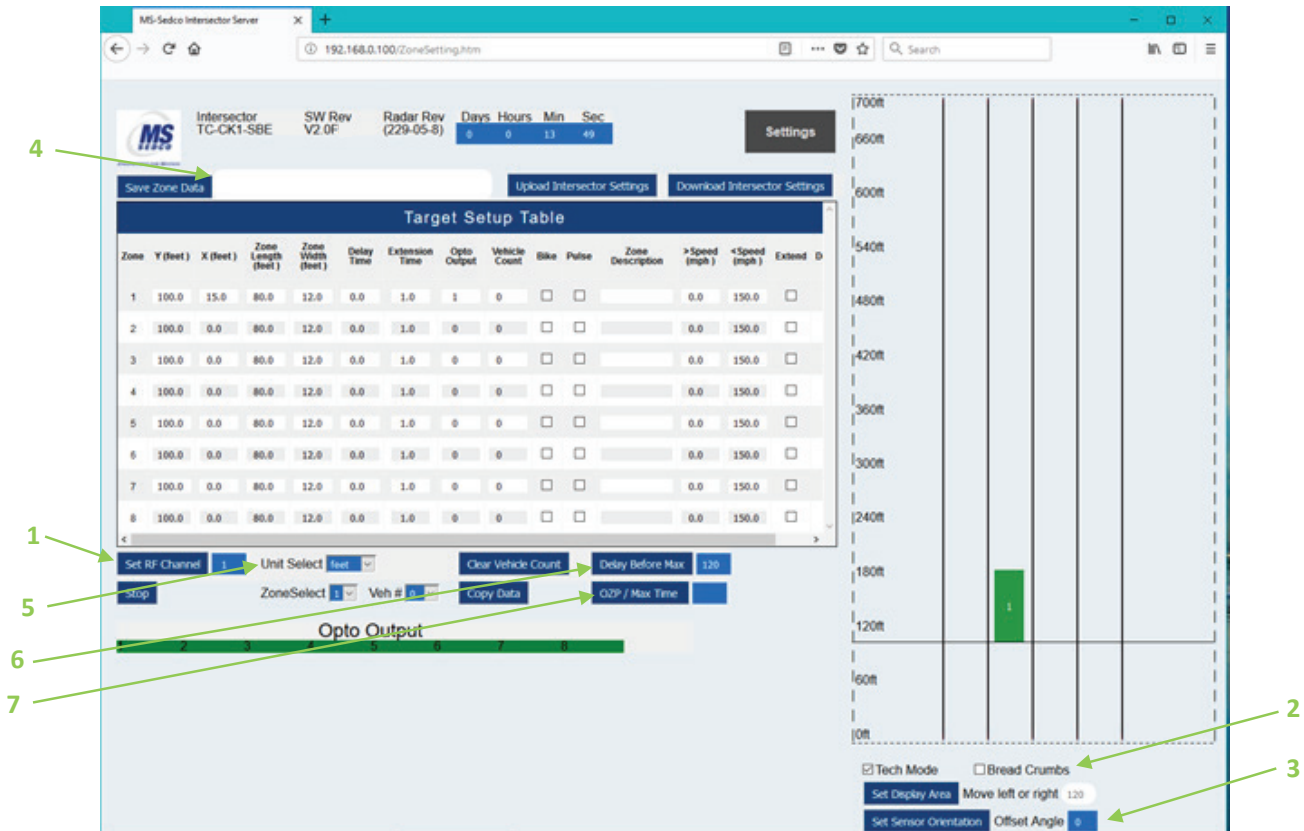


Figure 27: Initial Setup Screen Shot

- RF Channel:** Sets the Radio Frequency (RF) channel the sensor transmits on. This field is an integer value ranging from 1 through 7, with a default value set to 1. To modify the RF Channel, change the number in the text entry field to the desired value and then press the "Set RF Channel" button.
- Bread Crumbs:** This feature simplifies zone alignment by displaying the path that each detected vehicle has traveled, illustrating lanes of traffic flow. By default, this feature is disabled, and can be enabled by checking the box next to the text "Bread Crumbs". To reset the view, disable and re-enable Bread Crumbs or refresh the web page.
- Offset Angle:** This field adjusts the radar's processing of vehicles. The Offset Angle is the angle between the vehicle's trajectory and the boresight of the radar. Installation sites should be selected to keep this value between -15 and +15 degrees. This value can be edited by the user entering an integer value between -40 through 40 into the text box to the right of "Offset Angle" and is saved when the user presses the "Set Sensor Orientation" button to the left of "Offset Angle".

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

4. **TC-CK1-SBE-2.0 Description Field:** This text entry field allows the user to input a customized description, up to 32-characters long, which describes the TC-CK1-SBE-2.0 and the approach it is providing detection for. Typically, this should record the approach direction (i.e. NB, EB, etc.), the intersection (i.e. Main St. @ 1st Ave), and/or the phase(s) the Intersector System is detecting. To edit the value, set the text field to the desired text, then press the “Save Zone Data” button to the left of the text entry field.
5. **Unit Select:** Toggle between English and Metric unit systems.
6. **Delay Before Max:** This text entry field allows the user to customize the amount of time a stopped vehicle’s presence is emulated for until it is dropped from the active vehicle list.
7. **OZP / Max Time:** Occlusion Zone Protection (OZP) The amount of time the last vehicle in the zone is held for, either after the vehicle’s Delay Before Max timer has expired or if the vehicle is dropped for a different reason before its Delay Before Max timer expires.

Set RF Channel:

The RF Channel should be the first item to set on a new TC-CK1-SBE-2.0 setup. The RF Channel setting changes the channel the sensor transmits on to reduce sensor interfering cross-talk. Each sensor at an intersection should be set to a unique RF Channel. For corridors with Intersector Systems, it is recommended that an RF Channel scheme be created (i.e. all sensors pointing Northbound are on RF Channel 1, all sensors pointing Eastbound are on RF Channel 2, etc.).

The radar can determine if the selected RF Channel has too much signal interference to operate properly. The TC-CK1-SBE-2.0 Portal Page will show “Sensor Interference” in the upper left corner in red letters under the model number. If “Sensor Interference” is displayed for longer than 2 cycles, change the RF Channel to a channel not currently in use.

Offset Angle:

The Offset Angle adjustment is critical to a properly-functioning sensor. Ideally, the vehicle trajectories run straight down the webpage in the area(s) where zones will be placed for detection-purposes.

To set the Offset Angle, enable the “Bread Crumb” feature. Observe the lines that form as vehicles move through the radar’s field of view. To rotate the vehicle trajectories clockwise, make the Offset Angle more negative. To rotate the vehicle trajectories counter-clockwise, make the Offset Angle more positive. Adjust the Offset Angle until these bread-crumbs are running as parallel as possible to the lines on the grid view.

While determining the Offset Angle, observe the behavior of the sensor itself. Ideally, the sensor should begin detecting vehicles at least 60-feet before the back of where zones should be placed, and at least 20 to 40 feet in front of where zones will be. If the sensor is monitoring a left or right turn, ensure the sensor tracks vehicles making those turns throughout the apex of the turn. If additional radar detection is needed, physically re-adjust the sensor to provide additional radar coverage in the desired region.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

After any physical adjustments are made to the sensor, the Offset Angle should be re-evaluated to ensure vehicles continue to move straight through the region(s) of interest.

Unit Selection:

The “Unit Select” feature allows the user to set the TC-CK1-SBE-2.0 either English or Metric. By default, the TC-CK1-SBE-2.0 Portal Page uses English units where distance measurements are in feet and speed measurements are in miles-per-hour. If Metric is selected, distance measurements are in meters and speed measurements are in kilometers-per-hour.

To change units, select the desired unit system from the “Unit Select” drop down menu under the Target Setup Table. For English units, select “feet”; for Metric units, select “meter”. If the unit system is changed, the TC-CK1-SBE-2.0 will automatically convert all customizable fields to the desired unit system.

Emulated Presence and Automated OZP:

The Delay Before Max setting is the maximum amount of time a vehicle’s presence is held once it comes to a stop. The stopped vehicle is held in its last reported position until its Delay Before Max timer expires, or when the vehicle moves. Should a vehicle stop, move again for a short time, and then come back to a stop, the Delay Before Max timer would reset and begin counting down again. In addition to Delay Before Max, the TC-CK1-SBE-2.0 utilizes a second timer, OZP, which is applied to the last vehicle in a zone when its Delay Before Max timer has expired or it disappears from detection due to occlusion.

The way a TC-CK1-SBE-2.0 processes these occluded vehicles depends on the OZP / Max Time settings field. When the OZP / Max Time value is cleared and an OZP event happens to the last vehicle in a zone, the remaining time on the Delay Before Max timer for that last vehicle is assigned to the OZP and the vehicle is held at its last position until time expires, or the vehicle begins moving again. If a number is entered in to the OZP / Max Time field, the TC-CK1-SBE-2.0 will add that amount of time, in seconds, to the last vehicle in the zone if it drops before moving. This time is the set amount of time, independent of the time remaining (or lack thereof) to the Delay Before Max timer.

The default value for Delay Before Max is 120 seconds and the default value for OZP / Max Time is null (no value). The Delay Before Max should be set to maximum cycle time for the intersection (i.e. the maximum amount of time a vehicle would have to wait before getting a green light if they stop just after the last service of their phase), plus an additional 5 to 10 seconds a margin. OZP / Max Time can be set to a number, typically less than 20 seconds, if the automated OZP feature is not desired.

ZONE CONFIGURATION:

The TC-CK1-SBE-2.0 configuration largely relies on the configuration of zones. Each zone can be customized in size, activation timings, output mapping, activation based on classification, minimum and maximum speeds, and travel direction.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION (continued)

MS-Sedco Intersector Server

192.168.0.100/ZoneSetting.htm

Intersector TC-CK1-SBE SW Rev V2.0F Radar Rev (229-05-8) Days 9 Hours 23 Min 12 Sec

Settings

Save Zone Data Upload Intersector Settings Download Intersector Settings

Zone	Y (feet)	X (feet)	Zone Length (feet)	Zone Width (feet)	Delay Time	Extension Time	Opto Output	Vehicle Count	Bike	Pulse	Zone Description	>Speed (mph)	<Speed (mph)	Extend	D
1	100.0	15.0	80.0	12.0	0.0	1.0	1	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	
2	100.0	0.0	80.0	12.0	0.0	1.0	0	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	
3	100.0	0.0	80.0	12.0	0.0	1.0	0	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	
4	100.0	0.0	80.0	12.0	0.0	1.0	0	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	
5	100.0	0.0	80.0	12.0	0.0	1.0	0	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	
6	100.0	0.0	80.0	12.0	0.0	1.0	0	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	
7	100.0	0.0	80.0	12.0	0.0	1.0	0	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	
8	100.0	0.0	80.0	12.0	0.0	1.0	0	0	<input type="checkbox"/>	<input type="checkbox"/>		0.0	150.0	<input type="checkbox"/>	

Set RF Channel 1 Unit Select feet Clear Vehicle Count Delay Before Max 120

Stop ZoneSelect 1 Veh # 0 Copy Data OZP / Max Time

Figure 28: Zone Configuration Fields

- Target Setup Table:** The Target Setup Table is comprised to 8 rows by 15 columns that allow the user to customize the TC-CK1-SBE-2.0 activation options where each row is a unique zone and each column is a customizable parameter. The user can edit the values in the table based on each column's boundary conditions, and can save changes by pressing the "Save Zone Data" button to the left of the TC-CK1-SBE-2.0 Description Field.
- Copy Vehicle Data Feature:** These fields under the Target Setup Table allow the user to copy a vehicle's X and Y coordinates into a zone to assist with zone setup.
- Clear Vehicle Count:** Allows the user to clear the Vehicle Count for all zones.

Opto Outputs:

To enable a zone, set the Opto Output value to a 1-8 value. Opto Outputs on the TC-CK1-SBE-2.0 Portal Page correlate to the electrical outputs on the TCIB card. By default, only Zone 1 is set to Opto Output 1 and the remaining zones are disabled. The Target Setup Table allows the user to enter an integer value from 0 to 8. A value of 0 makes the Opto Output inactive. Note that the Opto Output does not need to match the zone number, and multiple zones can have the same Opto Output number.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

Opto Outputs on the TCIB will depend on the type of TCIB card(s) are connected to each sensor.

- **Primary TCIB-2.1:** Opto Outputs 1 and 2
- **Primary TCIB-4.x:** Opto Outputs 1 through 4
- **Secondary TCIB-2.1:** Opto Outputs 5 and 6
- **Secondary TCIB-4.x:** Opto Outputs 5 through 8

Zone Location and Size Adjustment Parameters:

All 8 zone sizes can be set independently through 4 different parameters for each zone: Y, X, Zone Length, and Zone Width. Changes to the zone size parameters will be previewed with the yellow zones in the Grid View. The figure below provides a visual example of these parameters.

- **Y:** Defines the “bottom edge” of the zone, which is the closest vertical axis. In addition, the Y-value of Zone 1 defines the “stop bar” line on the grid view.
 - o Range: 0 to 900'
 - o Default: 100'
- **X:** Defines the “center line” of the zone, which is the horizontal center of the zone.
 - o Range: -900' to 900'
 - o Default: 15 for Zone 1, 0 for all other zones
- **Zone Length:** Defines the “depth” of the zone, which defines the “top edge” of the zone when added to Y.
 - o Range: 0 to 900'
 - o Default: 80'
 - o **Best Practice Note:** Stop-bar zones should be between 60' to 80' to capture 3 to 4 cars. Advance zones should be between 20' to 40' depending on the average speed in the area. Ideally, vehicles should take ~3 seconds to get through the zone
- **Zone Width:** Defines the horizontal left and right boundaries of the zone, centered around the X value.
 - o Range: 0 to 900'
 - o Default: 12'

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION (continued)

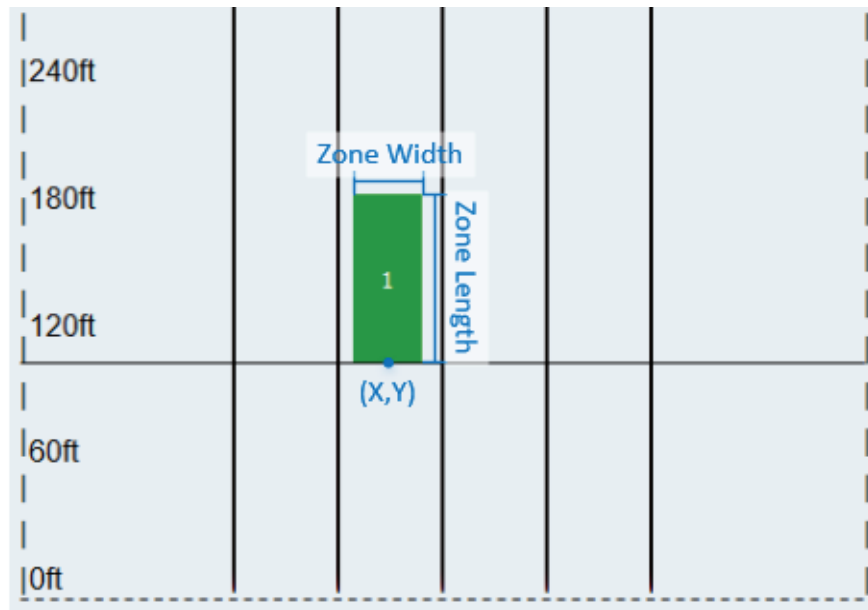


Figure 29: Zone Size Definition

In addition to manually entering a zone's X and Y value, the TC-CK1-SBE-2.0 allows the user to "copy" a vehicle's X and Y position into a zone. To use this feature, observe vehicles traveling in an approach. Once a vehicle reaches the location for a desired zone, press the "Stop" button under the Target Setup Table. This will temporarily stop live data from updating the TC-CK1-SBE-2.0 Portal Page. Once the TC-CK1-SBE-2.0 Portal Page is stopped, find the vehicle on the Grid View or Vehicle Table if it is visible. Note the Vehicle Number (the number next to the vehicle symbol on the Grid View), select it from the "Veh #" drop down menu under the Target Setup Table, select the desired zone number from the "Zone Select" drop down menu to the left of the "Veh #" drop down, and click the "Copy Data" button. This process can be repeated for any or all the desired zones. Once the zone's X and Y are copied and adjusted if needed, press the "Save Zone Data" button to save the changes.

Zone Activation Timing Parameters:

Each zone has customizable settings for the timing in activating and deactivating the output.

- **Delay Time:** The amount of time a vehicle must be in the zone before it can activate the zone.
 - o Range: 0 to 60 seconds
 - o Default: 0 seconds
 - o Best Practice Note: If a non-zero value is entered, ensure the zone is large enough such that the desired vehicle to be detected would still be moving through the zone after "Delay" amount of time from entering the zone
- **Extension Time:** The time an activated zone remains active after all vehicles leave the zone.
 - o Range: 0 to 60 seconds
 - o Default: 1 second

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

- **Pulse Checkbox:** When enabled by that zone, the output will “pulse” active for a static 125 ms for each vehicle that meets the activation criteria.
 - o Default: Disabled
 - o Miscellaneous Note: If there are multiple zones that have the same Opto Output, selecting “Pulse” on one will enable “Pulse” on any other zone assigned to the same Opto Output
 - o Best Practice Note: This is recommended for advance detection to ensure fast-moving vehicles get an activation notification to the controller

Vehicle Classification Parameters:

The TC-CK1-SBE-2.0 allows the user to customize zone activations based on vehicle classifications.

- **Bike Checkbox:** When enabled, only activates the zone for “bike” classified vehicles. When disabled, zone will activate for any vehicle that meets the other zone activation criteria.
 - o Default: Disabled
 - o Best Practice Note: Selecting this checkbox only filters the type of vehicle to activate the zone. Changing the TC-CK1-ESW’s sensitivity is set in the Settings Tab
- **Extend Checkbox:** When enabled, cars moving through the zone will get a 12’ extension to their vehicle representation. This “tail” can be used to keep the zone activated until it goes more than 12’ in front of the zone.
 - o Default: Disabled

Speed Condition Parameters:

Each zone is capable of activating based on the speed of vehicles moving through them. If a vehicle’s speed is greater than the minimum speed while less than the maximum speed, the zone will activate once all other zone activation criteria is met.

These values are typically set for dilemma zone activations (i.e. if a car is going greater than a certain speed, it is not likely they can stop before the light turns red and will extend an all-red phase). This can also be used in areas where pedestrian or maintenance workers are commonly going into the zone by setting a minimum speed greater than an average walking or lawn maintenance equipment speed.

- **> Speed:** Vehicle speed must be greater than this value to activate the zone
 - o Range: 0 to 150 mph
 - o Default: 0 mph
- **< Speed:** Vehicle speed must be less than this value to activate the zone
 - o Range: 0 to 150 mph
 - o Default: 150 mph

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

Departure Detection:

The TC-CK1-SBE-2.0 allows the user the ability to select whether each zone activates for either vehicles moving toward the sensor (Departure de-selected) or away from the sensor (Departure selected). By default, all Departure checkboxes are de-selected.

The sensor can track up to 64 vehicles, and if there are more than 64 vehicles in the detection area, it will prioritize tracking to the closest 64 vehicles. While all Departure Detection checkboxes disabled, the number of targets is filtered to the closest 64 vehicles moving toward the sensor. If any zones' Departure checkbox is selected, the sensor will track vehicles bi-directionally, and will prioritize the tracked vehicles as the closest 64 moving vehicles independent of travel direction.

This checkbox is common in Wrong Way installations when the sensor is mounted at the intersection and is providing Wrong Way detection for the approach where the correct flow of traffic is coming toward the intersection and sensor, and the wrong-way vehicles are driving away from the intersection. Having bi-directional tracking can also be assist in bicycle detection applications where bicyclists move sporadically (i.e. make "Figure-8's or ride side-to-side) when they come to an intersection.

Zone Description:

Each zone has an 8-character description field that allows the user to describe the zone's function. This typically is used to designate any designations from city plans, phase designation, and/or lane designation.

Vehicle Count:

The TC-CK1-SBE-2.0 keeps a running total of the number of vehicles that pass through a zone that meets all activation criteria. The Vehicle Count column provides a read-out of the number of vehicles that met all activation criteria for each zone. The TC-CK1-SBE-2.0 can record up to 65,535 vehicles per zone. Once the number of vehicles exceed this number, the vehicle count number resets back to 0.

To manually clear the vehicle count, press the "Clear Vehicle Count" that is below the Target Setup Table.

SETTINGS TAB:

The Settings Tab contains more advanced settings customizations. These settings can be viewed by clicking the "Settings" button to the right of the Sensor Information fields. To close the Settings Tab menu, click the "Settings" button again. It will also be automatically close if a setting change is saved with its respective button.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION (continued)

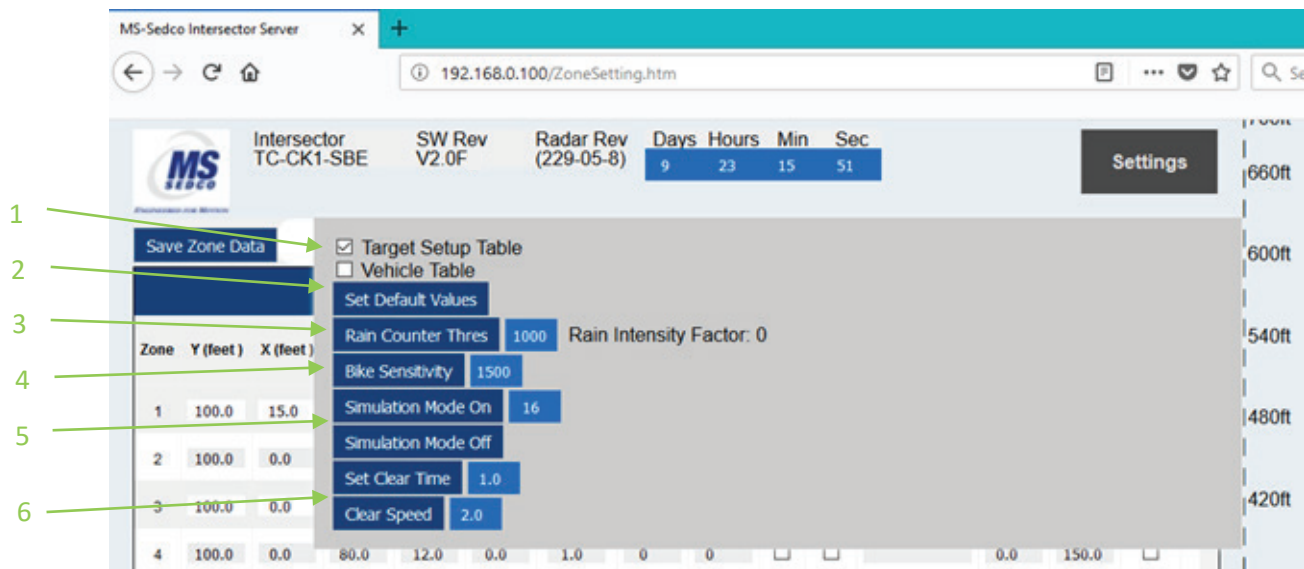


Figure 30: Settings Tab

- TC-CK1-SBE-2.0 Portal Page Declutter Options:** Checkboxes to declutter the Target Setup Table and Vehicle Table. When the checkbox is selected, the fields associated with that group are visible. When the checkbox is deselected, the fields associated with that group are hidden from view.
- Set Default Values:** The “Set Default Values” return all values customizable on the TC-CK1-SBE-2.0 Portal Page back to their default values. Note that this does not change the Ethernet network settings or failsafe timers if those were changed from their default values. CAUTION: All saved values will be deleted!
- Rain Failsafe Feature:** Rain customization options for sensitivity to going into recall with rain.
- Bike Classification Feature:** Customization option to fine-tune the sensor’s bike / car classification threshold.
- Simulation Mode:** Mode to run the sensor with a simulated vehicle profile instead of live radar data.
- Zone Clear Feature:** Allows the user to set automatic timing for clearing hung vehicles as traffic begins to move.

TC-CK1-SBE-2.0 Portal Page Declutter Options:

To reduce clutter on the TC-CK1-SBE-2.0 Portal Page, the TC-CK1-SBE-2.0 unit provides the ability to toggle the view of the Target Setup Table and Vehicle Table. By default, the Target Setup Table is visible, and the Vehicle Table is hidden.

The following fields are always visible, independent of the Target Setup Table and Vehicle Table declutter options:

- Model number
- Both sensor software version numbers

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

- Operation Timer
- TC-CK1-SBE-2.0 Description Field with save button
- Upload and Download TC-CK1-SBE-2.0 Settings buttons
- Settings Tab selection
- Opto Output visual display
- TC-CK1-SBE-2.0 Grid View and customization options

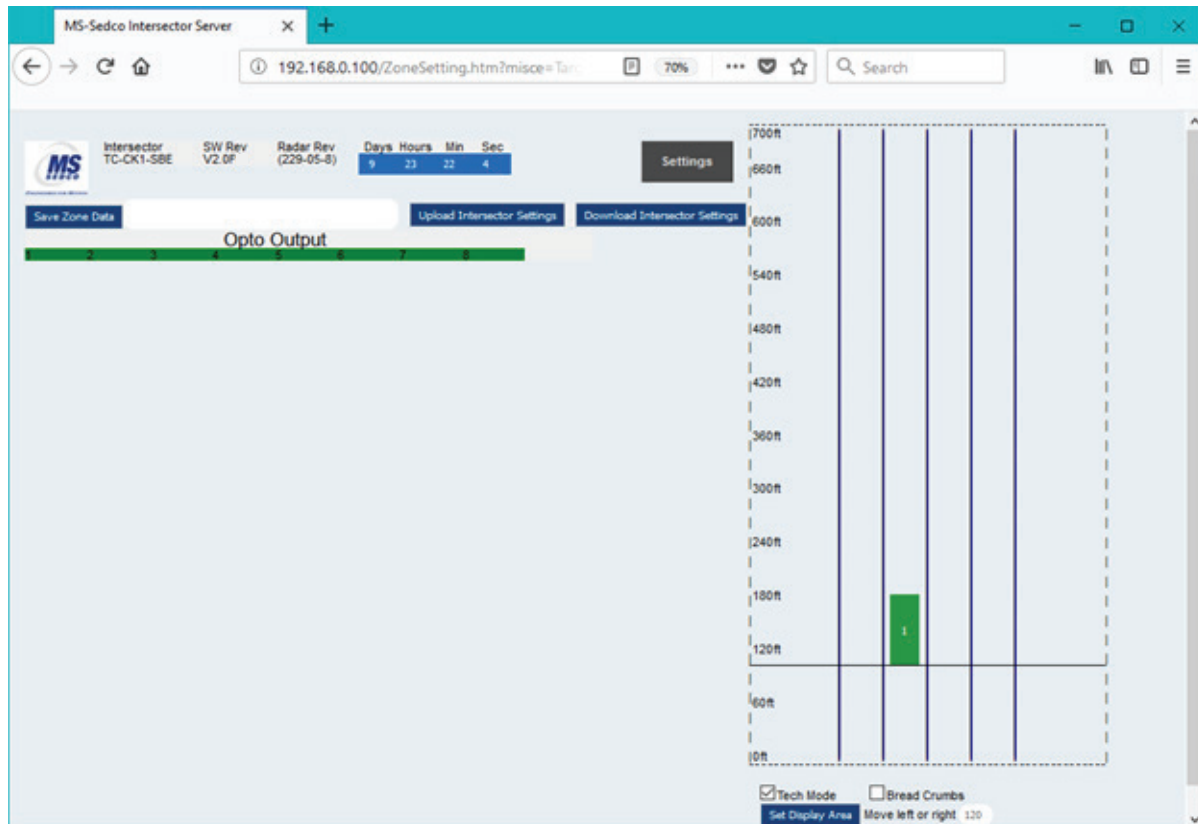


Figure 31: Target Setup Table and Vehicle Table Declutter View

The following settings are grouped with the Target Setup Table in the declutter option:

- Target Setup Table
- Set RF Channel button and text entry field
- Unit selection
- Clear Vehicle Count
- Stop live traffic view
- Copy feature of vehicle information to zone parameters

The Vehicle Table option controls whether the vehicle table is shown or hidden. See the Vehicle Table section for a summary of information the Vehicle Table provides.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION (continued)

The figure below provides a view with the Target Setup Table decluttered and the Vehicle Table is visible.

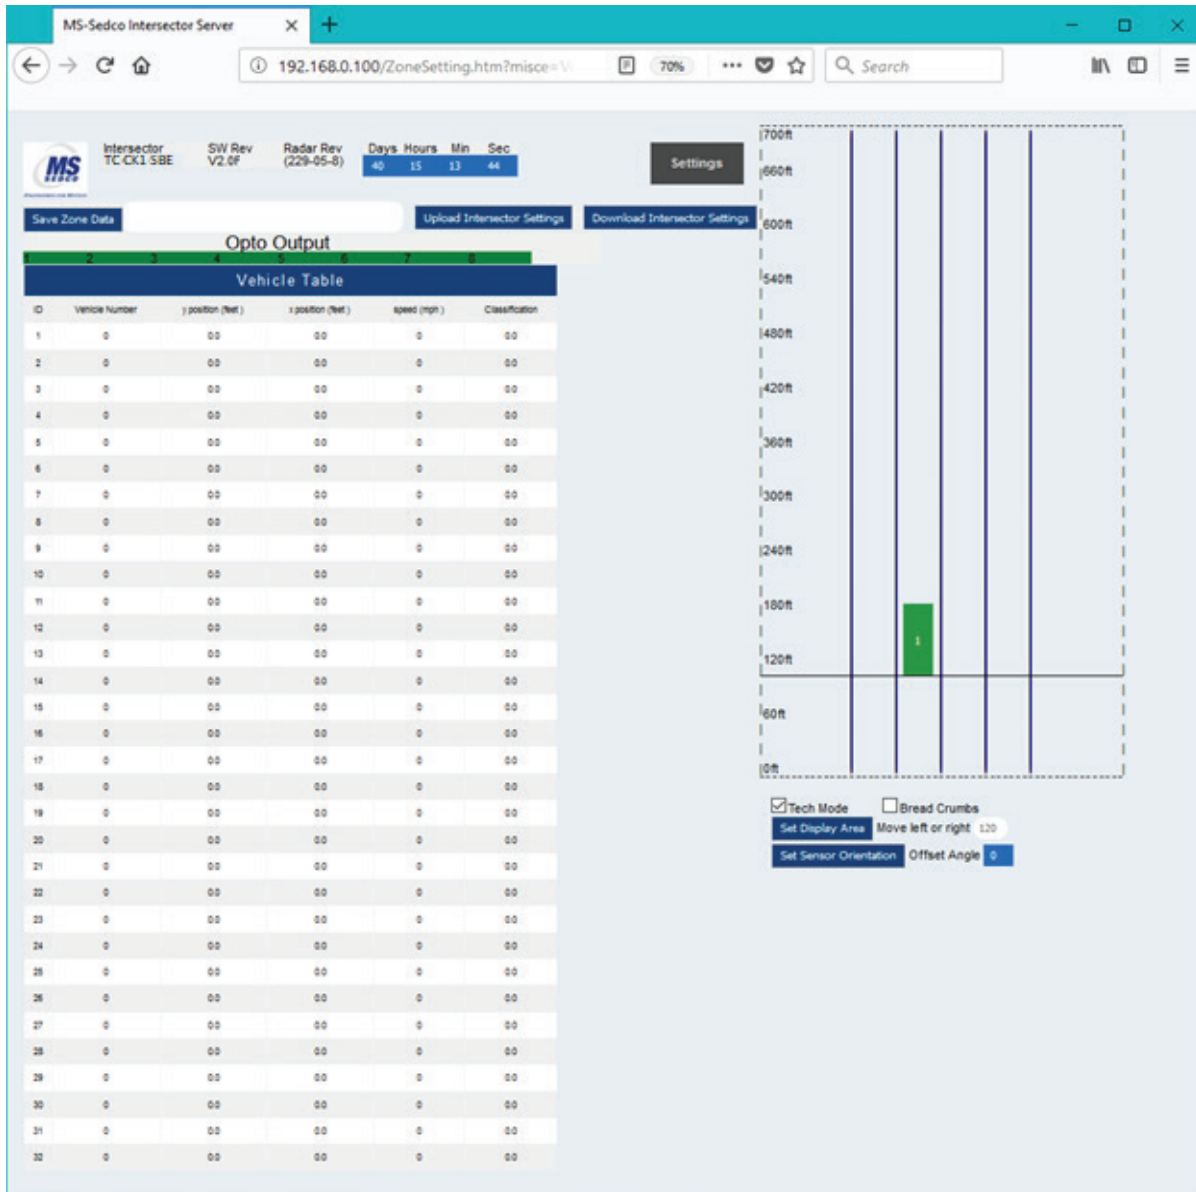


Figure 32: Vehicle Table Visible and Target Setup Table Decluttered

Rain Failsafe Feature:

The TC-CK1-SBE-2.0 provides a feature that can put the Intersector System into recall during a heavy rainfall that exceeds the sensor's rated rainfall limit. The following items are used for this feature:

- **Rain Intensity Factor:** Continuously calculated value based on the number of rain drops within the first 10-feet of the radar's field of view and a measurement of the rain drops' diameter.

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

- **Rain Counter Threshold:** Maximum Rain Intensity Factor allowed before the Intersector System goes into rain failsafe
 - o Range: 1 to 5000
 - o Default: 1000
 - o Disable Feature: 5000
- **Rain Flag:** Visual notification (bold blue text: “RAIN”) on the TC-CK1-SBE-2.0 Portal Page to the right of the Opto Output visual indicators to notify the user that the Intersector System is currently in Rain failsafe recall.

The TC-CK1-SBE-2.0 continuously calculates the Rain Intensity Factor and compares it to the Rain Counter Threshold. If the Rain Intensity Factor exceeds the Rain Counter Threshold, the Intersector System is put in failsafe recall until the Rain Intensity Factor drops below the Rain Counter Threshold for 5 minutes. While the system is in failsafe recall, all outputs on the connected TCIB card(s) are activated and the TC-CK1-SBE-2.0 Portal Page displays the Rain Flag.

The Rain Counter Threshold can be adjusted by editing the text field next to the “Rain Counter Thres” button on the Settings Tab. To save, press the “Rain Counter Thres” button. The Rain Intensity Factor readout can be found to the right of the Rain Counter Threshold edit fields in the Settings Tab.

As depicted in the graph below, the Rain Intensity Factor correlates to the rain storm’s rainfall rate; typically, as the rainfall rate increases, the Rain Intensity Factor also increases. By default, the Rain Counter Threshold is set to 1000, which is typical for a heavy rainfall rate. While rainfall rate is the primary metric to determine the Rain Intensity Factor, blowing wind may also affect the Rain Intensity Factor. To increase rain sensitivity, decrease the Rain Counter Threshold. To decrease rain sensitivity, increase the Rain Counter Threshold. Rain Counter Threshold entry ranges from 1 to 5000. To disable the Rain feature, set the Rain Counter Threshold to 5000.

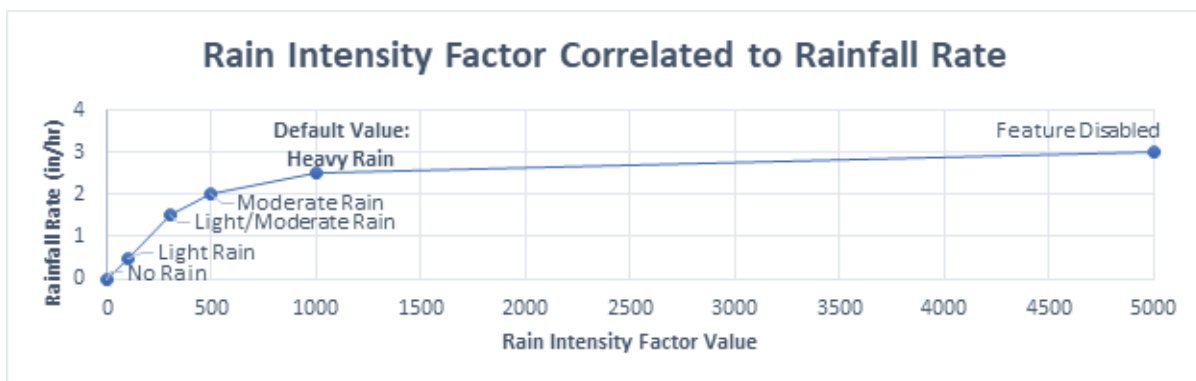


Figure 33: Rain Intensity Factor to Rainfall Rate Graph

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

Bike Classification Sensitivity Adjustment:

Another advanced feature found in the Settings Tab is the Bike Classification Sensitivity adjustment. This adjustment allows the user to customize how sensitive the TC-CK1-SBE-2.0 is for classifying vehicles as either bikes or cars. In some installations, the TC-CK1-SBE-2.0 may be more likely to incorrectly classify cars as bicycle traffic, or vice versa. If cars are being misclassified as bikes, decrease the Bike Sensitivity value. If bicycles are being misclassified as cars, increase the Bike Sensitivity value. Note that if a vehicle's speed exceeds 18.7 mph anytime during the life of that vehicle ID, it will always be classified as a car.

The adjustment range of this field is between 0 and 5000, and the default setting is 1500. Typically, a setting of 300 would accurately classify cars coming from an angle (driveways, roundabouts, etc.), or where bike-only zones are not required. A setting between 1250 and 2000 will offer better accuracy in bike-friendly areas with long, straight approaches.

Note that while the Bike Sensitivity setting can assist in correctly classifying bike or cars, the sensor mounting is crucial. For best results for bike classification, the TC-CK1-SBE-2.0 should be installed with a mounting height between 16 and 20 feet, an offset angle between 0 and ± 10 degrees, and an additional tilt angle of approximately 3 degrees downward (to a maximum of -9 degrees) relative to the slope of the road.

Simulation Mode:

The final feature available in the Settings Tab is the Simulation Mode. Simulation Mode allows the user to run a pre-existing scenario stored in the radar head rather than live traffic. This primarily used to test output mappings, product demonstration, and training on software setup.

To run a simulated scenario, put a simulation number into the text entry field in the Settings Tab and press the "Simulation Mode On" button. Simulation number 16 is the default simulation mode.

To turn off Simulation Mode and return to live data, press the "Simulation Mode Off" button in the Settings Tab.

Zone Clear Feature:

The Zone Clear feature allows the user to set automatic timing for clearing hung vehicles as traffic begins to move. The TC-CK1-SBE-2.0 will track vehicles as they begin to leave the detection zones. Once a vehicle has moved 10 feet past the front edge of the zone, the value in the "Set Clear Time" field will begin counting down. Any vehicles that did not reach the "Clear Speed" once the front vehicle has departed will be cleared after the timer has expired. Both the "Set Clear Time" and "Clear Speed" fields are configurable from the Settings Tab. The default value for "Set Clear Time" is 1 second, and the default value for "Clear Speed" is 2 miles-per-hour. Ranges for these fields are from 0.0 to 10.0. To disable this feature, change the "Set Clear Time" to 0..

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION *(continued)*

VEHICLE TABLE:

The Vehicle Table is another advanced feature available in the TC-CK1-SBE-2.0 Portal Page. To view it, check the box next to “Vehicle Table” in the Settings Tab. The Vehicle Table provides a list of the closest vehicles, up to 32, being tracked by the sensor. If no “Departure” checkboxes are selected in the Target Setup Table, all vehicles listed will correlate to vehicles moving towards the radar. If any “Departure” checkboxes are selected, the vehicles listed can correlate to vehicles either approaching or departing with respect to the sensor.

The Vehicle Table has 6 read-only columns to describe each vehicle.

Vehicle Table					
ID	Vehicle Number	y position (feet)	x position (feet)	speed (mph)	Classification
1	0	0.0	0.0	0	0.0
2	0	0.0	0.0	0	0.0
3	0	0.0	0.0	0	0.0
4	0	0.0	0.0	0	0.0
5	0	0.0	0.0	0	0.0
6	0	0.0	0.0	0	0.0
7	0	0.0	0.0	0	0.0
8	0	0.0	0.0	0	0.0
9	0	0.0	0.0	0	0.0
10	0	0.0	0.0	0	0.0
11	0	0.0	0.0	0	0.0
12	0	0.0	0.0	0	0.0
13	0	0.0	0.0	0	0.0
14	0	0.0	0.0	0	0.0
15	0	0.0	0.0	0	0.0
16	0	0.0	0.0	0	0.0
17	0	0.0	0.0	0	0.0
18	0	0.0	0.0	0	0.0
19	0	0.0	0.0	0	0.0
20	0	0.0	0.0	0	0.0
21	0	0.0	0.0	0	0.0
22	0	0.0	0.0	0	0.0
23	0	0.0	0.0	0	0.0
24	0	0.0	0.0	0	0.0
25	0	0.0	0.0	0	0.0
26	0	0.0	0.0	0	0.0
27	0	0.0	0.0	0	0.0
28	0	0.0	0.0	0	0.0
29	0	0.0	0.0	0	0.0
30	0	0.0	0.0	0	0.0
31	0	0.0	0.0	0	0.0
32	0	0.0	0.0	0	0.0

Figure 34: Vehicle Table

TC-CK1-SBE-2.0 SETTINGS CUSTOMIZATION (continued)

- **ID:** The vehicle's relative number as seen by the sensor. This value is helpful to determine how many vehicles are displayed instantaneously.
- **Vehicle Number:** The tracking number assigned by the radar. This value can be used to copy the vehicle's position to a zone's X and Y position. See the Zone Location and Activation Parameters section of this document for additional details.
- **Y position:** Vertical coordinate of where the vehicle is relative to the sensor, or how close or far the vehicle is from the sensor.
- **X position:** Horizontal coordinate of where the vehicle is relative to the sensor, or how far the vehicle is to the left or right of the sensor. Negative x-values correlate to vehicles to the left of sensor's boresight. Positive x-values correlate to vehicles to the right of the sensor's boresight.
- **Speed:** How fast the vehicle is moving, as measured by the sensor.
- **Classification:** A numerical value corresponding to the vehicle's size as determined by the radar. This number will change to the time remaining on its Delay Before Max timer once the vehicle's speed is 0. Once the vehicle begins to move again (speed is greater than 0.0 mph), this value will return to its classification number relating to the vehicle's size.

TC-CK1-SBE-2.0 GRID VIEW

The TC-CK1-SBE-2.0 offers a Grid View on the TC-CK1-SBE-2.0 Portal Page. This view overlays zones relative location and sizes with a graphical representation of vehicles.

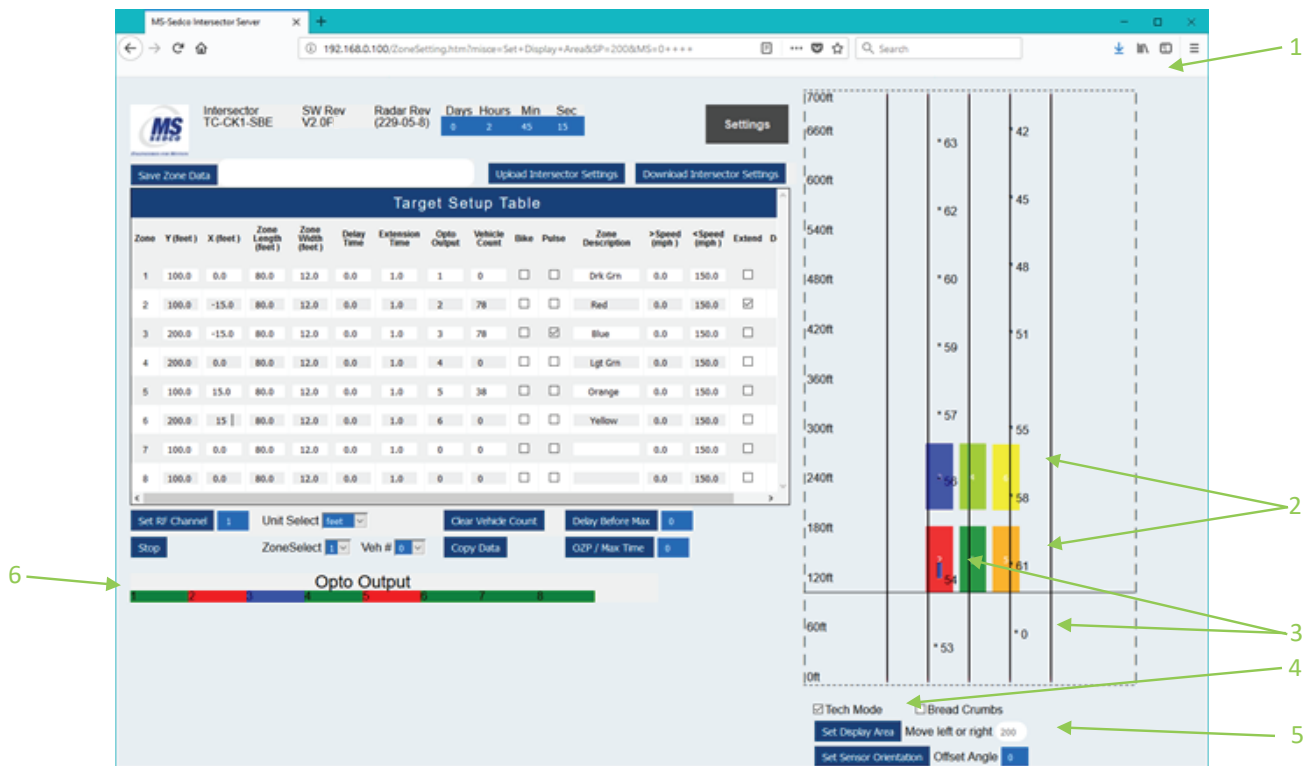


Figure 35: TC-CK1-SBE-2.0 Grid View

TC-CK1-SBE-2.0 GRID VIEW *(continued)*

1. **TC-CK1-SBE-2.0 Grid View Base:** Background of the TC-CK1-SBE-2.0 Grid View that is always on the TC-CK1-SBE-2.0 Portal Page.
2. **Zone Rendering Overlay:** Graphical representation of each zone overlaid to scale on the TC-CK1-SBE-2.0 Grid View base.
3. **Vehicle Rendering:** Graphical representation of each vehicle overlaid in each respective coordinate on the TC-CK1-SBE-2.0 Grid View base.
4. **Tech Mode Feature:** Toggle whether the zone or vehicle renderings are “on top”.
5. **Set Display Area Feature:** Shift the graphical representation of zones and vehicles left or right in the TC-CK1-SBE-2.0 Grid View base.
6. **Opto Output Display:** Visual representation of output activation on the TC-CK1-SBE-2.0 Portal Page.

GRID VIEW MARKINGS:

The TC-CK1-SBE-2.0 Grid View denotes the scale with a periodic Y-value scale running from the bottom to the top of the Grid View. When English units are selected, this scale ranges from 0 to 700 feet in increments of 60 feet with the exception from 660' to 700', which is drawn to scale, but is only 40' tall. When Metric units are selected, this scale ranges from 0 to 213 meters in increments of 20 meters with the exception from 200m to 213m, which is drawn to scale, but is only 13m tall.

The Grid View also provides vertical lines spaced approximately 20-feet apart. These lines do not designate specific x-values, they are meant to be guide lines for setting the sensor's Offset Angle such that vehicles move as straight as possible through the region(s) of interest.

A horizontal line is rendered along Zone 1's Y-value. This line is meant to represent a stop bar if the sensor is used in stop bar applications. This line is for graphical scale reference only, and does not affect TC-CK1-SBE-2.0 performance. If the application does not require a stop bar zone, this horizontal line's display can be disregarded.

ZONE RENDERING:

Zones are overlaid to scale on top of the TC-CK1-SBE-2.0 Grid View. The zone's graphical representation is designated with its Zone Number from the Target Setup Table in the center of the zone in white text. Changes to a zone's location or size can be previewed in the TC-CK1-SBE-2.0 Grid View.

Zones are color coded on the Grid View to show activation status, as well as other pertinent information about activation type and criteria.

- **Dark Green:** Zones with non-zero Opto Outputs set to activate for approaching vehicles that are not currently activating their Opto Output.
- **Red:** Zones with non-zero Opto Outputs set to activate for approaching vehicles that are currently activating their Opto Output, and are not set to “Pulse” mode.
- **Blue:** Zones with non-zero Opto Outputs that are set to “Pulse” mode that have a vehicle that activated the zone passing through it.

TC-CK1-SBE-2.0 GRID VIEW *(continued)*

- **Light Green:** Zones with non-zero Opto Outputs set to activate for departing vehicles that are currently not activating their Opto Output.
- **Orange:** Zones with non-zero Opto Outputs set to activate for departing vehicles that are currently activating their Opto Output.
- **Yellow:** Zones that have unsaved changes in the Target Setup Table.

VEHICLE RENDERING:

Vehicles being tracked by the radar are also overlaid on the TC-CK1-SBE-2.0 Grid View. Their relative location is denoted on the Grid View with an asterisk symbol (*). If a vehicle that is not classified as a bike is in a zone with its “Extend” checkbox selected, the vehicle symbol changes from an asterisk to a blue bar that starts at the vehicle’s X and Y coordinates and extends 12-feet back.

The number next to the vehicle symbol correlates to its Vehicle Number, which allows the user to either set a zone’s X and Y values based on its position, or to find it in the Vehicle Table. For vehicles classified as cars, this number will not have any background. For vehicles classified as bikes or “unknown” (typical for vehicles that have traveled less than 60’ after being picked up from the radar), this number will have a blue background.

The TC-CK1-SBE-2.0 also can hide vehicle symbols while they are on top of zones through the “Tech Mode” feature. When “Tech Mode” is enabled, vehicles are overlaid on top of zones; when “Tech Mode” is disabled, zones are overlaid on top of vehicles. Enabled Tech Mode helps when doing initial setup while disabled Tech Mode helps monitoring zone activations without any clutter of overlaid vehicles. By default, Tech Mode is enabled.

SET DISPLAY AREA:

The TC-CK1-SBE-2.0 Grid View can also be shifted left or right depending on where zones and vehicles are with respect to the grid. Increasing the number next to the text “Move left or right” below the Grid View will shift all object renderings right. Decreasing this number will shift all object renderings left. Clicking the “Set Display Area” button saves changes to the text entry field.

OPTO OUTPUTS:

The TC-CK1-SBE-2.0 Portal Page also provides a readout graphic to display the activation status of each Opto Output. The bar found between the Target Setup Table group and Vehicle Table has a box for each possible output. Each box is designated with its Output Number corresponding to the left side of the box. The following is the color code of the boxes:

- **Dark Green:** Opto Output that are not currently activated
- **Red:** Opto Output that is activated and is not set to “Pulse” mode
- **Blue:** Opto Output, set to “Pulse” mode, with at least 1 active vehicle still in the zone

TC-CK1-SBE-2.0 GRID VIEW *(continued)*

Note that these graphical representations correspond only to zone activations. If the TCIB is not in a recall or failsafe state, these will correspond to the outputs on the TCIB(s). There are 4 possible scenarios where the TCIB would register activations that would not be displayed on the web page:

1. **Power-up Failsafe:** The Intersector System has an initial power-up failsafe timer that keeps all outputs active while the sensor powers up and calibrates. By default, this timer is set to 120 seconds (2 minutes). This can be changed through the serial terminal of the TCIB.
2. **Network Communication Error:** If the TC-CK1-SBE-2.0 is connected to a TCIB's "SETUP" port and the TCIB's "LAPTOP" port does not connect to the "OPERATIONAL" port through an Ethernet switch, the TCIB will not be able to get data from the TC-CK1-SBE-2.0 and will therefore stay in recall until it can get sensor information through the "OPERATIONAL" port. This error may also be seen if the Ethernet cable between the TC-CK1-SBE-2.0 and the TCIB or TCIB-UNI has a fault in it. If using a TCIB-UNI, its portal page will denote this error and have troubleshooting features available to diagnose.
3. **Rain Failsafe:** If the Rain Failsafe Feature is activated, the TCIB will go into a failsafe mode until all the conditions to come out of Rain Failsafe have been met. The user can see if this condition is active on the TC-CK1-SBE-2.0 Portal Page. If the Rain Failsafe Feature is active, "RAIN" will be displayed to the right of the Opto Output boxes in bold blue letters.
4. **Sensor Error:** If the sensor has a critical internal failure that prevents it from operating properly, it will go into recall until the unit is serviced. The user can see if this condition is active on the TC-CK1-SBE-2.0 Portal Page. If the TC-CK1-SBE-2.0 has a fatal Sensor Error, "Sensor Error" or "Error Flag" will be displayed under the model number in the Sensor Information section of the portal page in bold red letters.

DOWNLOAD AND UPLOAD TC-CK1-SBE-2.0 SETTINGS

The TC-CK1-SBE-2.0 has features to download and upload the user-customizable settings.

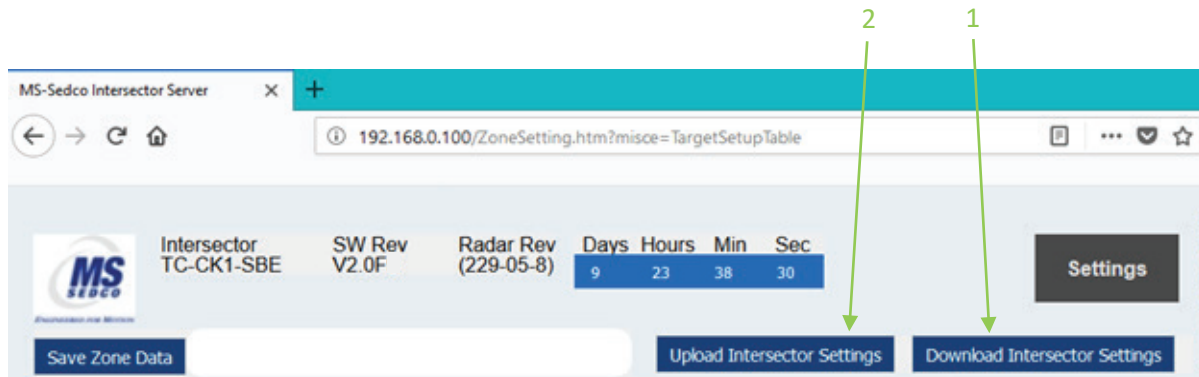


Figure 36: Download and Upload TC-CK1-SBE-2.0 Settings

DOWNLOAD TC-CK1-SBE-2.0 SETTINGS:

Once the TC-CK1-SBE-2.0 is set up and has the desired performance, it is recommended that the user save the settings in the event something happens to the TC-CK1-SBE-2.0 unit. The Download TC-CK1-SBE-2.0 Settings feature allows the user the ability to store TC-CK1-SBE-2.0 setup and zone settings configurations. When the Download TC-CK1-SBE-2.0 Settings is selected, a text file containing the current values from the TC-CK1-SBE-2.0 Portal Page will be downloaded to the computer.

The interface to Download TC-CK1-SBE-2.0 Settings will depend upon the web browser being used and their applicable settings.

UPLOAD TC-CK1-SBE-2.0 SETTINGS:

The Upload TC-CK1-SBE-2.0 Settings feature allows the user the ability to retrieve TC-CK1-SBE-2.0 setup and zone settings configurations previously saved. Selecting the Upload TC-CK1-SBE-2.0 Settings allows the user to navigate to a location that contains previously saved files using the browser window that appears based on web browser settings. Selecting a file and clicking "OK" will upload the saved values into the TC-CK1-SBE-2.0 Portal Page.

Only previously saved TC-CK1-SBE-2.0 files from 2.0 software versions or higher should be used to upload to a TC-CK1-SBE-2.0. Using a TC-CK1-VMS file will cause the unit to not behave correctly.

NOTE: Internet Explorer and Microsoft Edge will occasionally fail during upload. Google Chrome and Mozilla Firefox are recommended web browsers for using the Upload TC-CK1-SBE-2.0 Settings feature.