


TEMPERATURE CONTROLLER AXPI

FEATURES:

The temperature controller sends 0-10v signals out to either a plant item or to a component within the control panel. The controller has two outputs, these can be configured for heating and cooling.

DISPLAY:

The display shows the temperature that the sensor connected to the controller is reading. Pressing either INC or DEC with display the current set point. side.

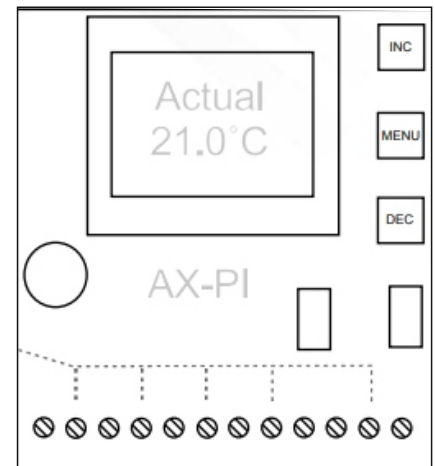

CHANGE SET POINT:

The set point can be easily changed on the controller. On the right hand side of the controller are three buttons simply push INC or DEC to change the set point displayed, it is saved instantly.

NO DISPLAY:

The controller is only energised when the piece of plant it is controlling is enabled, if the controller is controlling a thyristor for the heater, the display will only be on if the Heater Run indicator on the door is on. The heater switch on the door can be switched on but will only illuminate if the airflow from the supply fan is proven.

The information provided in the literature is believed to be accurate (subject to change without notice). However, use of the information shall be entirely at the user's own risk.

