

TEMPERATURE CONTROLLER CAD1

FEATURES:

The temperature controller has a single output, this can be configured for heating or cooling.

DISPLAY:

The display shows the temperature that the sensor connected to the controller is reading, the display is only lit up for 30 seconds from the last button press.


The red dot in the bottom right hand corner of the display shows when the relay is activated.

CHANGE SET POINT:

The set point can be easily changed on the controller. Press the SET button until "dy" is displayed on the readout. This will show the current set point, press UP or Down buttons to get to the desired set point. Press SET button again to save.

SENSOR ERROR:

If the display shows SE then there is a sensor fault, sensor connections need to be checked.

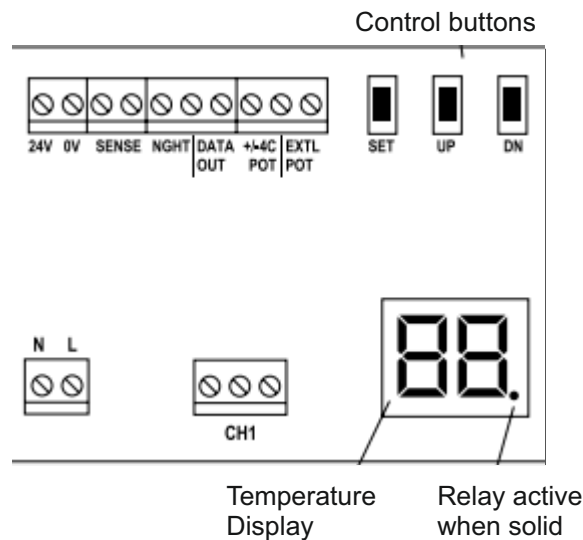

The information provided in the literature is believed to be accurate (subject to change without notice). However, use of the information shall be entirely at the user's own risk.

