#### Model SY8051 Standard Coverage, Standard Response Concealed Pendent Sprinkler, K-factor 5.6 (80 metric)

#### **Description:**

Sentry Sprinklers Model SY8051 is an Automatic Standard Response Concealed Pendent Sprinkler head that utilizes a frangible thermo-sensitive glass bulb to operate the sprinkler. The sprinkler is available in various finishes and temperatures. Sprinkler Model SY8051 is listed and approved for standard coverage for Light and Ordinary hazards. Model SY8051 is a 5.6 K-Factor (80 metric) intended for use in fire sprinkler systems designed in accordance with the standard installation rules recognized by the applicable The Concealed Sprinkler listings or approved agency. Assembly includes a Cover Plate Assembly that covers the operating components above the ceiling. The Cover Plate Assembly is mounted to the Sprinkler Cup Assembly. Upon the release of the Cover Plate, the Concealed Pendent Sprinkler produces a hemispherical water distribution pattern below the deflector.



## **Technical Data:**


| Minimum Operating Pressure: | 7 psi (0.5 bar)                           |
|-----------------------------|---|
| Maximum working Pressure:   | 175 PSI (12 bar)                          |
| Factory Test:               | 100% @ 500 psi (34.5 bar) Hydrostatically |
| Nominal K-Factor:           | 5.6 (80 metric)                           |
| Thread Size:                | 1/2" NPT                                  |
| Bulb size:                  | 5mm                                       |

## **Operation:**

Upon fire initiation within a protected hazard, the temperature inside the hazard rises fusing the solder between the cover plate and its assembly. A spring on the Sprinkler Cover Plate Assembly ensures the ejection of the cover plate from its assembly. The rising heat causes the liquid inside the Thermo-Sensitive bulb to expand. The liquid expansion causes the glass bulb to break, releasing the bulb seat assembly. The water discharges through the sprinkler orifice striking the deflector producing a uniform distribution pattern within the hazard area.

#### Model SY8051 Standard Coverage, Standard Response Concealed Pendent Sprinkler, K-factor 5.6 (80 metric)

Fire Protection

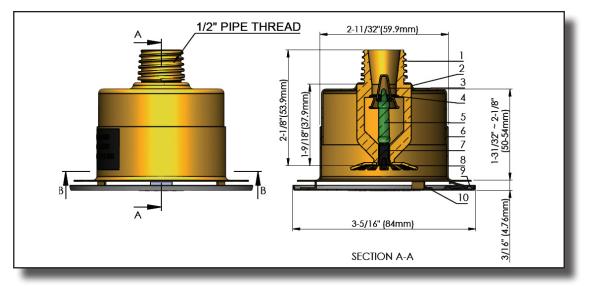

| Approval | Material Standard |  |                     |        |  |  |
|----------|-------------------|--|---------------------|--------|--|--|
| UL       | 1- Frame:         | Brass  | 7- Set Screw:       | Brass  |  |  |
|          | 2- Mounting Cup   |  | 8- Deflector:       | Bronze |  |  |
|          | 3- Button Seal:   | Teflon Tape  | 9- Cover Plate      |        |  |  |
|          | 4- Spring Seal:   | Stainless Steel                                    | 10- Ejection Spring |        |  |  |
|          | 5- Bulb:          | Glass Bulb with Glycerine Solution,<br>5mm Nominal | 11- Label           |        |  |  |
|          | 6- Enclosure      |  |                     |        |  |  |

#### Coverage:

For coverage area and placement of the sprinkler refer to NFPA 13 standard.

#### Guarantee:

Sentry Sprinklers shall replace any of its products if found to be defective in materials or workmanship for a period of one year from order date. The guarantee does not cover wear and tear or improper installation.



Sprinkler Mounting Cup Assembly

## Installation:

All sprinkler heads must be inspected prior to installation. If a sprinkler is damaged, the bulb is cracked, the bulb has loss of liquid and or lost its protective cap, do not install the sprinkler and contact Sentry Sprinklers for replacement. With the sprinkler held in the horizontal orientation, a small air bubble should be present inside the glass bulb.

#### Model SY8051 Standard Coverage, Standard Response Concealed Pendent Sprinkler, K-factor 5.6 (80 metric)

Fire Protection

Use Sentry Sprinklers recommended wrench to install the sprinkler. Slide the sprinkler wrench around the sprinkler frame arms and press the wrench down to engage sprinkler wrench flats. Rotate the wrench clockwise to tighten the sprinkler head. The frame arms must be parallel to the pipe. Never tighten the sprinkler from sprinkler arms. Any torque applied to the frame arms will dislodge the bulb seating assembly causing the sprinkler to leak.

The concealed sprinkler must not be used in any application where the air pressure above the ceiling is greater than that below it. Downdraft through the Mounting Cup could delay sprinkler operation in a fire condition.

Only use Sentry Sprinklers recommended wrench to install the sprinkler.

Exercise caution when installing the sprinkler. If the sprinkler is damaged during installation, do not attempt to fix it, replace it immediately.

After the ceiling has been completed with a  $2\frac{1}{2}$ " (64mm) to 2 13/16" (72mm) diameter clearance hole, remove and discard the protective cap and verify that the sprinkler is intact.

Do not attempt to make up for insufficient adjustment in the sprinkler assembly by under or overtightening the sprinkler Mounting Cup Assembly. Instead, readjust the position of the sprinkler fitting.

# Do not remove Sprinkler Protective Cap until you are ready to install the Cover Plate Assembly.


Absence of the Cover Plate Assembly may delay the sprinkler operation time in a fire situation.

For additional details, refer to NFPA and UL for installation guidelines.

## Care and Maintenance:

The owner is responsible for maintaining their fire protection system and devices in proper operating condition. Refer to NFPA 25 for inspection, testing and maintenance requirements. It is recommended that an automatic sprinkler system be inspected quarterly by qualified inspection personnel.

Sprinklers must never be shipped and or stored where ambient temperature exceeds 100° F / 38° C. Inspect Sprinkler before and after installation. Exercise caution during installation to avoid damage to the sprinkler. Damaged sprinkler due to dropping, striking, and or wrench slippage must be replaced.

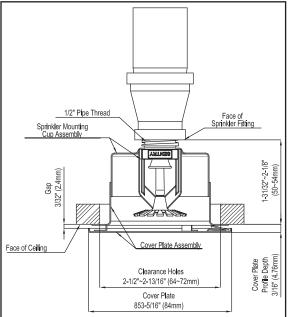




**Cover Plate Assembly** 

#### Model SY8051 Standard Coverage, Standard Response Concealed Pendent Sprinkler, K-factor 5.6 (80 metric)

Fire Protection

If a sprinkler must be removed for any reason, do not reinstall it or a replacement without reinstalling the Cover Plate Assembly. If a Cover Plate Assembly becomes dislodged during service, replace it immediately.

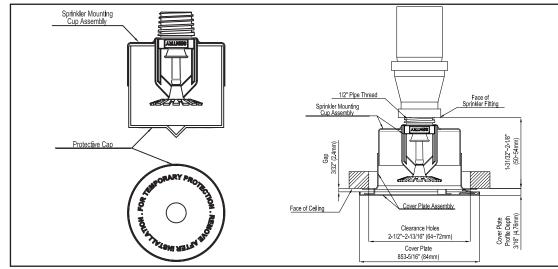

Properly installed sprinklers must have a nominal 3/32" (2.4mm) air gap between the lip of Cover Plate and the ceiling. The air gap is necessary for the proper operation of the sprinkler. If the ceiling is to be painted after installation of the Cover Plate Assembly, care must be taken to ensure that new paint does NOT seal off the nominal 3/32" (2.4mm) air gap.

Sprinklers and or cover plates must not be painted, coated or otherwise altered after leaving the factory. Sprinklers that have been exposed to corrosive products of combustion, but have not operated, must be replaced.

| CONCEALED PENDENT SPRINKLERS SIN + TEMPERATURE + FINISH CODE |                 |                 |                 |                 |  |  |
|--|-----------------|-----------------|-----------------|-----------------|--|--|
|  |                 |                 |                 |                 |  |  |
| K-FACTOR   | 5.6 (80 METRIC) | 5.6 (80 metric) | 5.6 (80 metric) | 5.6 (80 metric) |  |  |
| ORIENTATION  | CONCEALED       | CONCEALED       | CONCEALED       | CONCEALED       |  |  |
| RESPONSE   | STANDARD        | STANDARD        | STANDARD        | STANDARD        |  |  |
| TEMPERATURE  | 135° F (57° C)  | 155° F (68° C)  | 175° F (79° C)  | 200° F (93° C)  |  |  |
| BULB COLOR   | ORANGE          | RED             | YELLOW          | GREEN           |  |  |
| TEMP. CLASSIFICATION   | ORDINARY        | ORDINARY        | INTERMEDIATE    | INTERMEDIATE    |  |  |
| HAZARD TYPE  | LIGHT/ORDINARY  | LIGHT/ORDINARY  | LIGHT/ORDINARY  | LIGHT/ORDINARY  |  |  |
| APPROVAL   | UL              | UL              | UL              | UL              |  |  |
| THREADS  | 1/2" NPT        | 1/2" NPT        | 1/2" NPT        | 1/2" NPT        |  |  |
| * FINISH CODE: 2 FOR CHR                                     | OME             | ^               | ^               | •               |  |  |

| COVER PLATE PART NUMBER |                      |                       |                      |                       |  |  |  |
|-------------------------|----------------------|-----------------------|----------------------|-----------------------|--|--|--|
| SIZE                    | WHITE 135° F (57° C) | CHROME 135° F (57° C) | WHITE 155° F (68° C) | CHROME 155° F (68° C) |  |  |  |
| ADJUSTMENT              | 1/6" (4.2 mm)        | 1/6" (4.2 mm)         | 1/6" (4.2 mm)        | 1/6" (4.2 mm)         |  |  |  |
| 3- 5/16"                | CP80135-W            | CP80135-C             | CP80155-W            | CP80155-C             |  |  |  |

\*Do not attempt to paint or repaint the cover plate. Only factory paint is allowed.

10967 Lake Underhill Rd, Unit 103 Orlando, Florida 32825 Tel:+1-407-482-9282 Fax:+1-407-482-9476