

# CLOTHING PROTECTOR (ADULT BIB)

FINISHED SIZE

SMALL: 16" X 28 ½" / MEDIUM: 17" X 30 ½" / LARGE: 18" X 32" (APPROX.)

*This clothing protector is a specially designed bib for all purposes. A few other ways you can use it is on children too since it is bigger than baby bibs it can cover whole surface and you don't have to worry about the food getting on the child's pants. By attaching snaps on the bottom corner and folding the edge it can actually catch foods and you can avoid the mess of cleaning the floors. Moreover, this can be used as a smock when doing creative projects that makes a lot of mess!*





# CLOTHING PROTECTOR (ADULT BIB)

## FINISHED SIZE

**SMALL: 16" X 28 ½" / MEDIUM: 17" X 30 ½" / LARGE: 18" X 32" (APPROX.)**

*This clothing protector is a specially designed bib for all purposes. A few other ways you can use it is on children too since it is bigger than baby bibs it can cover whole surface and you don't have to worry about the food getting on the child's pants. By attaching snaps on the bottom corner and folding the edge it can actually catch foods and you can avoid the mess of cleaning the floors. Moreover, this can be used as a smock when doing creative projects that makes a lot of mess! [Designer's Review](#)*

## MATERIAL LIST

### FABRIC

44" wide heavyweight home decorator OR quilting weight cotton  
(1) Yard for bib (exterior, interior)

### TOOL LIST

Ruler, Scissors, Chalk pencil, Pencil, Sewing machine, Pins, Needle, Shape tool, fabric clips, Installation tool for install line 24 snaps (Optional), Hammer (Optional)

\* All seam allowances are 3/8" unless specified otherwise

\*All units are in inches.

\*\* After printing the pattern and taping the pieces together, please follow the reference the provided size guide (3" or 5").

\*\* Patterns marked as A4 are for users who utilize the A4 standard paper size. If the pattern fits inside a single page of letter and/or A4 paper then a separate A4 size file is not included, as the pattern will work with both paper sizes.

### OTHERS

(1) 1" wide 2" length hook and loop fastener  
(2) Packs of line 24 snap (Optional)  
(1) Spool of coordinating thread

© 2020 Copyright of [ithinksew.com](http://ithinksew.com)

The finished products may only be sold when the following conditions are applied.

\*Full credit must be given to [ithinksew.com](http://ithinksew.com) for the patterns (both online and offline). For example, when products are sold online, they must include a statement saying "This pattern was designed by [ithinksew.com](http://ithinksew.com)."

When sold offline, a tag must be attached, stating, "The finished products may only be made by crafters. It may not be mass produced." The conditions above may change.


## Cut out the Fabric

Draw the patterns directly onto the wrong side of a single layer of fabric. Cut out all the pieces.


- (2) Bib Pieces (1 for exterior, 1 for interior)
- (2) 1 ½" Length Hook and Loop Fasteners

## Assemble the Bib


**1** Place the two bib pieces with right sides together. Pin and stitch the two together, back stitch on both ends. Leaving a opening for turning the bib right side out on the bottom of the bib.

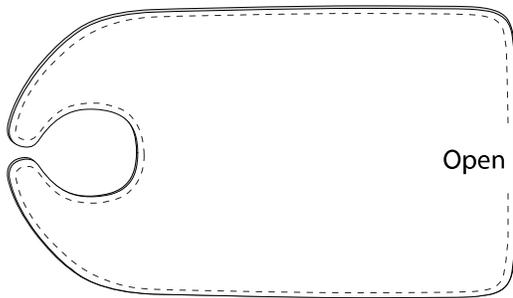

**2** Notch and clip the curved seams.

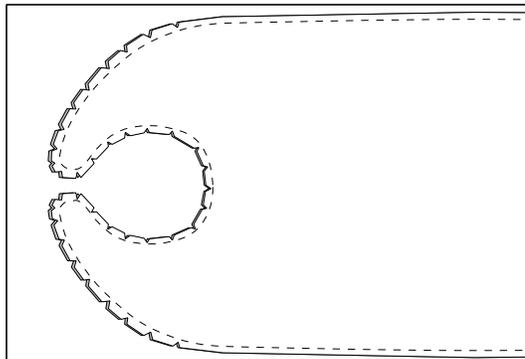

**3** Turn the bib right side out through the opening. Press and topstitch 1/4" away from the seam.

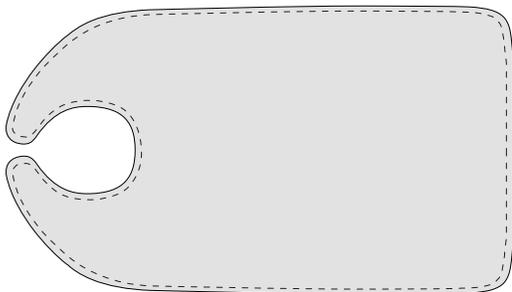

**4** Attach the snaps on both ends as indicated on the pattern. See Appendix O. "Attach the snaps"




## Attach the hook and loop fastener

**1** Separate the hook and loop fastener.

**2** Lay the exterior side facing up.

**3** Place the hook and loop fasteners onto the exterior side and interior side of the faced place as indicated on the pattern. Use the fabric clip to hold it.

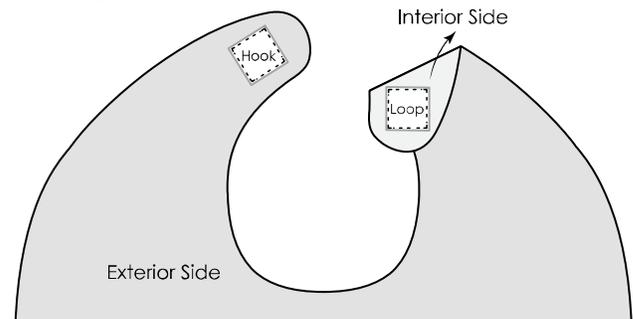

**4** Stitch the hook and loop fasteners in a rectangular shape.

## Appendix O. Attach the Snaps

The caps (and posts) have a long prong that stick out, while the sockets and studs each have a center hole. The prong is poked through the fabric and then comes up through the hole of a socket or stud. The cap and the socket are one set, while the stud and post are one set. The instructions on how to attach the snaps are as follows.

### 1 Snap sets, snap setter.



### 2 Place your capped post, post up, on your setting anvil.




### 3 Place the forward side leather piece wrong side facing up, so that the post pushes through the hole.



### 4 Put the socket over the cap.



### 5 Put the punch on the socket and hit the punch using the hammer.

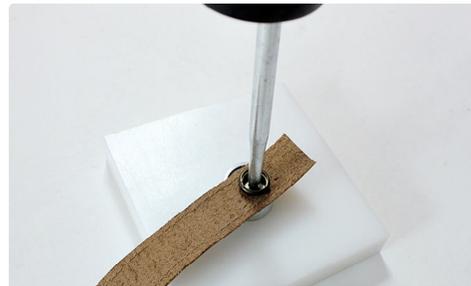

### 6 Repeat this process for the remaining stud and post to the backward side leather



### 7 Finished picture.





\*\* When printing this pattern, please print it without any margins at actual size.


\*\* After printing the pattern and taping the pieces together, please follow the reference the provided size guide (3" or 5").


\*\* Patterns marked as A4 are for users who utilize the A4 standard paper size.

\*\* If you experience that certain parts of the pattern are not printing, you should be able to ignore those near the edge/border. These are usually just guides & signs.

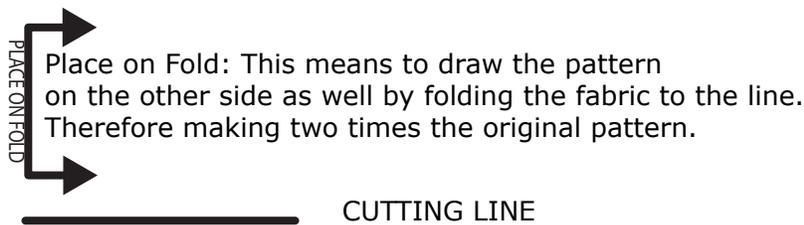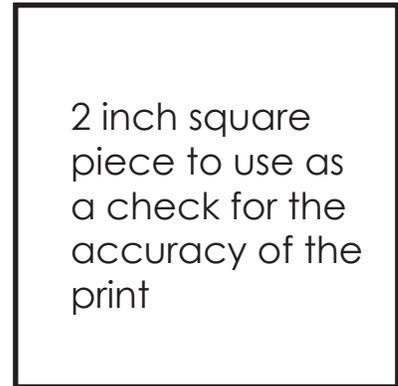

### Paper Layout (Letter Size)

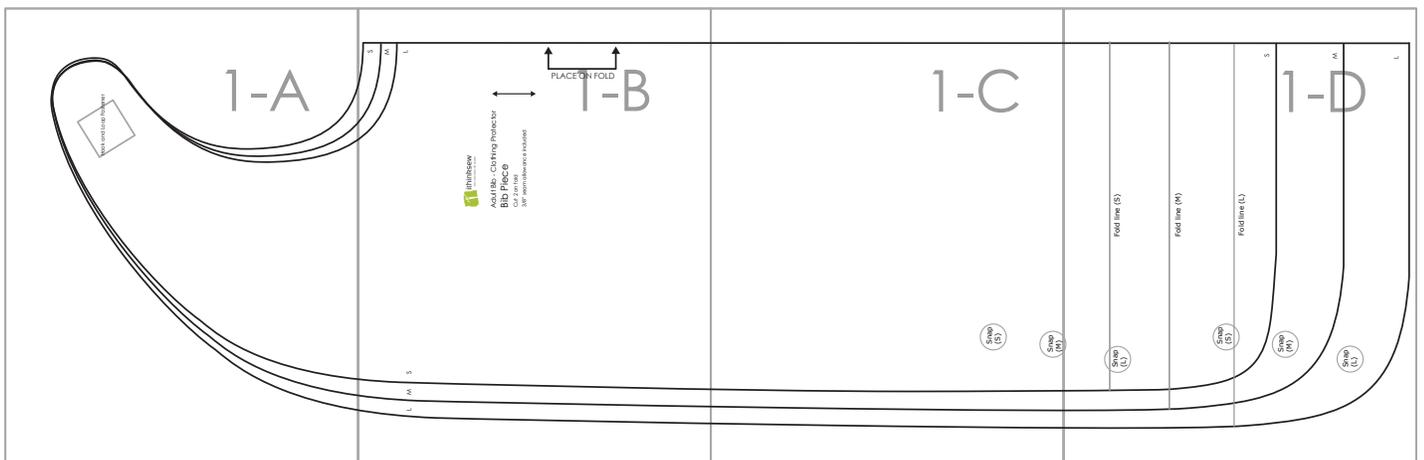


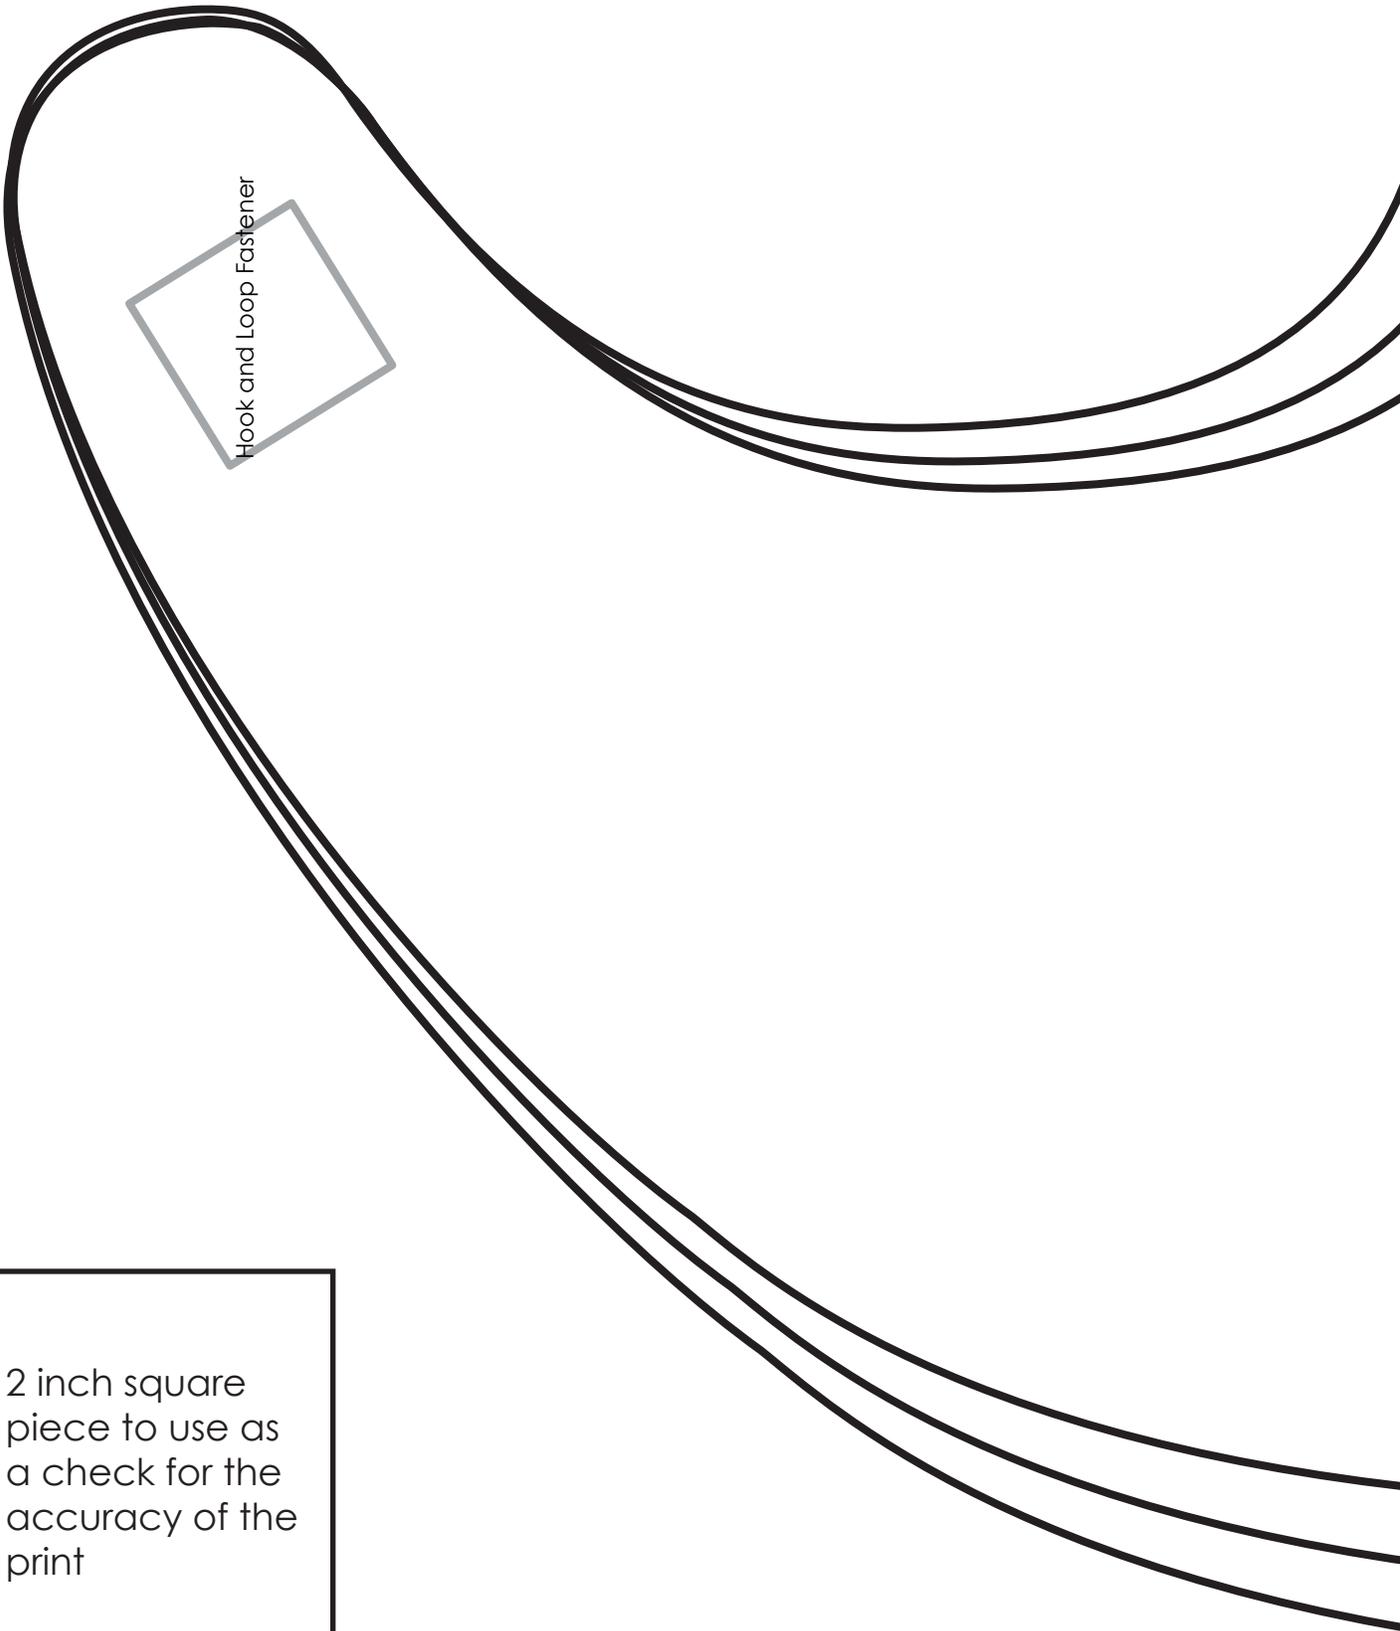

Hook and Loop Fastener

2 inch square  
piece to use as  
a check for the  
accuracy of the  
print

3" (7.62cm)

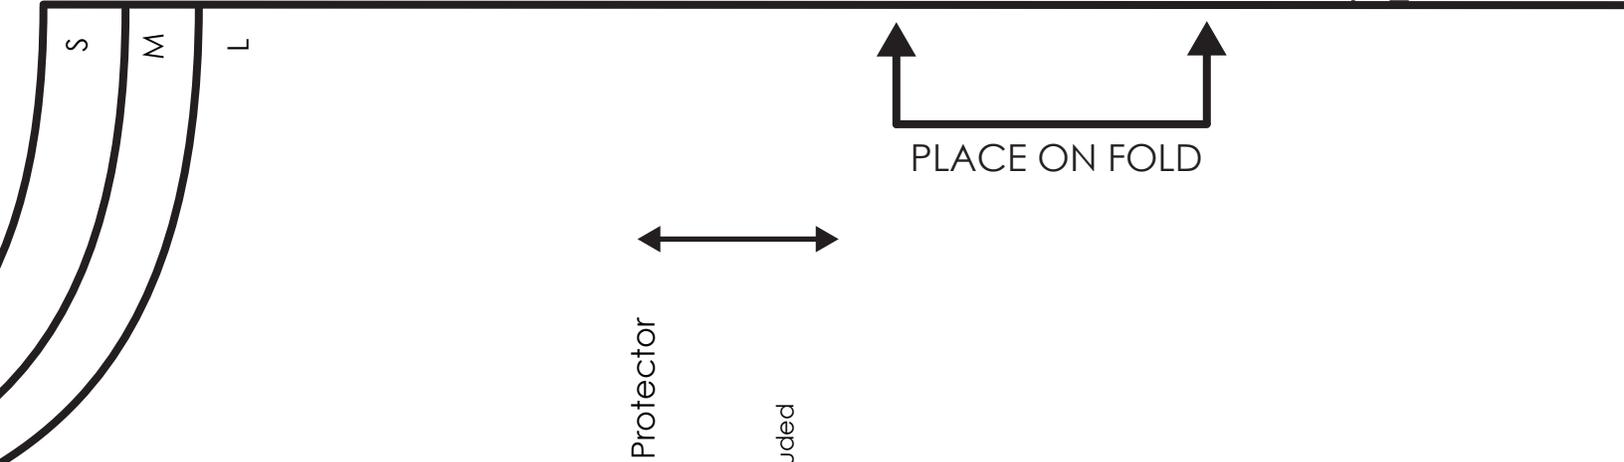

Adult Bib - Clothing Protector  
**Bib Piece**


Cut 2 on fold  
3/8" seam allowance included



Snap  
(S)

Snap  
(M)

3" (7.62cm)

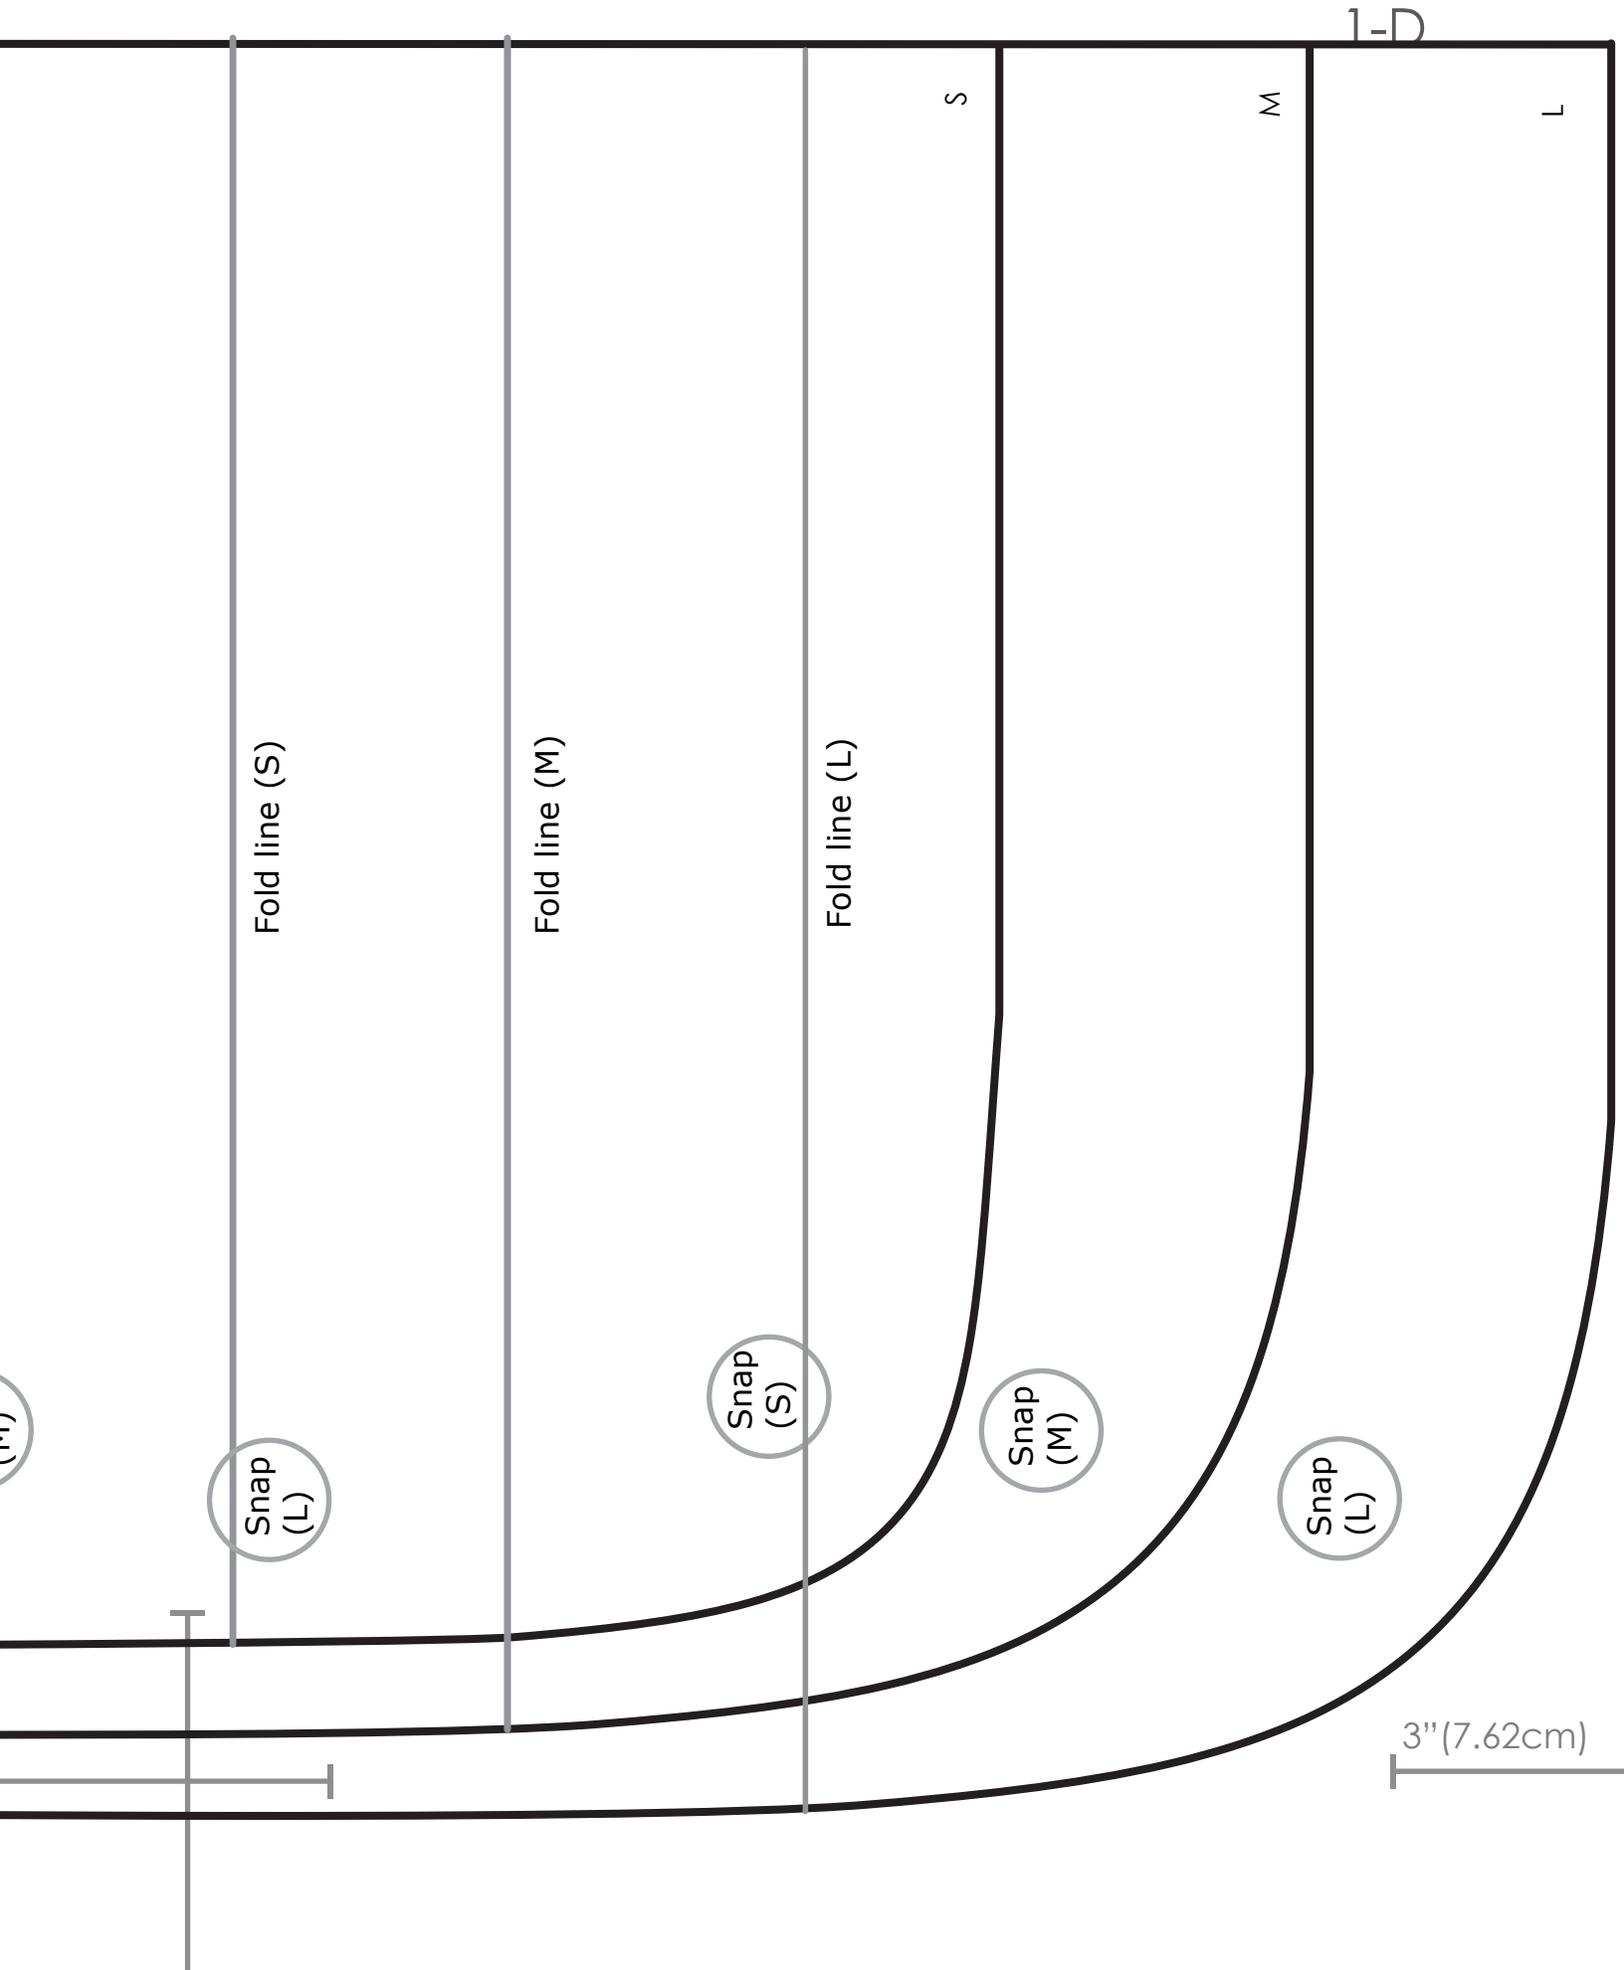

# A4


# PAPER

\*\* When printing this pattern, please print it without any margins at actual size.

\*\* After printing the pattern and taping the pieces together, please follow the reference the provided size guide (3" or 5").

\*\* Patterns marked as A4 are for users who utilize the A4 standard paper size.


\*\* If you experience that certain parts of the pattern are not printing, you should be able to ignore those near the edge/border. These are usually just guides & signs.

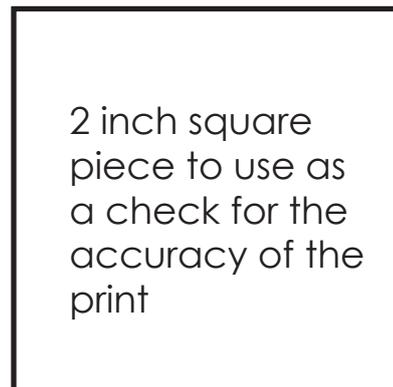

Place on Fold: This means to draw the pattern on the other side as well by folding the fabric to the line. Therefore making two times the original pattern.

CUTTING LINE

## Paper Layout (A4 Size)

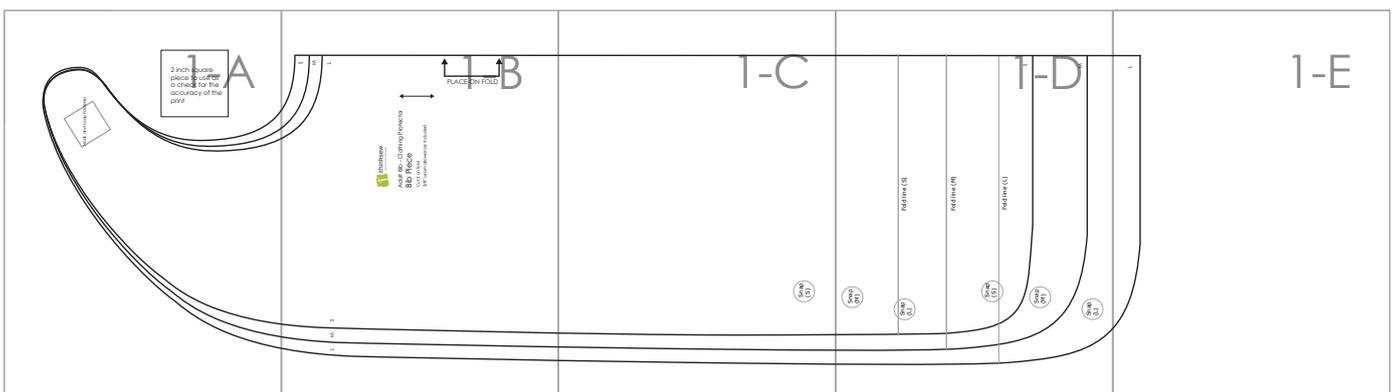


1-A


2 inch square  
piece to use as  
a check for the  
accuracy of the  
print

Hook and Loop Fastener

3" (7.62cm)

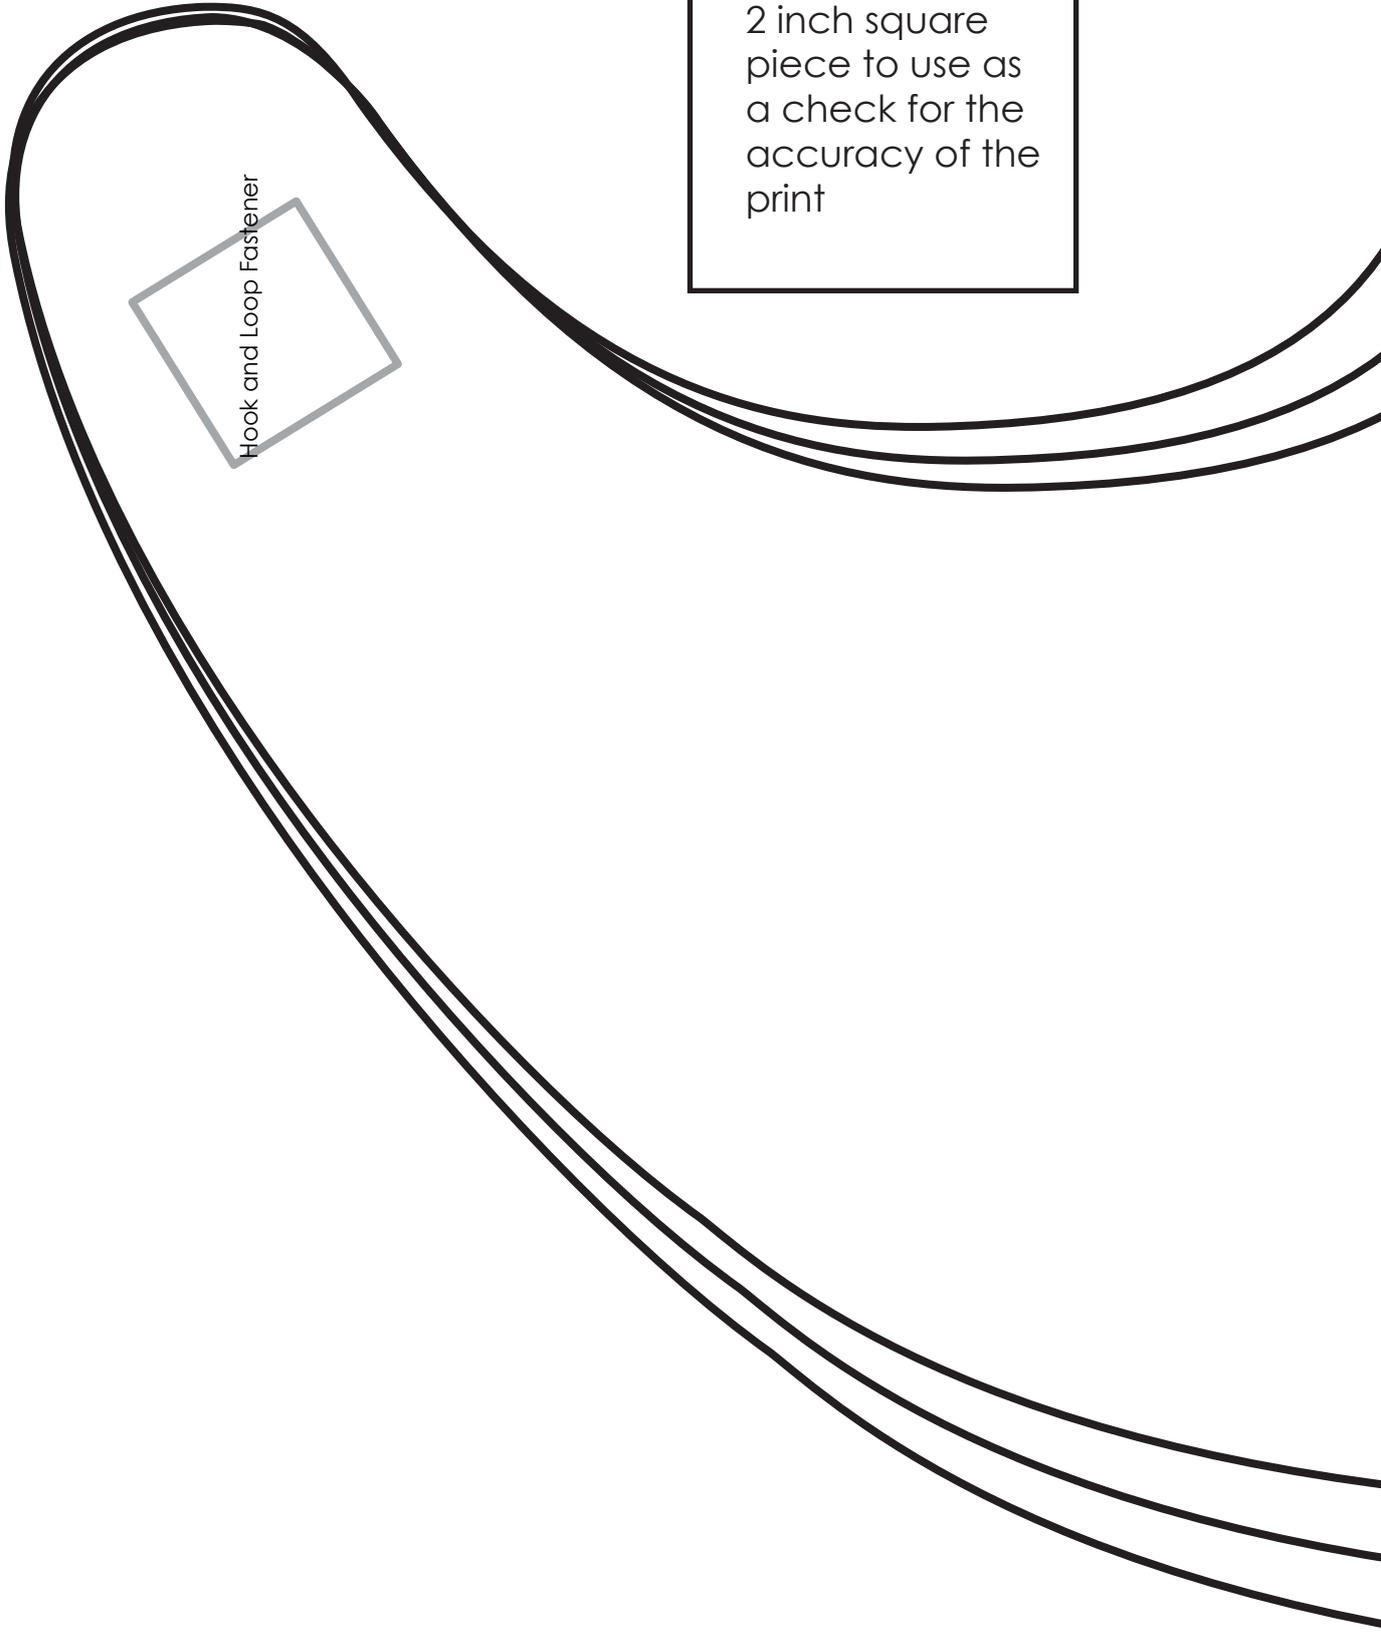


1-B

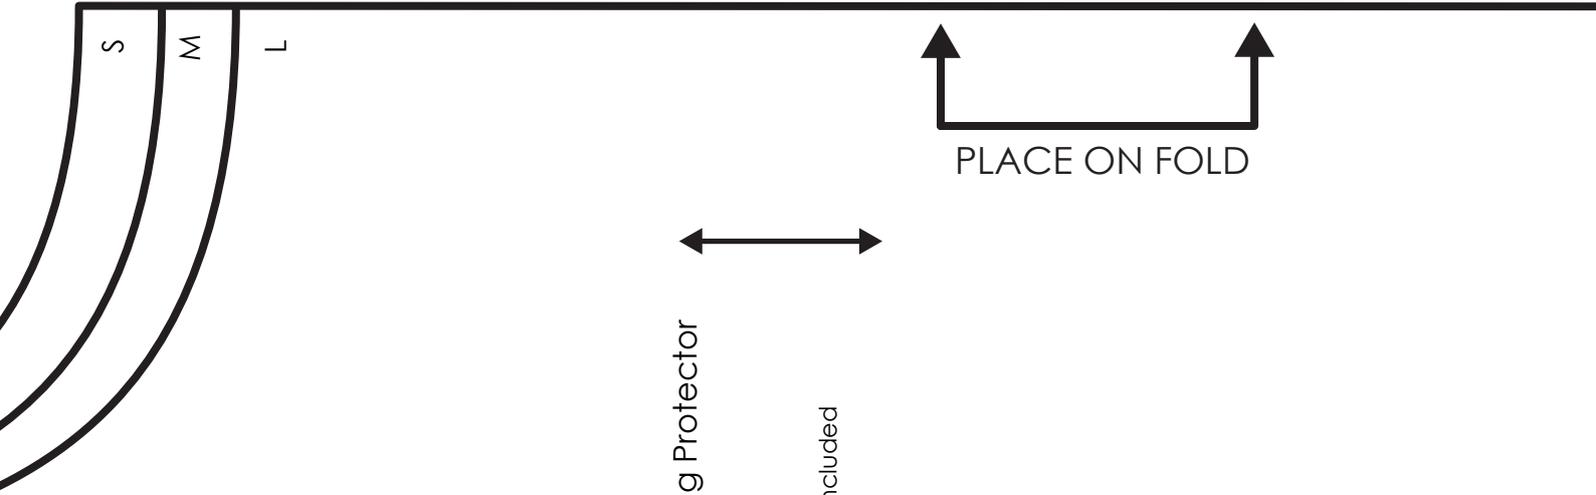


Adult Bib - Clothing Protector  
**Bib Piece**

Cut 2 on fold  
 3/8" seam allowance included

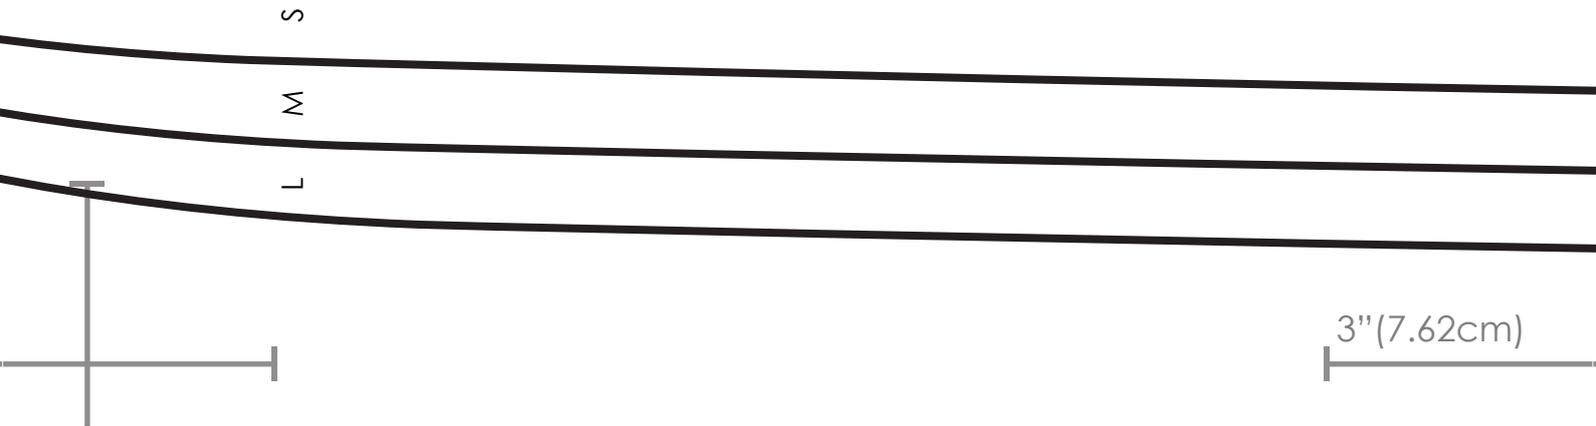


Snap  
(S)

3" (7.62cm)

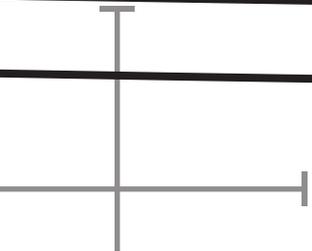


1-D

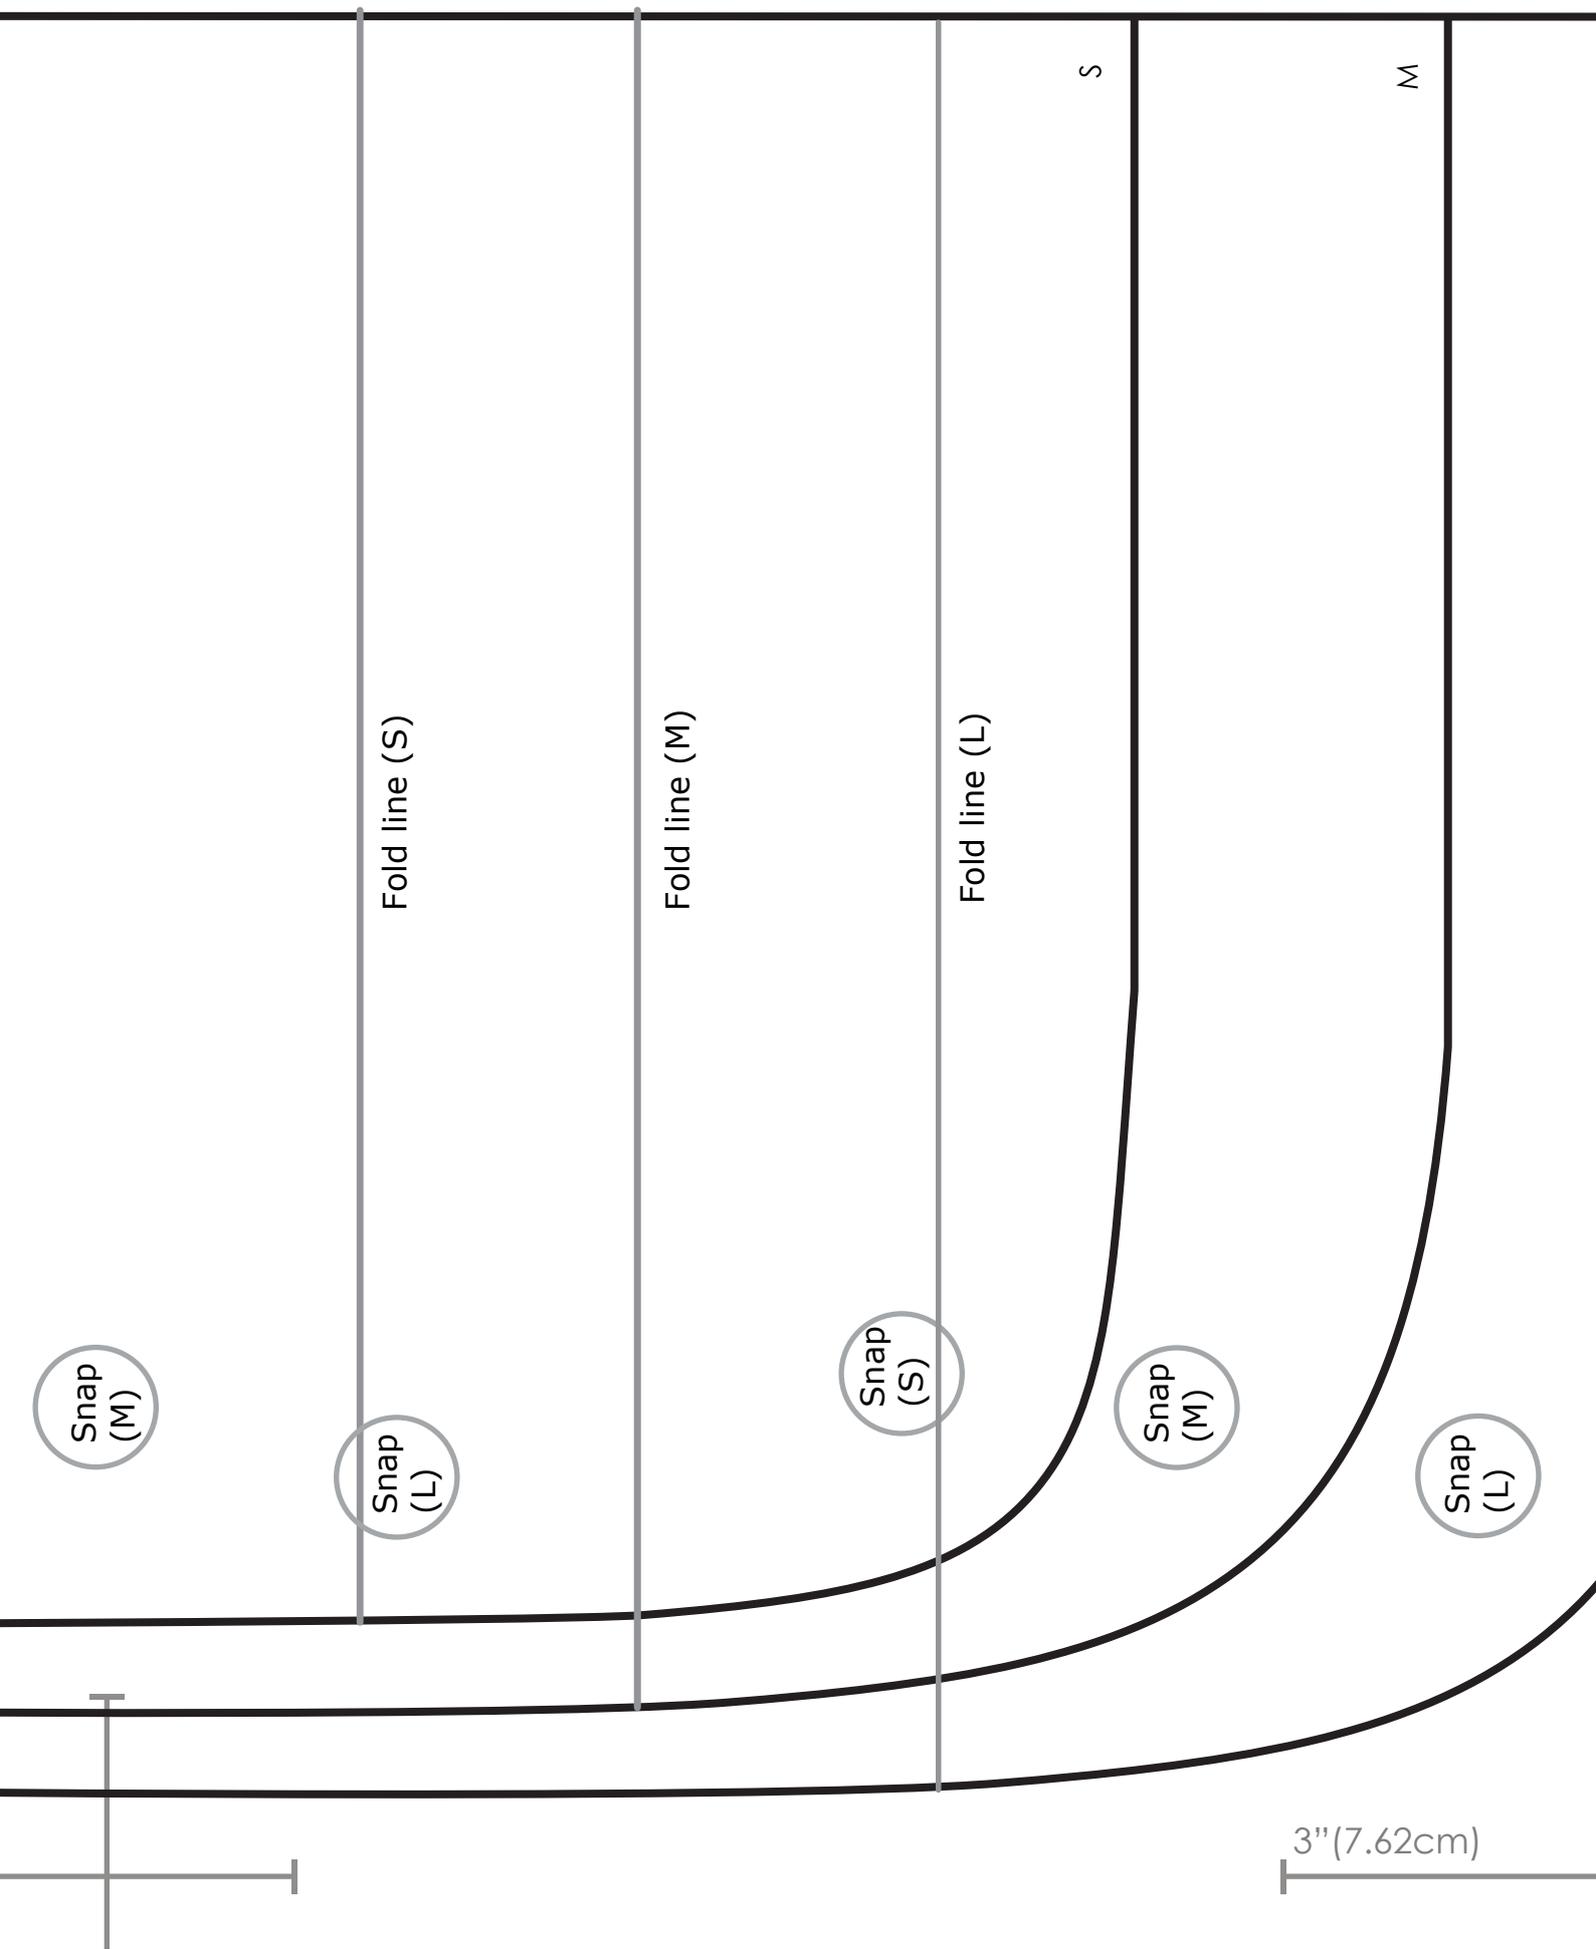

1-E



┌

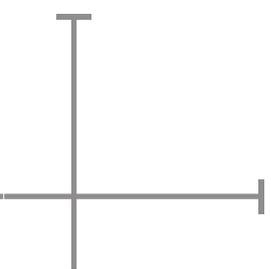

3" (7.62c)