


SHURflo 4.0 GPM Pump Breakdown

Model 2088-313-544

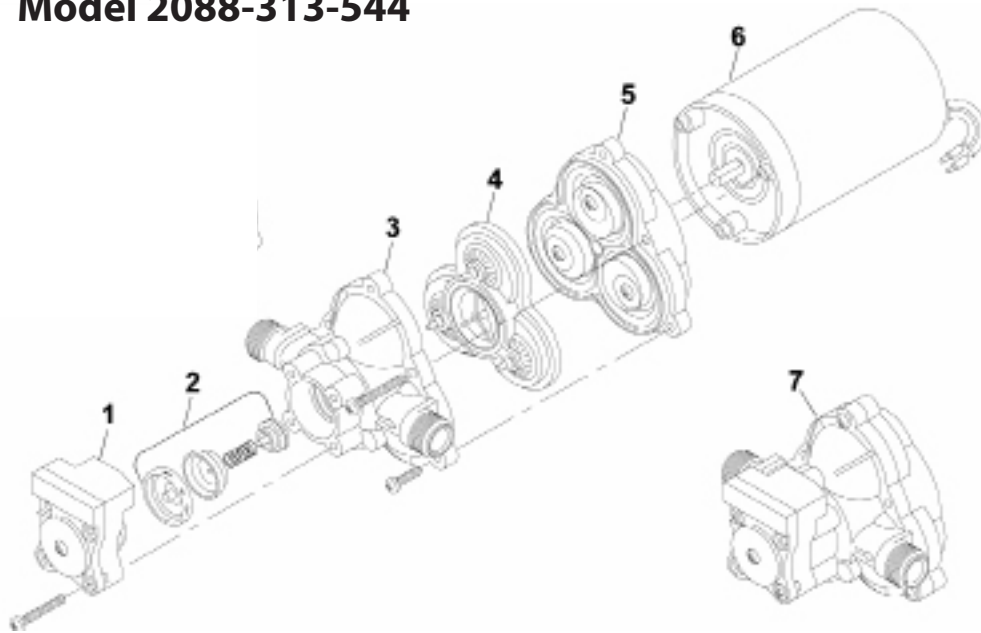

Replacement Parts

1. Switch Assembly (sealed replacement)	94-230-55
2. Check Valve Assembly	94-237-05
3. Upper Housing	94-231-30
4. Valve Assembly	94-232-05
5. Diaphragm / Drive Assembly	94-238-04
6. Motor	11-226-06
7. Complete Pump Head	94-236-15