



ST16 Hardware Monitor, Right Stick

1). Power on the ST16 and let it come to the main screen.

2). Select "Systems Settings":

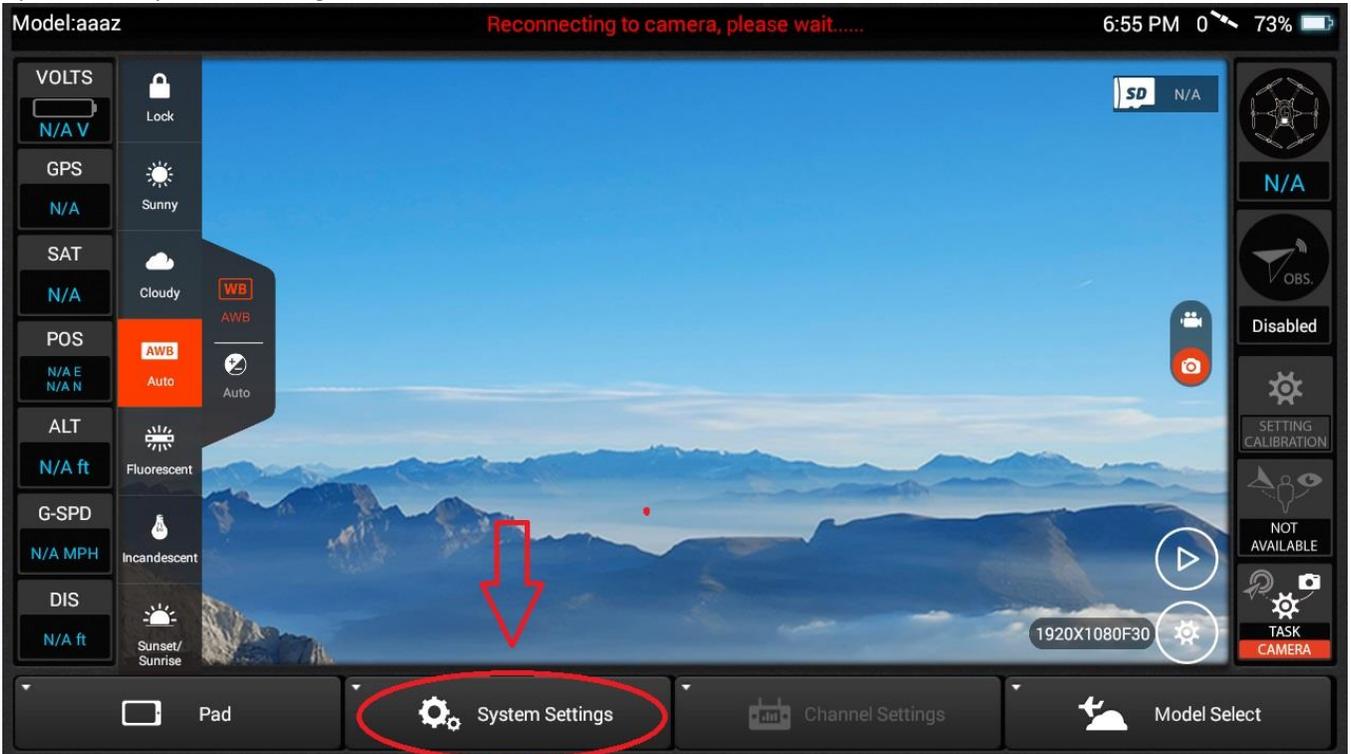


3). Select "OK":

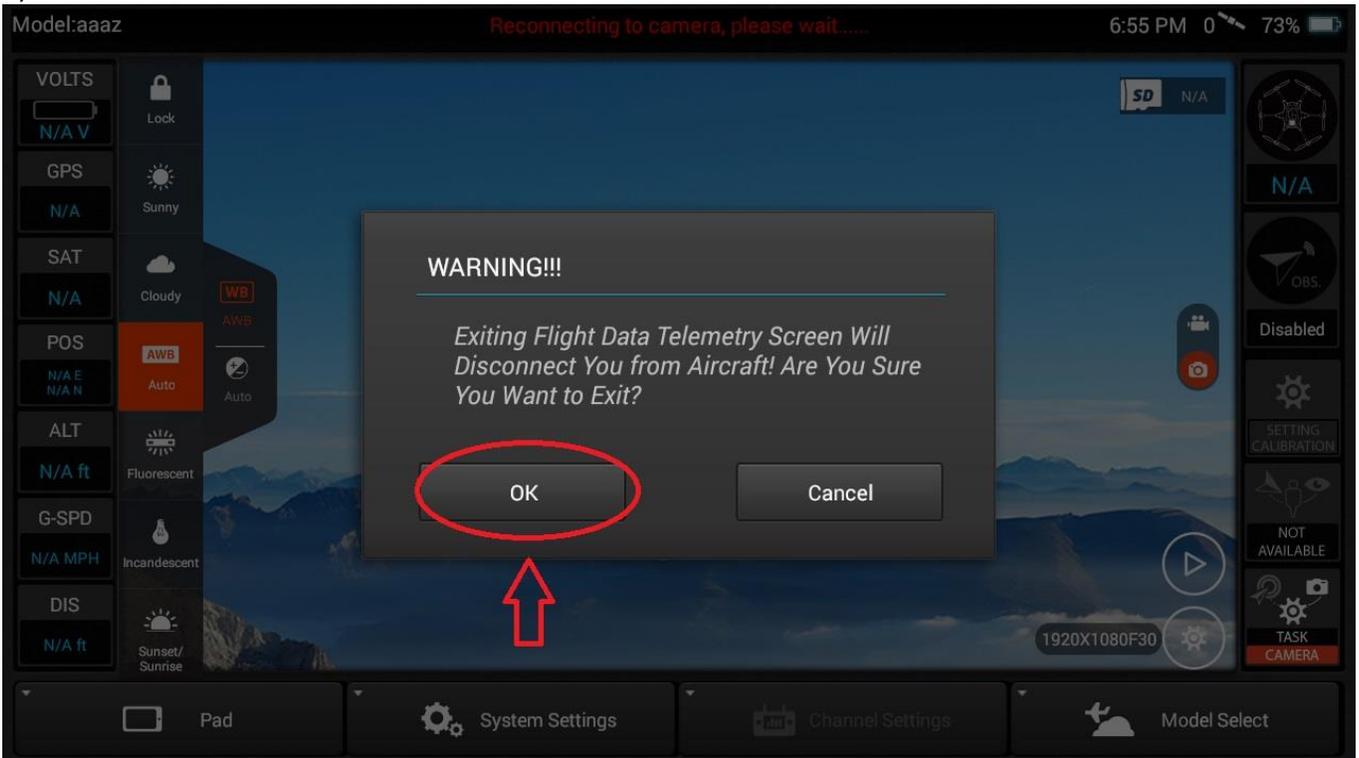

ST16 Hardware Monitor, Right Stick

4). Select "Hardware Monitor":

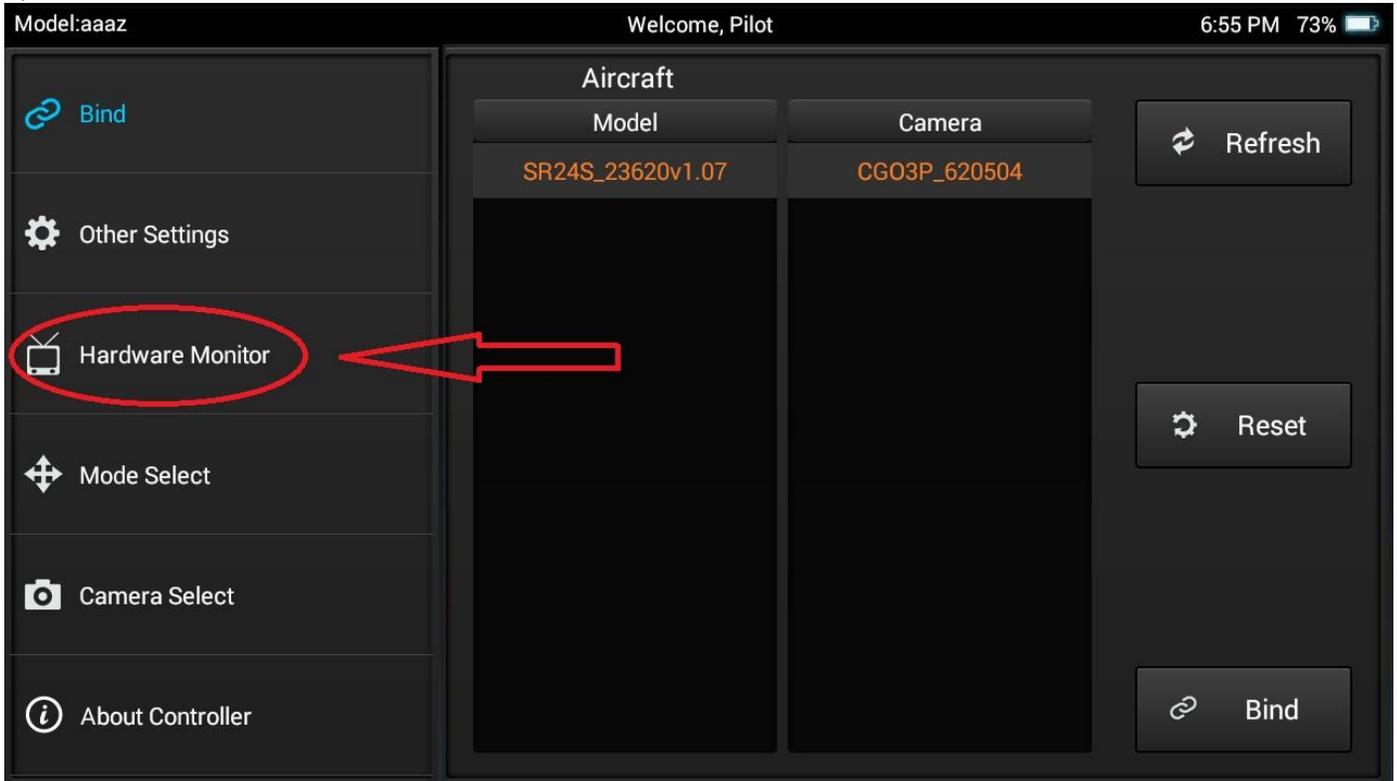

5). Move the RIGHT stick around to ensure "J3" and "J4" operate smoothly and BOTH come back to center when the stick is released:

