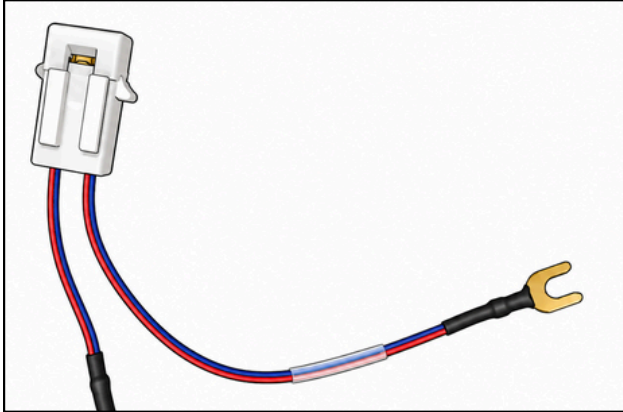
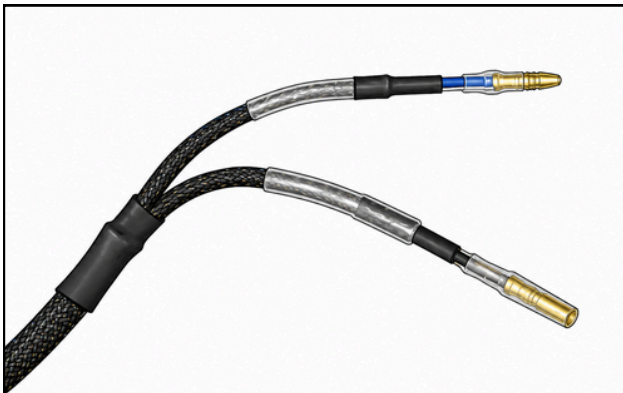


INSTALLATION GUIDE**BATTERY TERMINAL**


Connect to **BATTERY TERMINAL**

- **RED** Wire to (+) Positive Battery Terminal

**INPUT / OUTPUT WIRES**

Input & output wires

- **BLUE** Wire to (+) Aux light trigger
- **BLACK** Wire to (-) Negative High / Passing trigger

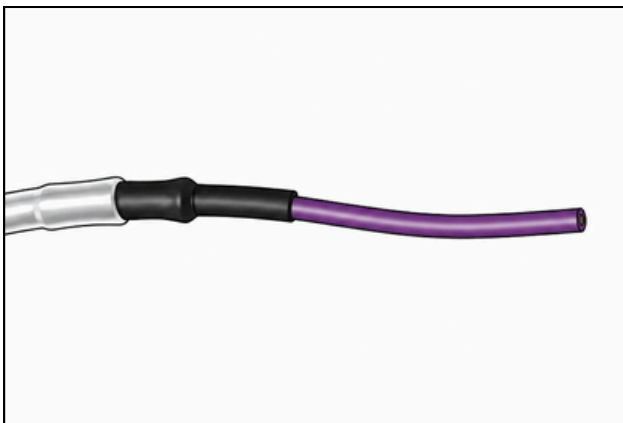**ACCESSORY WIRE**

Connect to **ACCESSORY WIRE**

- **PURPLE** Wire to (+) Positive Accessory wire
- Connect to any positive (+) wire that becomes active when the ignition is switched **ON**.