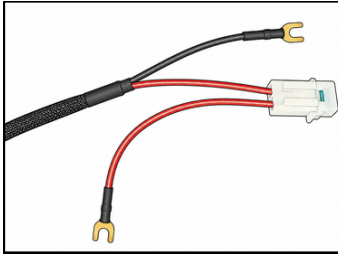
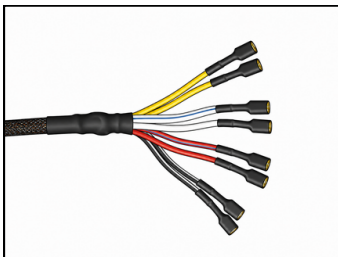


INSTALLATION GUIDE**BATTERY TERMINALS**

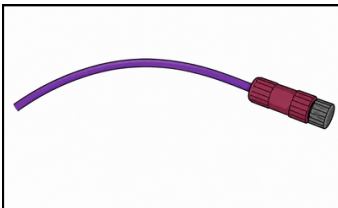
Connect to **BATTERY TERMINALS**

- **RED** Wire to (+) Positive Battery Terminal
- **BLACK** Wire to (-) Negative Battery Terminal

**OUTPUT WIRES**

Connect to **AUXILIARY LIGHT**

- **RED** Wire to (+) Aux light **COMBINATION**
- **WHITE** Wire to (+) Aux light **WHITE**
- **YELLOW** Wire to (+) Aux light **YELLOW**
- **BLACK** Wire to (-) Aux light **GROUND**

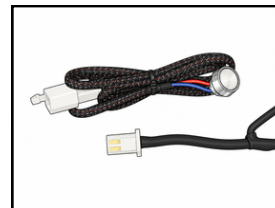
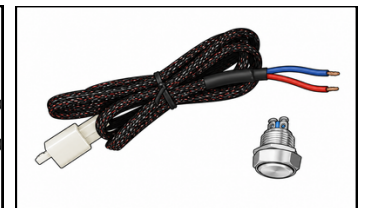
**ACCESSORY WIRE**

Connect to **ACCESSORY WIRE**

- **PURPLE** Wire to (+) Positive Accessory wire
- Connect to any positive (+) wire that becomes active when the ignition is switched **ON**.

**LIGHT SWITCH**

- 4 PIN Terminal connector to **LIGHT SWITCH**

WITH PASSING VARIANT**2 PIN Terminal****Detachable passing switch**

Wiring harness **PASSING TRIGGER**

- Detachable passing trigger can be replaced with the switch of your choice
- **BLUE WIRE** Can be integrated to any switch with (+) Positive output

**ATTENTION**

- Disregard and seal **RED WIRE** if **BLUE WIRE** is integrated to a different triggering switch.