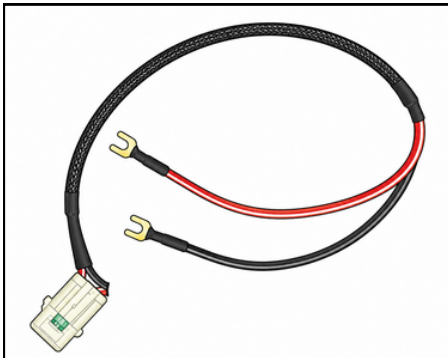 
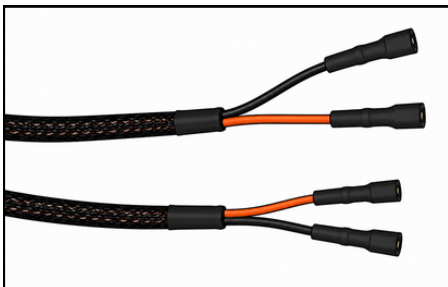 


INSTALLATION GUIDE**BATTERY TERMINALS**

 
Connect to **BATTERY TERMINALS**

- **ORANGE** Wire to (+) Positive Battery Terminal
- **BLACK** Wire to (-) Negative Battery Terminal

**LOUD HORN CONNECTORS**

Connect to **AFTERMARKET LOUD HORNS**

- **BLACK** Wire to (-) Negative Terminal
- **ORANGE** Wire to (+) Positive terminal

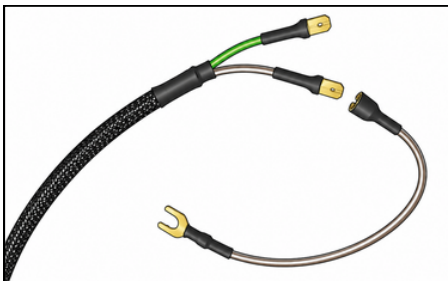**TO STOCK HORN TRIGGERS**

Connect to **STOCK HORN TRIGGERS**

- **GREEN** Wire to (+) Positive trigger
- **BROWN** Wire to (-) Negative trigger
- If unit has single terminal only - Use the **Brown** grounding adapter if needed