

Large Display Thermometer & Hygrometer

Measures indoor/outdoor temperature and indoor humidity.

Large LCD Display | High Stability & Accuracy | Waterproof temperature probe



Temperature
°C/°F Transformations

Humidity

Time (12 Hour/24 Hour
mode switch)



1. Product specification

- Temperature measurement range: -50 °C~+70 °C (-58 °F~+158 °F)
- Temperature measurement precision: $\pm 1^{\circ}\text{C} \pm 1.8^{\circ}\text{C}$
- Temperature resolution: 0.1 °C (0.2 °F)
- Humidity measurement range: 10% RH~99% RH
- Humidity measurement precision: $\pm 5\% \text{RH}$
- Humidity resolution: 1%RH
- Battery: AAA 1.5 V
- Storage conditions: -10 °C~+50 °C (20~80%RH)

2. Basic function

- Temperature/Humidity display; C/F temperature display switch
- Maximum/Minimum temperature and humidity memory function
- 12/24 Hour clock; Hour function; The daily alarm clock function
- Calendar display function

3. Operation method

- 3.1 Follow the directions on the back to open the battery door & install the battery prior to use.
- 3.2 Key Functions:
 - [MODE] Switch the clock and alarm mode, set the current time, alarm, 12 or 24 hour time, and date;
 - [ADJ] Adjust the value of the set item;
 - [MEMORY] Show the maximum/minimum temperature and humidity values; holding down for more than 2 seconds can clear the memory and display the current measured values;
 - [°C/°F] Switch °C and °F located behind the bracket.
- 3.3 When holding down [MODE] for 2 seconds, the current number of minutes will begin flashing. Press [ADJ] to adjust the number of minutes. Continuously pressing [MODE] can set the "clock", "12/24, Month (M), and Day (D).
- 3.4 In the current clock mode (when the two points between the clock and the minute flicker once per second), press [MODE] to switch to the alarm mode (when the two points between the clock and the minute do not flicker), then press [ADJ] to switch the alarm function on and off. NowTime setting; Hold down [MODE] for 2 seconds to set the alarm time.
- 3.5 If you are in the alarm mode, it will automatically return to the current clock time in 10 seconds if there is no activity. You can also press [ADJ] to switch to the calendar, and after 10 seconds it will automatically return to the current clock time.
- 3.6 If there is a malfunction, please reinstall the battery.

