


INNOVATION IN ROTARY AIRERS

Instructions

Opening the SyDri Standard Ainer


You will find most ground spikes are similar in size and diameter for your SyDri Standard Ainer. Firmly place the bottom of the central pole of your SyDri Standard Ainer into a ground spike (not provided).

With the one hand locate the **Bottom Hub**
Push the **Bottom Hub** in an upwards direction, up the central pole.

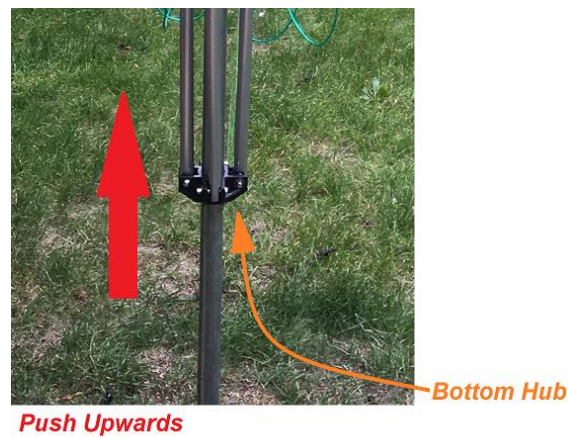

With the other hand locate the **Pulley cord**, loosely pull the **Pulley cord** in a downwards direction, you will hear the ratchet of the pully cord clicking.

(NOTE please DO NOT use the **Pulley cord** to pull the Bottom Hub up the central pole).

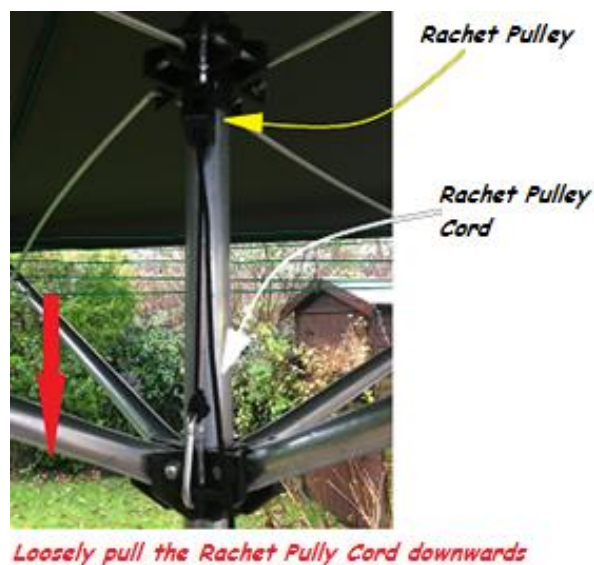

Push the **Bottom Hub** up the central pole until the **Bottom Hub** stops sliding upwards, at this point the canopy should be in a fully open position.

With the other hand holding the **Pulley cord**, loosely pulling the **Pulley cord** until its taught but not over tightened.

Your SyDri Standard Airer is now in a fully opened position.



If required: At the end of each canopy rod, simply hold the corner of the canopy and pull in a downward direction until the corner of the canopy slides over the end of the canopy rod.

Shown below



Pull in a downward direction



Slides over the end of the rod

You're ready to hang your washing

Always try to hang your washing with the longest items pegged onto the line in the middle of the rotary airer nearest to the central pole.

The smallest items pegged onto the line towards the outer edges of your rotary airer.

For more information please visit the website **SyDry.com**

Telephone: **07983 957324**