

## **EW51501** Driveline Fluid Exchange Machine

# JOB AID

Technical Support: 833-303-4644

SAFETY	RECOMMENDATIONS	
Safety glasses and gloves should be worn during the service. Use extreme caution when raising the vehicle on the lift.		
PREPARATION		
Attach to <b>NEW FLUID</b> cap / inlet tube the appropriate Wynn's Differential Fluid. Connect battery cables to vehicle's battery. Select appropriate adapter.		
Attach the appropriate adapter to the <b>BLACK</b> & <b>RED</b> service hoses. <b>NOTE:</b> Use larger suction wand whenever possible.		

#### DRAIN DIFFERENTIAL

Open ball valve on <b>BLACK</b> service hose, and insert adapter into vehicle's differential fill hole.	
Set the <b>USED FLUID</b> switch to the <b>ON</b> position to remove fluid from the vehicle's differential.	ON
Set the switch OFF when finished.	USED FLUID
<b>NOTE:</b> If vehicle has a drain plug, it can be removed to drain the system.	OFF OFF



### **EW51501** Driveline Fluid Exchange Machine

# JOB AID

Technical Support: 833-303-4644

FILL DIFFERENTIAL		
Open ball valve on <b>RED</b> service hose, and insert adapter into vehicle's differential fill hole.		
Set the <b>NEW FLUID</b> switch to the <b>ON</b> position to add fluid to the vehicle's differential.	ON	
Set the switch OFF when finished.	NEW FLUID	
WARNING: Failure to turn NEW FLUID switch OFF before closing ball valve will cause blown fuse and or pump damage.	OFF	
DISCONNECT		
Close ball valves and remove adapters from service hoses.		
Disconnect battery cables from vehicle's battery.		