



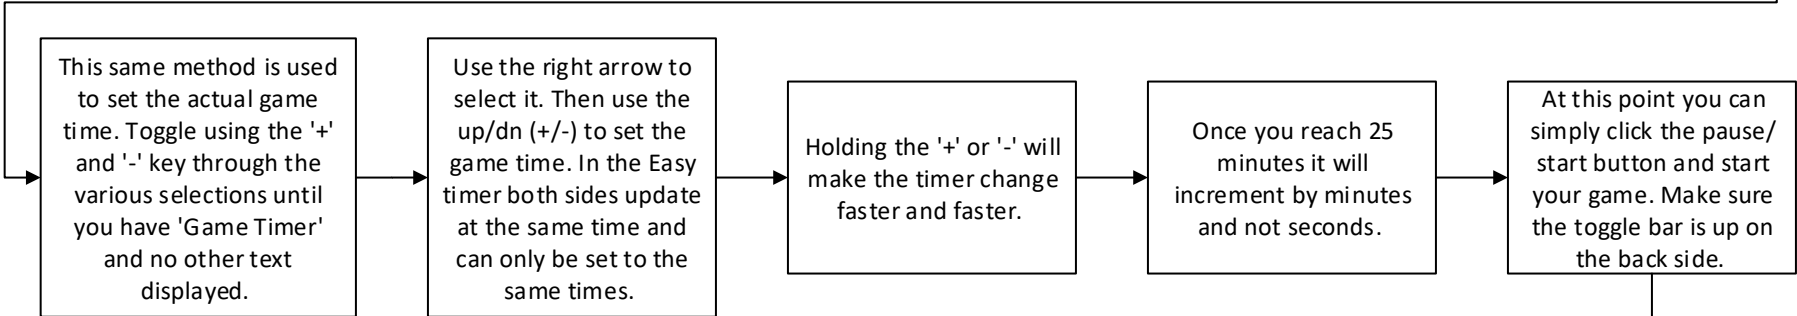

Turn on the clock using the ON button on the front lower left corner of the clock. Once on, make sure the sound is off. If the image of a note is on the front panel, toggle the associated button in the upper right corner of the center set of buttons.

Once on both times displayed will start blinking.

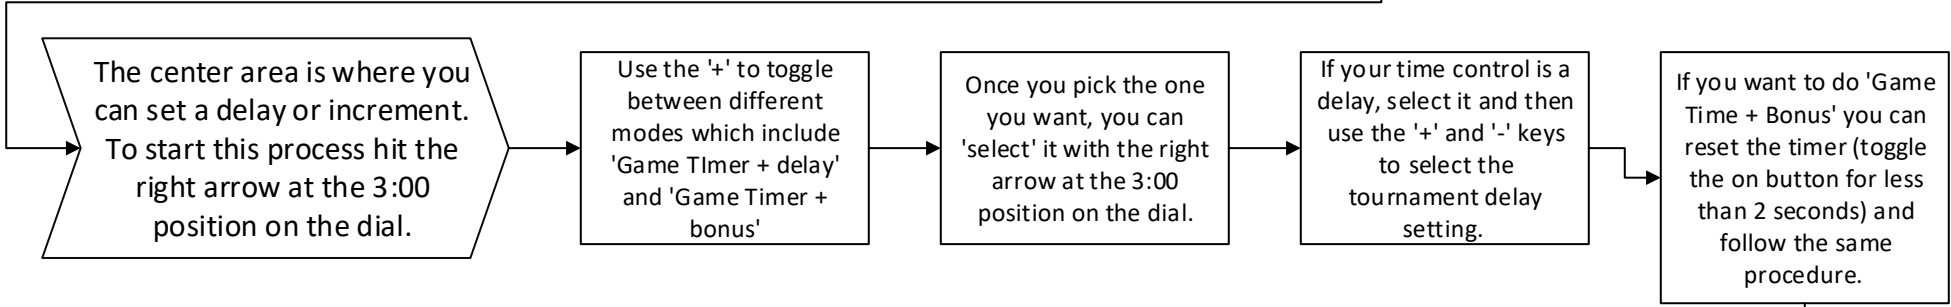

Note to reset for the next player, just toggle the 'On' button.