



## USER INSTRUCTIONS

# No-Fuss Flush<sup>®</sup>

#336

### WASTEHOLDING TANK FLUSHING SYSTEM

1. Connect sewer hose.
2. Open dump valve; let tank empty.
3. Attach garden hose to water inlet labeled "Sewer Valve Must Be Open When Using This Inlet". **DO NOT** use the same hose to fill your potable (fresh) water tank that is used for the flushing system.
4. Using only public water supply with a minimum of 40 PSI or more, flush at full pressure (do not use a water regulator) for about 2 minutes or until water runs clear from discharge hose.
5. Disconnect garden hose from faucet and lay on ground to allow water to drain from the system before detaching from water inlet. **DO NOT LEAVE ANY HOSE (WATER SUPPLY) CONNECTED TO THIS SYSTEM WHEN NOT IN USE.**
6. After dumping add some water to black water tank. Never have a dry black water tank.

### CAUTION

**DO NOT ALTER THIS SYSTEM IN ANY WAY, SUCH AS BY ADDING CHECK VALVES, WATER REGULATORS, ETC.**

**DUMP VALVE MUST BE OPEN ANY TIME THERE IS A HOSE (WATER SUPPLY) CONNECTED TO THIS SYSTEM.**

(SEE OTHER SIDE FOR DRAWING)

*For Parts or Assistance, please call the manufacturer:*

**LAKEVIEW RV SUPPLY, INC.**

**Phone: (512) 261-8000**

**Fax (512) 261-7722**

**tabbdye@lakeviewrvsupply.com**

**See Other Side  
For Installation  
Instructions**



Made in USA

**INSTALLER INSTRUCTIONS FOR FACTORY INSTALLATION  
OF  
NO-FUSS FLUSH® WASTEHOLDING TANK FLUSHING SYSTEM PART #336**  
(TEI Listing No. 16910)

1. Drill 1" hole on side or end of wasteholding tank, no more than 2" from the top of the tank near center.
2. Insert No-Fuss Flush® in hole in "top" position as stamped on flusher and drill 1/8" lead holes in tank.
3. Apply **clear silicone sealer** (do not substitute) completely covering inside of flange (about 3/16" thick). Fasten with #8 - 1/2" screws supplied. Let silicone cure, following manufacturers' instructions on tube, before testing.
4. Install vacuum breaker-check valve a minimum of 6" above the highest flood level rim of any fixture connected to the wasteholding tank. The best place to install the vacuum breaker/check valve is inside bathroom sink cabinet. Valves are directional. **DO NOT** connect any other valves (other than enclosed) to this system. **Do not use a water inlet with check valve.**
5. Test Flusher system for leaks with a minimum water pressure of 40 PSI.
6. Attach enclosed *Caution* sticker on or near the water inlet to this system.

**NOTE:** If it is necessary to replace any parts to this system, the parts shall be the equivalent of and installed in accordance with IAPMO TSC 27.

Manufactured by  
**LAKEVIEWRV SUPPLY, INC.**  
(512) 261-8000  
tabbdye@lakeviewrvsupply.com

**NO-FUSS-FLUSH®**  
#336  
WASTEHOLDING TANK  
FLUSHING SYSTEM

**PART#**

①	FILL INLET	
②	ELBOW	
③	VACUUM BREAKER-CHECK VALVE	#1000
④	1/2" IPS (LISTED PIPING)	
⑤	"NO-FUSS FLUSH"®	#336

**PACKAGE INCLUDES:**

#3 & #5, plus 3 screws, caution sticker, user and installer instructions.

