



TYPICAL RAINMAKER BUSHFIRE SPRINKLER LAYOUTS


Installation Steps

1. Plan your protection system to determine how many and what type of Rainmakers you will need, plus any other components required.
2. Trial fit Rainmaker sprinklers in desired location.
 - If gutter mesh is fitted then a 75mm slit may need to be cut at the outer edge to allow fitting of the Rainmaker. (Mark the underside gutter for easy fitting)
 - If there is no lip (Colorbond fence or handrail) an angled bracket may need to be fixed to allow fitting.
3. Connect system components together and adjust Rainmaker spray stream to best suit your purpose.
4. Train the whole family in how to set up and use the system.

We recommend setting up the system at the beginning of the bushfire season, running it at least every 2 weeks and removing when the risk is over for maintenance.

 Rainmaker DA Sprinkler covers a diameter of 10 metres using 5 litres per minute at 100 KPa.

 Rainmaker Impact Sprinkler covers a diameter of 15 metres using 10 litres per minute at 100 KPa

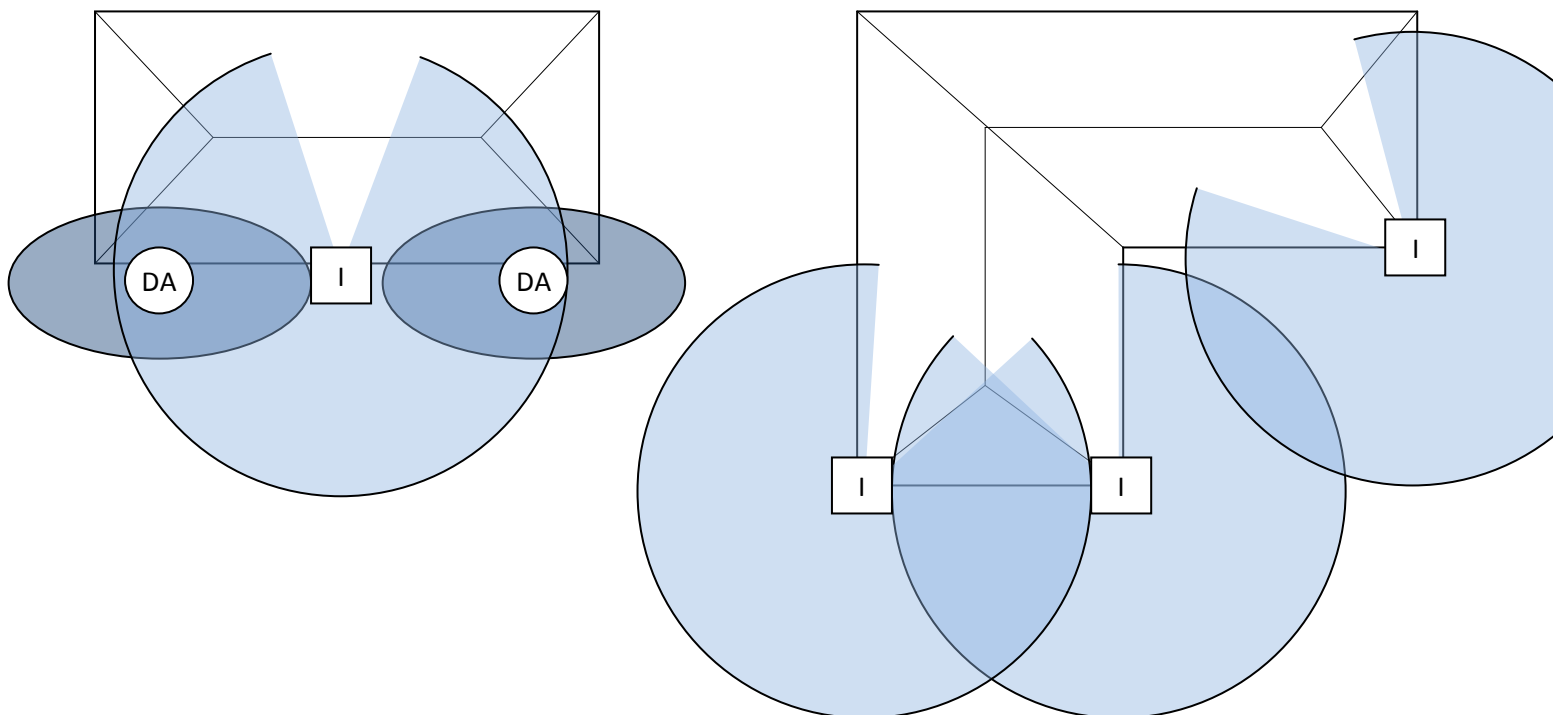

Bush Fire Risk