

Brute Performance LED Tail lights

Wiring orientation is as follows:

From the taillight to chassis wiring:

White goes to black

Red goes to blue

Black goes to red

On the Stock taillights there's a white retainer inside of the factory plug. You will need to remove it.

Then you can take a small screwdriver or pick and lift up the tab that retains the pins.

Pull the pins out and insert the new pins accordingly.

Once you get to that point, put the pigtail back through the hole.

Line up the taillight so that it is level to the housing, push straight in until it bottoms out.

Check functions and that all there is to it.