











# PARTICLE SEPARATOR P/N: 20-3000 INSTALLATION INSTRUCTIONS (CONTINUED)

## ONGOING MAINTENANCE

Your Particle Separator requires very little if any maintenance depending on where you drive; however, you should check to make sure the opening on front of the Particle Separator is not blocked by mud or other debris each time you exit the UTV. To clean your Particle Separator, review the cleaning instructions below. The dirt collection chamber should be emptied monthly. Interval may increase as you increase riding miles.

## CLEANING INSTRUCTIONS

To clean the KWT Particle Separator push in the three buttons located on the bottom to release the dirt collection tray. Empty the dirt and install the tray in place starting from the back, squeeze the dirt collection chamber onto the filter until hearing an audible click. Repeat for the two front buttons. TO ensure the dirt collection chamber is securely fastened, gently pull down on each of the three corners for ensure no gaps are viable.