

SPEEDO DRD

Locate your machines speedo sensor, unplug the plug and install the speedo drd in line.

Refer to the setup procedure in the instructions

[Setup calculator](#) can be found online

Teryx is located next to the engine dipstick

Polaris machines are located on the very back of the transmission in front of the muffler

Teryx 800



Rzr 1000

