

## Date / Time Change - SPS 500 Series

### Date Time Setting

1. Turn the key lock to the X position.
2. Touch X MODE PGM and then touch DATE TIME SETTING. The RTC SETTING (real time clock) screen displays.

RTC SETTING

13:23:35 5-20-2009 WED

INPUT DATE/TIME(MMDDYYYYHHMMSS)

7 8 9

4 5 6

1 2 3

0 00 ←

OK CANCEL

3. Input the Date/Time in MMDDYYYYHHMMSS format. Touch OK.