SINGLEVIU ENTERING ADJUSTMENT MODE

Connect the orange wire (bottom left pin) of the large connector to a power source.

Hold the reset button in.

Turn the ignition on.

You are in adjustment mode.

Press the button to cycle through the options.

