

## Customer cheat sheet for the Concord

| COMMAND   | KEYPAD                                    | KEYFOB   |
|---|---|--|
| DISARM SYSTEM   | 1 + CODE                                  | FOR KEYFOB PRESS UNLOCK BUTTON ONCE              |
| ARM TO STAY   | 2   | FOR KEYFOB PRESS LOCK BUTTON ONCE                |
| ARM TO AWAY   | 3   | FOR KEYFOB PRESS LOCK BUTTON TWICE               |
| PANICS  |   | KEYPAD   |
| SEND POLICE ALARM   | PRESS & HOLD POLICE BUTTONS FOR 2 SECONDS |  |
| SEND AUX ALARM  | PRESS & HOLD AUX BUTTONS FOR 2 SECONDS    |  |
| SEND FIRE ALARM   | PRESS & HOLD FIRE BUTTONS FOR 2 SECONDS   |  |
| *FOR KEYFOB PANIC PRESS AND HOLD LOCK AND UNLOCK TOGETHER FOR 2 SECONDS |   |  |
| SYSTEM FEATURES   |   | KEYPAD   |
| ARM SYSTEM SILENTLY   | <b>5 + 2 OR 5 + 3</b>                     |  |
| BYPASS SENSOR   | INDIRECTLY                                | <b>2 + # (FOR STAY MODE) OR 3 + # (FOR AWAY)</b> |
|   | DIRECTLY                                  | <b># + SENSOR NUMBER</b>                         |
| TURN CHIME ON/OFF   | 7 + 1                                     |  |
| CHECK SYSTEM STATUS   | *   |  |

### CHANGING MASTER AND USER CODES

#### MASTER CODE

1. At keypad enter programming by pressing 9 + MASTER CODE (Default is 1234)
2. Pressing A or B scroll to USER CODES press #
3. Pressing A or B scroll to MASTER CODE and press #, change master code to unique number and press # press # to save entry.
4. To EXIT press \* + 00 + # to exit programming menu.

#### USER CODES

1. At keypad enter programming by pressing 9 + MASTER CODE
  2. Pressing A or B scroll to USER CODES press #
  3. Pressing A or B scroll to REGULAR USER CODES press #
  4. Screen will read USER 000,( you can have up to 230 different user codes) press B to scroll through different USER numbers.
  5. Once you have your USER number chosen press #, enter unique four digit code, press #
- Note: you cannot have the same master, or user code or it will not save in system.
6. To EXIT press \* + 00 + # to exit programming menu

#### Delete a USER CODE

1. At keypad enter programming by pressing 9 + MASTER CODE
2. Press 030 nnn(where nnn is user 000-229 whichever code you are trying to delete) + 0  
Example: I want to delete USER 001 I would press 030+001+0, it would then show USER -001 - CODE
3. Enter Master Code , then #, it will then read USER 001 - \*\*\*\*
4. To EXIT press \* + 00 + # to exit programming menu.

#### Setting TIME and DATE

1. At keypad enter programming by pressing 9 + MASTER CODE
2. Pressing A or B scroll to TIME and DATE press #
3. Time will display enter 4 digit time using 24 hour format (example 4:23 pm would be 1623) press # to save entry. (Another example of time 3:23 am would be 0323)
4. Press B to scroll to DATE enter 6 digit date, press #. Example: May 5, 2009 would be 050509
5. To EXIT press \* + 00 + # to exit programming

#### Zones

|        |  |        |  |         |  |         |  |         |  |
|--------|--|--------|--|---------|--|---------|--|---------|--|
| zone 1 |  | zone 5 |  | zone 9  |  | zone 13 |  | zone 17 |  |
| zone 2 |  | zone 6 |  | zone 10 |  | zone 14 |  | zone 18 |  |
| zone 3 |  | zone 7 |  | zone 11 |  | zone 15 |  | zone 19 |  |
| zone 4 |  | zone 8 |  | zone 12 |  | zone 16 |  | zone 20 |  |