

## General App Usage

---



**Page 1 - Trick Play**



**Page 2 – Transport**



**Page 3 – Numbers**



**Page 4 – Other**

General usage of the app is as simple as using the hand held remote. Each page of the app is a different section of the hand held remote. Fling up and down to move to each page as ordered in the illustrations above. Tap each button to achieve the same functionality as a button press on the hand held Tivo remote.

Quickly open the app by linking the app to a complication on your watch face. Quickly close the app by Flinging Right when any of Pages 1-4 are visible.

Long Press on Page 1 – Trick Play:

To switch control to a different Tivo device, Long Press the PAUSE/DEVICE button on Page 1. Select the Tivo DVR from the list of DVRs that you entered earlier in the Initial Setup section. If there is no Tivo DVR IP address set, the settings screen will be shown (See Initial Setup).

Long Press on Page 2 – Transport:

Long Press the UP/CH+ button for Channel Up functionality. (i.e.) When the guide is visible, a Long Press will skip up to the top of the guide, a Tap will move up one step. (i.e.) When the guide is not visible, a Long Press will change to a higher channel.

Long Press the OK/RECORD button for the record functionality.

Long Press the DOWN/CH- for Channel Down functionality. (i.e.) When the guide is visible, a Long Press will skip down to the bottom of guide, a Tap will move down one step. (i.e.) When the guide is not visible, a Long Press will change to a lower channel.

Fling to Page 4 for direct access to Netflix (NET) and to bring up Settings after initial settings.