


STRUCTURE

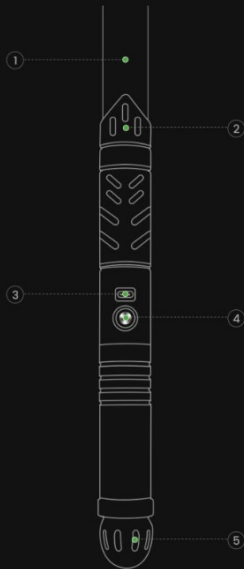

- ① Blade
- ② Emitter
- ③ Recharge port
- ④ Button
- ⑤ Sound holes

XENOPixel

Basic Instructions:

- Press and hold the LED button to bring out of sleep mode. You will hear a 'Power On' voice, and the LED button will turn on.
- Press the button once, quickly, to turn the blade on.

The following controls activate when the blade is on, and are based on the flash of the LED button light:

- ① A quick press will initiate a single blaster deflect effect.
- ② Press and hold the button for ONE flash, then release. This will initiate the drag effect. A quick press will end the drag effect.
- ③ Press and hold the button for TWO flashes, then release. This will initiate the color cycle. When the color you want shows, a quick press will end the color cycle.
- ④ Continue to hold the button PAST 2 flashes to turn off the blade.

While the blade is off, the following controls are activated based on the flash of the LED button light:

- ① Press and hold the button for ONE flash, then release. This will change the volume. There are 3 volume settings: Volume High, Volume Low, and Mute.
- ② Press and hold the button for TWO flashes, then release. This will change the blade effect. There are 5 blade effects: Steady, Pulse, Rainbow Blade, Unstable, and Fire Blade.
- ③ Press and hold the button for THREE flashes, then release. This will change the blade mode. There are several blade modes, including some pre-on effects. Blade effects will affect pre-ons, but will not have any effect on Blaster Blade and Ghost Blade modes. Only blade color and font selection impact these modes.
- ④ Press and hold the button for FOUR flashes, then release. This will change the sound font. The selection of fonts can be customized by the user.

Advanced Controls: MOTION

- There are several motion or manual controls available on the XenoPixel V2.

- ① A direct and quickstabbing motion with the hilt level will turn the blade on, or off. 
- ② A quick twist while the hilt is pointed down will change the font to the next on the list. 
- ③ Twist quickly when the handle is up. The music track will play and a quick spin again will stop the music. 
- ④ Hold the button and impact the hilt/blade to activate lockup. Release the button to end the lockup. 
- ⑤ While holding the button, a quick twist while the hilt is pointed down will change the selected blade color. Release the button to select the current color. 