



WIRELESS INSTALL GUIDE

IMPORTANT INFORMATION: Before starting the install please download the 'iGotcha GPS app from:

Apple Store
(for iPhones and iPads):



Google Play Store
(for Android phones or tablets):



Login to your account and use the app to scan the GPS Device barcode and then scan the car VIN barcode to register the device to the vehicle.

STORAGE PRIOR TO INSTALL: Do not store or inventory device in a high temperature location. Store device where temperatures do not exceed 60°C (140°F).

Device is not environmentally sealed and must be installed inside the vehicle. Recommended Install Locations: Glove box, under seat, under dash.



DEVICE SETUP AND ACTIVATION

1

www.igotchagps.com/login

Login to your **iGotcha account** and navigate to the **Device Inventory** page. Search for your device using the **serial number** found on the device label. Fill in the vehicle and customer details. **Click Save.**

2



Ensure the device is in a location with good visibility to the sky. **Press the button** located on the bottom of the device.

3

After **pressing the button**, monitor the LEDs to confirm device gets a location. **The Blue LED** will blink slowly (1x per second). Once **the LED stops blinking**, the device is ready to be installed.

4

Place the device in one of the recommended install locations. **Do not** locate the device anywhere with direct sunlight, in the engine compartment, or other location that generates heat.

5

www.igotchagps.com/login

Once the device has completed the activation steps, return to your **iGotcha account**, verify the device has an install date and move it to **Live state.**

Notes:

- If the **Green LED** is blinking fast, there is no GPS lock. Ensure there is clear visibility to the sky or this process may fail to complete or take up to 15 minutes to complete.
- If **Blue LED** was blinking fast before it turned off, move to a location with better cellular coverage and press the button again.

POWER MODES	ENDURANCE MODE	TRIP MODE	RECOVERY MODE	ACTIVE MODE
Locate On Demand	✘	✘	✘	✔
Battery Usage	Low	Medium/Low	Medium/High	High
Reporting	Every 11 hrs	When Trip Starts or Ends Every 24 hrs if No Trips	When Trip Starts or Ends Every Hour if No Trips Every 15 minutes if In a Trip	Every 15 mins
Change Modes	Can Change When Device Reports In	Can Change When Device Reports In	Can Change When Device Reports In Auto Switches to Endurance Mode after 3 Days Every 15 mins if In a Trip	Auto Switches to Recovery Mode After 1 hr