




- 1 POWER OFF / UNPLUG machine
- 2 make sure you did step 1. Connecting or disconnecting cables while machine powered on can destroy display or CPU
- 3 REMOVE backglass assembly

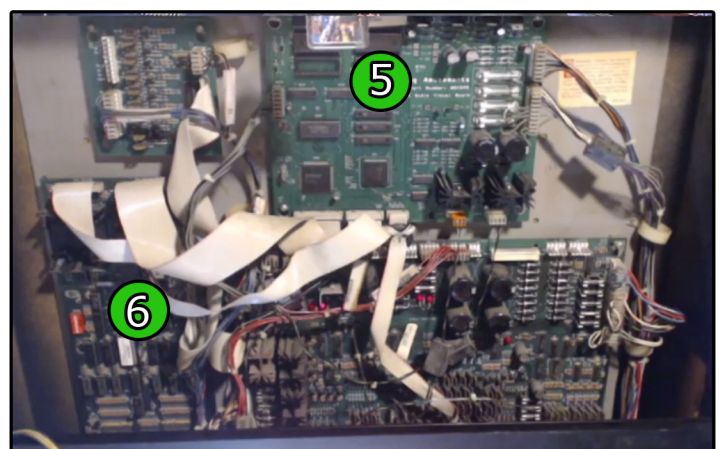


- 4 DISCONNECT speaker panel cables and REMOVE speaker panel
- 5 DISCONNECT A/V board cables from and REMOVE A/V board
- 6 DISCONNECT CPU board cables and REMOVE CPU board

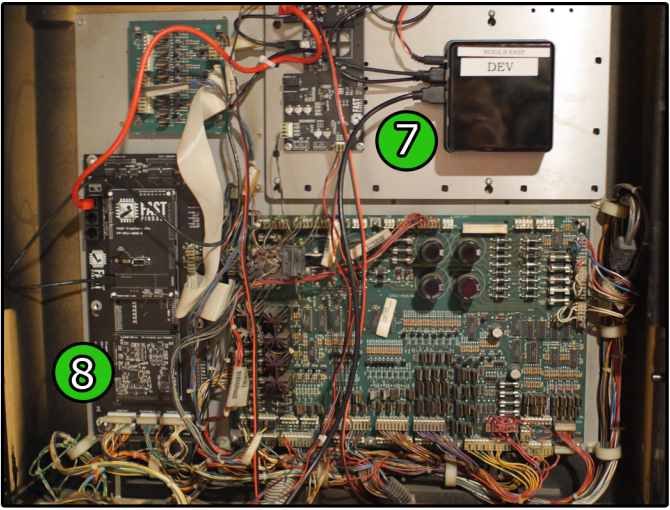


- 7 MOUNT CPD cpu panel
- 8 MOUNT FAST controller

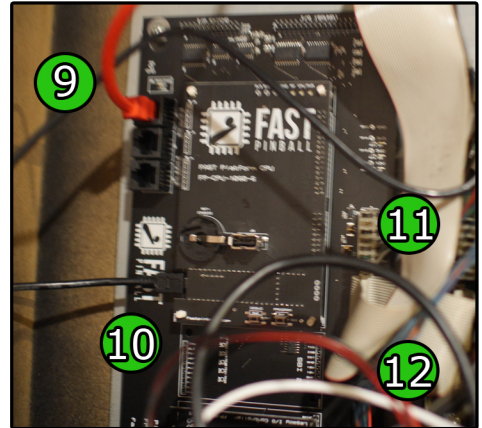


- 9 CONNECT ethernet cord
- 10 CONNECT mini usb cord
- 11 CONNECT power cable
- 12 CONNECT ribbon cable

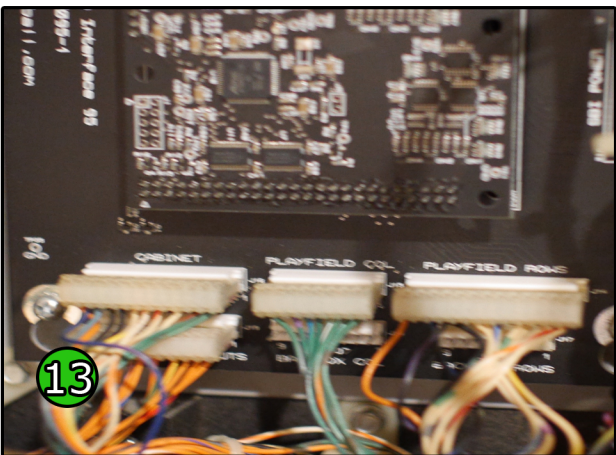


- 13 CONNECT all switch inputs to FAST controller

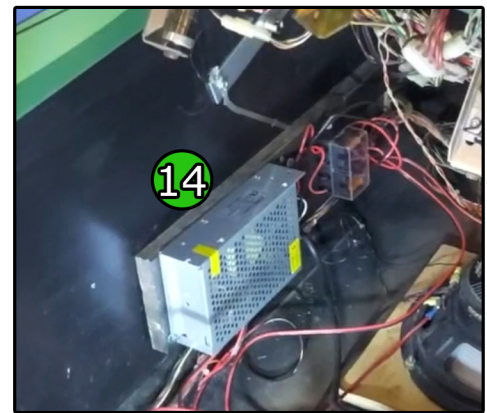

- 14 MOUNT power supply in bottom cabinet
- 15 PLUG input power into service outlet
- 16 RUN output power to backbox and secure wires using included ty-wraps

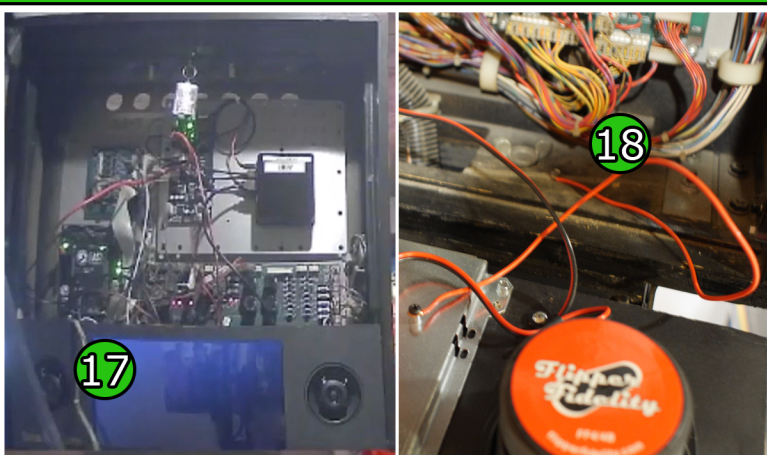

- 17 MOUNT speaker/display panel
- 18 CONNECT display ground wire to ground braid in backbox using the supplied screw
- 19 CONNECT audio out from display panel to audio in on audio controller board
- 20 CONNECT power in for display panel to power out on audio controller board using 2-pin connector
- 21 CONNECT power from power supply to audio controller board using 3-pin connector

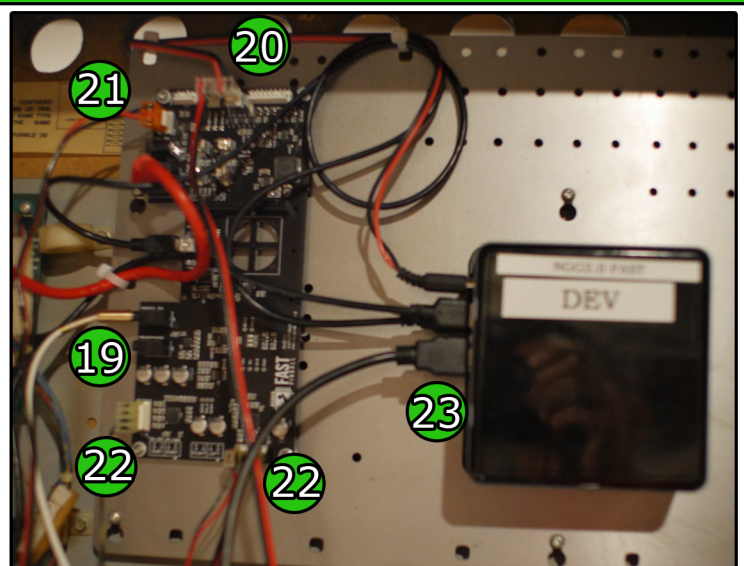

- 22 CONNECT speaker wires for speaker panel and cabinet subwoofer to audio controller board using included 4-pin connectors (if necessary)
- 23 CONNECT HDMI cable from display to cpu
- 24 PLUG in machine and have fun!

# No Good GoFERS™ BATTLE FOR THE GREEN™

## QUICK INSTALL GUIDE

Cardona Pinball Designs

