

Sno Cone Machine Instructions

Shaving Ice

1. Fill the ice horn with ice
2. Press and hold the MOTOR switch to activate blades and begin shaving ice
3. While holding MOTOR switch down, apply steady downward pressure to the ice pusher
4. Release the MOTOR switch when finished

Cleaning Procedures

1. Remove all ice from the ice horn and storage compartment
2. Operate the motor for several minutes to remove any water collection on the cutter head
3. Unplug the power cord from the electrical outlet
4. Using a clean cloth, wipe down the following items:
 - The inner surface of the ice horn
 - The outside surface of the ice horn casting
 - The ice pusher
 - All interior and exterior surfaces

CAUTION: BLADES ARE SHARP AND OPERATE AT HIGH SPEEDS! Please be sure to keep all body parts and any objects away from the ice horn.

Any problems or issues should be reported to Out Back Party Rentals immediately at either 830-798-2000 or 830-613-9761

