



Quick Install

Quick Install Steps

1. Mount the Front module in the front of the UTV, example below, and then connect the harness.



2. Run the front right (green) and left (yellow) turn light to each location.



3. Install the LEDs on each side of the UTV front. Note the precise method depends on the LEDs chosen, see full Install Manual.



4. Mount and connect the horn.



5. Mount the Hand Control to the steering column and run wire through the fire wall to the front of the harness, close to the pulse bar.




6. Optional, connect dash indicators to instrument cluster.


- a. White wire to pin 6 and black wire to pin 7
- b. **WARNING:** If the indicators will not be used you must use the provided heat shrink to cap the pins to prevent a short.



7. Remove and disconnect the right and left taillight. Connect the rear modules to each factory connector.

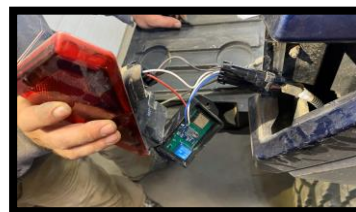

8. With the key off, Plug the pulse power connector into the pulse bar.

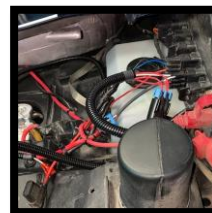

9. **IMPORTANT:** The system must be paired before the first use. See the pairing instructions on the opposite side of the page.

Note: If the rear modules pair opposite of the install, you can reinstall them to the correct side or see the owner's manual for instructions on how to change them through your mobile device.

The full step-by-step Install Manual can be viewed online at the WTS+ support page.

Tools Required

- #2 Philips head screwdriver
- #3 Philips head screwdriver
- Side cutter, for trimming zip ties
- Polaris tool kit pliers, for rivet removal
- 3/4" hole saw or step bit
- 4mm allen wrench
- 5mm allen wrench
- 3/16" allen wrench
- 10mm wrench

Note: You may need additional tools for removing instrument cluster, center dash depending on the UTV year and/or model.

Also, tools may be different depending on the type of Led chosen.



Quick Install

Pairing

1. Ensure all Hand Controls, UTVs with WTS+ already installed, in the area are turned off with no power to them.
2. Push the Hand Control lever to the horn position, forward.
3. Turn on power and release the Hand Control lever after a couple of seconds.
4. You should be paired at this point; test the functions of the Hand Control.
5. If the above does not work, try the Repairing Procedure below.

Re-Pairing

1. Ensure all Hand Controls, UTVs with WTS+ already installed, in the area are turned off with no power to them.
2. Push the Hand Control to the horn position, forward.
3. Turn on power and release the Hand Control lever after a couple of seconds.
4. Pull the Hand Control lever back towards the driver, hazard position, for up to twenty seconds until the lights begin to flash. Let go of the lever.
5. All modules, Hand Control, Front, Rear, etc. should be flashing to indicate they are unpaired.
6. If a module does not unpair right away, wait for 5-10 minutes, with the power on, for them to flash and unpair.
7. When all modules flash, they are unpaired.



Useful Links

SwanEmersonAccessories.com

WTS Main Support Page



The support page contains the following:

- Install Manual with step-by-step instructions.
- Diagnostics information
- User Manual

Support Contact

Support@SwanEmerson.com