
This is a brief overview of the controls of my car (Vauxhall Corsa SRi). It includes one or two points about core controls. Mainly it is intended as a reference for the ancillary controls.

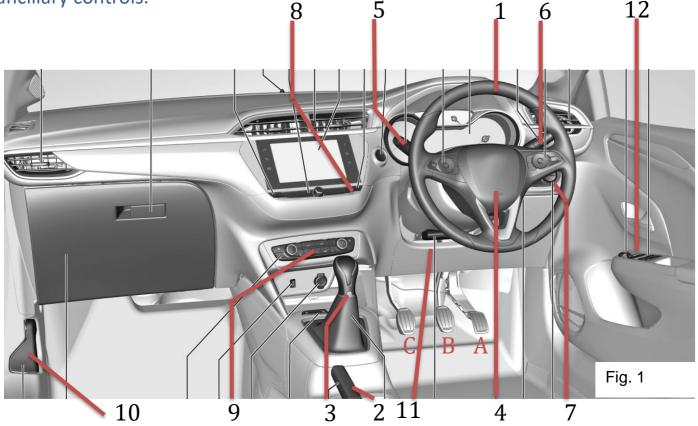

A – Accelerator

B – Brake

C – clutch

- Steering wheel 1
- Hand brake / parking brake 2
- 3 Gear lever
- 4 Horn
- 5 Indicator stalk / lever
- 6 Windscreen wiper control stalk
- 7
 - Exterior lighting switch
 - Hazard warning switch 8
 - 9 Air conditioning and demister controls
 - 10 Bonnet release lever
 - 11 Steering column release lever
 - 12 Door mirror adjustment controls

Gear selector




 
Parking brake

Before leaving the vehicle, check parking brake status. Control indicator (P) illuminate constantly when electric parking brake is applied.

▲Warning

Manual parking brake

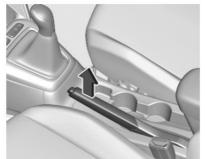

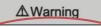

Always apply parking brake firmly without operating the release button, and apply as firmly as possible on a downhill or uphill siope. To release the parking brake, pull the lever up slightly, press the release button and fully lower the lever.

To reduce the operating forces of the parking brake, depress the foot brake at the same time.


Control indicator (1) \$ 70.

Front windscreen wiper and washer

(Fig 1 No 6)

Windscreen wiper and washer


Windscreen wiper with adjustable wiper interval

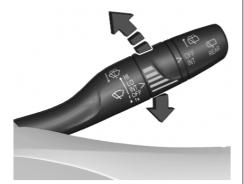

HI : fast LO : slow INT : interval wiping OFF : off 1x : single wipe

Do not use if the windscreen is frozen. Switch off in car washes. To activate interval wiping mode the next time ignition is switched on, press the lever downwards to position OFF and back to INT.

Adjustable wiper interval

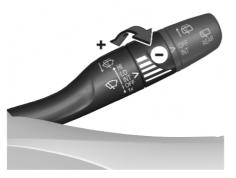

Wiper lever in position INT. Turn the adjuster wheel to adjust the desired wipe interval.

Windscreen washer



Pull lever. Washer fluid is sprayed onto the windscreen and the wiper wipes a few times.

Rear windscreen wiper and washer

The rear window wiper comes on automatically when the windscreen wiper is switched on and reverse gear is engaged.

Activation or deactivation of this function can be changed in the Vehicle personalisation menu \Rightarrow 80.

Rear window washer



Rear window wiper and

washer

OFF : off INT : intermittent operation Do not use if the rear window is frozen. Switch off in car washes.



Push lever. Washer fluid is sprayed onto the rear window and the wiper wipes a few times.

Washer fluid ♀ 190.







 AUTO : automatic light control switches automatically between daytime running light and headlight
⇒ ≤ : sidelights
I headlights

NB Sidelights have limited practical use. If you need lights on to drive (at night or raining) you need dipped headlights.

Lights – main beam (Fig 1 No 5)





Main (high) beam control on indicator stalk

Pull to flash **Push** to switch on & off (dipped headlights need to be on).

Fog lights (Fig 1 No 7)

Front





Rear



Side lights



Dipped headlights









Brake lights



Rear fog light



Front fog lights



Air conditioning and demisters (Fig 1 No 9)

Temperature control




Demist rear windscreen (& door mirrors)

Blower speed

Power windows

(Fig 1 No 12) Operate relevant switch Small press/pull – open/close small amount Full press/pull & release – open/close fully

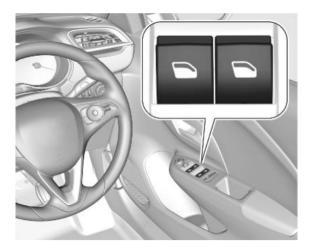

Power windows

Deactivate rear door window switches

