

DVD Player Instructions

Firstly please refer to the TV Instructions page to start-up the TV.

To work the DVD Player, please pick-up the DVD Player Remote Control (see picture to the right).

1. Press the red button on the DVD Player Remote to start it. If the DVD player doesn't display 'Hello', please press the red button again until it does.
2. The TV should start looking for the device and the DVD Player menu should display.
3. If it doesn't and the TV is displaying 'No source found', please press the back-up arrow on the TV remote (it's the button with an arrow pointing left, in the middle of the TV remote). This should exit the source screen and show the DVD menu.
4. The DVD menu is easy to use from there.
5. To exit the DVD Player, please use the red button again to switch it off.
6. The Mag Box menu should be restored. If it is not, the easiest thing to do is switch the TV off and back on again.



DVD Player Remote