

# KUKJE Branson 7845RP(US) Branson Tractor

## Parts Catalogue

# CONTENTS

GROUP NO	GROUP NAME	PAGE
C001	PTO & MAIN DAMPER	6
C002	MAIN PUMP	8
C003	PST VALVE	10
C004	OIL COOLER	12
C005	HYDRAULIC FILTER	14
C006-1	SELECTING CONTROL V/V,JOY STICK	16
C006-2	SELECTING CONTROL V/V,JOY STICK(2019.04~)	18
C007	LIFT CYLINDER	20
C008	BRAKE ROD	22
C009	BRAKE PEDAL	24
C010	RADIATOR	26
C011	COOLING WATER SUB-TANK	28
C012	FRONT AXLE BRACKET	30
C013	FRONT AXLE SUPPORT	32
C014-1	PROPELLER SHAFT	34
C014-2	PROPELLER SHAFT(2019.04~)	36
C015	AIR CLEANER	38
C016	INTERCOOLER	40
C017	BATTERY	42
C018	COOLING FAN	44
C019	FUEL TANK ASS`Y	46
C020	FUEL TANK	48
C021	EXHAUST PIPE MOUNTING-USA	50
C022	EXHAUST PIPE-USA	52
C023	SUB STEP	54
C024	ROPS ASS`Y	56
C025	BONNET ASS`Y	58
C026	BONNET	60
C027	ACCELERATION SYSTEM	62
C028	HORN	64
C029-1	STEERING COLUMN	66
C030-1	COLUMN STAY & CLUTCH PEDAL	68
C030-2	COLUMN STAY & CLUTCH PEDAL(2019.04~)	70
C032	DRAFT LINK	72
C033	CENTER LINK	74

GROUP NO	GROUP NAME	PAGE
C034	LIFT LINK	76
C035	DRAWBAR	78
C036	PTO COVER	80
C037	LEVER KNOB	82
C039	REAR SCV LEVER	84
C040	T/M OIL IN-LET	86
C041	DRIVER`S SEAT	88
C042	FRONT WHEEL & TIRE	90
C043	REAR WHEEL & TIRE	92
C044	DASH BOARD	94
C045	FENDER ASS`Y	96
C046	FOOT FRAME	98
C047	HEAT INSULATOR ASS`Y	100
C048	STOP-VALVE KNOB ASS`Y	102
C049.1-1	LABEL	104
C049.1-2	LABEL(2019.04~)	106
C049.2	LABEL	108
C050	HARNESS	110
C051	SPARE TOOLS	112
E001	CYLINDER BLOCK	114
E002	V-PULLY_CRANK SHAFT	116
E003	AIR HEATER	118
E004	APPROVAL, AGENCY	120
E005	CRANK SHAFT	122
E006	BREATHER, CRANKCASE	124
E007	CAMSHAFT	126
E008	FRONT GEAR ACCESSORY DRIVE	128
E009	IDLE GEAR	130
E010	ALTERNATOR	132
E011	BALANCE ASS`Y	134
E012	FAN DRIVE	136
E013	DRIVE PULLY	138
E014	FUEL FILTER	140
E015	FLYWHEEL HOUSING	142
E016	16. FUEL INJECTION	144

GROUP NO	GROUP NAME	PAGE
E017	PLUMBING, FUEL	146
E018	FLYWHEEL	148
E019	COVER, FRONT GEAR	150
E020	HEAD, CYLINDER	152
E021	MANIFOLD, INTAKE	154
E022	INJECTOR	156
E023	ARRANGEMENT, LIFTING	158
E024	COOLER, ENGINE OIL	160
E025	FILTER, LUBRICATING OIL	162
E026	GAUGE, OIL LEVEL	164
E027	PUMP, LUBRICATING OIL	166
E028	NOZZLE, PISTON COOLING	168
E029	ARRANGEMENT, OIL FILL	170
E030	OIL PAN	172
E031	PISTION	174
E032	LEVER, LOCKER	176
E033	MOTER, STARTIONG	178
E034	PLUMBING, TURBO CHARGER	180
E035	TURBO CHARGER	182
E036	COVER, VALVE	184
E037	PUMP, WATER	186
E038	MANIFOLD, EXHAUST	188
E039	DPF	190
E040	CONNECTION, AIR INTAKE	192
F001	FRONT AXLE HOUSING	194
F002	FRONT DIFFERENTIAL GEAR	196
F003	FRONT GEAR CASE I	198
F004	FRONT GEAR CASE II	200
F005	FRONT GEAR CASE III	202
F006-1	POWER STEERING CYLINDER	204
F006-2	POWER STEERING CYLINDER(2019.04~)	206
T001	MAIN DRIVE SHAFT ASS`Y	208
T002	MAIN DRIVEN SHAFT ASS`Y	210
T003	IDLE SHAFT ASS`Y	212
T004	MAIN SHIFT DRIVE SHAFT ASS`Y	214



FIG C001

Branson 7845RP(US)

PTO & MAIN DAMPER

Year/Month

2020/02

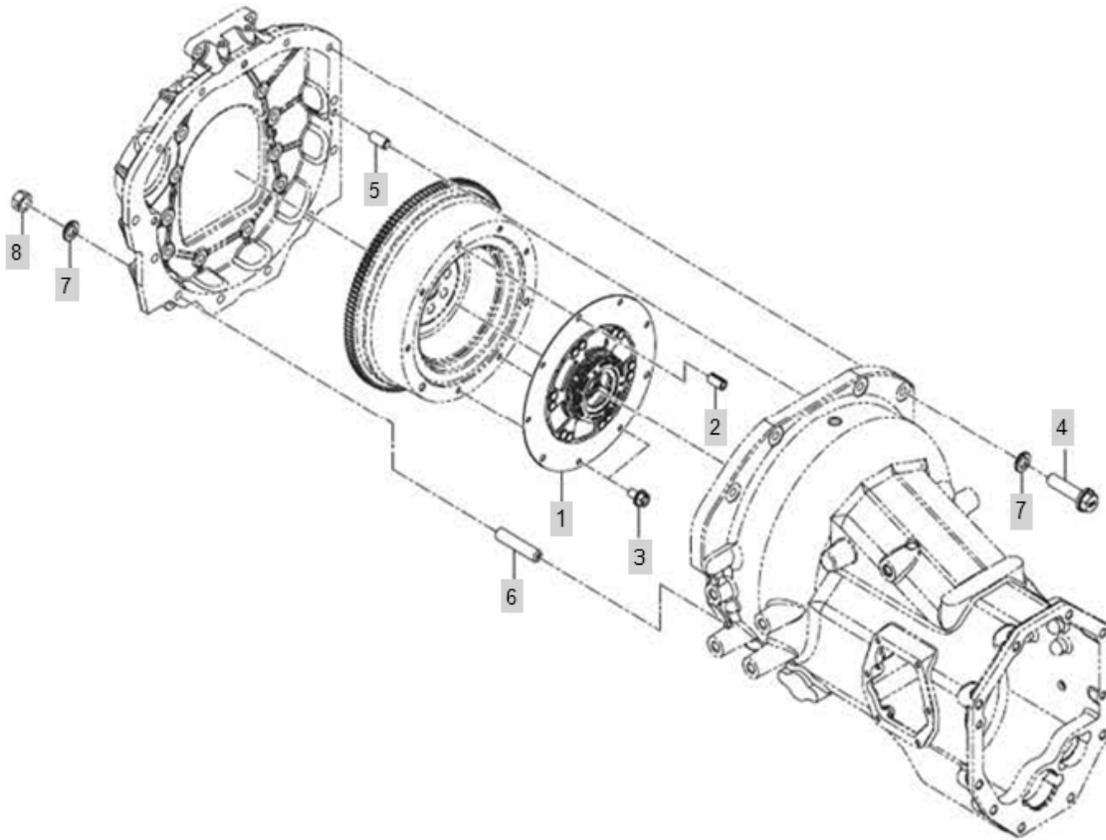




FIG C002

Branson 7845RP(US)

MAIN PUMP

Year/Month

2020/02

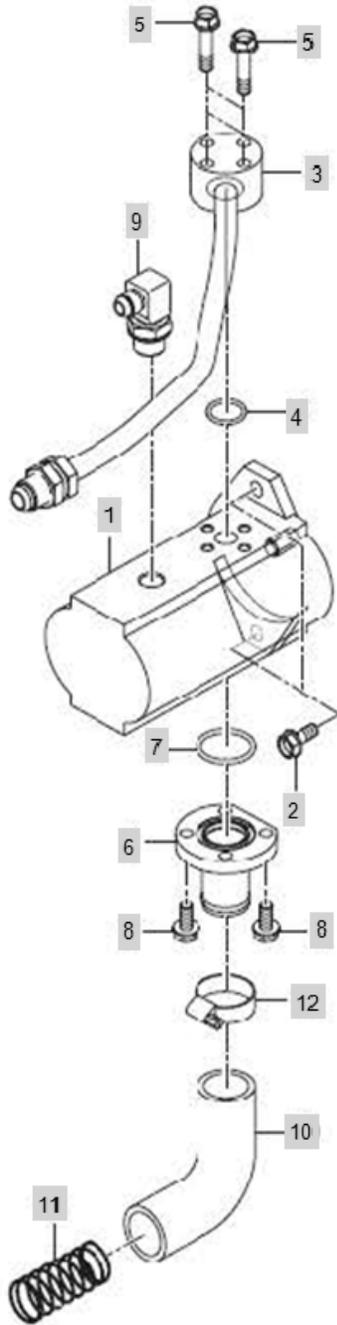




FIG C003

Branson 7845RP(US)

PST VALVE

Year/Month

2020/02

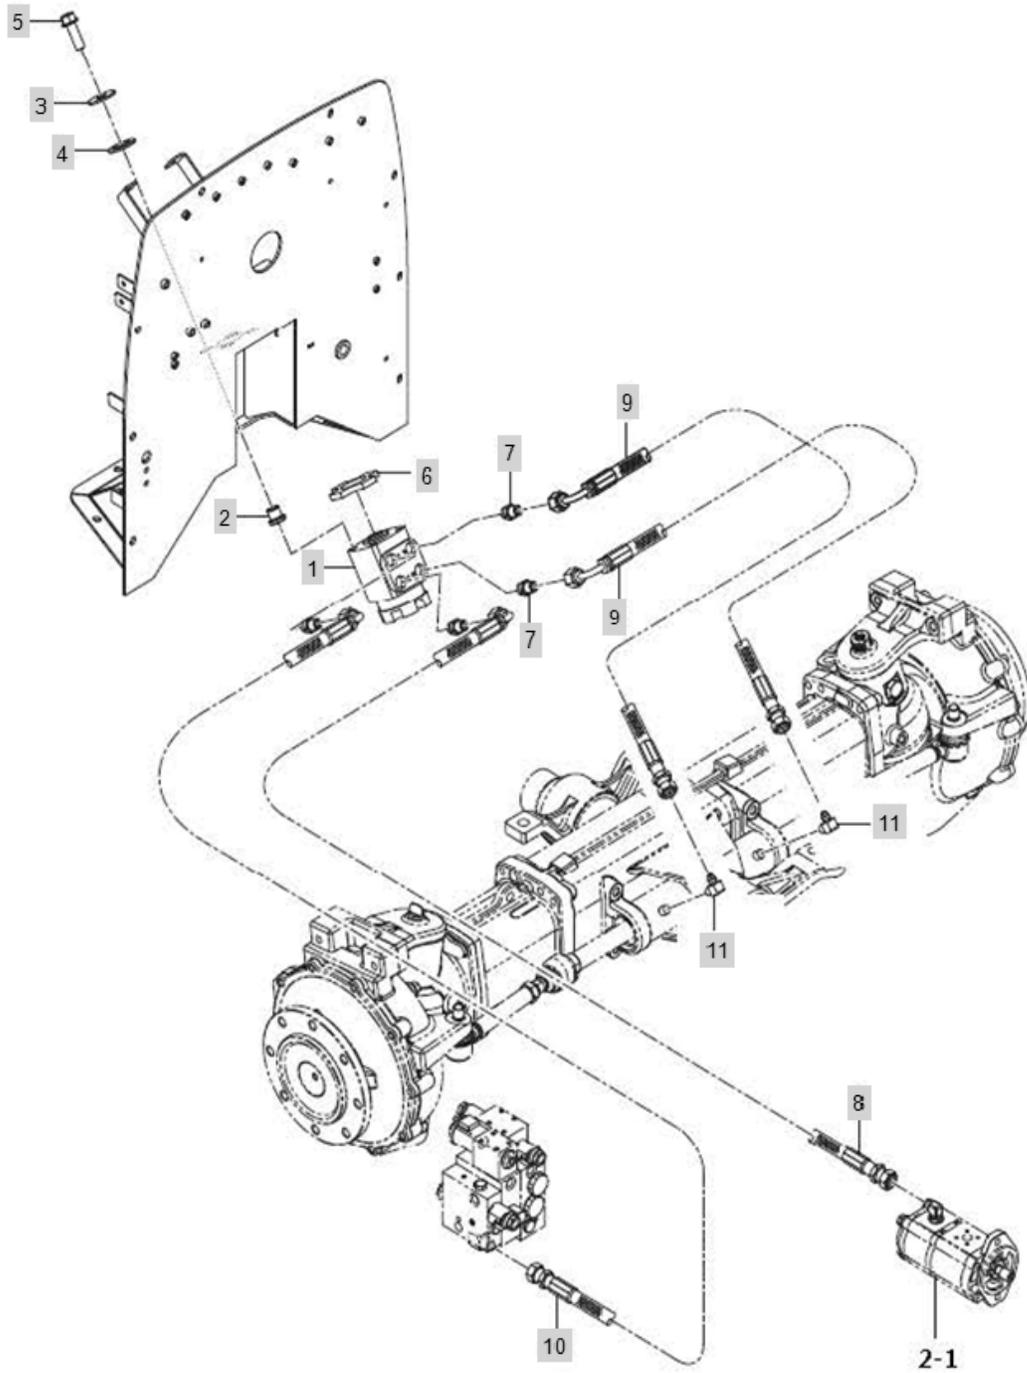




FIG C004

Branson 7845RP(US)

# OIL COOLER

Year/Month

2020/02

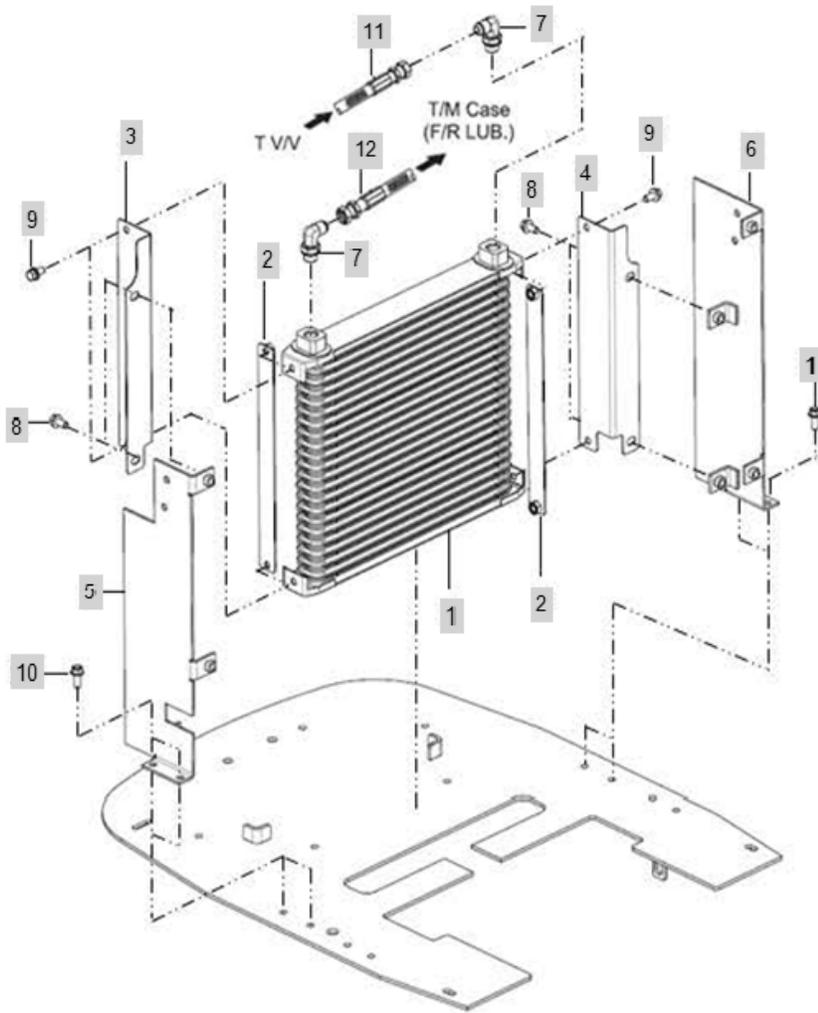




FIG C005

HYDRAULIC FILTER

Year/Month

Branson 7845RP(US)

2020/02

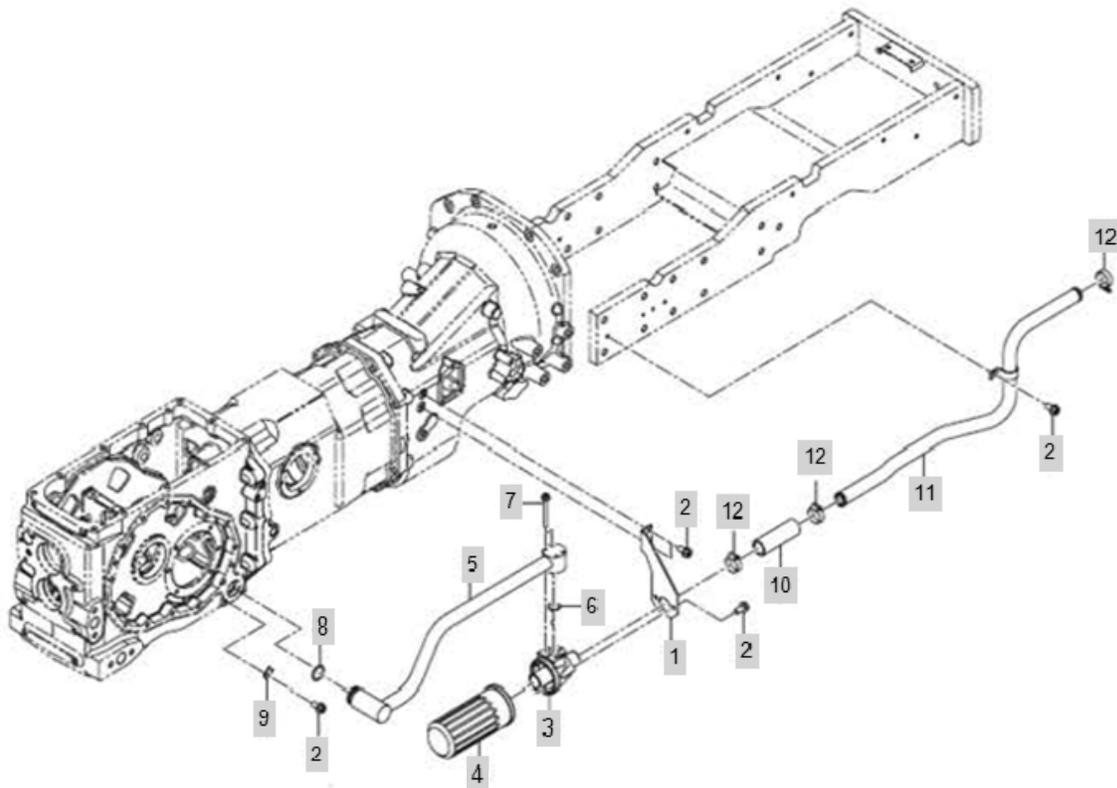




FIG C006-1

Branson 7845RP(US)

SELECTING CONTROL V/V, JOY STICK

Year/Month

2020/02

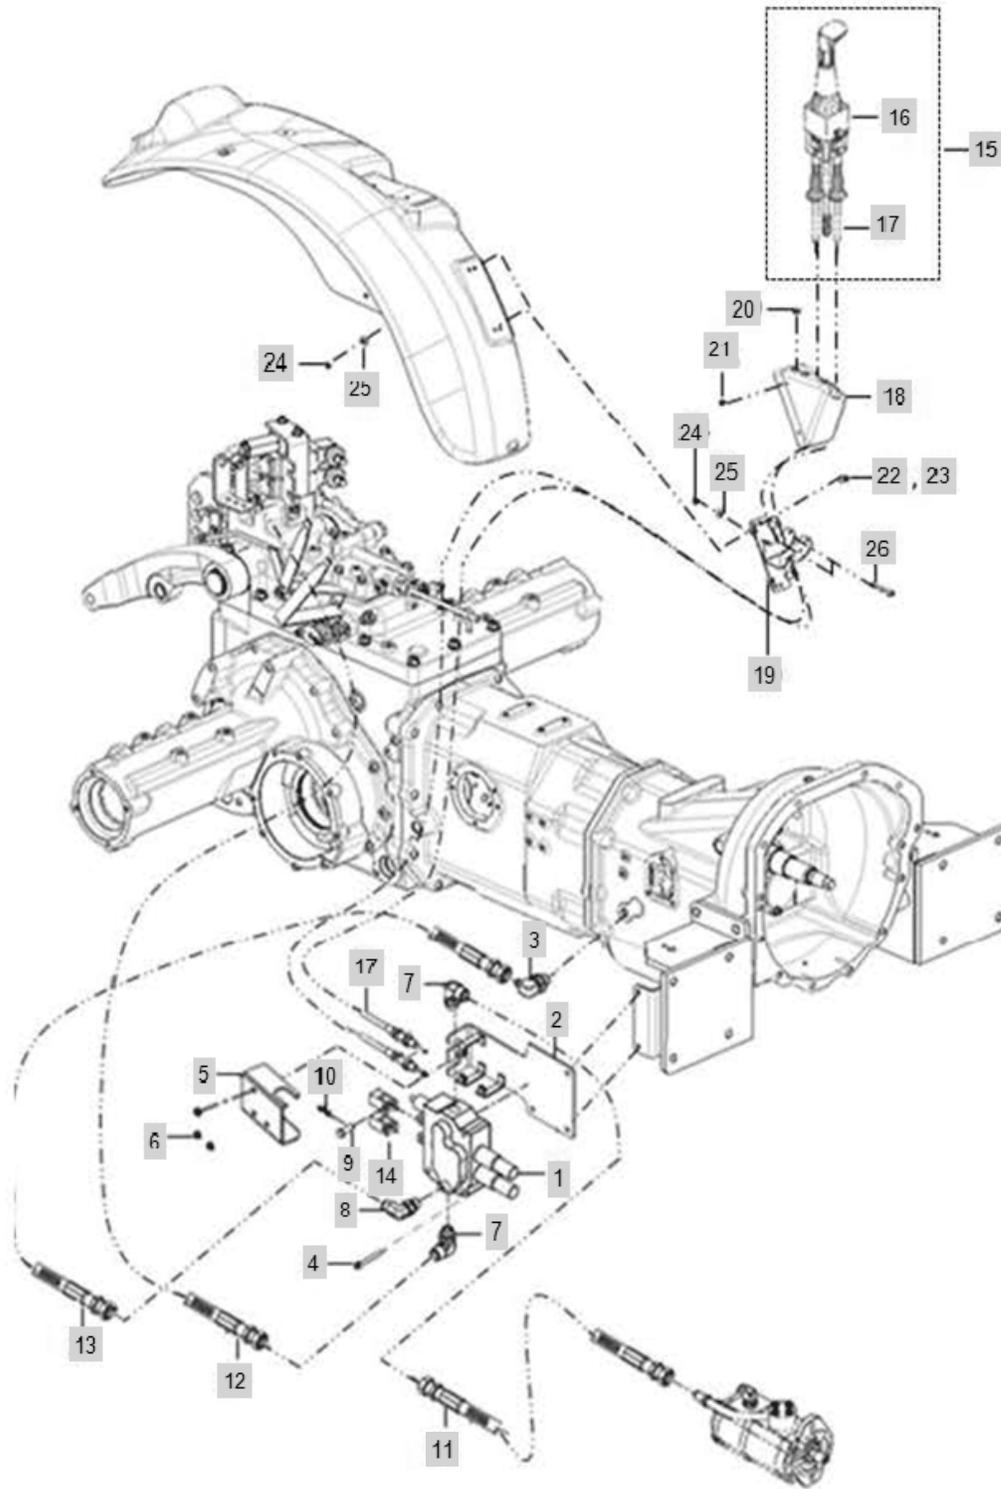




FIG C006-2

SELECTING CONTROL V/V, JOY STICK  
(2019.04~)

Year/Month

Branson 7845RP(US)

2020/02

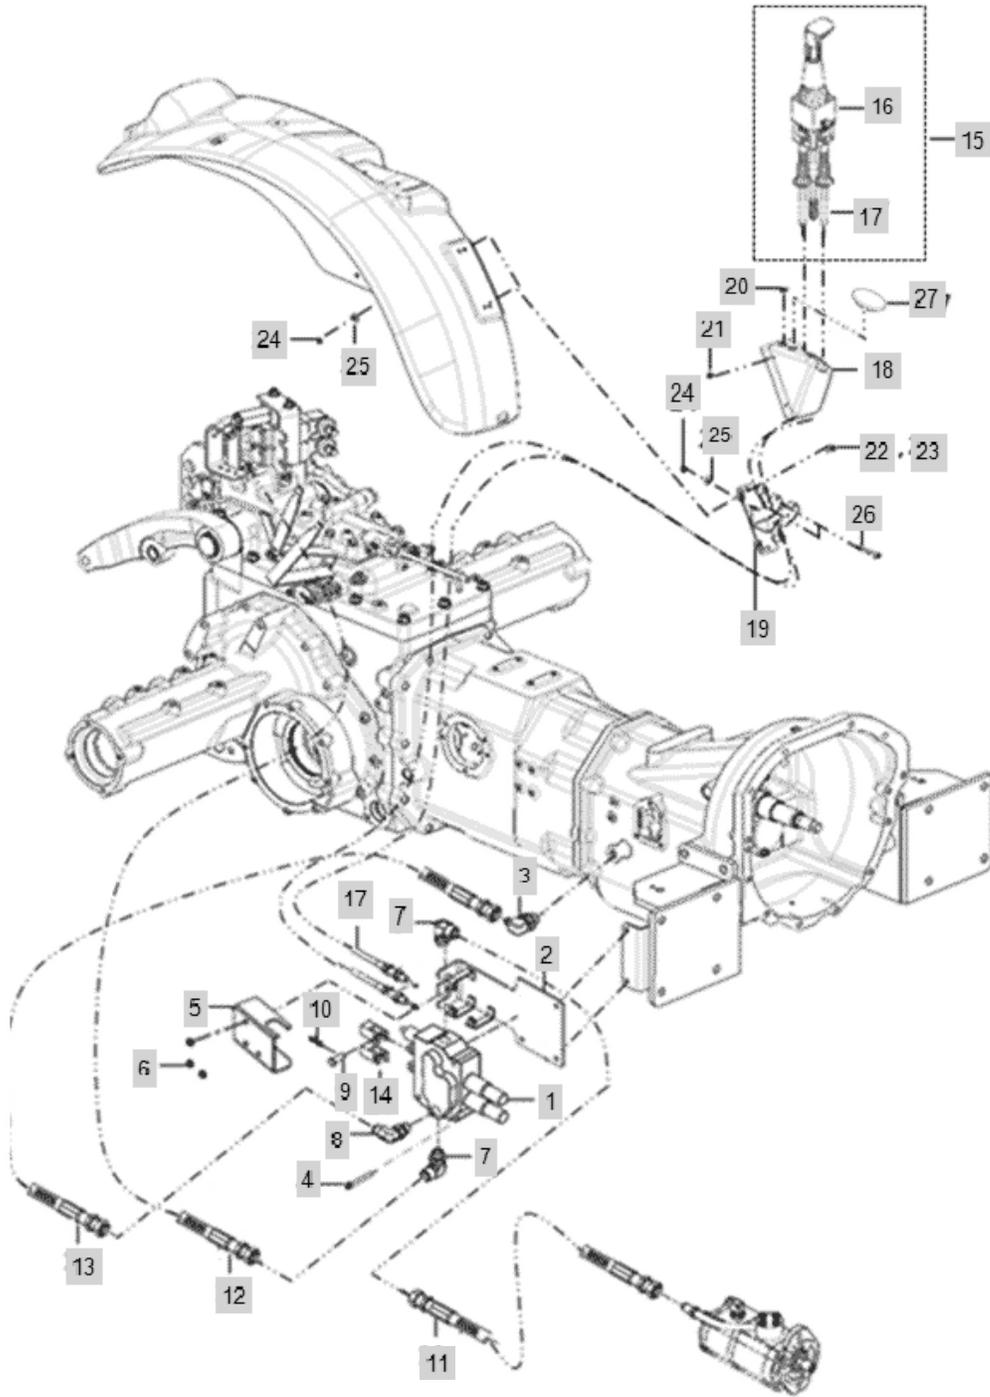




FIG C007

Branson 7845RP(US)

LIFT CYLINDER

Year/Month

2020/02

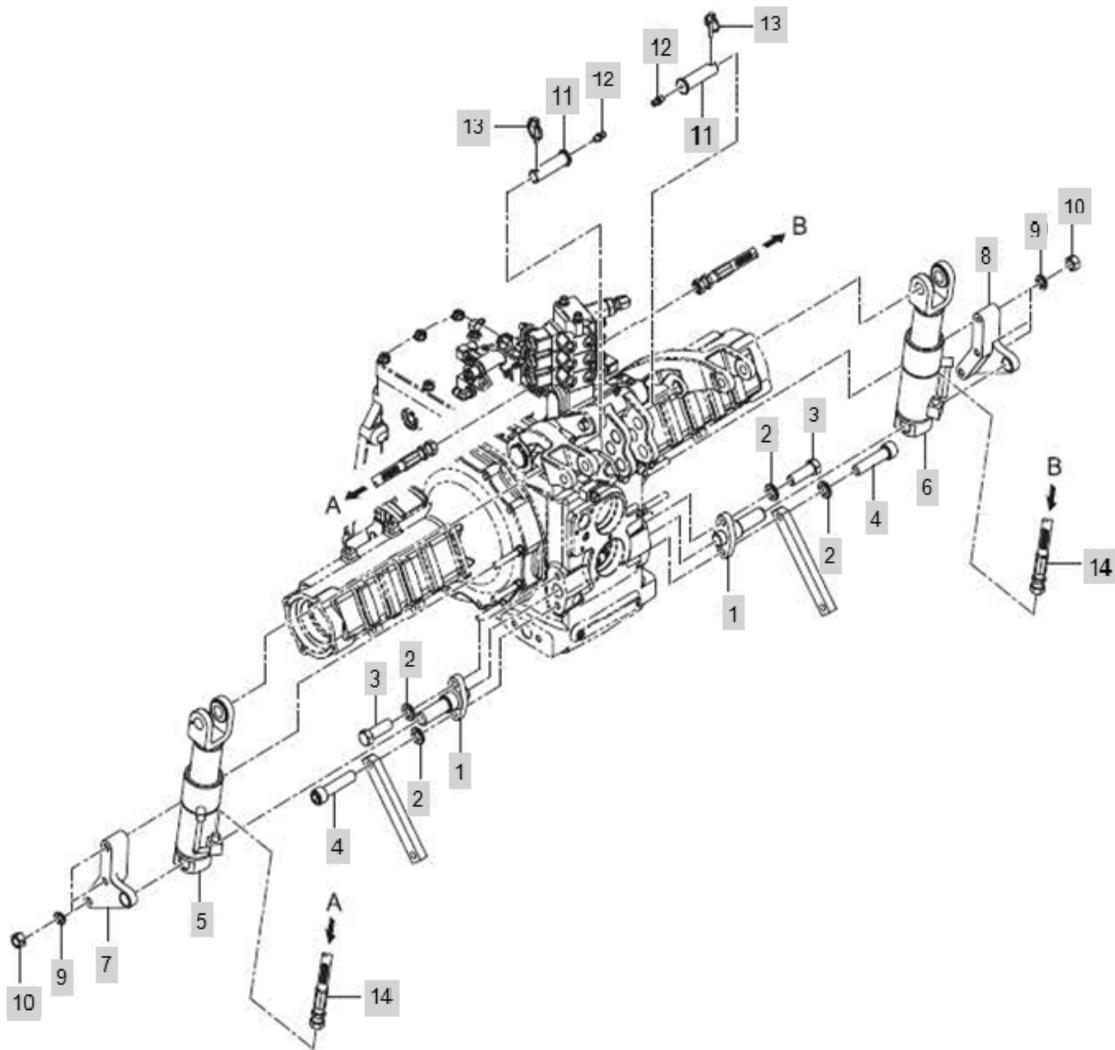




FIG C008

Branson 7845RP(US)

BRAKE ROD

Year/Month

2020/02

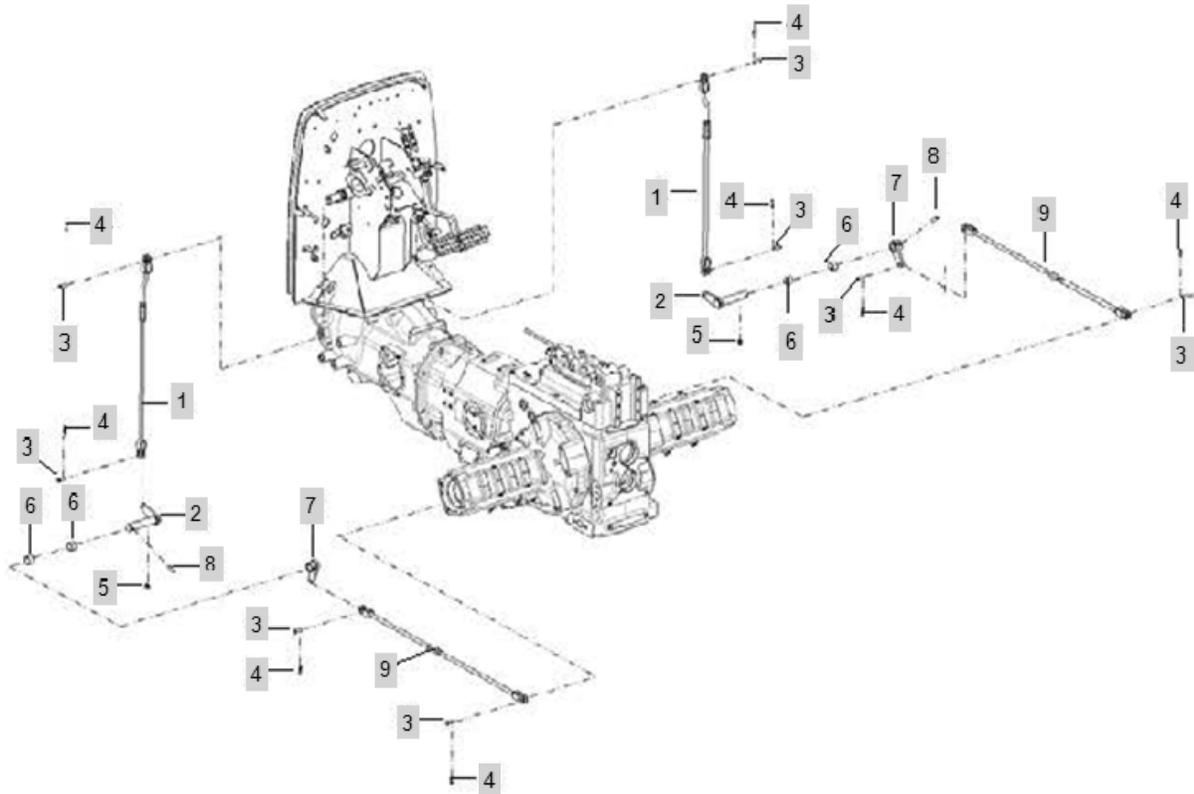




FIG C009

BRAKE PEDAL

Year/Month

Branson 7845RP(US)

2020/02

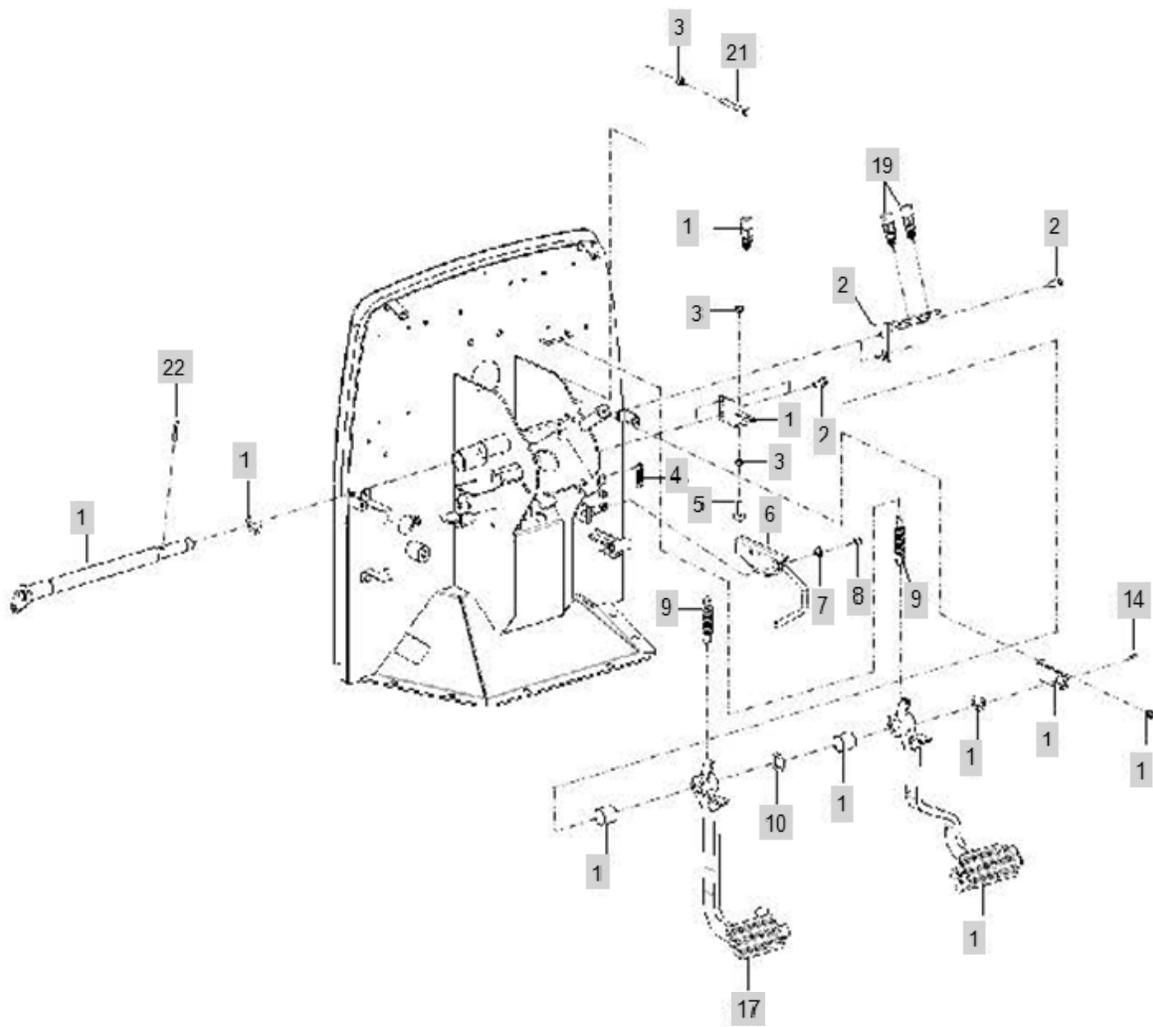




FIG C010

# RADIATOR

Year/Month

Branson 7845RP(US)

2020/02

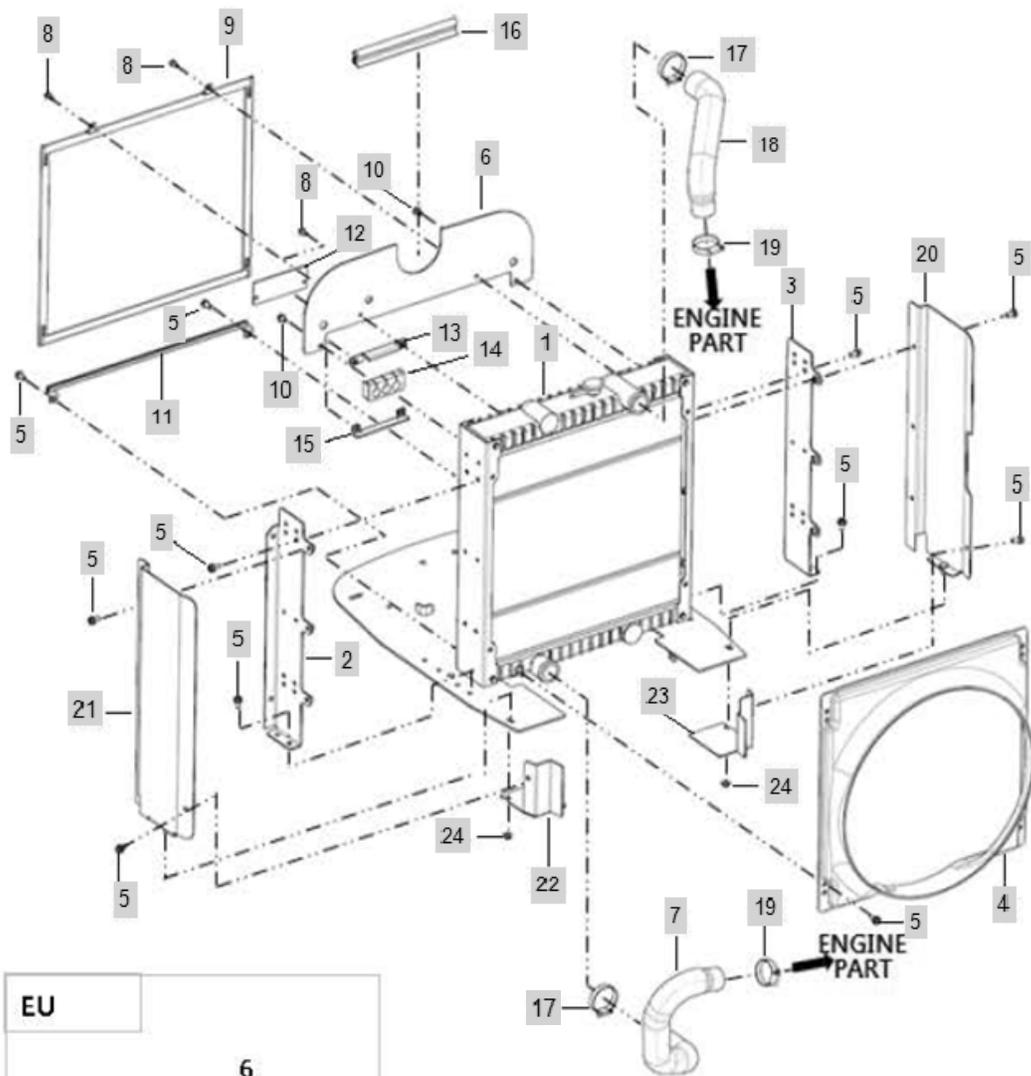




FIG C011

Branson 7845RP(US)

COOLING WATER SUB-TANK

Year/Month

2020/02

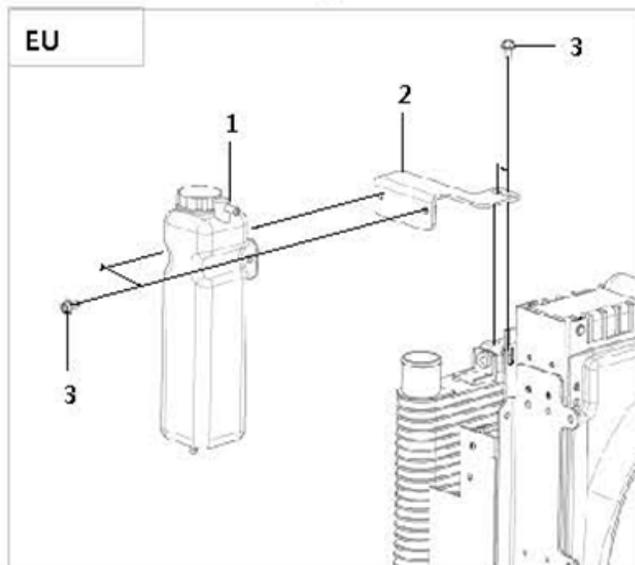
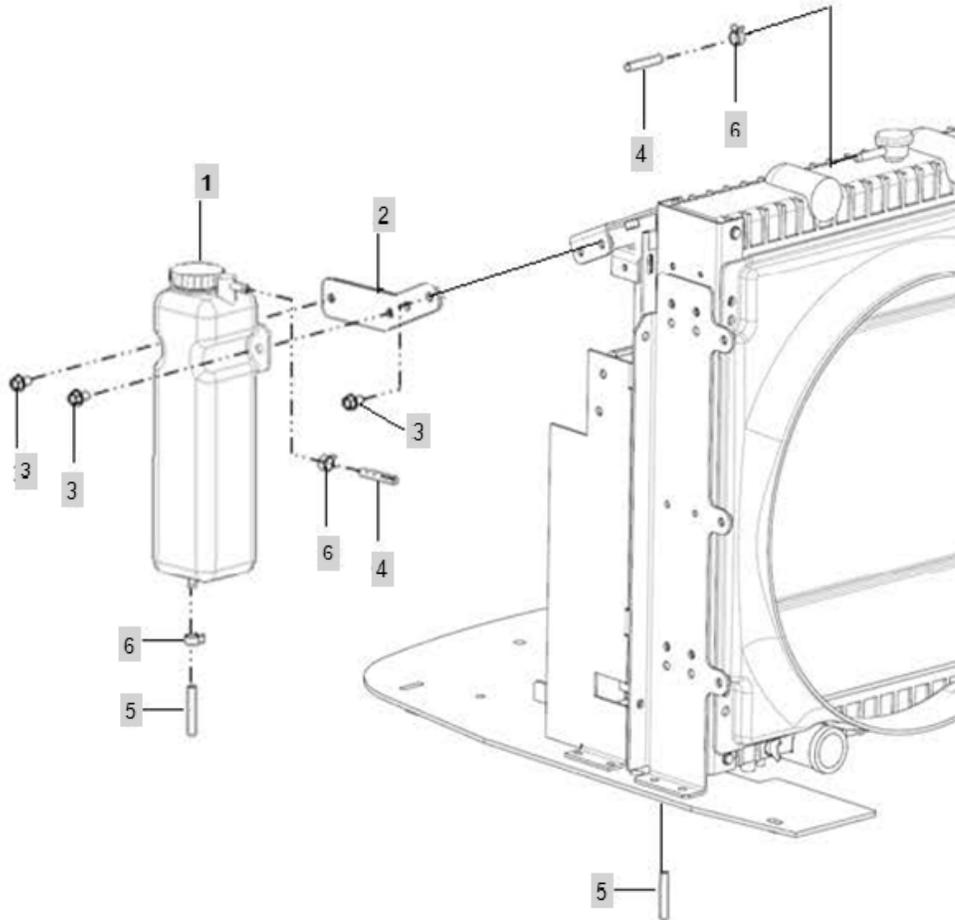




FIG C012

FRONT AXLE BRACKET

Year/Month

Branson 7845RP(US)

2020/02

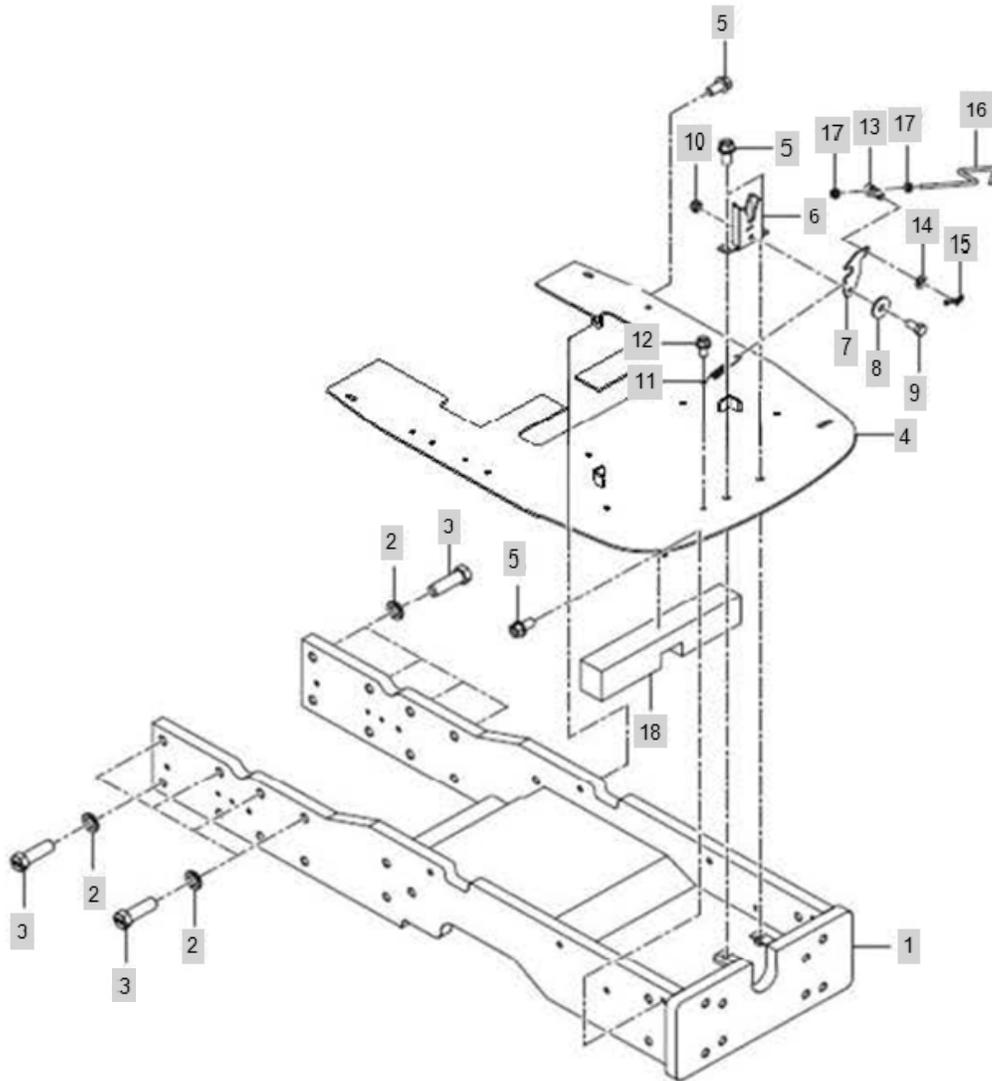




FIG C013

Branson 7845RP(US)

FRONT AXLE SUPPORT

Year/Month

2020/02

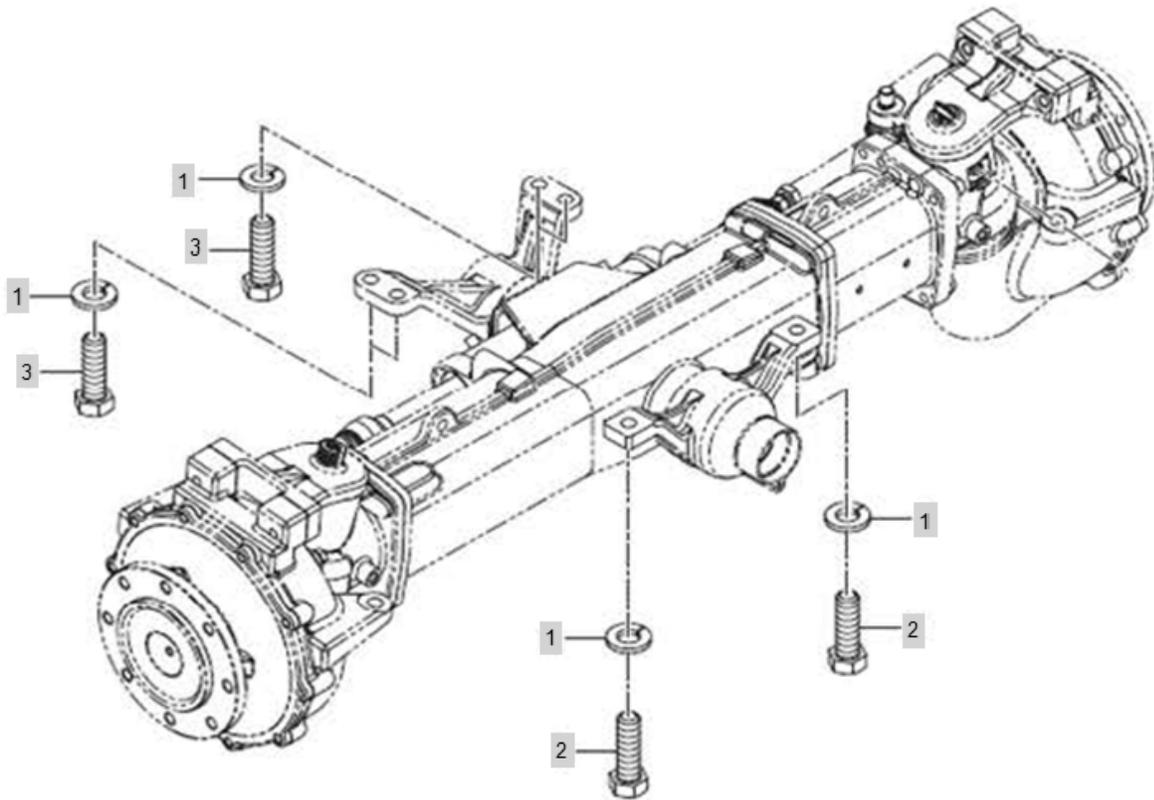




FIG C014-1

PROPELLER SHAFT

Year/Month

Branson 7845RP(US)

2020/02

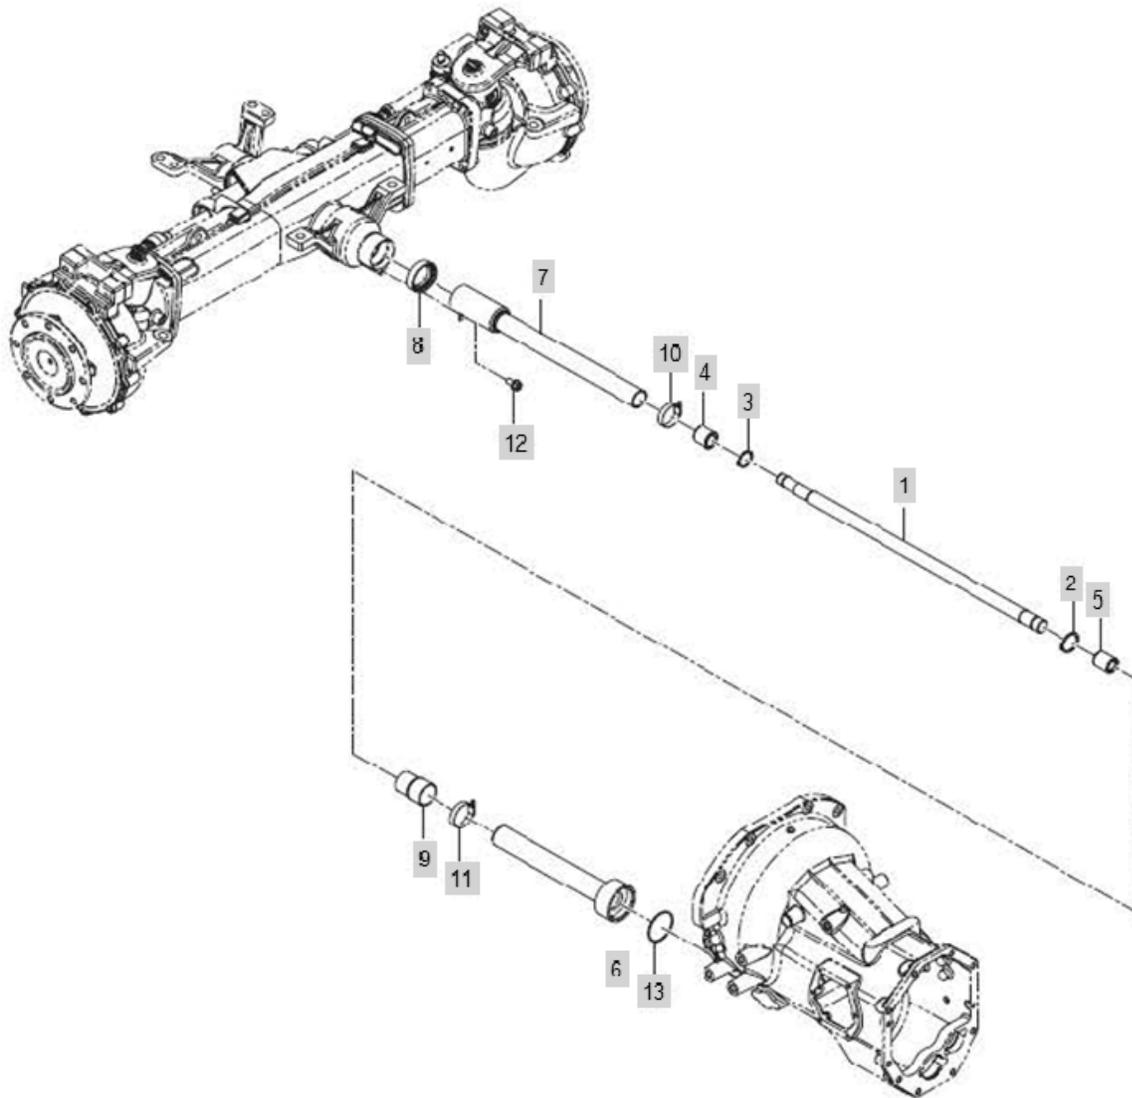




FIG C014-2

PROPELLER SHAFT(2019.04~)

Year/Month

Branson 7845RP(US)

2020/02

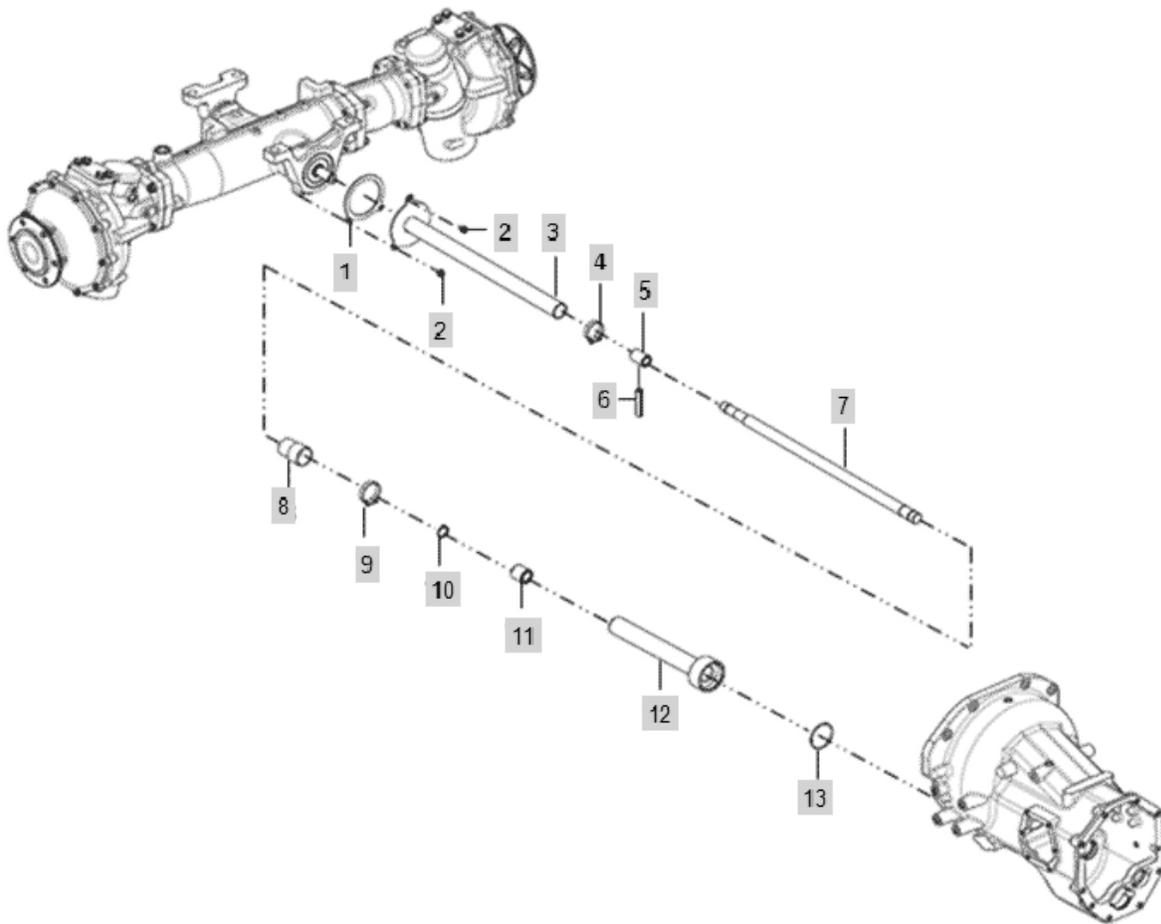




FIG C015

AIR CLEANER

Year/Month

Branson 7845RP(US)

2020/02

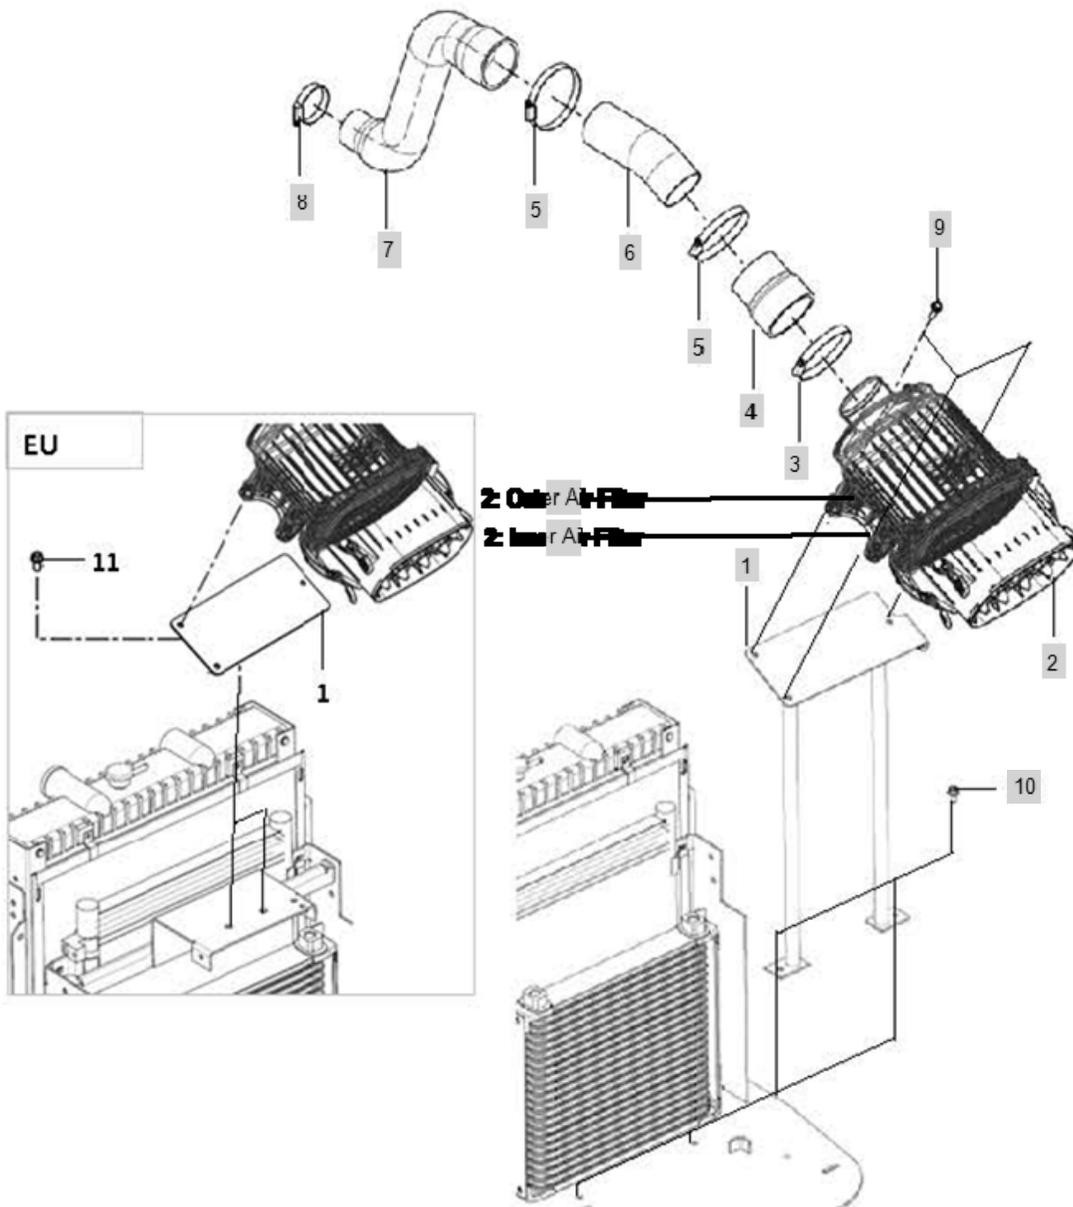




FIG C016

Branson 7845RP(US)

INTERCOOLER

Year/Month

2020/02

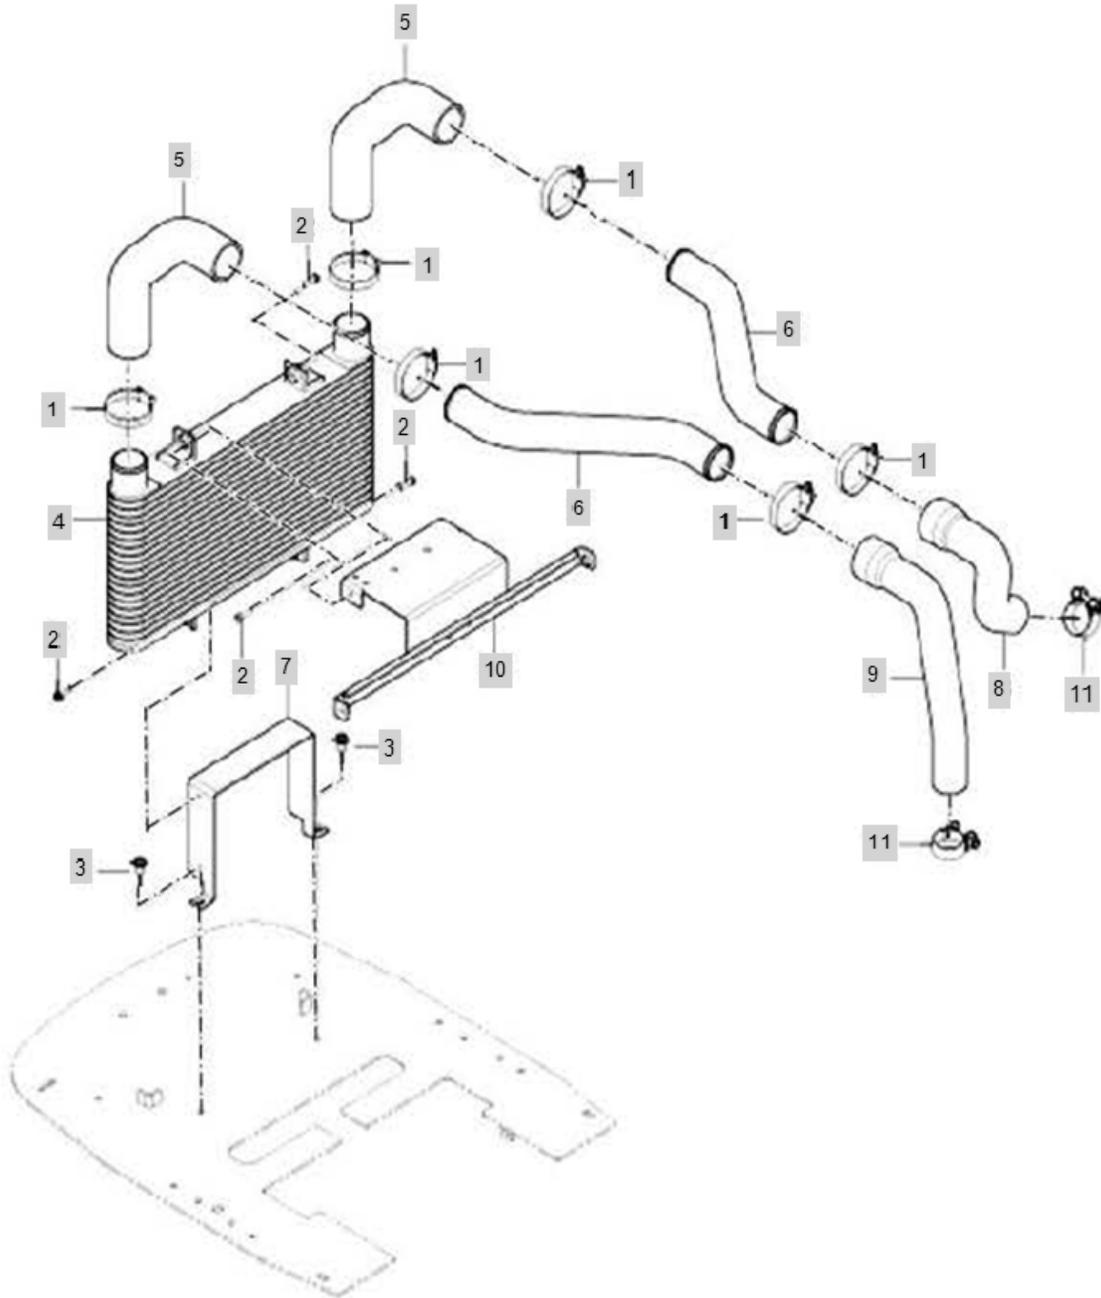




FIG C017

Branson 7845RP(US)

BATTERY

Year/Month

2020/02

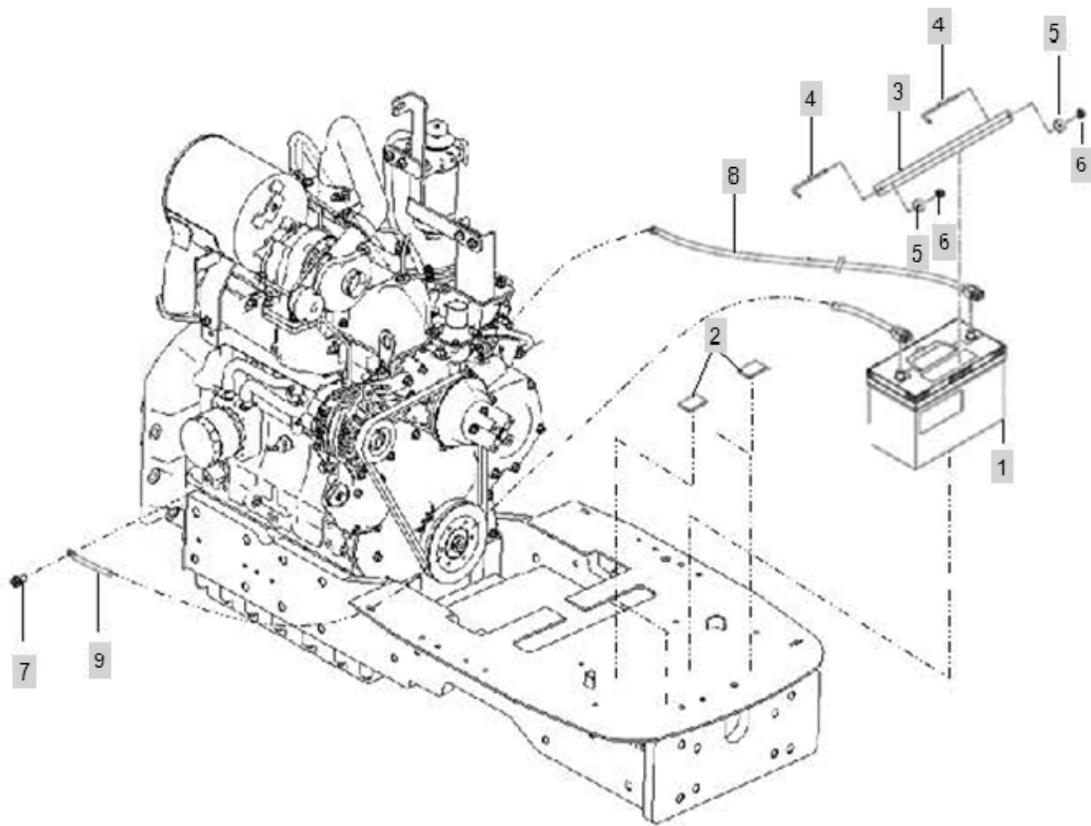




FIG C018

Branson 7845RP(US)

COOLING FAN

Year/Month

2020/02

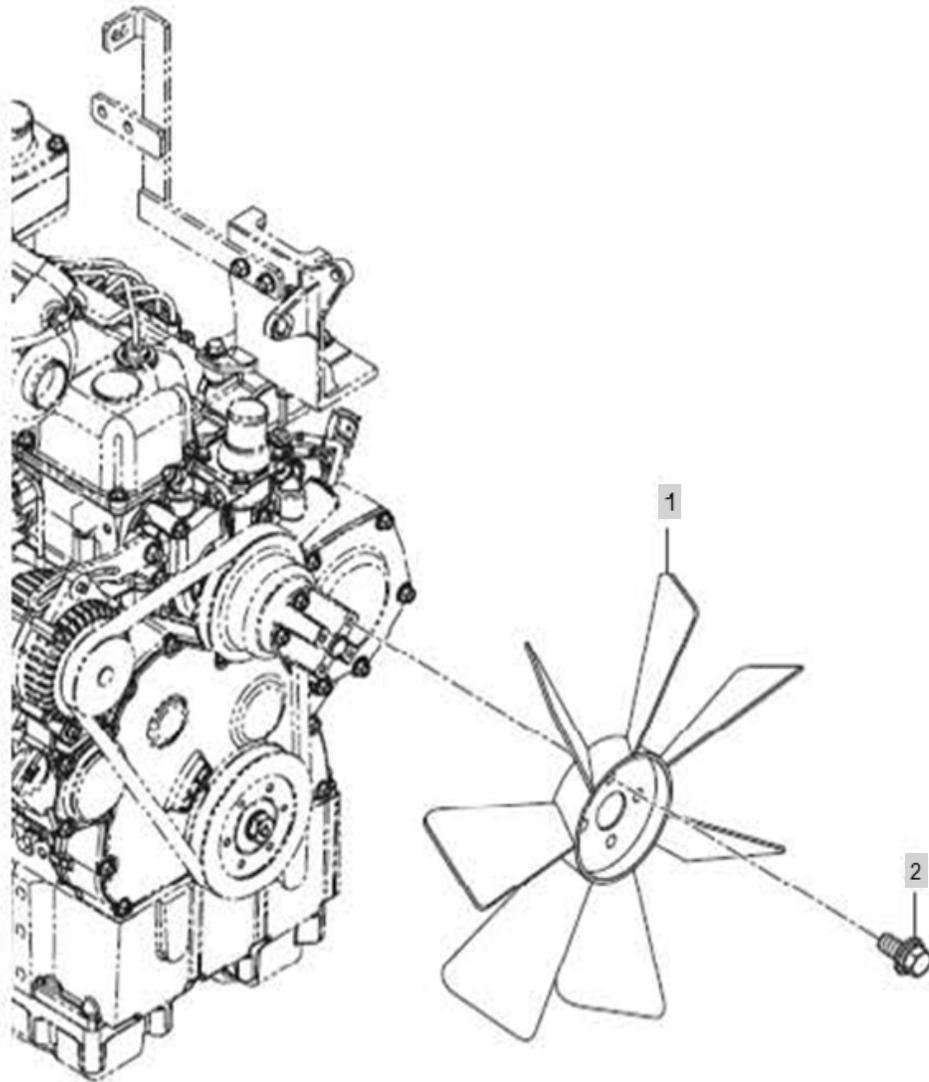




FIG C019

Branson 7845RP(US)

FUEL TANK ASS'Y

Year/Month

2020/02

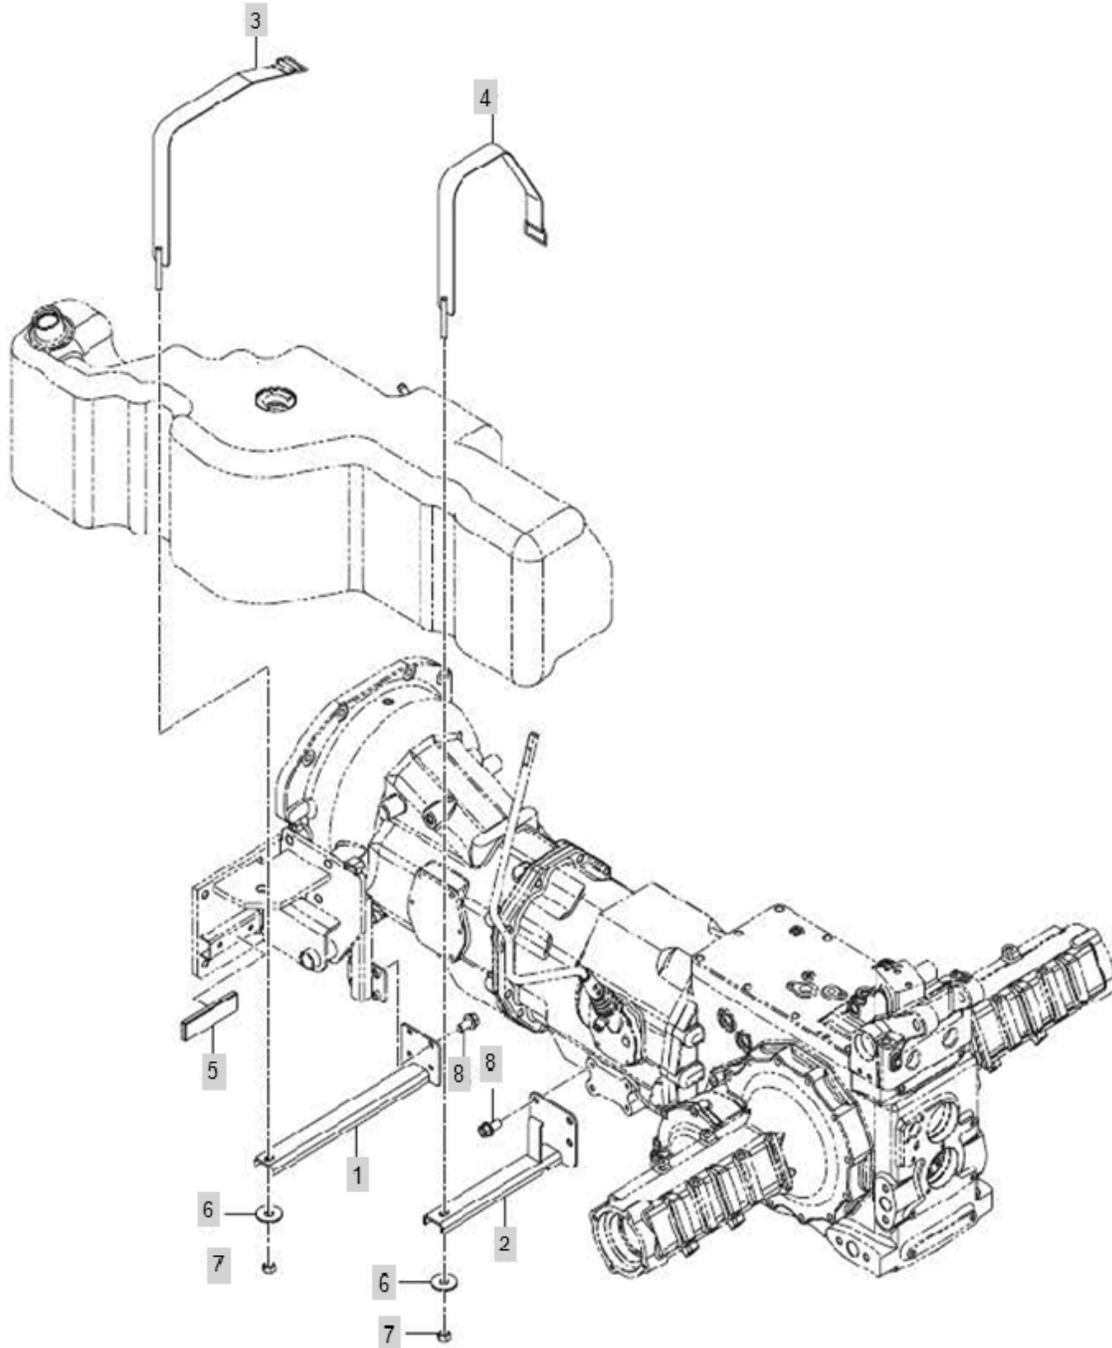




FIG C020

Branson 7845RP(US)

FUEL TANK

Year/Month

2020/02

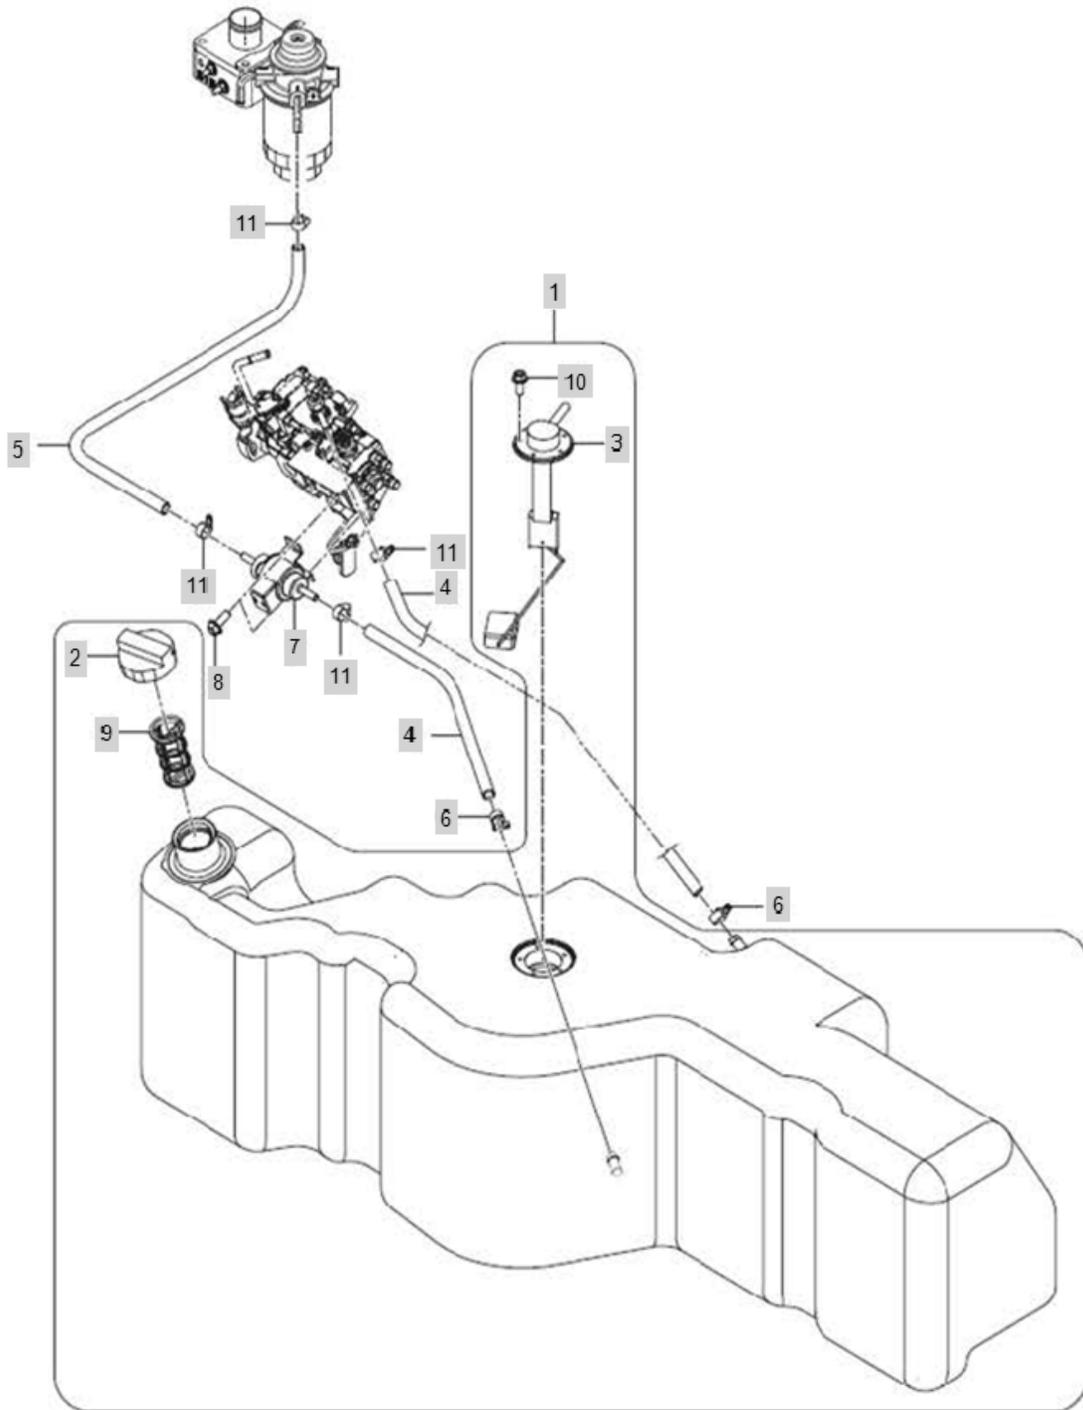




FIG C021

Branson 7845RP(US)

EXHAUST PIPE MOUNTING-USA

Year/Month

2020/02

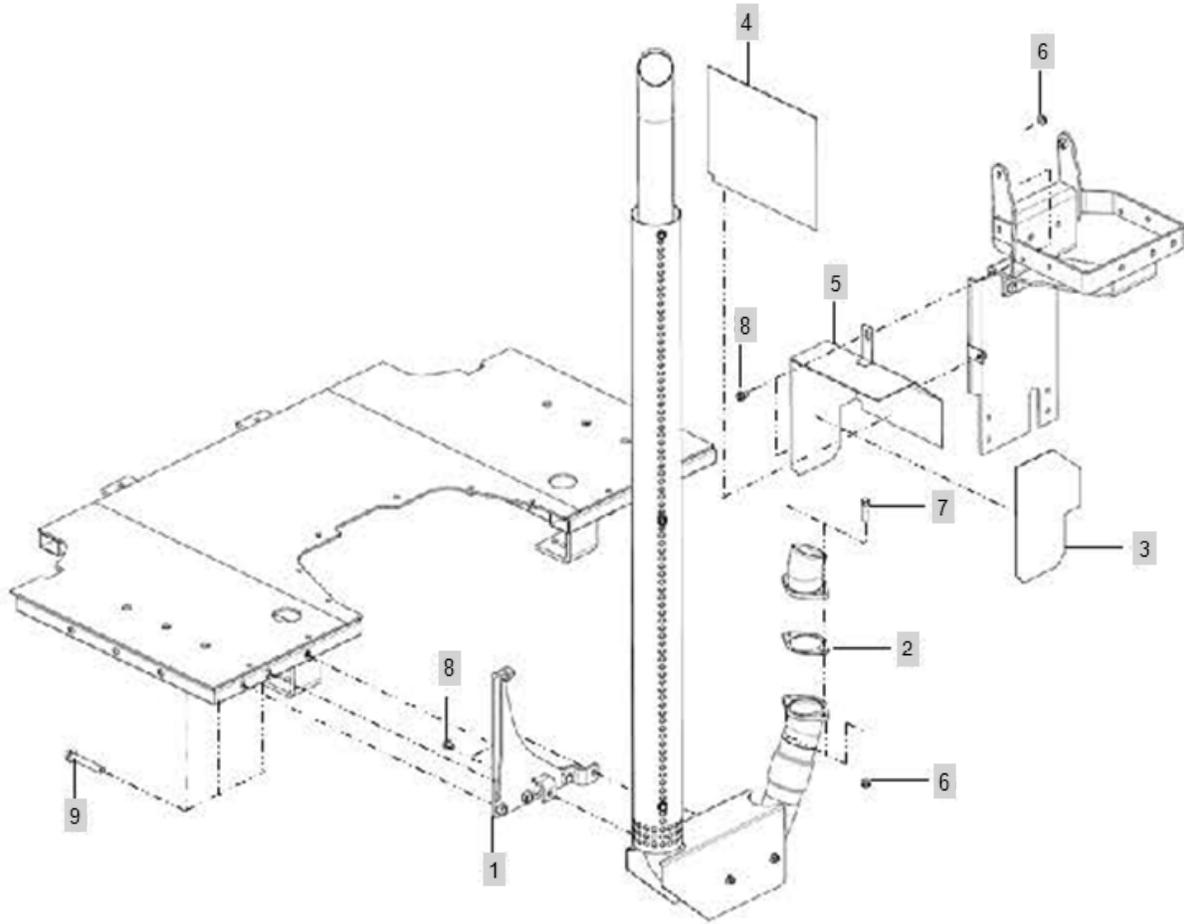




FIG C022

EXHAUST PIPE-USA

Year/Month

Branson 7845RP(US)

2020/02

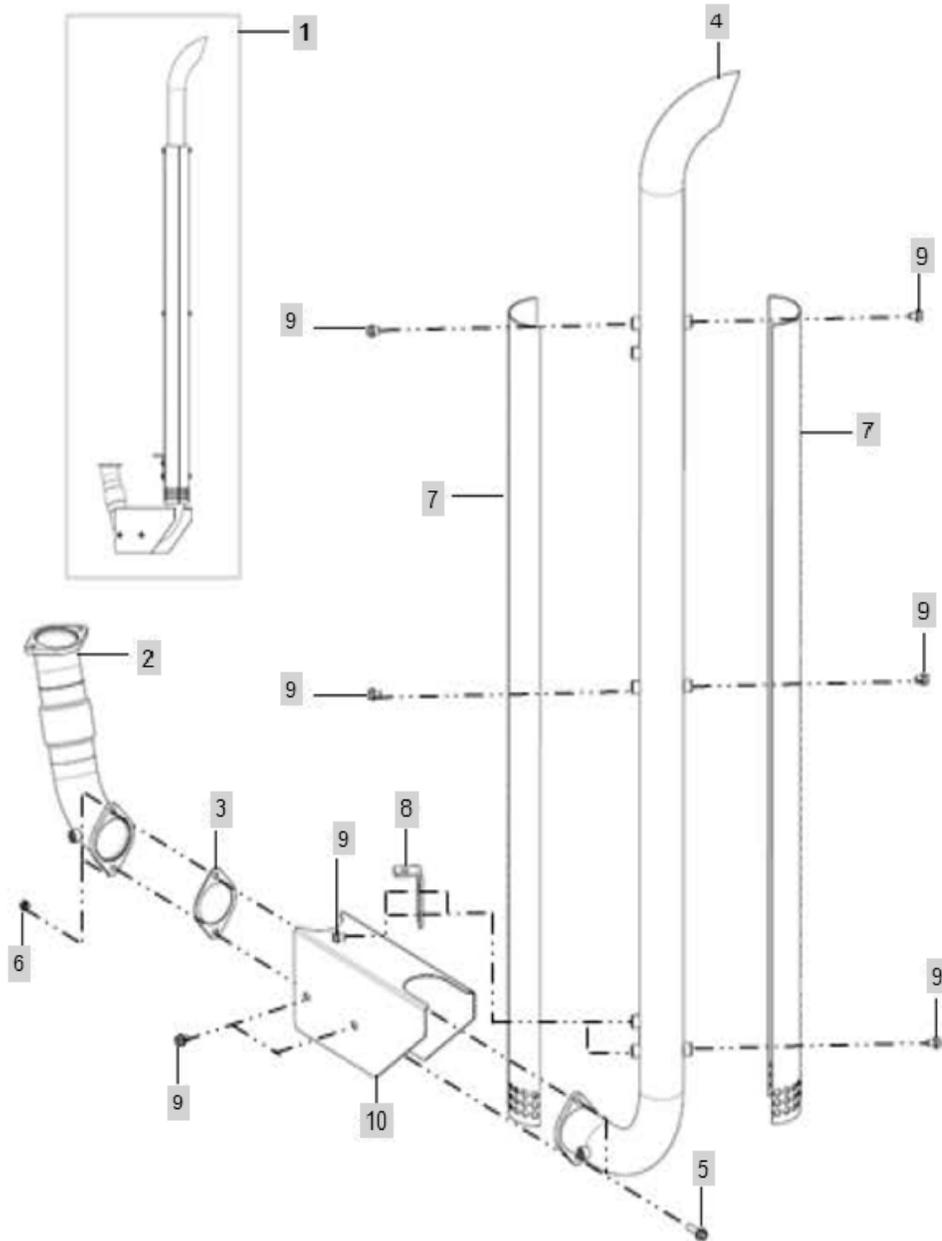




FIG C023

Branson 7845RP(US)

SUB STEP

Year/Month

2020/02

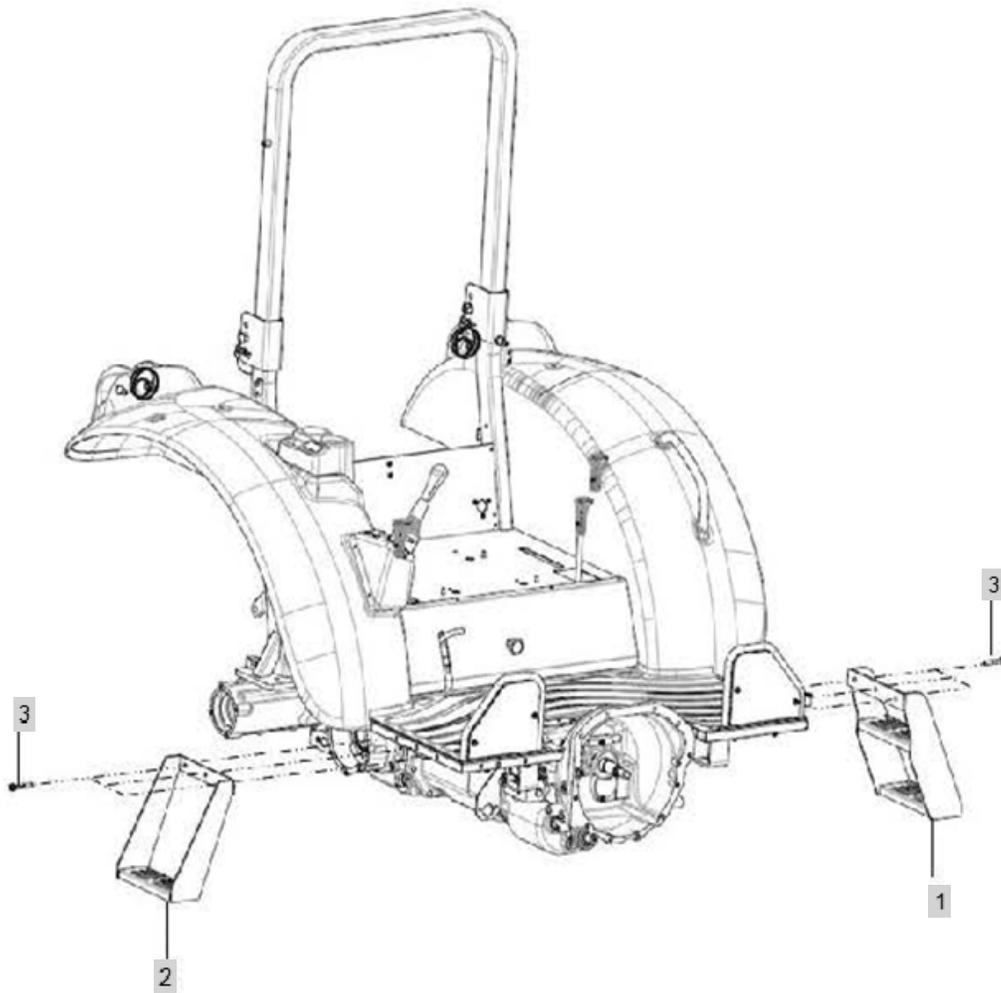




FIG C024

Branson 7845RP(US)

ROPS ASS'Y

Year/Month

2020/02

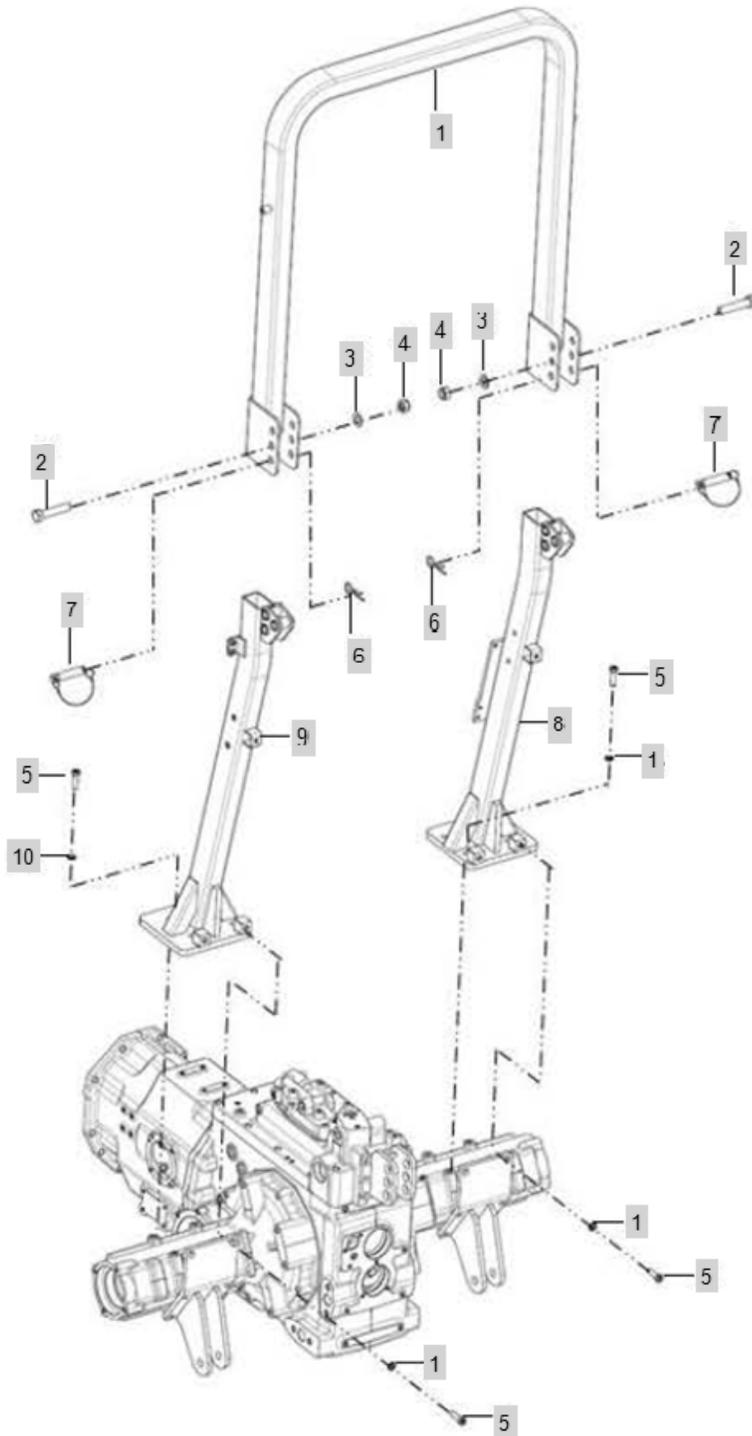




FIG C025

Branson 7845RP(US)

BONNET ASS'Y

Year/Month

2020/02

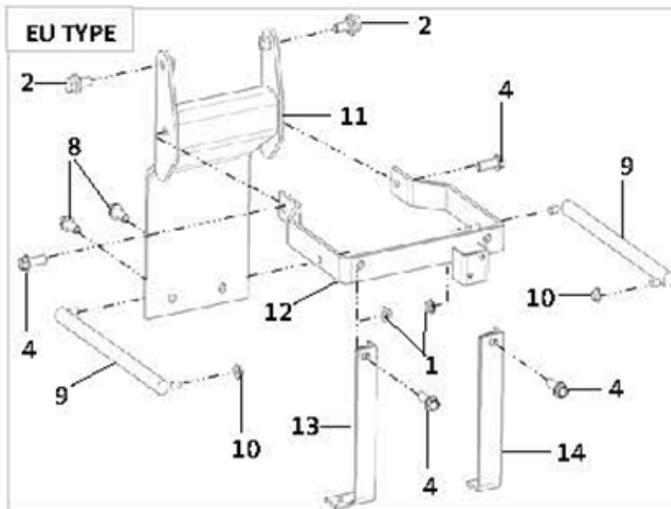
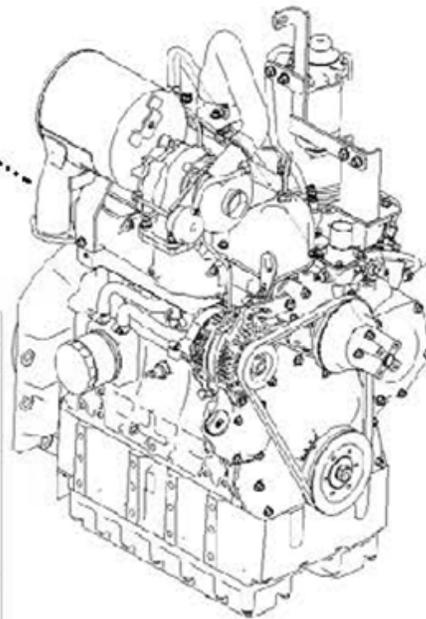
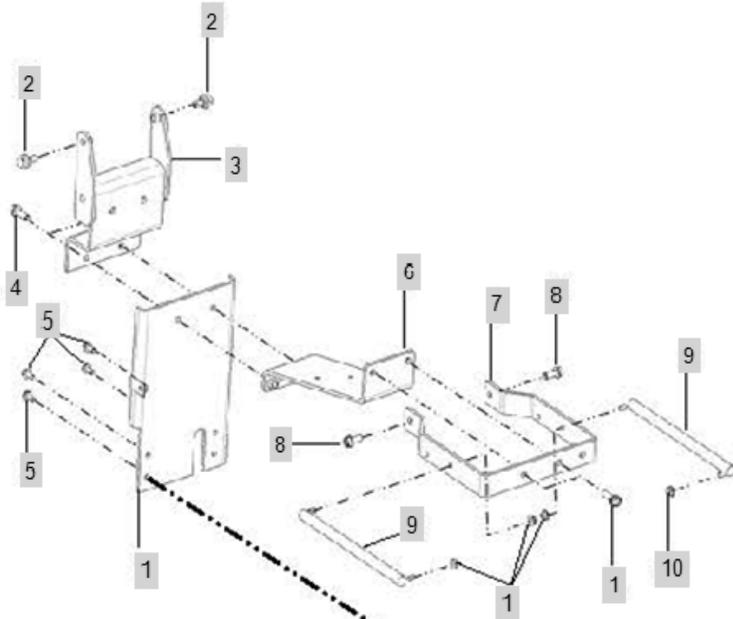




FIG C026

BONNET

Year/Month

Branson 7845RP(US)

2020/02

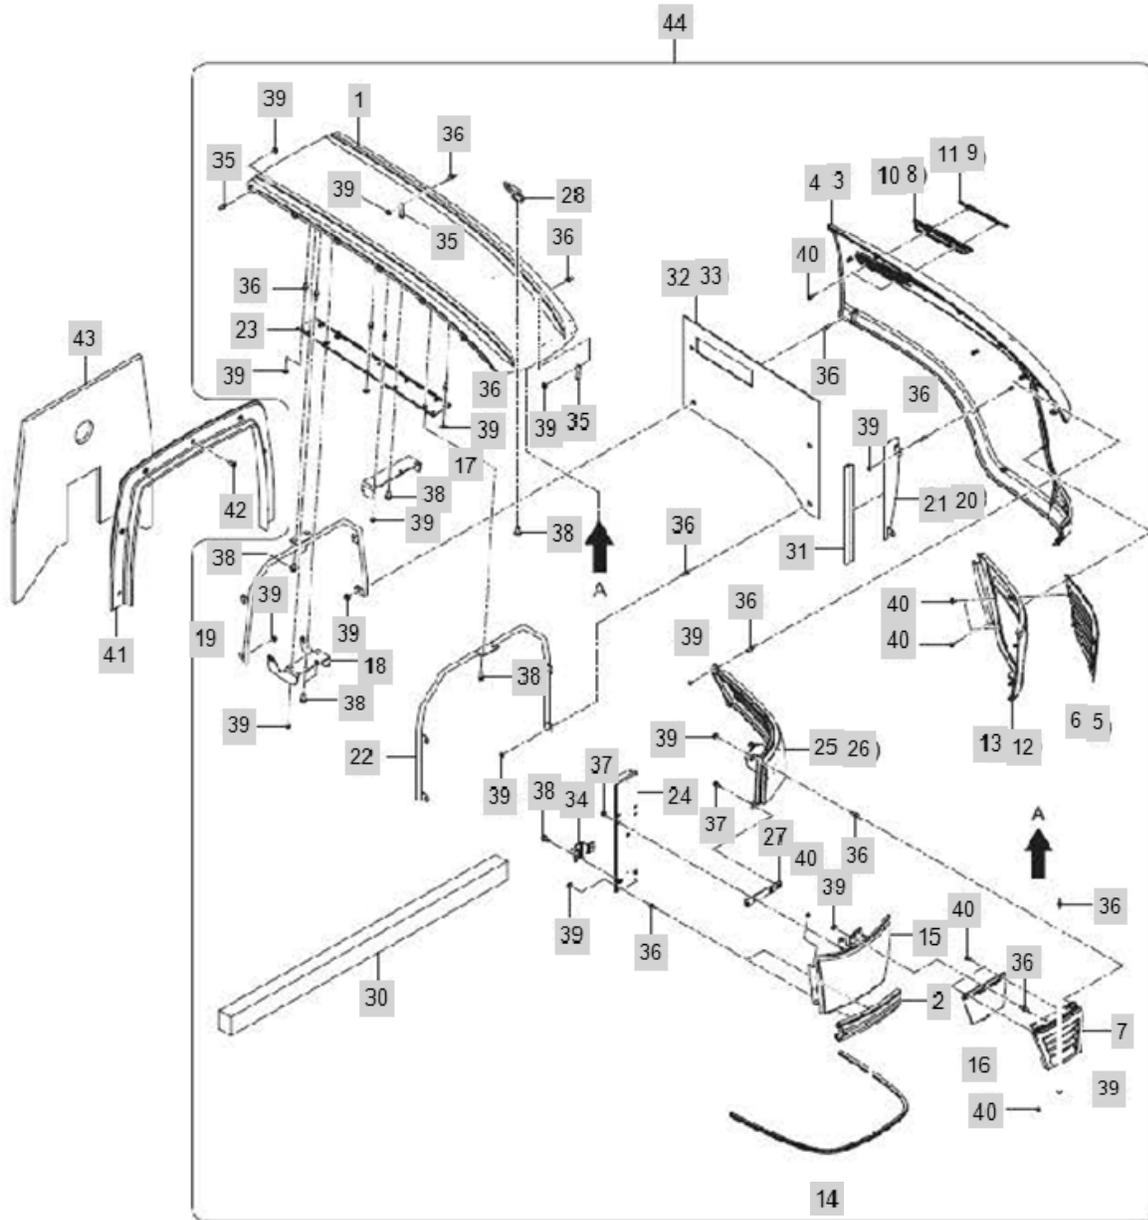


FIG C026		BONNET			Year/Month
Branson 7845RP(US)					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
1	TA00035180B	BONNET, UPPER	1		
2	TA00035182A	BONNET, LOW	1		
3	TA00035183A	BONNET, RH	1		
4	TA00035184A	BONNET, LH	1		
5	TA00035185A	SIDE GRIL, RH	1		
6	TA00035186A	SIDE GRIL, LH	1		
7	TA00035187A	CENTER GRIL	1		
8	TA00035188A	SIDE MASK, RH	1		
9	TA00035189A	BAR RH, SIDE MASK	1		
10	TA00035190A	SIDE MASK, LH	1		
11	TA00035191A	BAR LH, SIDE MASK	1		
12	TA00035323A	GRIDIRON RH	1		
13	TA00035324A	GRIDIRON LH	1		
14	TA00035332A	STRIP	1		
15	TA00035333A	GRIDIRON, FRONT	1		
16	TA00035334A	GIRDIRON, UPPER	1		
17	TA00035335A	HINDGE BRACKET, GAS SPRING	1		
18	TA00035336A	GRIDIRON F	1		
19	TA00035337B	PIPE ASSY, REAR	1		
20	TA00035338B	PLATE ASSY, RH	1		
21	TA00035339B	PLATE ASSY, LH	1		
22	TA00035340B	PIPE ASSY, FRONT	1		
23	TA00035341A	PLATE ASSY, CENTER	1		
24	TA00035372B	BRACKET ASSY, SUPPORT	1		
25	TA00036559A	HEAD LAMP ASSY LH	1		
26	TA00036568A	HEAD LAMP ASSY RH	1		
27	TA00036574A	BRACKET, HEAD LAMP	1		
28	TA00036726A	EMBLEM	1		
29	26106-100142	Bolt, Hexa (10-14)	1		
30	TA00038069A	PAD	1		
31	TA00038125A	STRIP, HOOD	2		
32	TA00038768A	INSULATOR(BONNET L)	1		
33	TA00038769A	INSULATOR(BONNET R)	1		
34	TA00038853A	LOCKING BRACKET ASS`Y	1		
35	TCD5310000A4	Clamp, Harness C	2		
36	TA00001332A	INSERT BOLT(M6)	58		
37	26106-060162	HEXFLANGE BOLT	4		
38	26106-080162	SCREW,HEXFLANGEHEADCAP	10		
39	26367-060002	Nut, Hexa (Φ6)	58		
40	26476-050122	PLANGE HEXA BOLT	29		
41	TA00035210A	HEAD LAMP ASSEMBLY	1		
42	26577-080142	SCREW	7		
43	TA00040826A	PLATE	1		
44	TA00035354D	BONNET ASSY	1		

FIG C027

ACCELERATION SYSTEM

Year/Month

Branson 7845RP(US)

2020/02

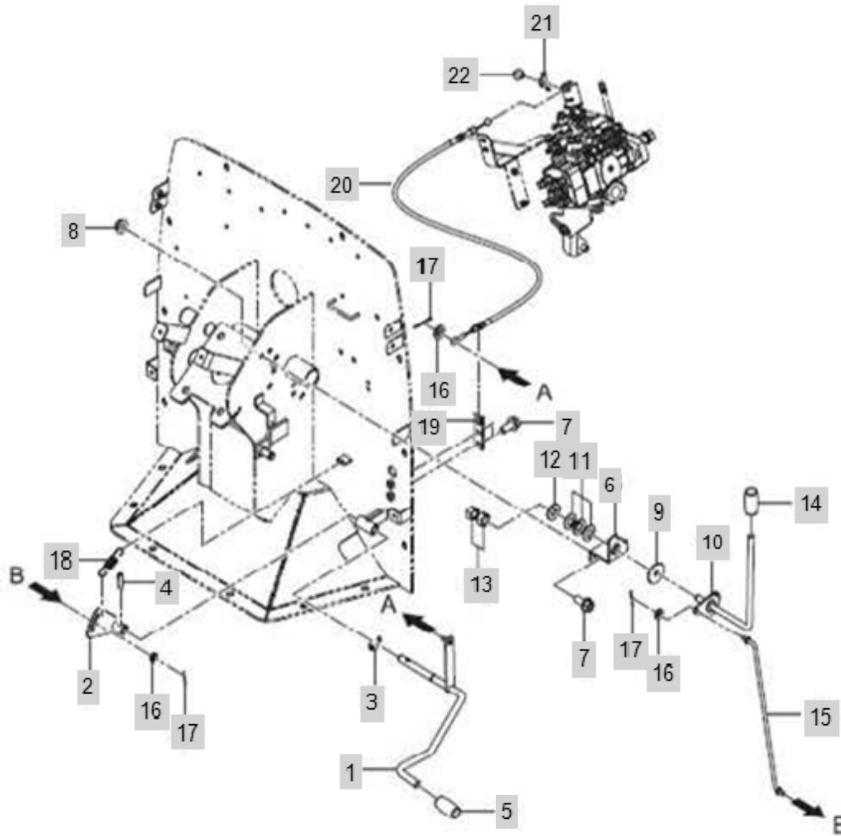




FIG C028

Branson 7845RP(US)

HORN

Year/Month

2020/02

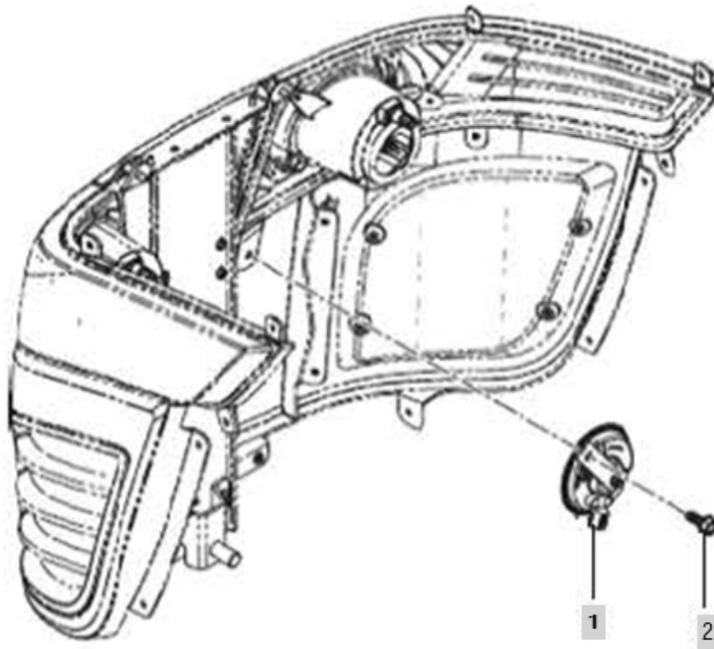




FIG C029-1

STEERING COLUMN

Year/Month

Branson 7845RP(US)

2020/02

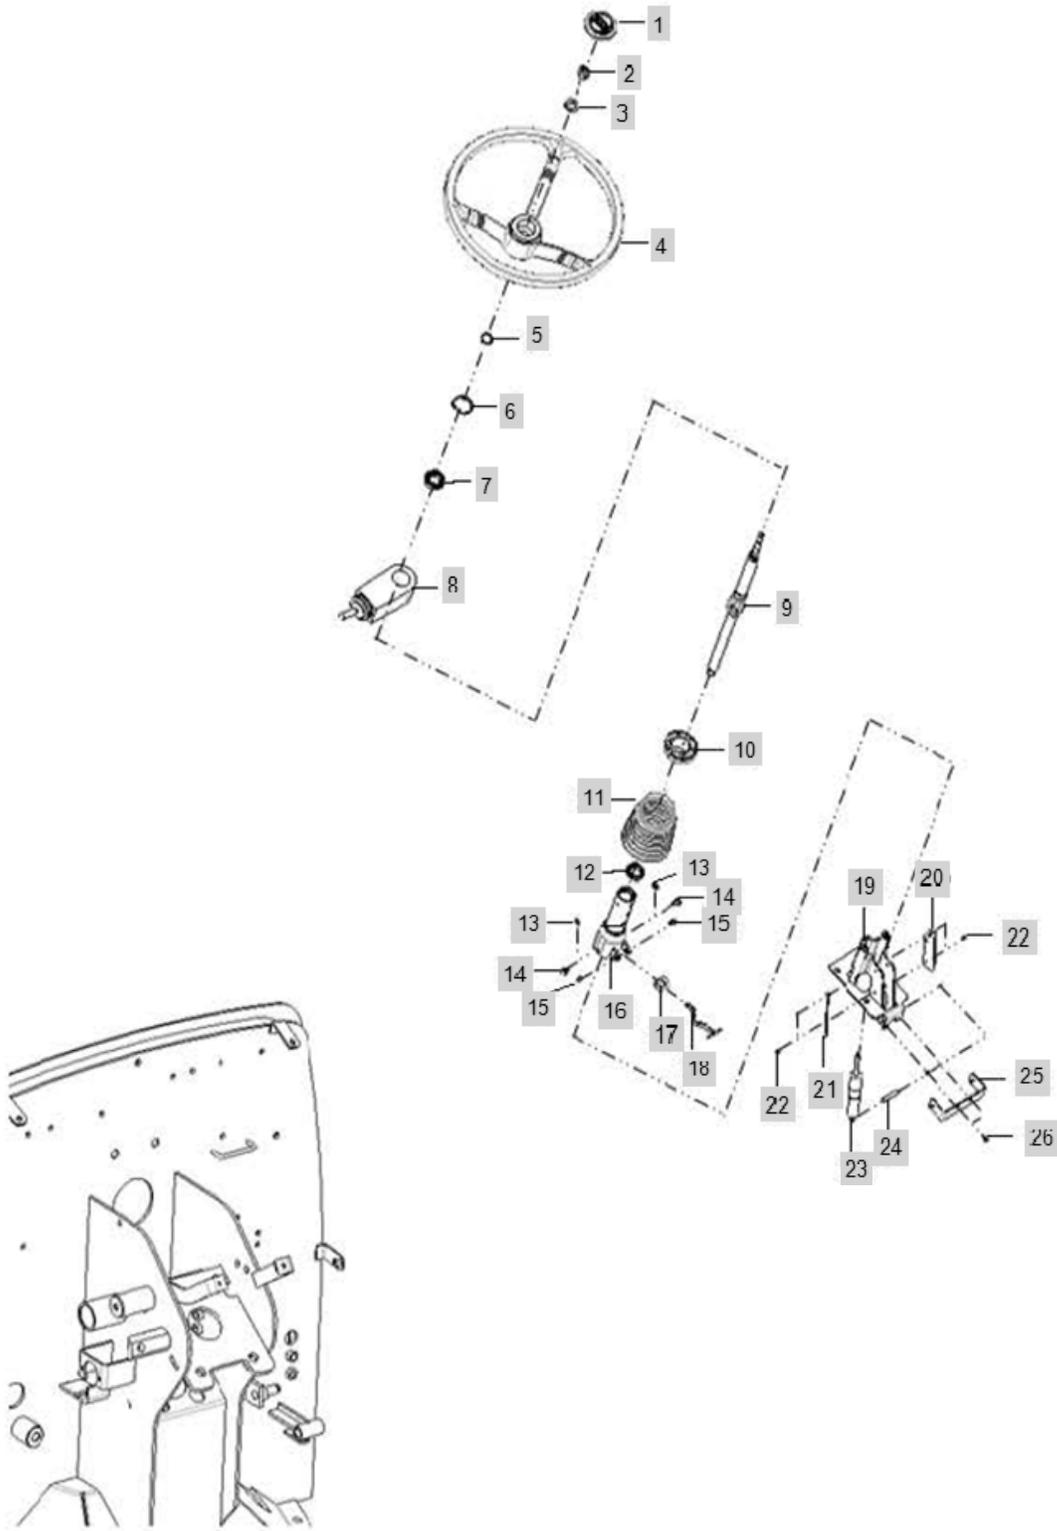




FIG C030-1

COLUMN STAY & CLUTCH PEDAL

Year/Month

Branson 7845RP(US)

2020/02

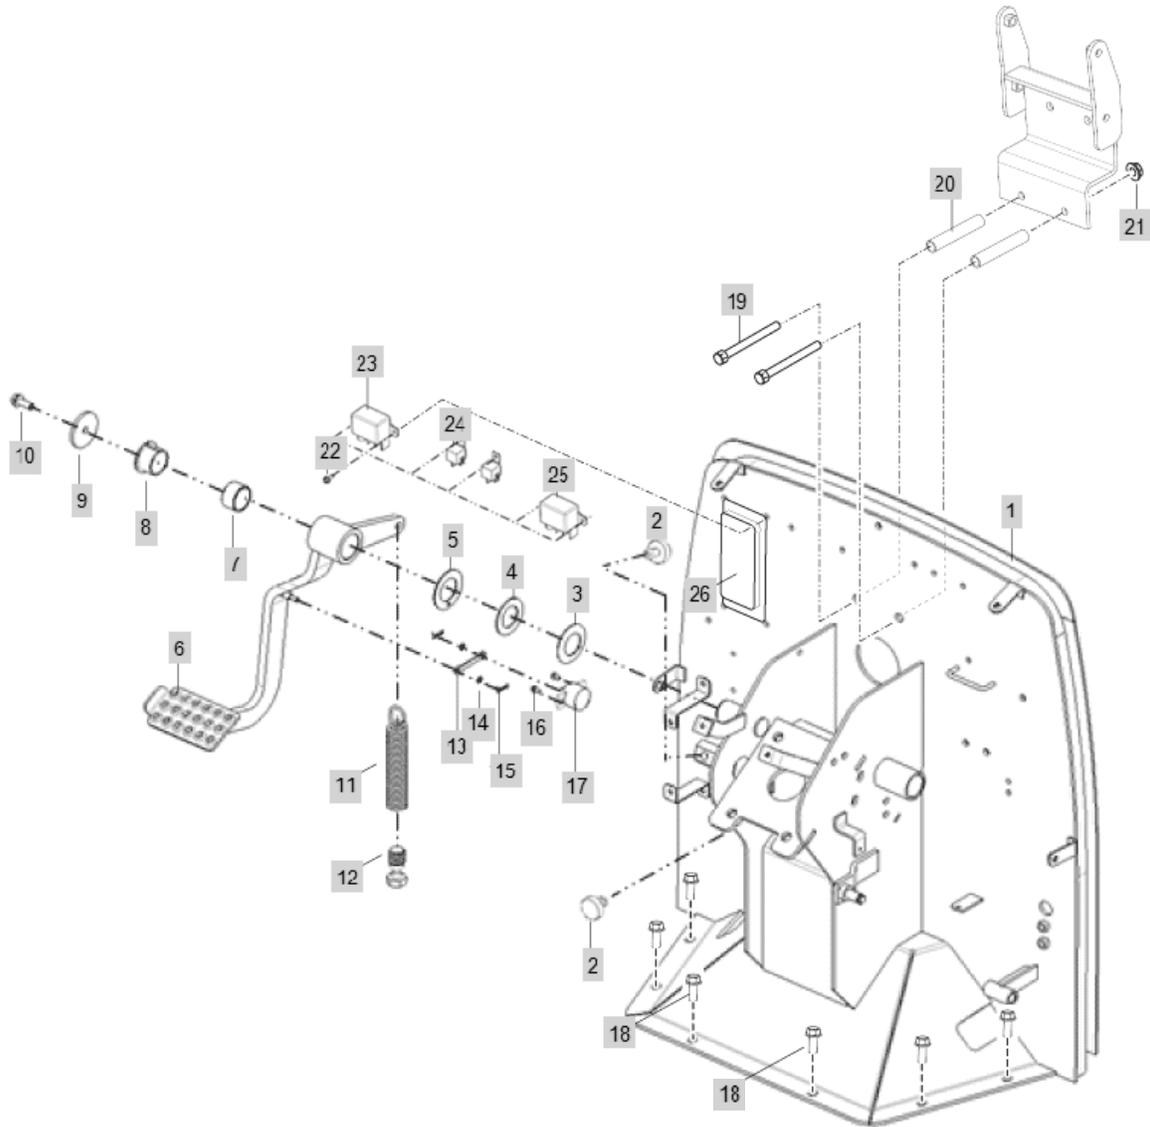




FIG C030-2

Branson 7845RP(US)

COLUMN STAY & CLUTCH PEDAL(2019.04~)

Year/Month

2020/02

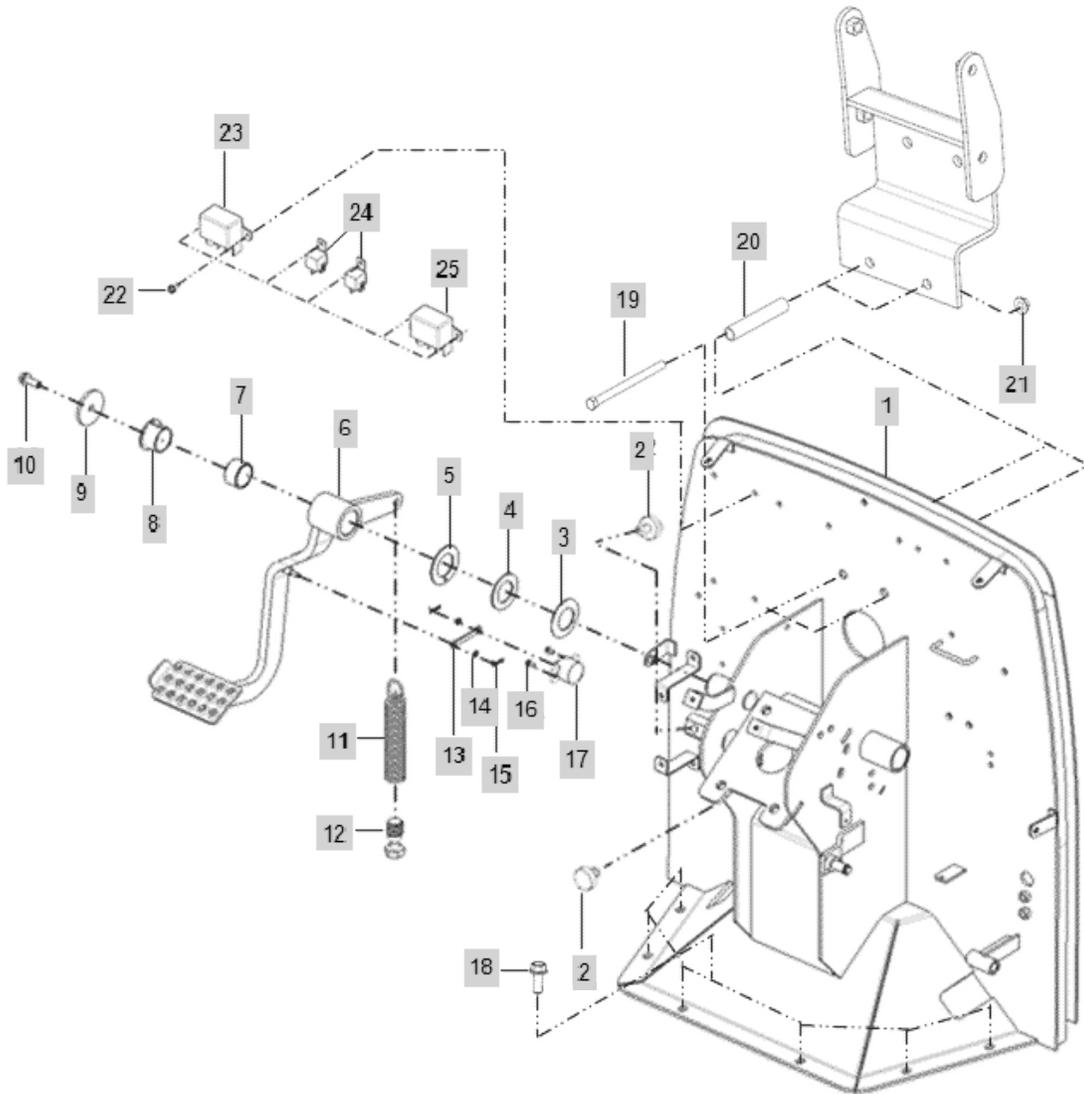




FIG C032

DRAFT LINK

Year/Month

Branson 7845RP(US)

2020/02

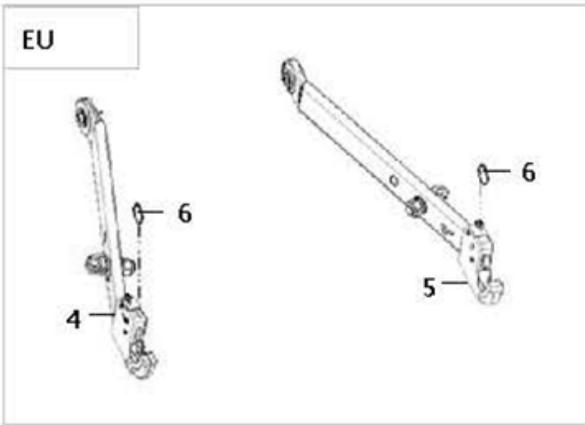
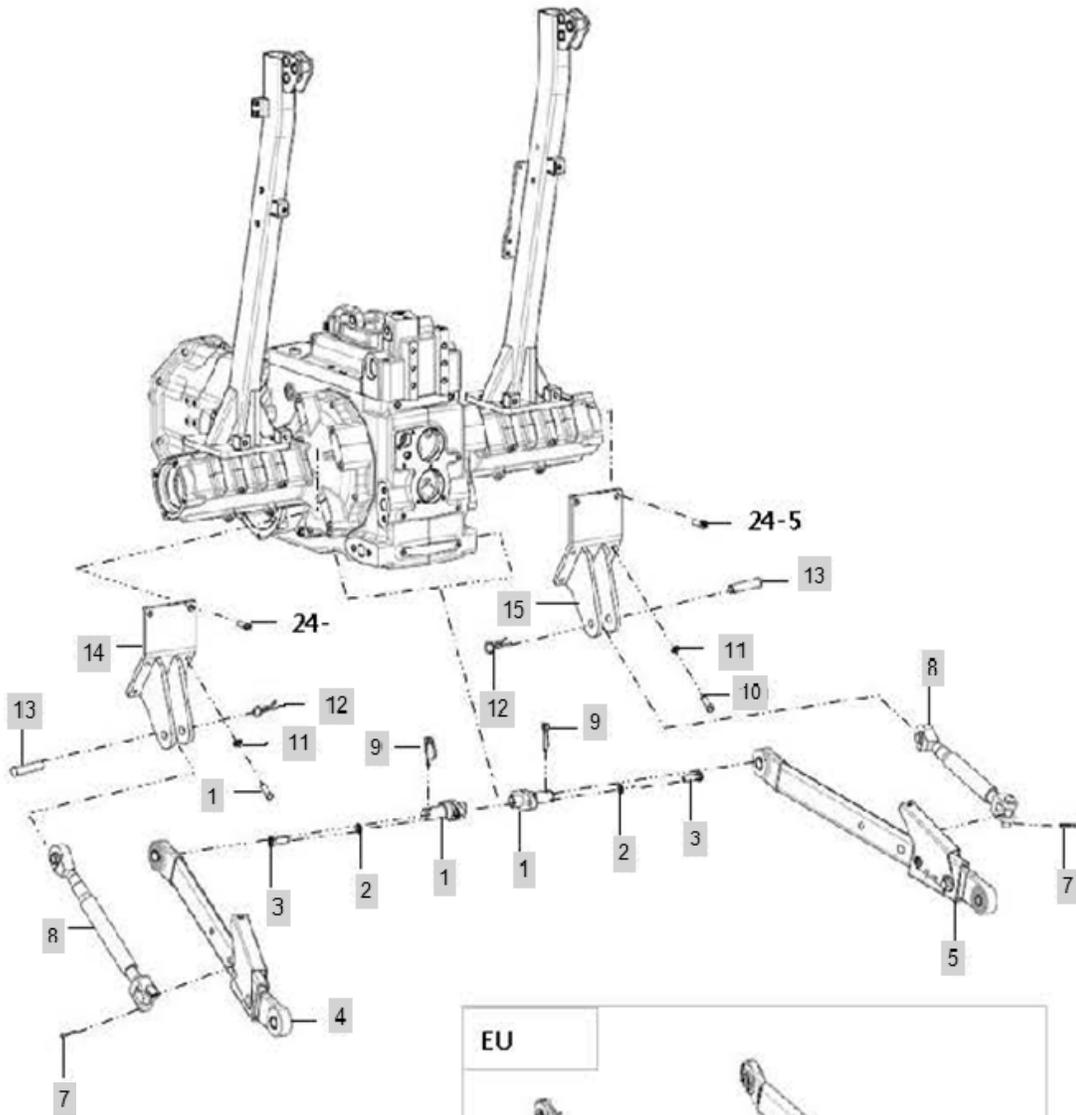




FIG C033

Branson 7845RP(US)

CENTER LINK

Year/Month

2020/02

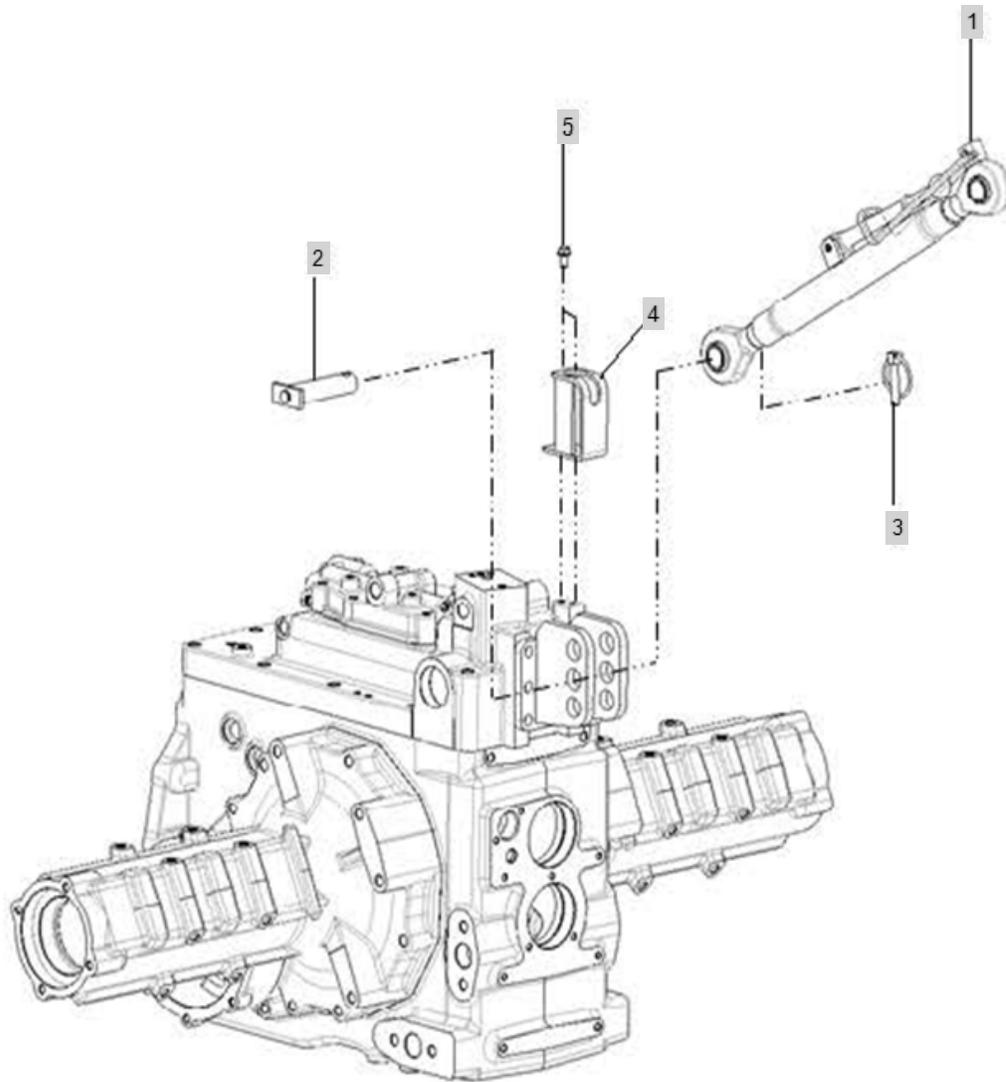




FIG C034

Branson 7845RP(US)

LIFT LINK

Year/Month

2020/02

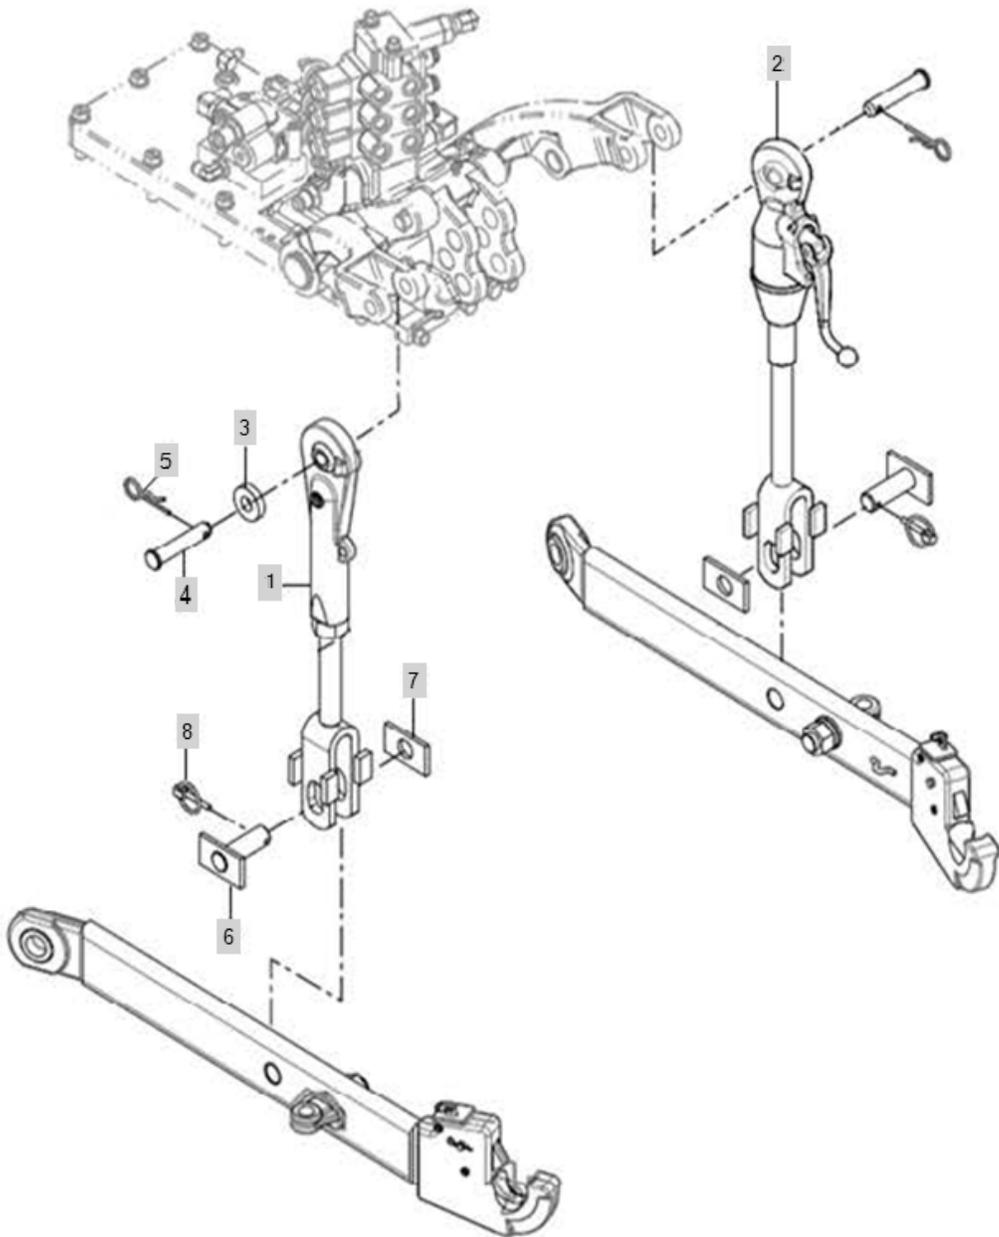




FIG C035

Branson 7845RP(US)

DRAWBAR

Year/Month

2020/02

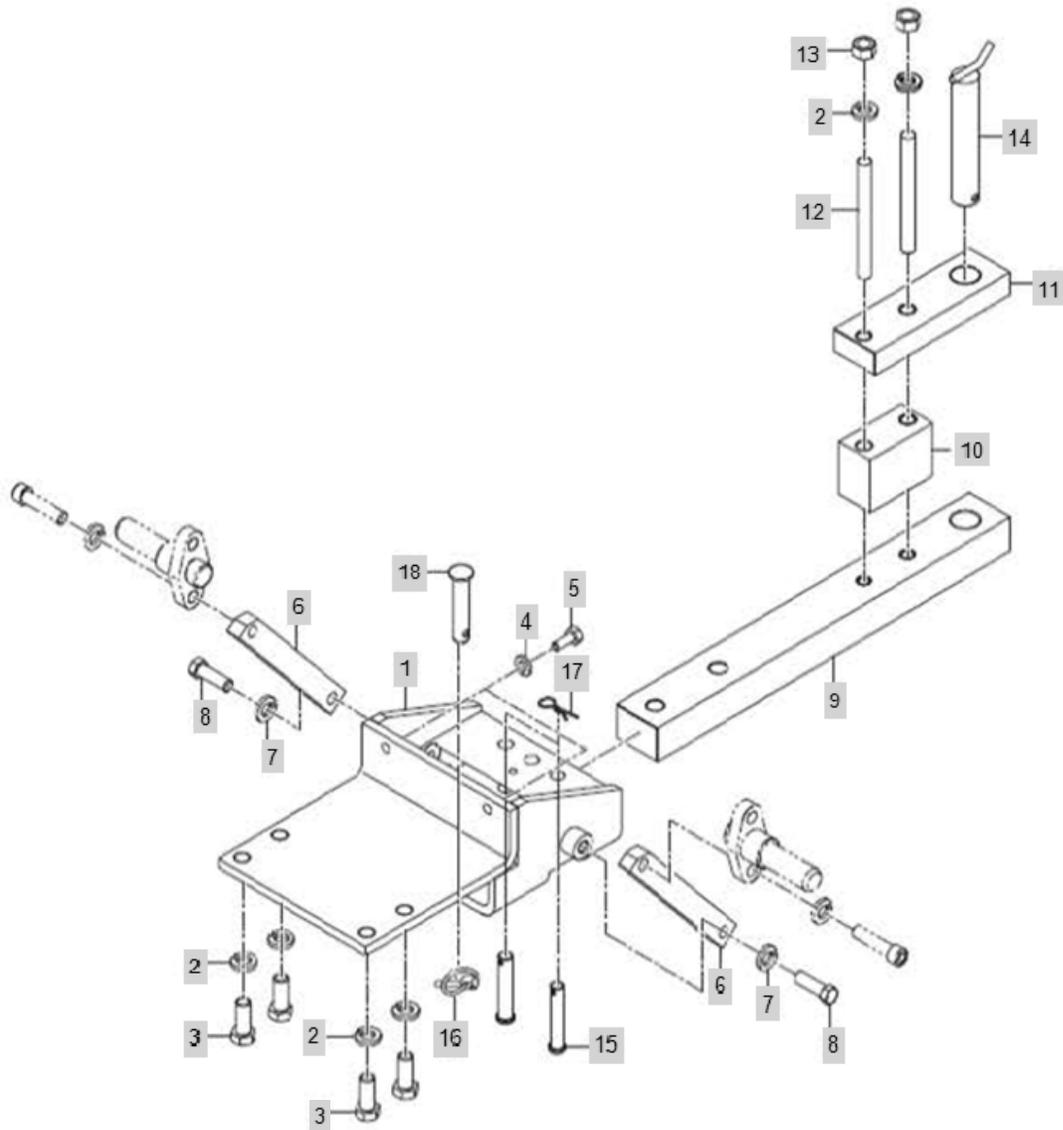




FIG C036

Branson 7845RP(US)

PTO COVER

Year/Month

2020/02

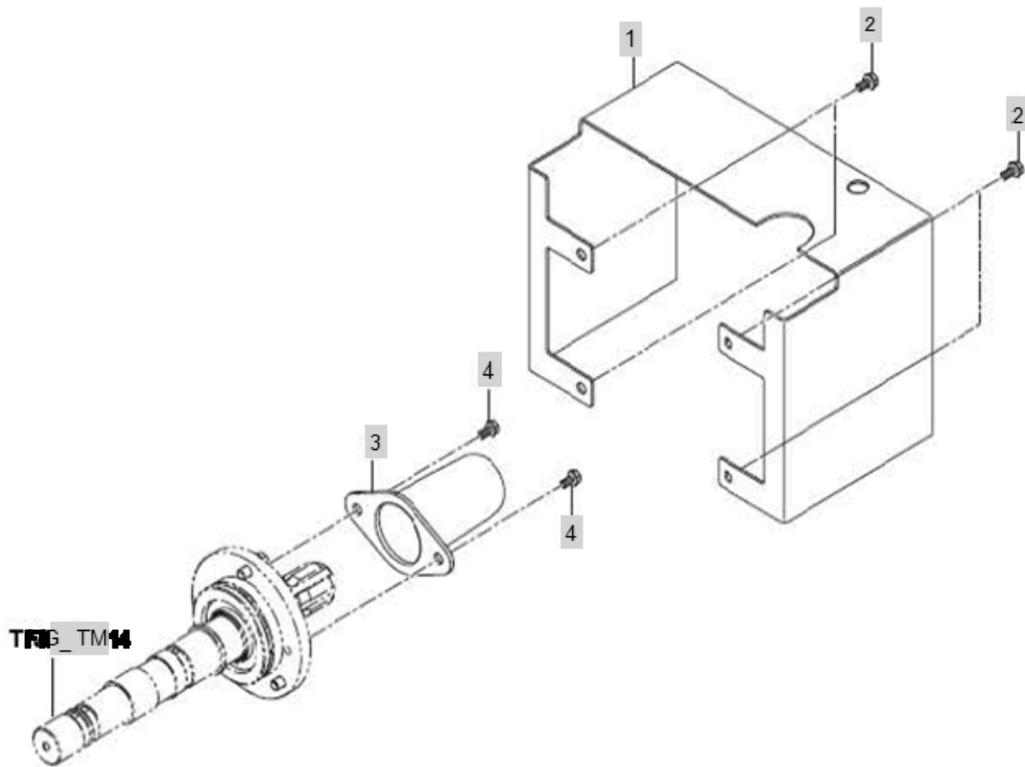




FIG C037

Branson 7845RP(US)

LEVER KNOB

Year/Month

2020/02

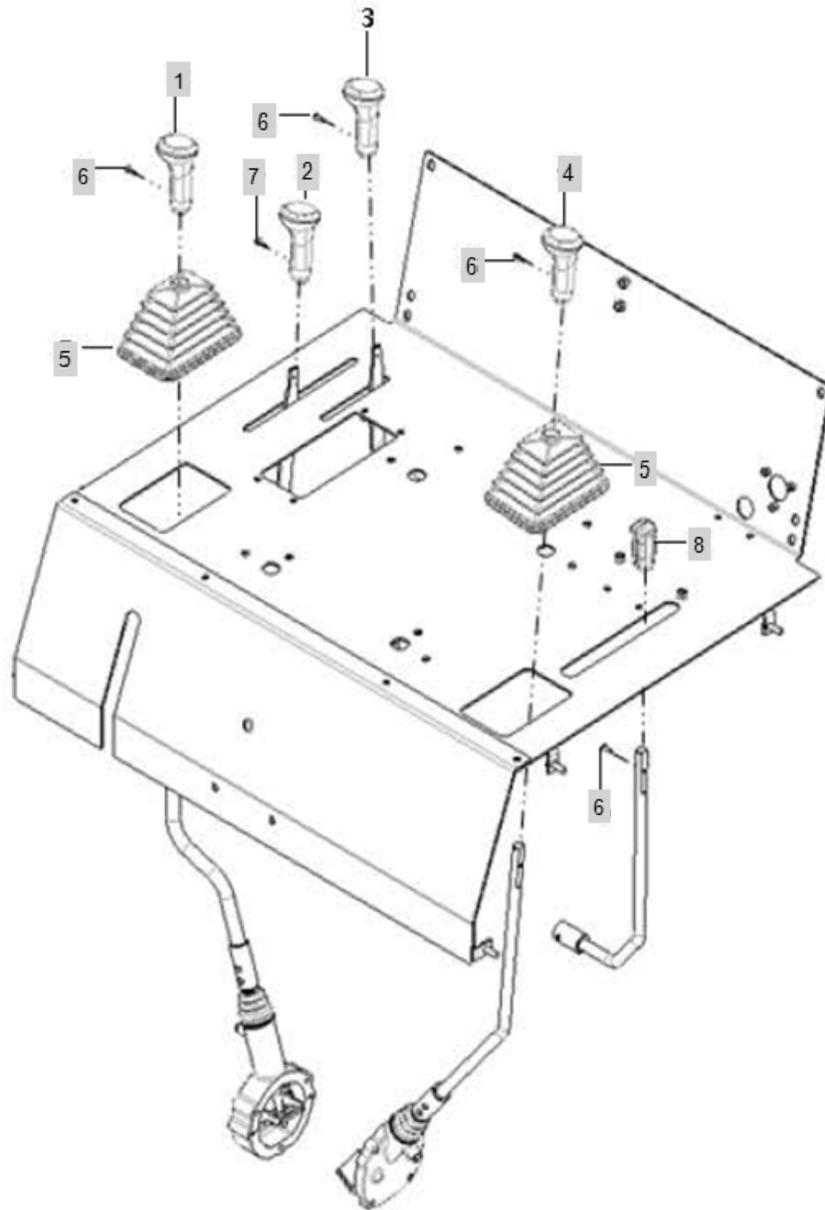




FIG C039

Branson 7845RP(US)

REAR SCV LEVER

Year/Month

2020/02

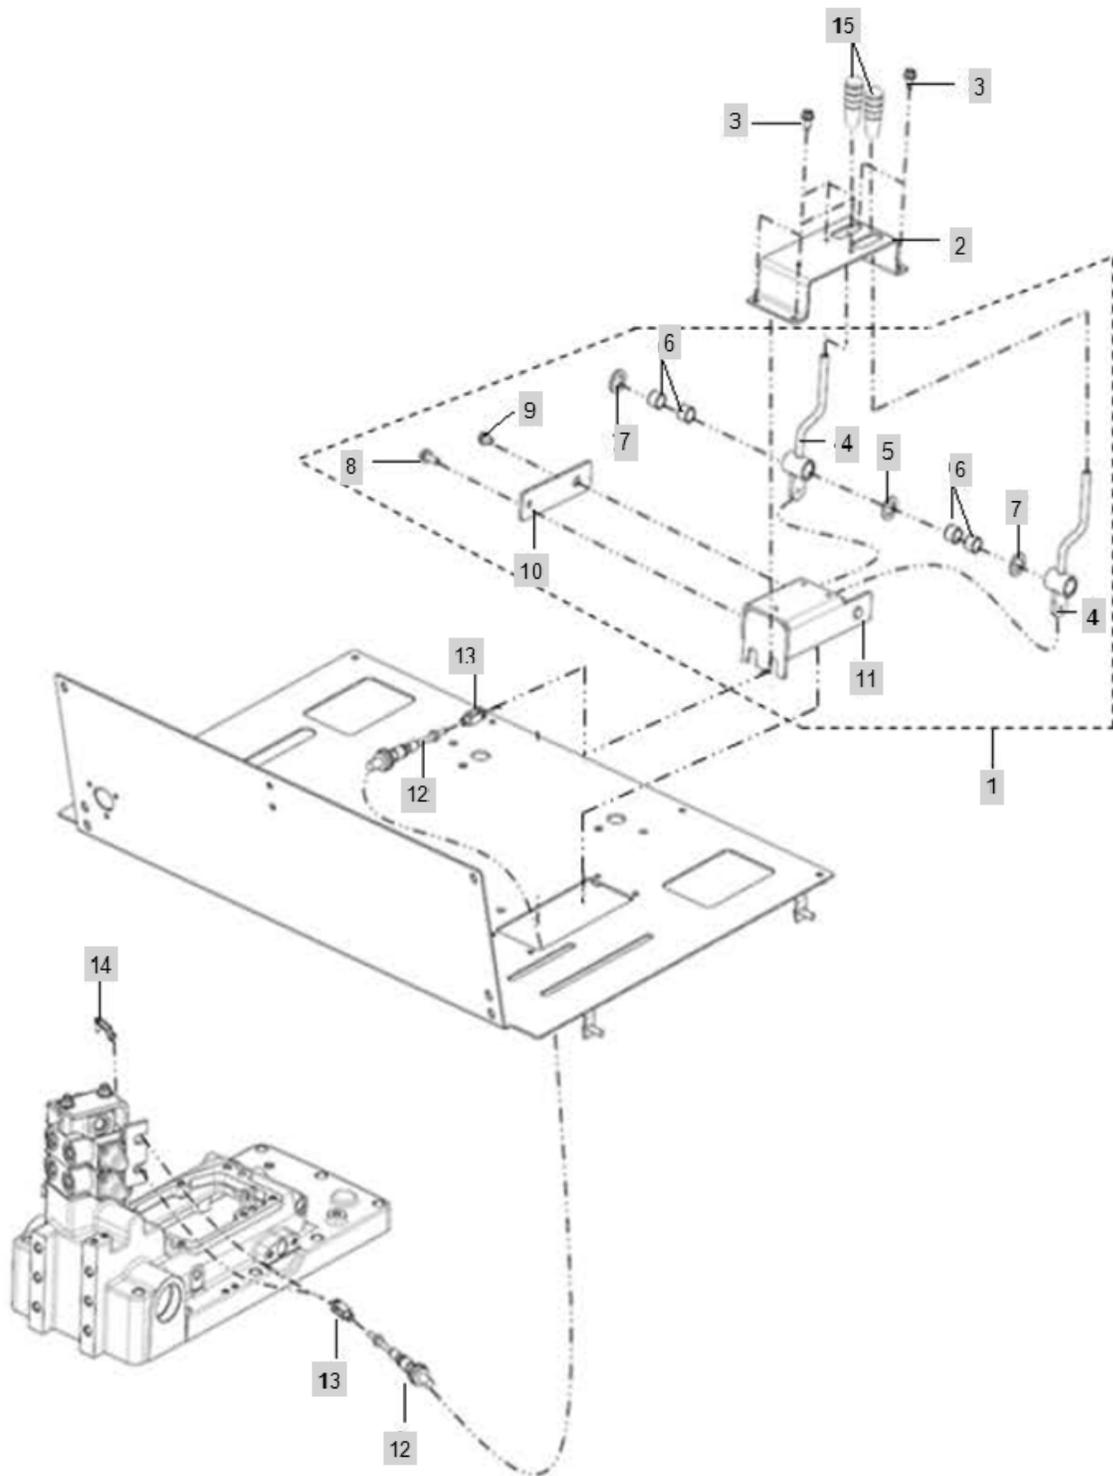




FIG C040

Branson 7845RP(US)

T/M OIL IN-LET

Year/Month

2020/02

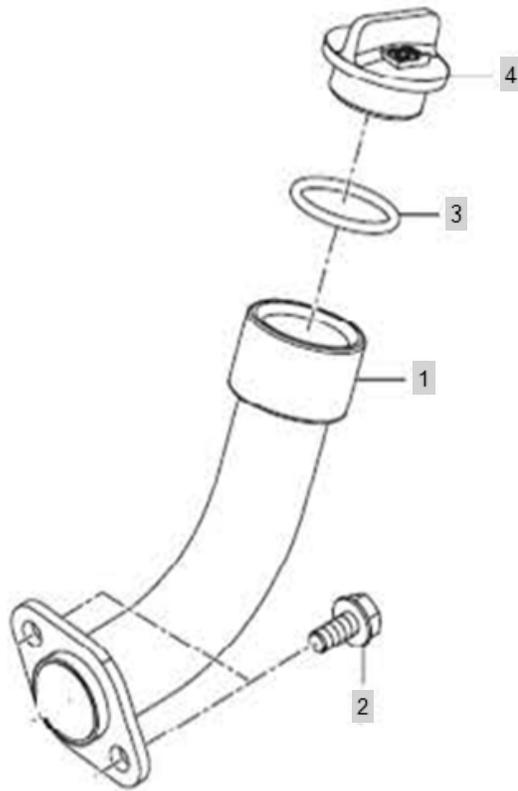




FIG C041

Branson 7845RP(US)

DRIVER'S SEAT

Year/Month

2020/02

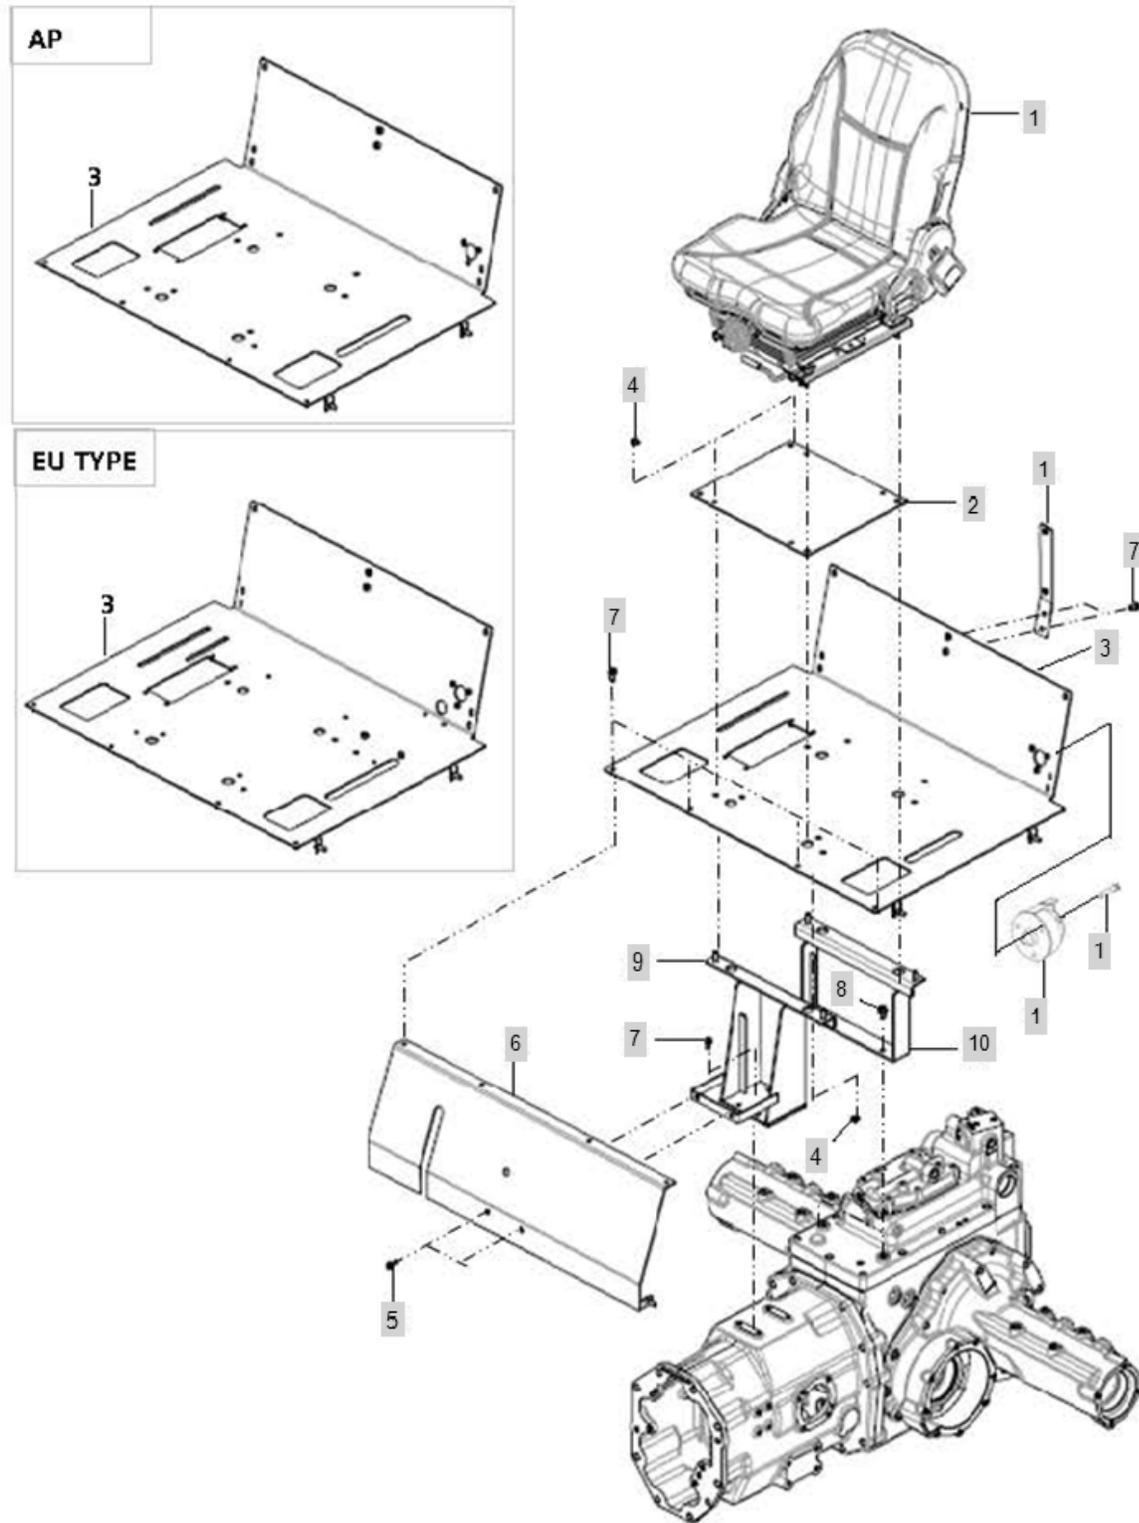




FIG C042

Branson 7845RP(US)

FRONT WHEEL & TIRE

Year/Month

2020/02

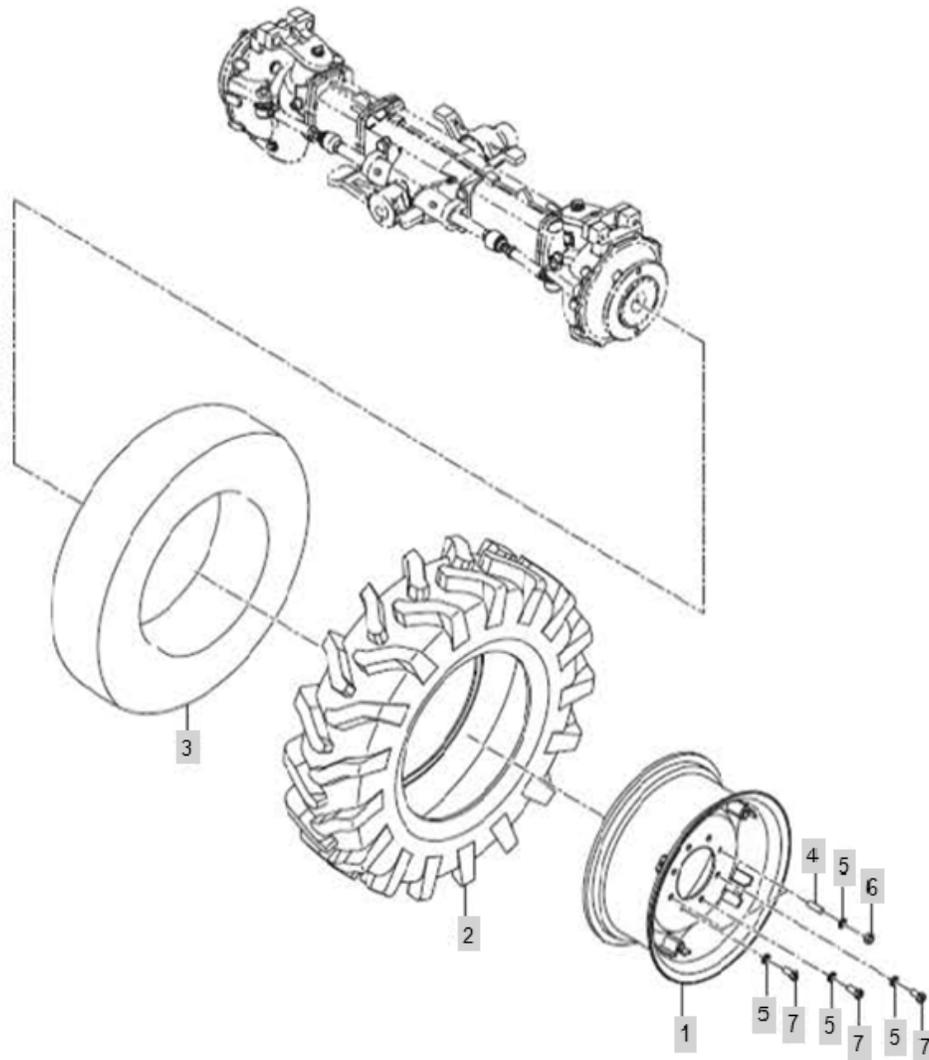




FIG C043

Branson 7845RP(US)

REAR WHEEL & TIRE

Year/Month

2020/02

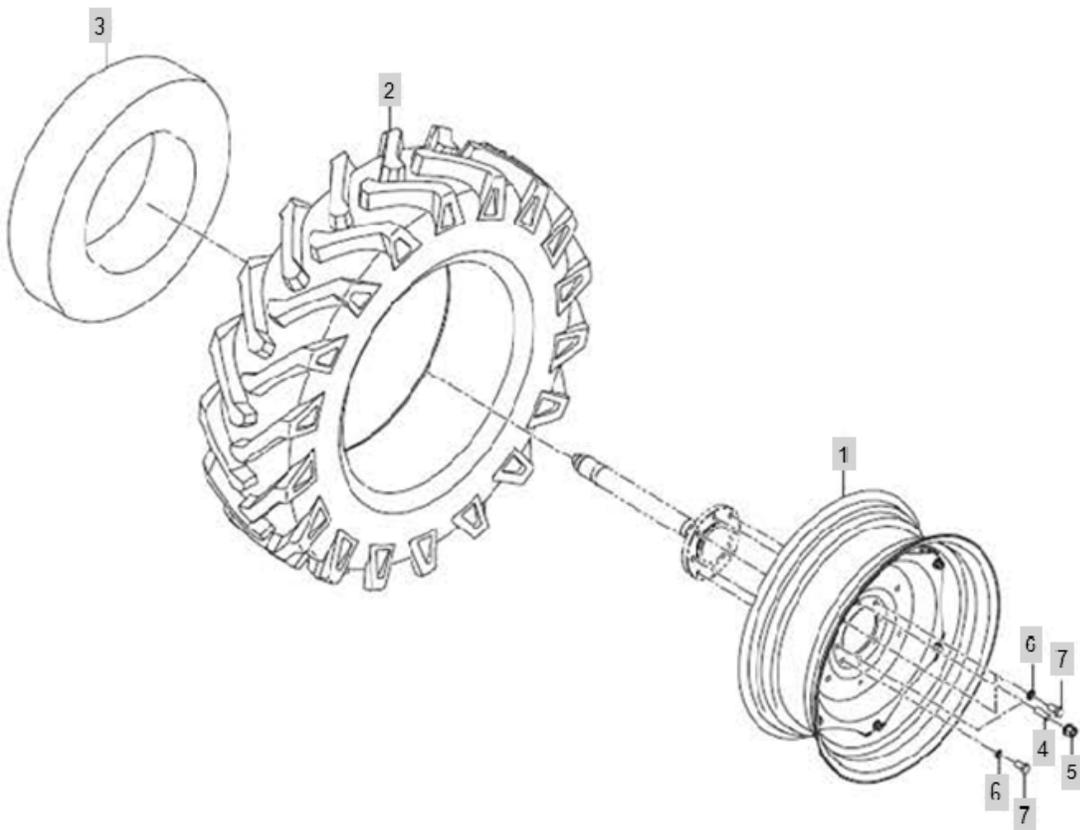




FIG C044

Branson 7845RP(US)

DASH BOARD

Year/Month

2020/02

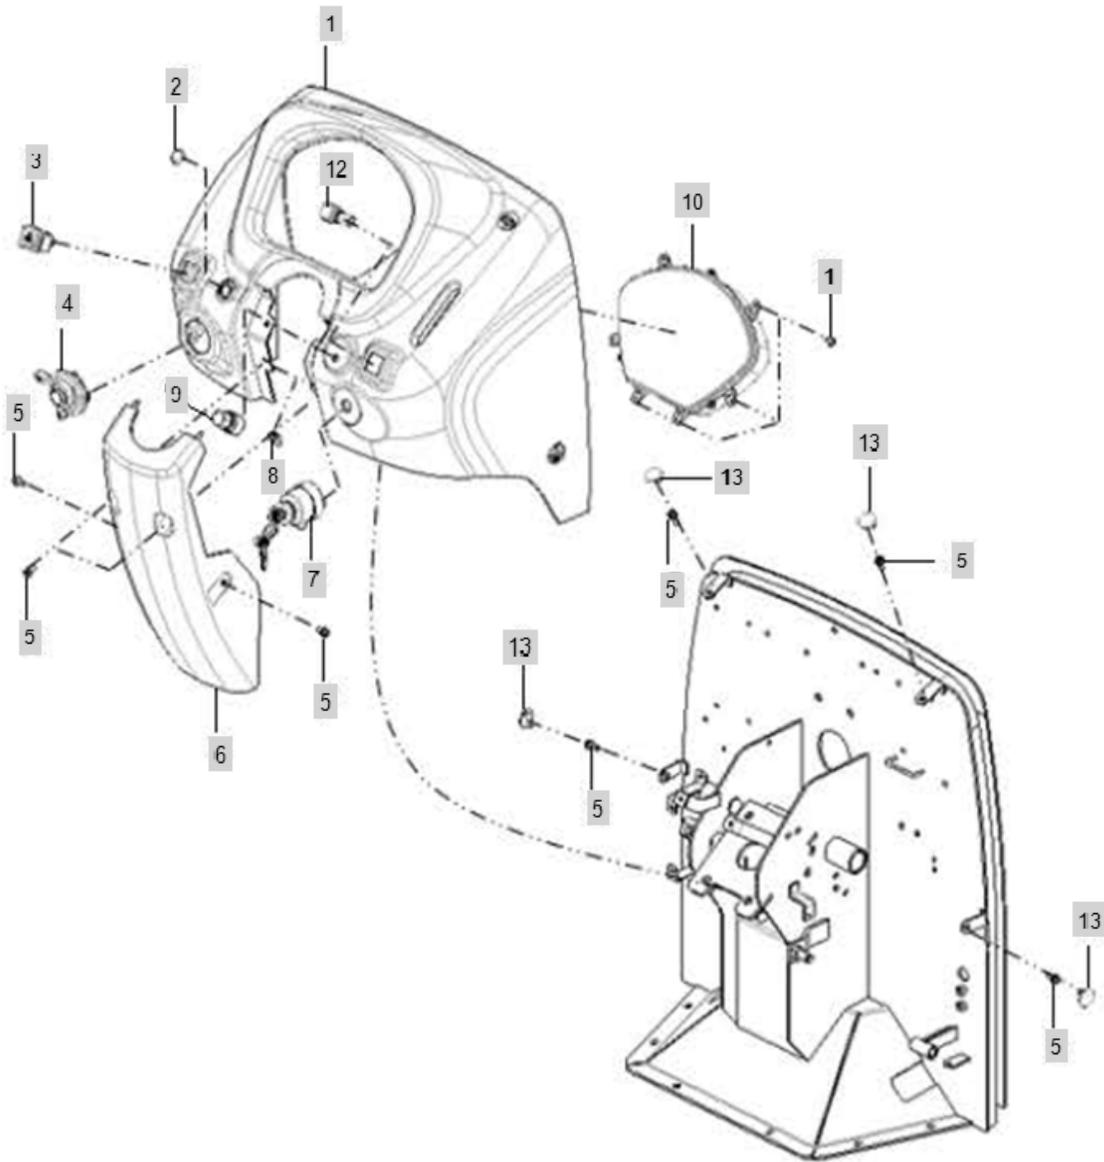




FIG C045

Branson 7845RP(US)

FENDER ASS`Y

Year/Month

2020/02

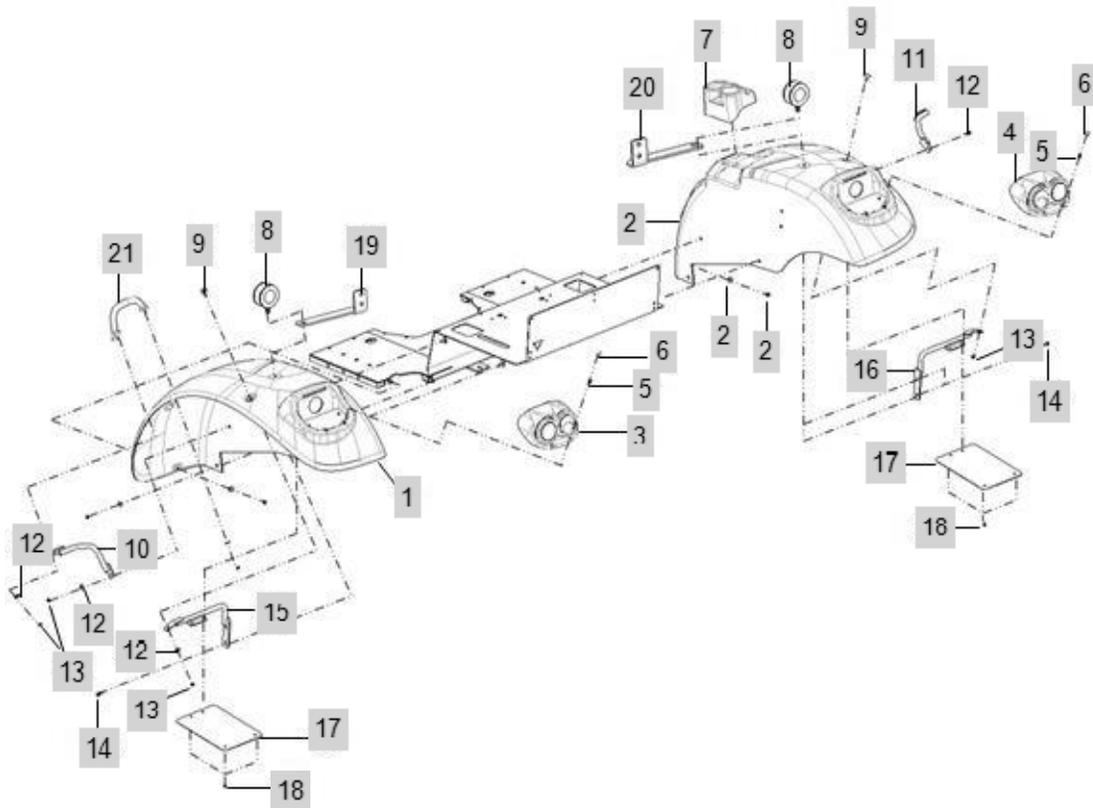




FIG C046

Branson 7845RP(US)

FOOT FRAME

Year/Month

2020/02

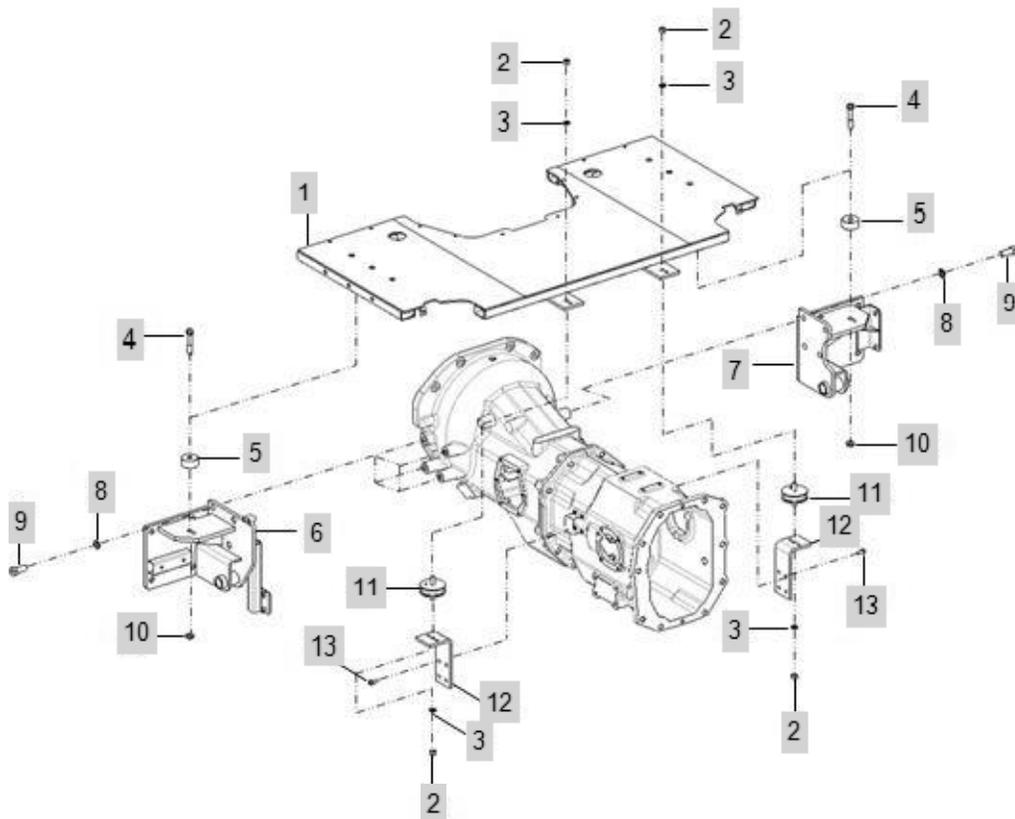




FIG C047

Branson 7845RP(US)

HEAT INSULATOR ASS'Y

Year/Month

2020/02

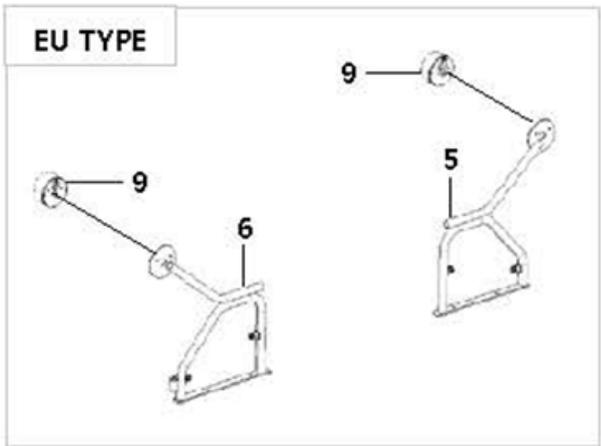
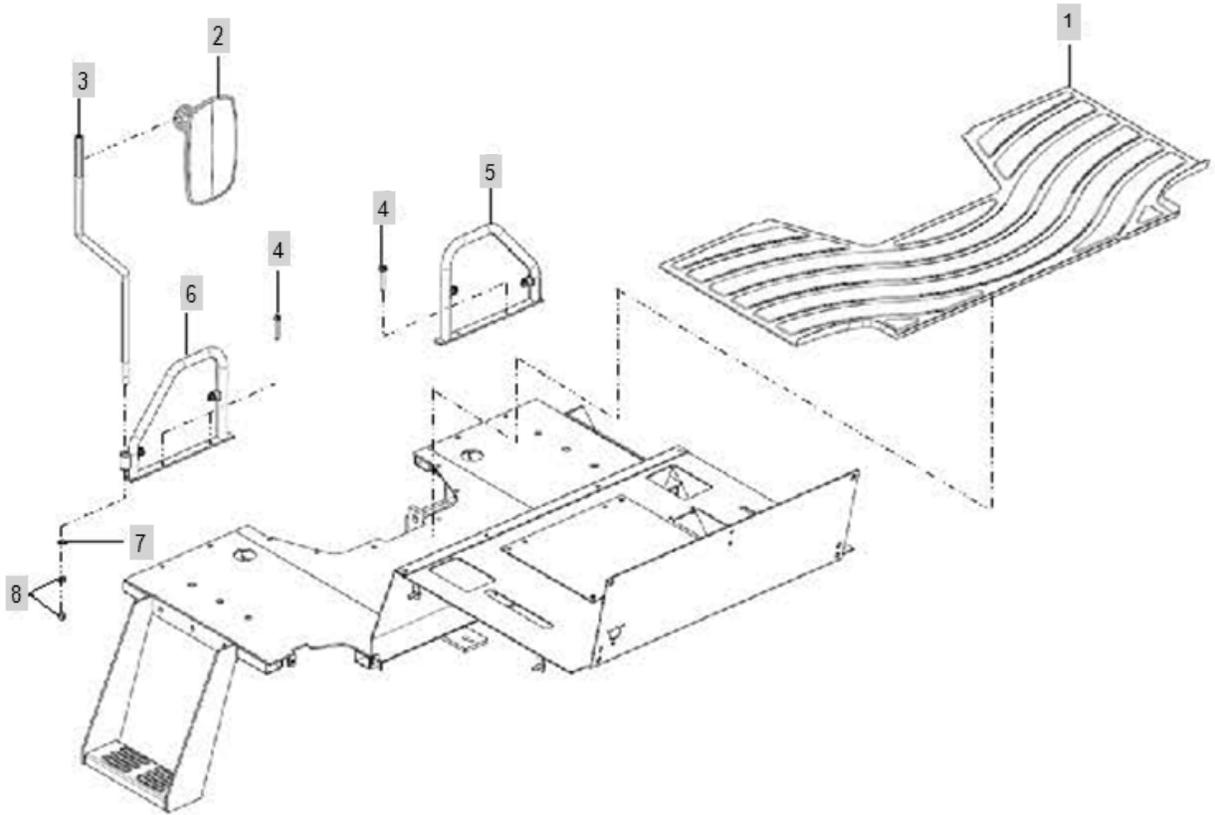




FIG C048

Branson 7845RP(US)

STOP-VALVE KNOB ASS'Y

Year/Month

2020/02

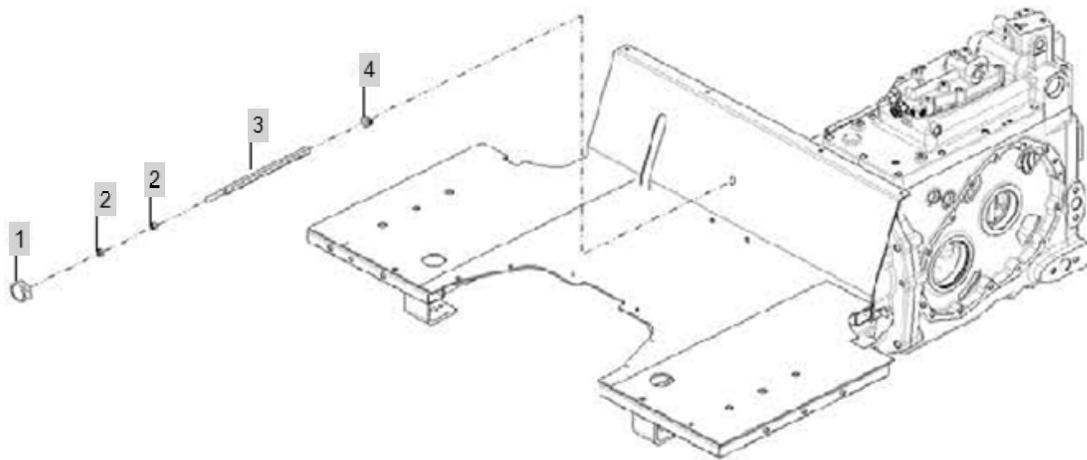








FIG C049.1-2

LABEL(2019.04~)

Year/Month

Branson 7845RP(US)

2020/02

**WARNING** Braking dual wheel vehicle systems can be affected when in the state of failure to wear brake at 10% which is after approximately 100,000 miles.  
Always check and operate the engine in a well-ventilated area. If in an enclosed area, vent the exhaust to the outside. Do not modify or tamper with the exhaust system. Do not use the engine exhaust as a heater.  
For more information go to [www.fisherscorp.com](http://www.fisherscorp.com)

**WARNING** Cover and Reproduction from [www.FISHERS.com](http://www.FISHERS.com)

GEAR	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th
1	1.30	1.70	2.20	2.80	3.50	4.30	5.20	6.20	7.30	8.50
2	1.50	2.00	2.60	3.30	4.10	5.00	6.00	7.10	8.30	9.60
3	1.70	2.30	3.00	3.80	4.70	5.70	6.80	8.00	9.30	10.70
4	1.90	2.60	3.40	4.30	5.30	6.40	7.60	8.90	10.30	11.80
5	2.10	2.90	3.80	4.80	5.90	7.10	8.40	9.80	11.30	12.90
6	2.30	3.20	4.20	5.30	6.50	7.80	9.20	10.70	12.30	14.00
7	2.50	3.50	4.60	5.80	7.10	8.50	10.00	11.60	13.30	15.10
8	2.70	3.80	5.00	6.30	7.70	9.20	10.80	12.50	14.30	16.20
9	2.90	4.10	5.40	6.80	8.30	9.90	11.60	13.40	15.30	17.30
10	3.10	4.40	5.80	7.30	8.90	10.60	12.40	14.30	16.30	18.40

**CAUTION**  
TO AVOID PERSONAL INJURY(OPERATING ON SLOPES)  
1. If descending a slope, never disengage the clutch or shift levers to neutral.  
Doing so could cause the tractor to speed up out of control.  
2. Slow down for slopes, especially when transporting heavy, rear mounted equipment.  
3. Before descending a slope, shift to a gear low enough to control speed without using brakes.

**WARNING** TO AVOID PERSONAL INJURY OR DEATH FROM ROLL-OVER:  
Always maintain three points of contact with the tractor. Do not use the tractor as a seat or substitute operator or third person's safety. Do not use the tractor to transport or dismount a third person. ALWAYS USE THE TRACTOR'S SEAT BELT. Always use both the seat belt and the ROPS. They must be used together for further safety, unless your tractor's label or your local laws.

**WARNING** This structure's protective capability may be impaired by structural damage, over turns, or alteration, or any of these conditions occur, the structure must be replaced.

**WARNING** Do not use the tractor on uneven ground. The tractor may tip. Always use proper tie-down technique. Always use proper tie-down technique. Always use proper tie-down technique.

**DANGER** Do not start the tractor until you are in gear. Starting in gear will damage the transmission.

**WARNING** **CAUTION**

**CAUTION** TO USE PTO SAFELY:  
1. Do not touch the PTO shaft while the tractor is running.  
2. Do not touch the PTO shaft while the tractor is running.  
3. Do not touch the PTO shaft while the tractor is running.  
4. Do not touch the PTO shaft while the tractor is running.  
5. Do not touch the PTO shaft while the tractor is running.  
6. Do not touch the PTO shaft while the tractor is running.  
7. Do not touch the PTO shaft while the tractor is running.  
8. Do not touch the PTO shaft while the tractor is running.  
9. Do not touch the PTO shaft while the tractor is running.  
10. Do not touch the PTO shaft while the tractor is running.

**CAUTION** Do not touch the PTO shaft while the tractor is running.

**CAUTION** Do not touch the PTO shaft while the tractor is running.

**BRANSON 7845RP**

**BRANSON 7845RP**

**CAUTION**

**WARNING**

540  
540  
750  
750 (3400)  
1000  
6

**CAUTION**

7

8

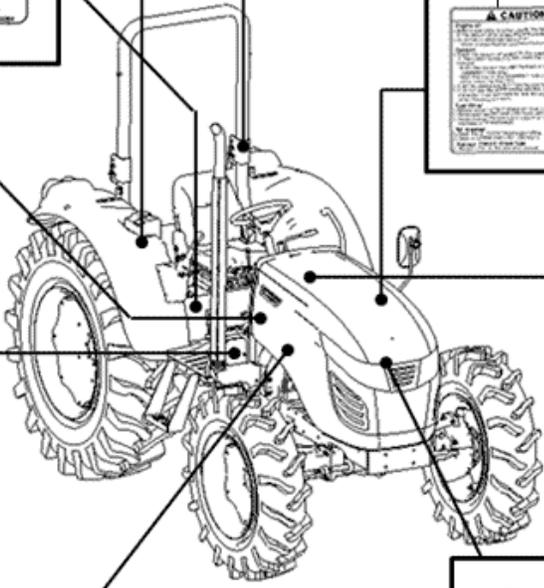




FIG C049.2

Branson 7845RP(US)

LABEL

Year/Month

2020/02

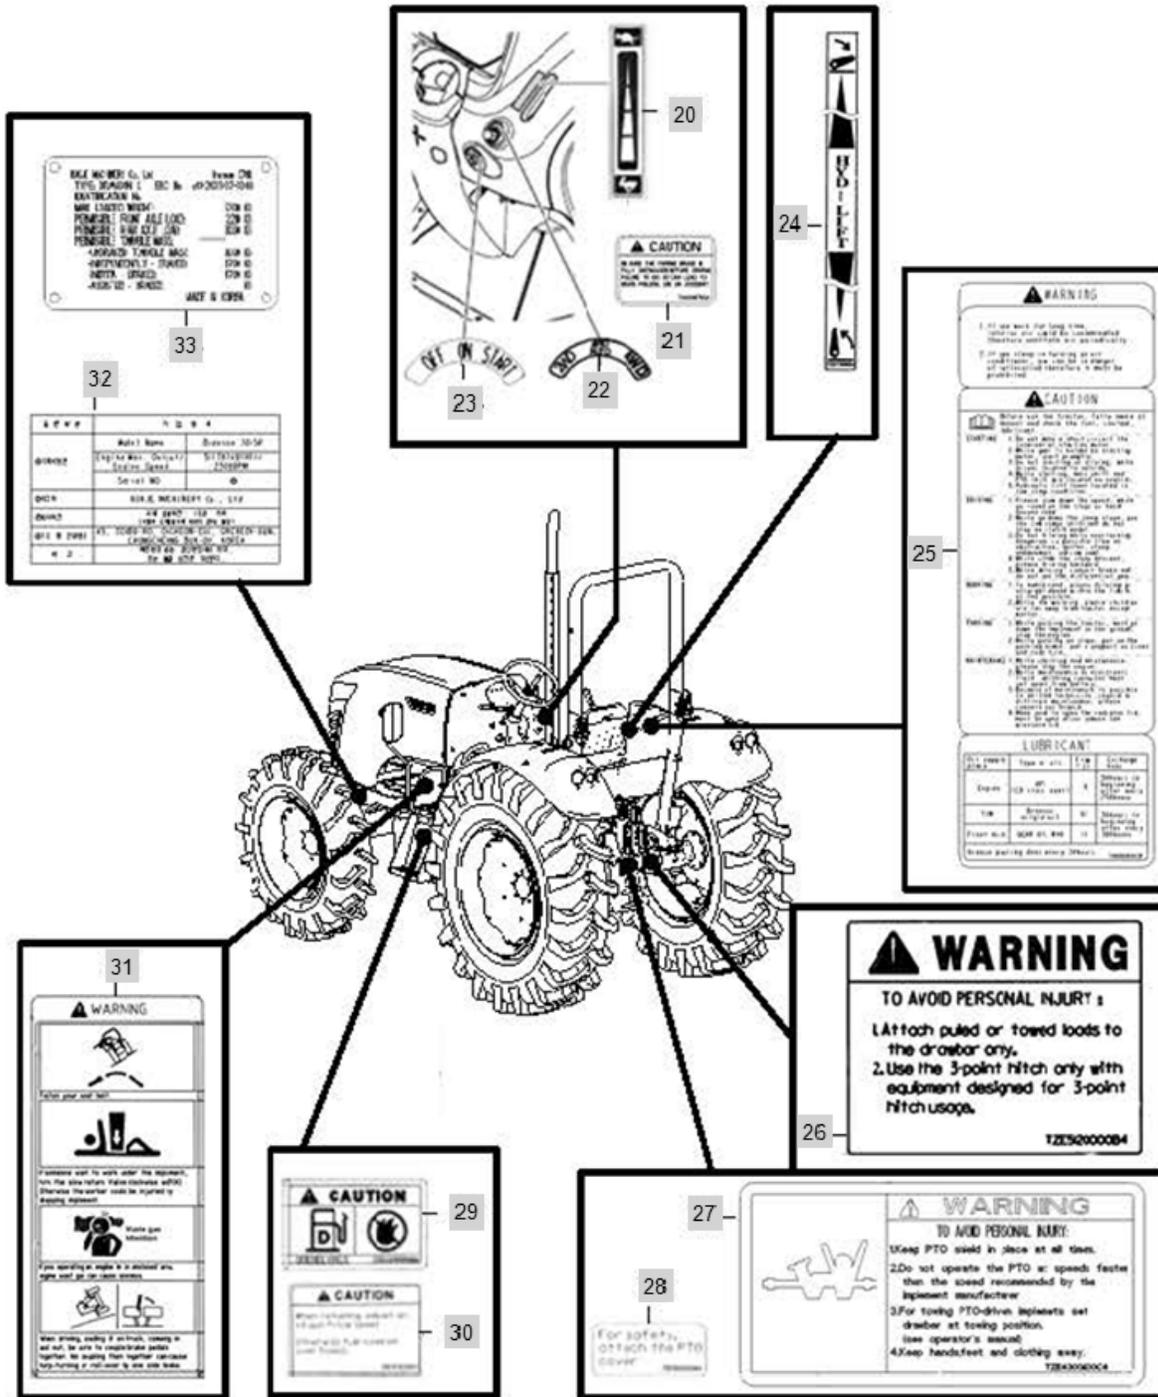




FIG C050

HARNESS

Year/Month

Branson 7845RP(US)

2020/02

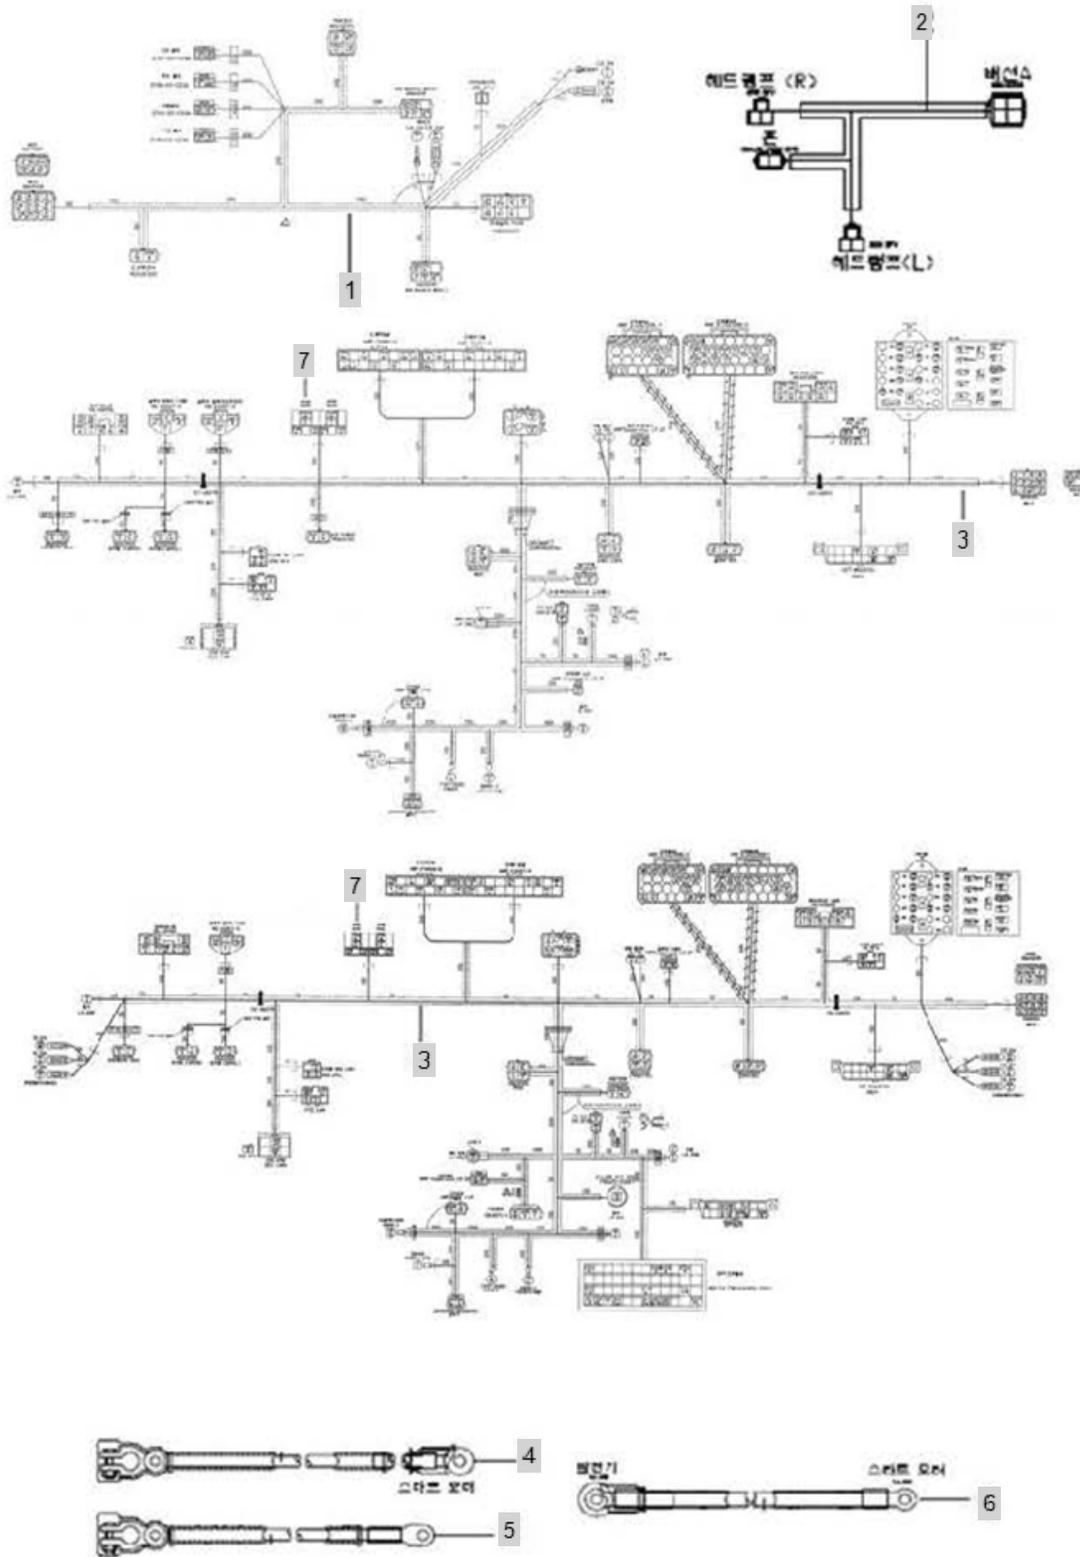




FIG C051

Branson 7845RP(US)

SPARE TOOLS

Year/Month

2020/02

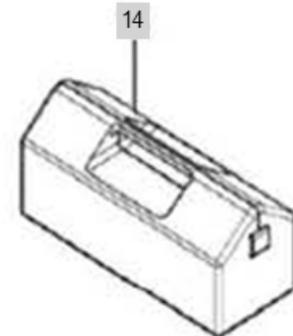
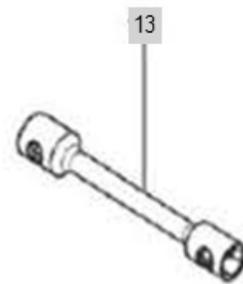
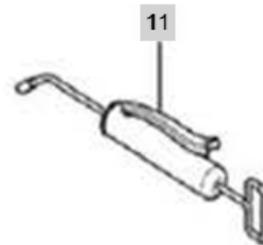
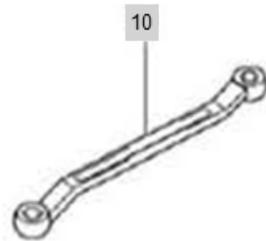
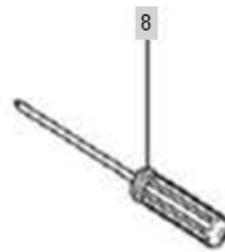
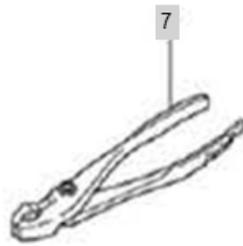
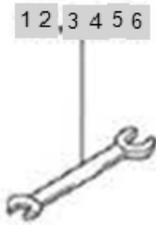




FIG E001

Branson 7845RP(US)

CYLINDER BLOCK

Year/Month

2020/02

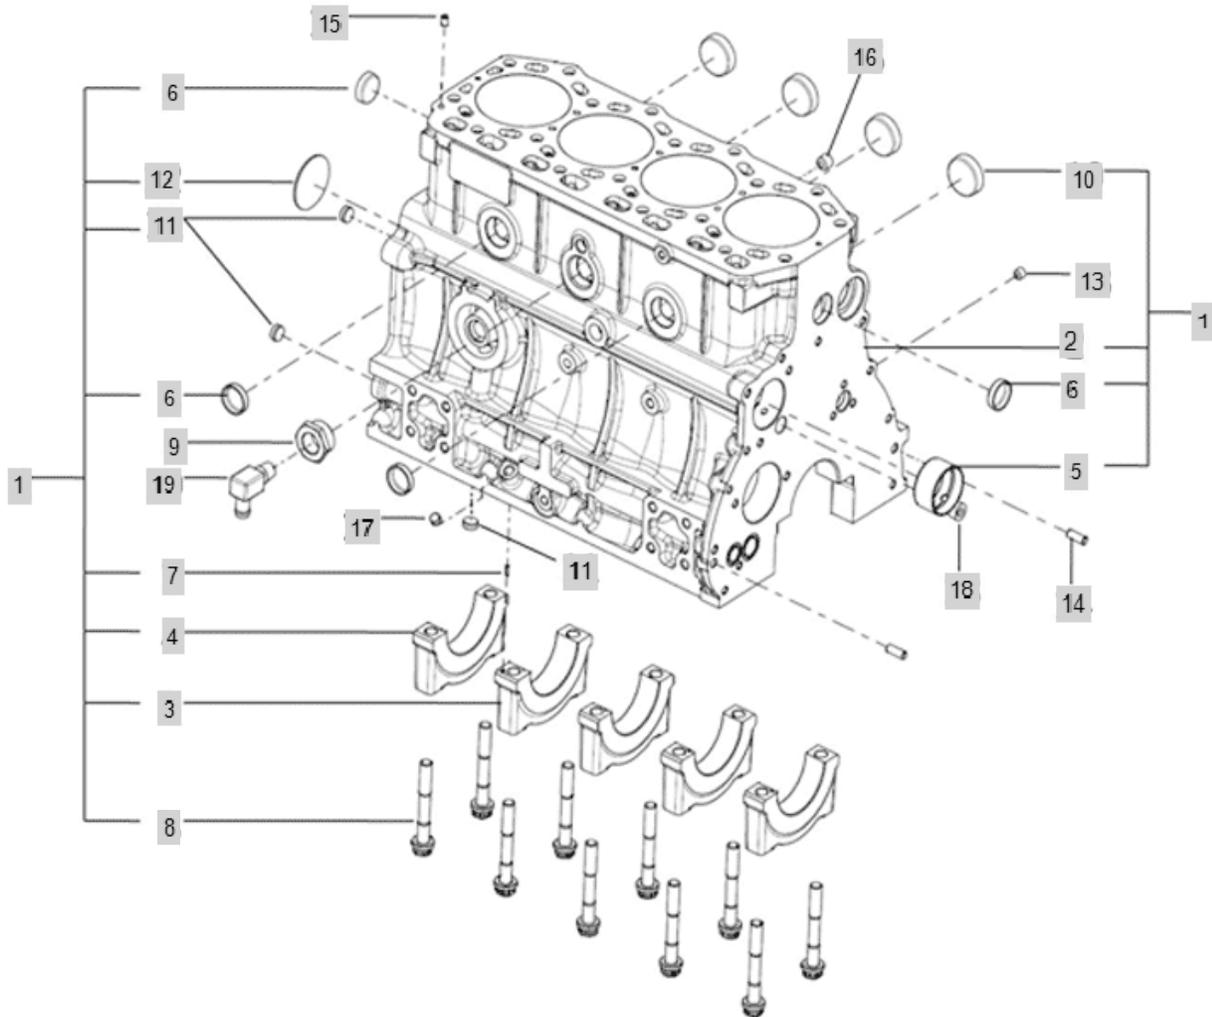




FIG E002

Branson 7845RP(US)

V-PULLY\_CRANK SHAFT

Year/Month

2020/02

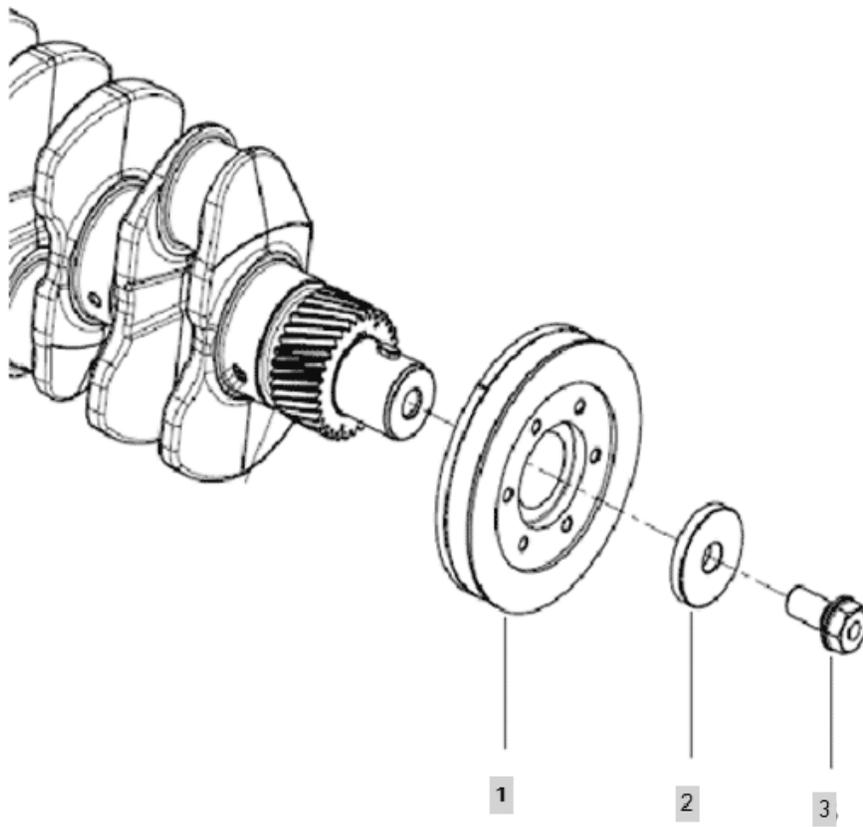




FIG E003

Branson 7845RP(US)

AIR HEATER

Year/Month

2020/02

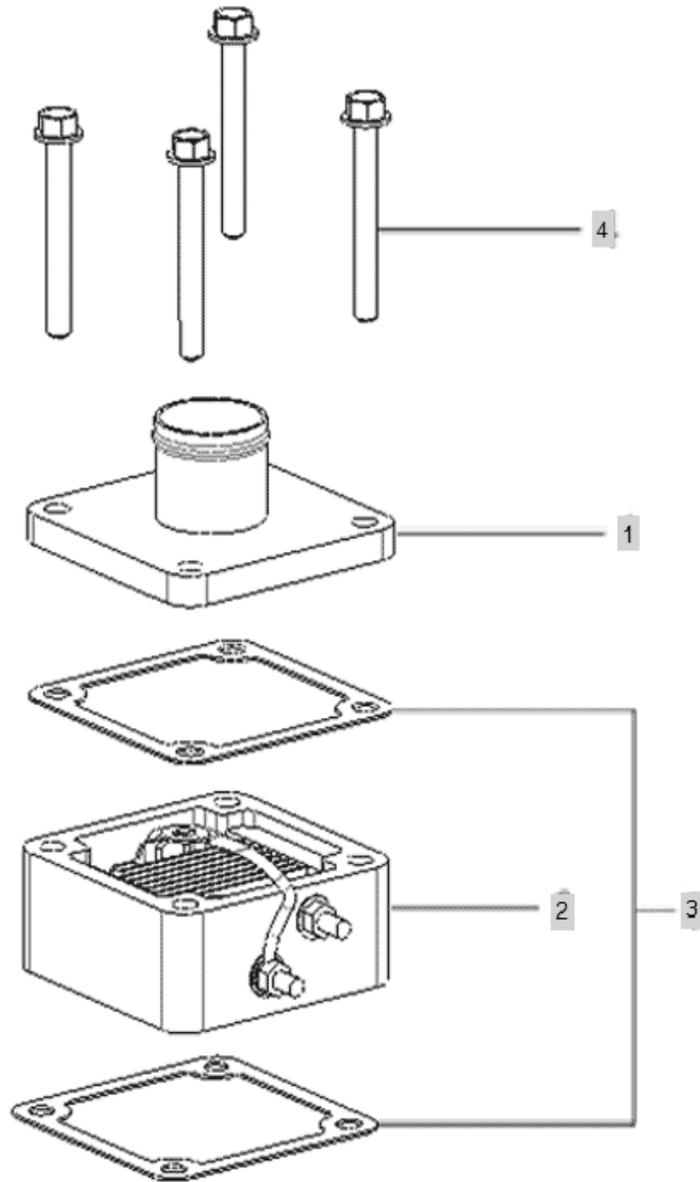




FIG E004

Branson 7845RP(US)

APPROVAL, AGENCY

Year/Month

2020/02

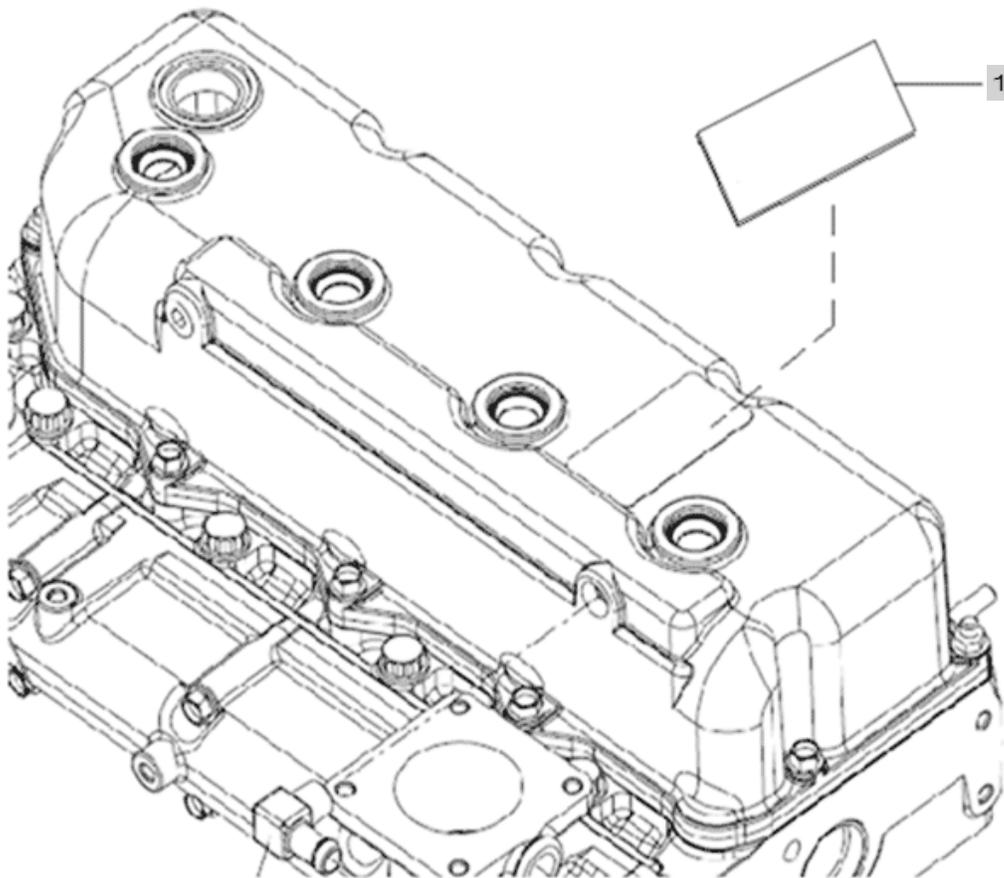




FIG E005

Branson 7845RP(US)

CRANK SHAFT

Year/Month

2020/02

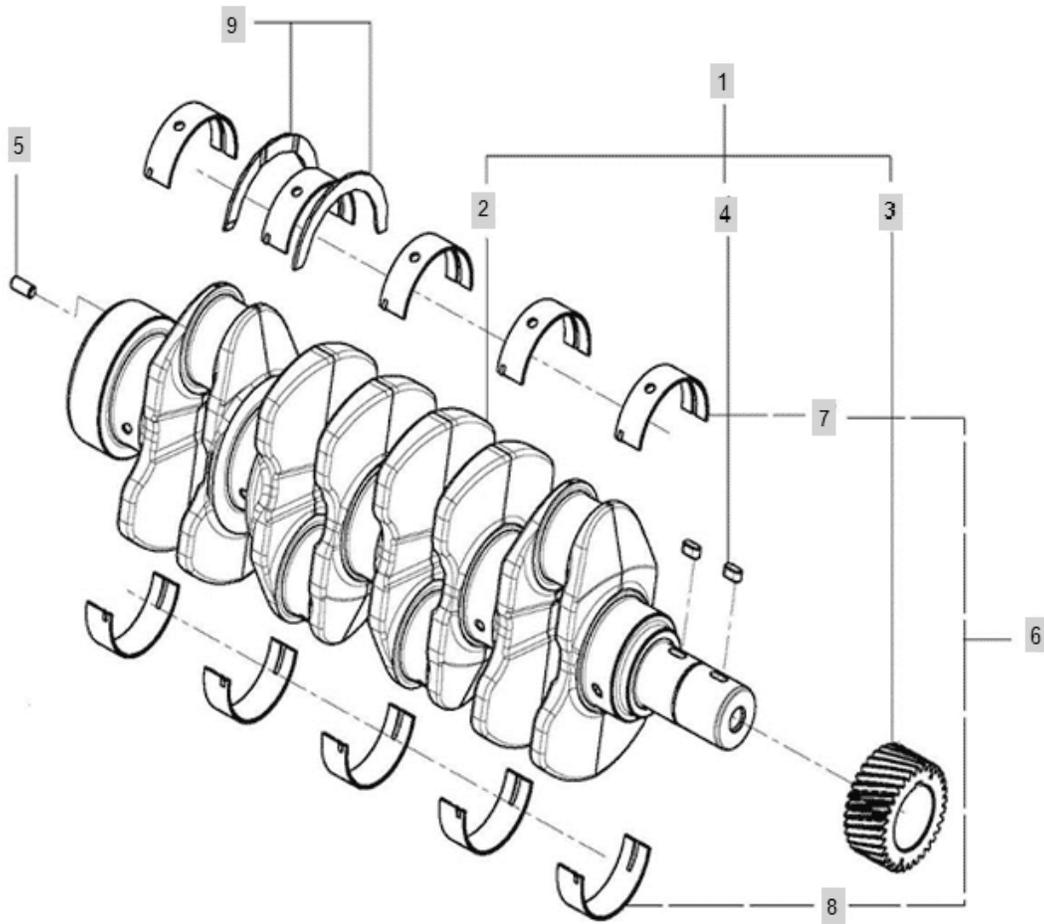




FIG E006

Branson 7845RP(US)

BREATHER, CRANKCASE

Year/Month

2020/02

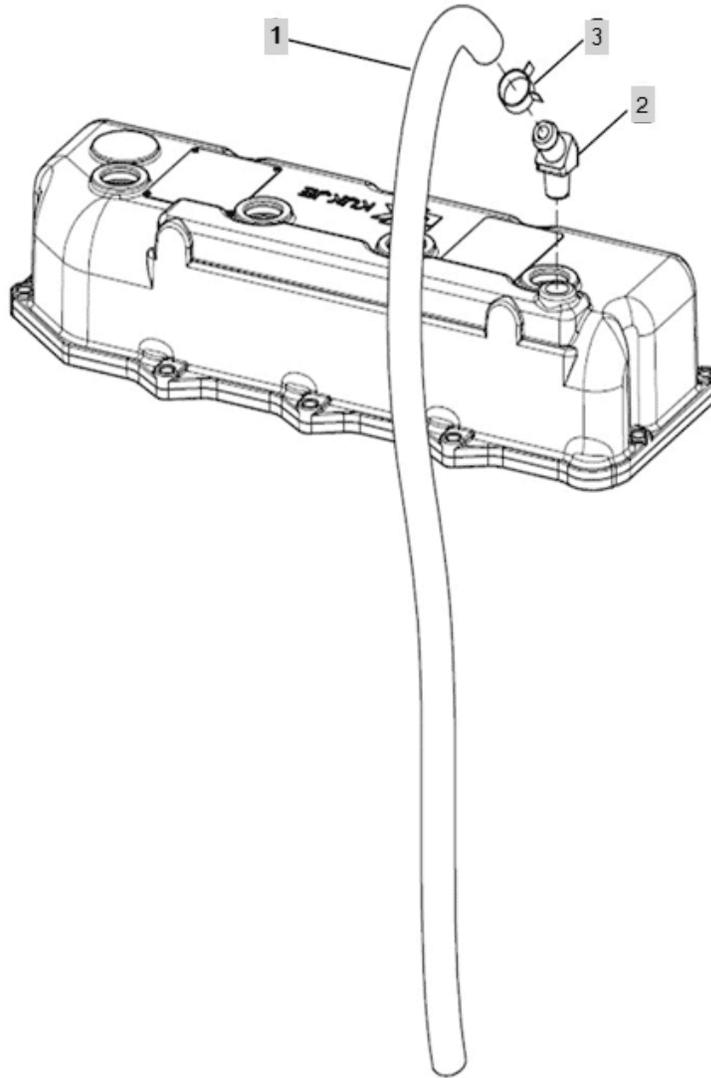




FIG E007

Branson 7845RP(US)

# CAMSHAFT

Year/Month

2020/02

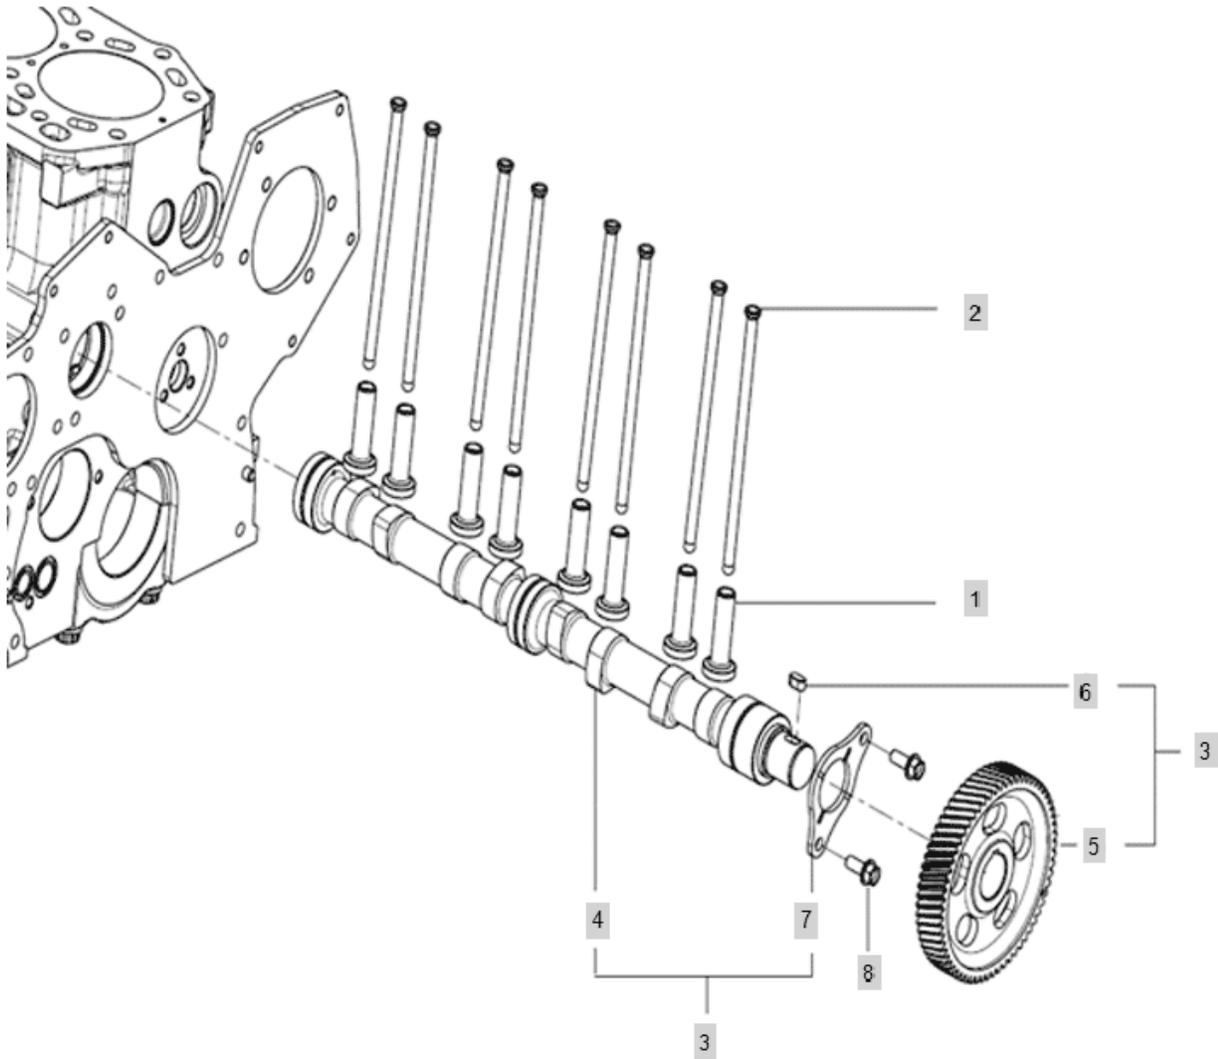




FIG E008

FRONT GEAR ACCESSORY DRIVE

Year/Month

Branson 7845RP(US)

2020/02

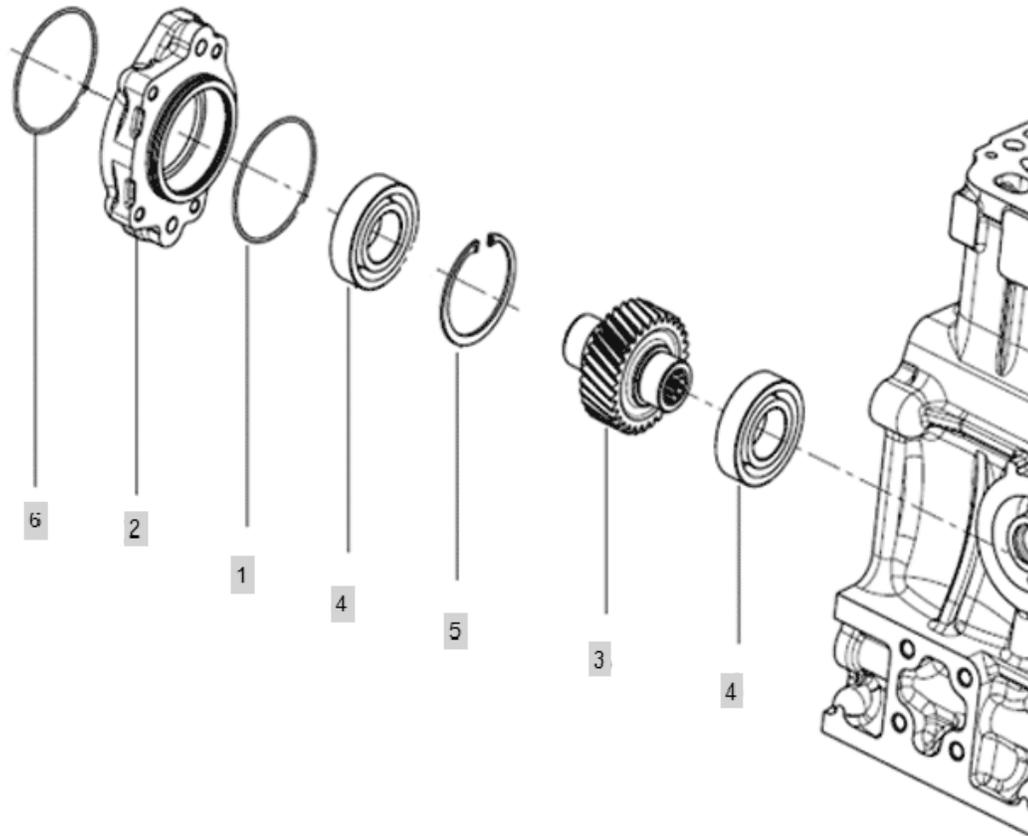




FIG E009

Branson 7845RP(US)

IDLE GEAR

Year/Month

2020/02

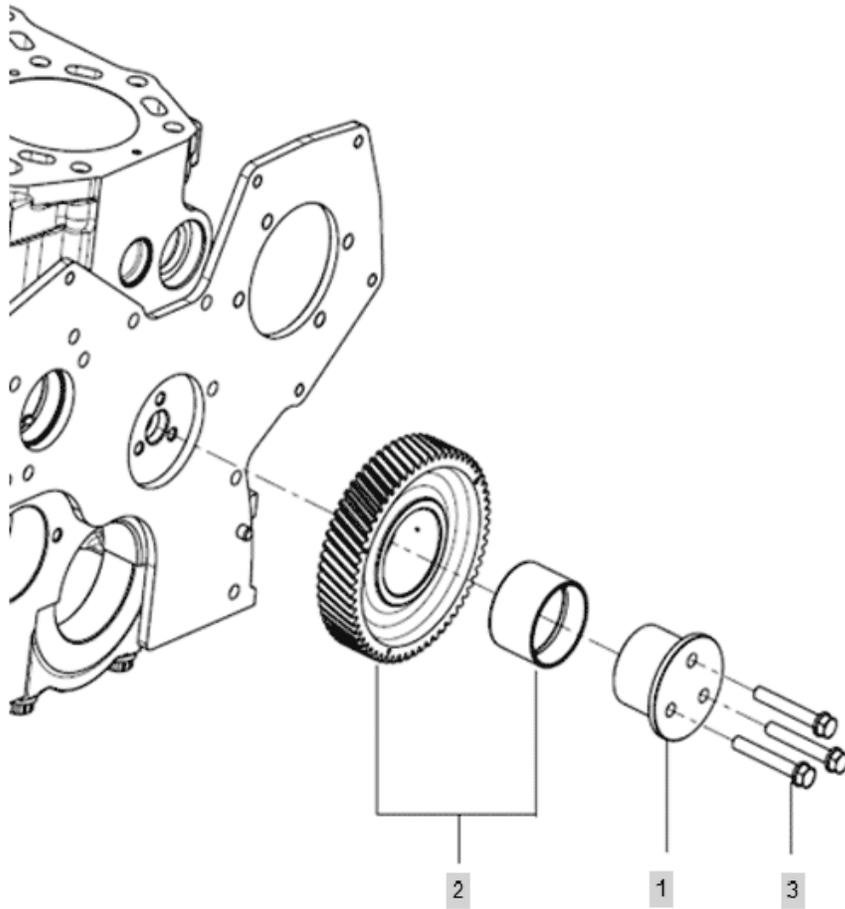




FIG E010

Branson 7845RP(US)

ALTERNATOR

Year/Month

2020/02

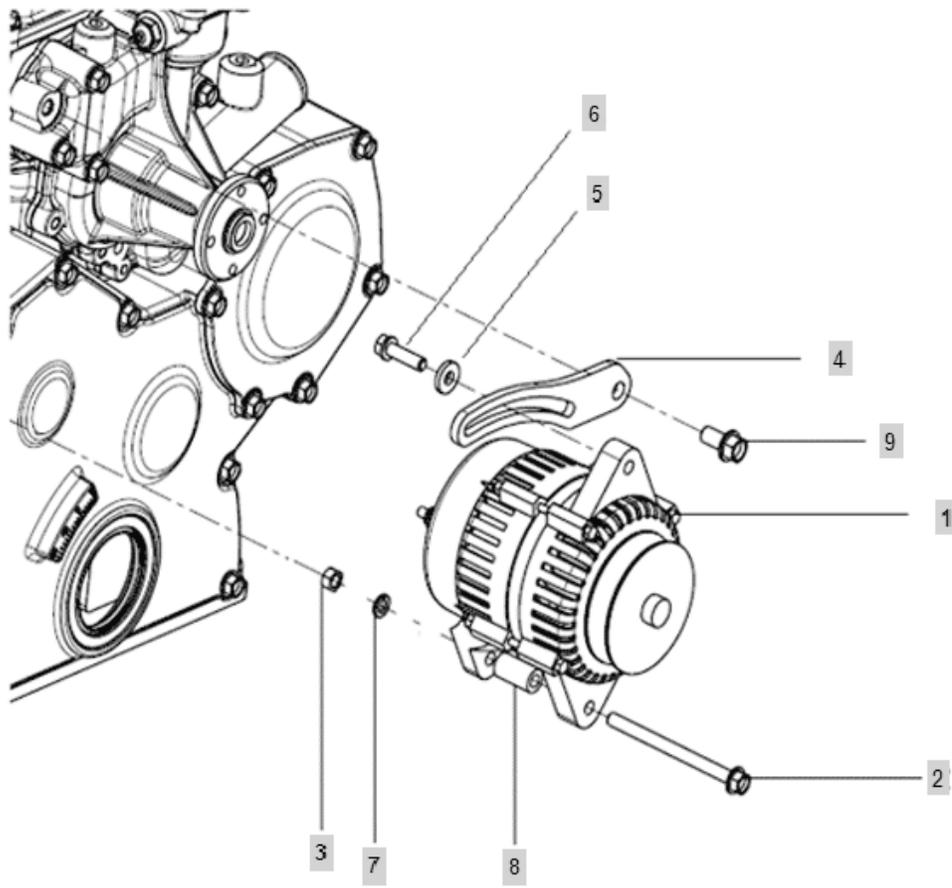




FIG E011

Branson 7845RP(US)

BALANCE ASS'Y

Year/Month

2020/02

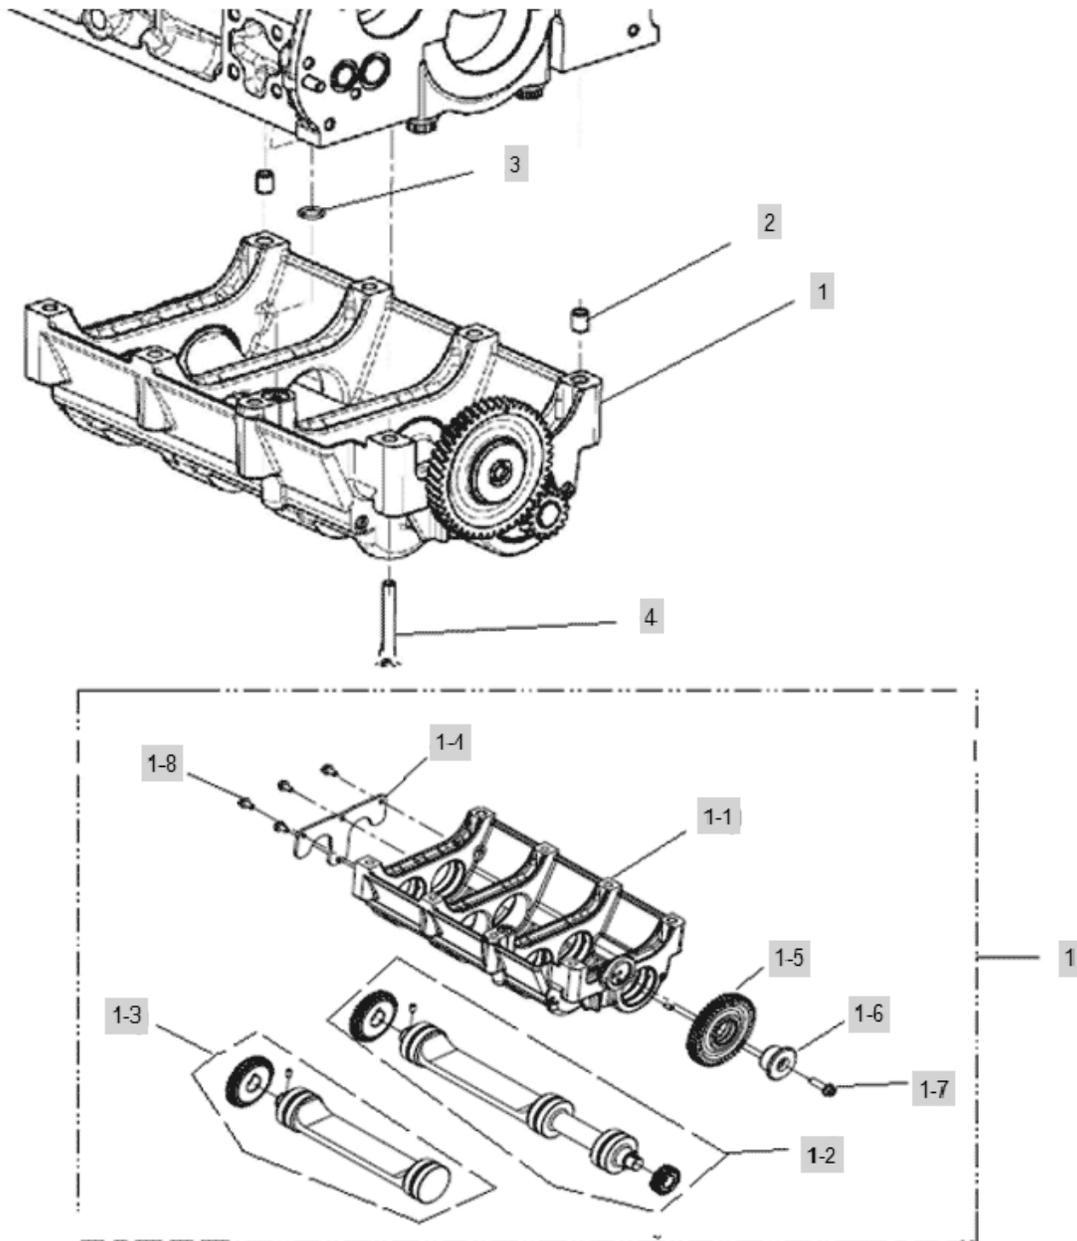




FIG E012

FAN DRIVE

Year/Month

Branson 7845RP(US)

2020/02

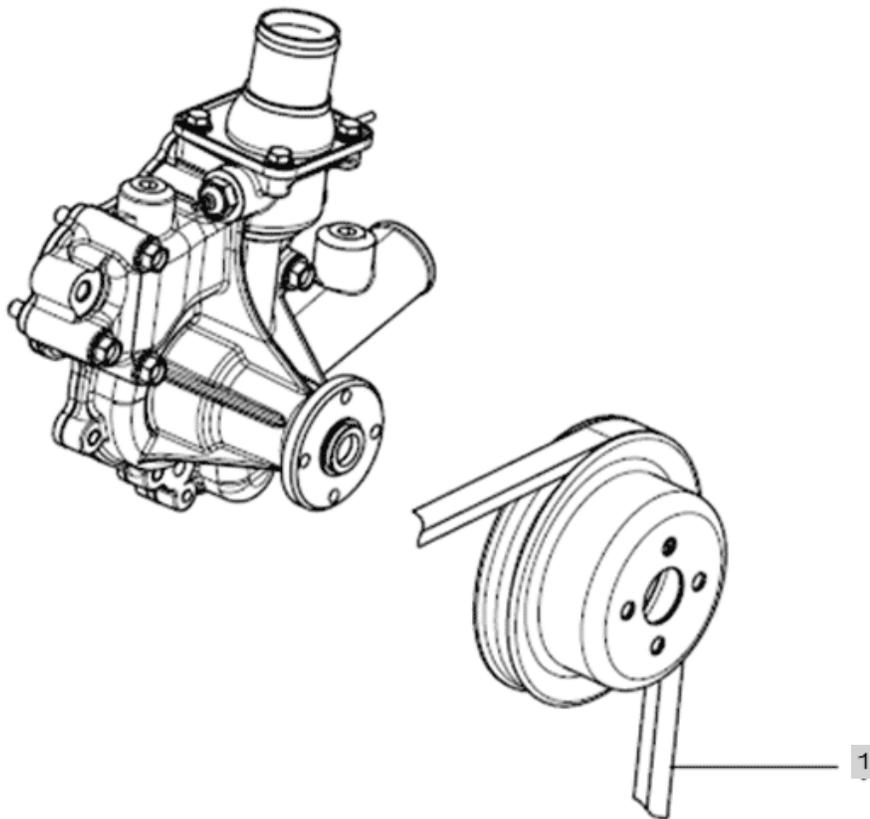




FIG E013

Branson 7845RP(US)

DRIVE PULLY

Year/Month

2020/02

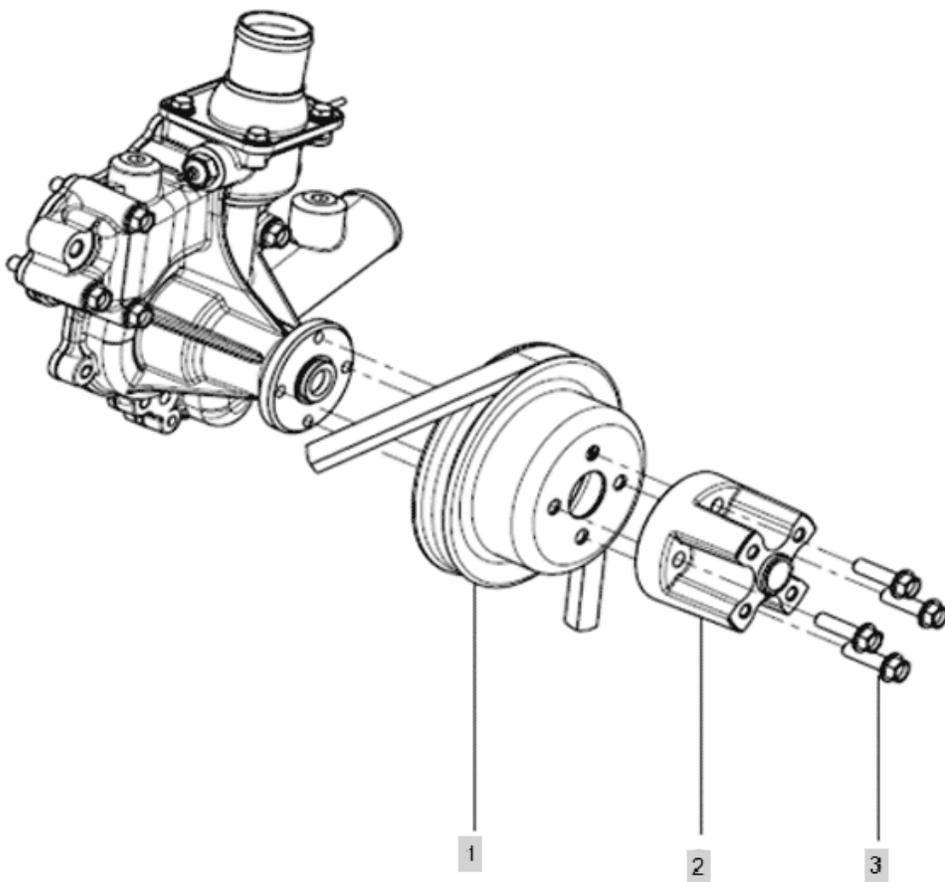




FIG E014

Branson 7845RP(US)

### FUEL FILTER

Year/Month

2020/02

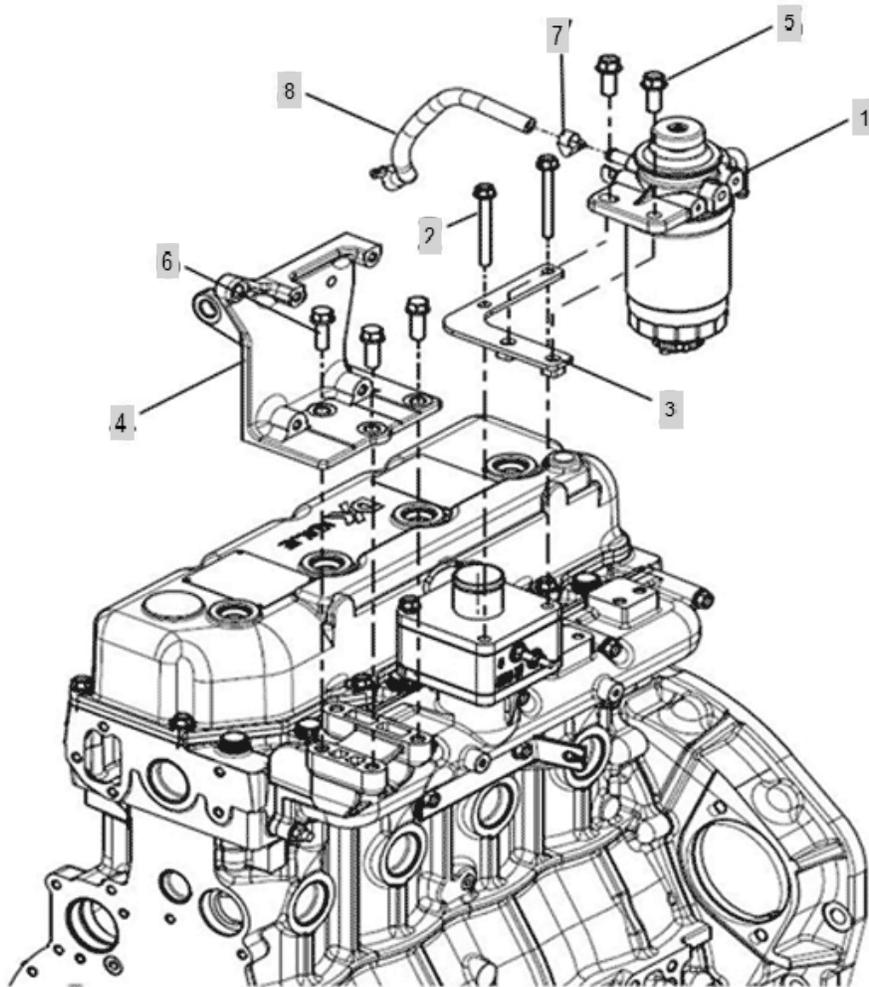




FIG E015

FLYWHEEL HOUSING

Year/Month

Branson 7845RP(US)

2020/02

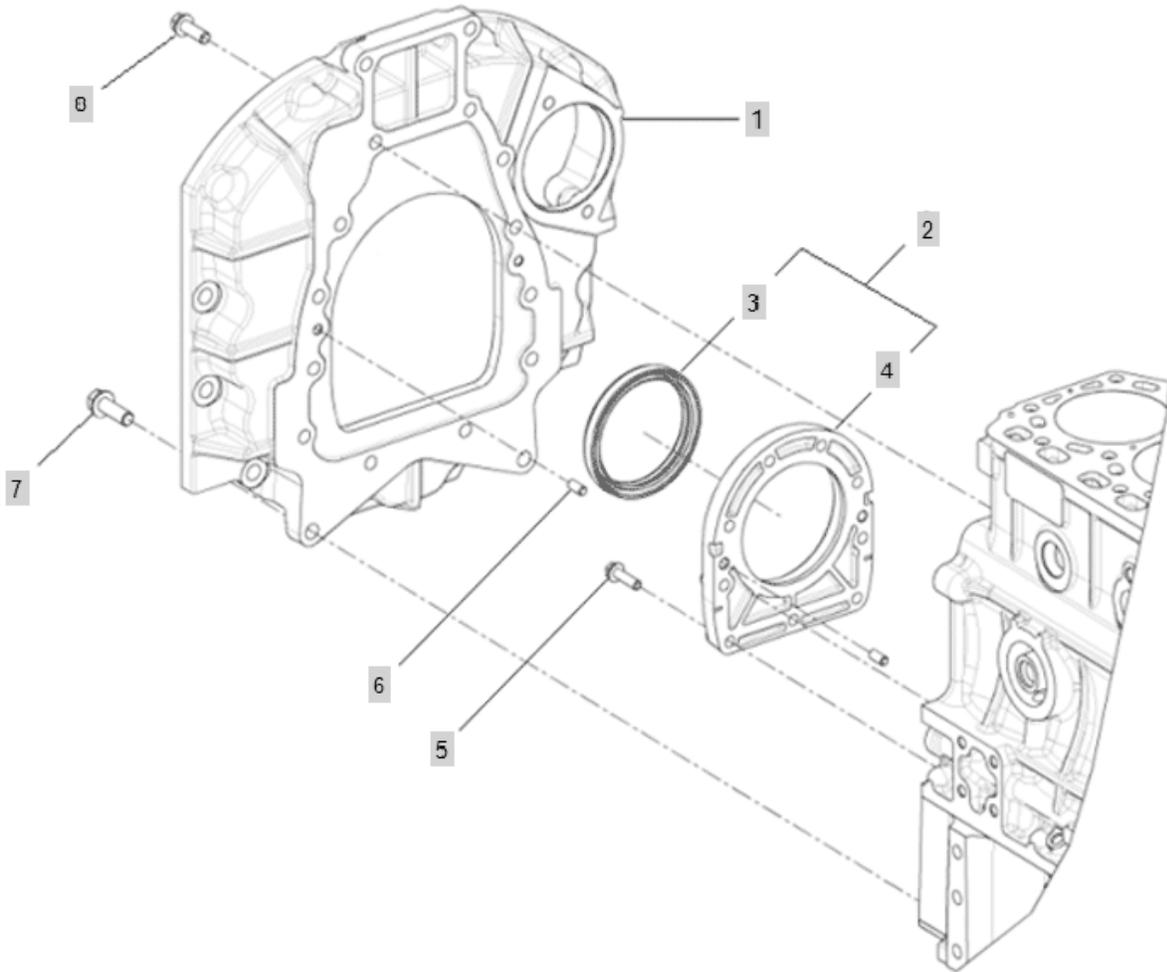





FIG E016

Branson 7845RP(US)

16. FUEL INJECTION

Year/Month

2020/02

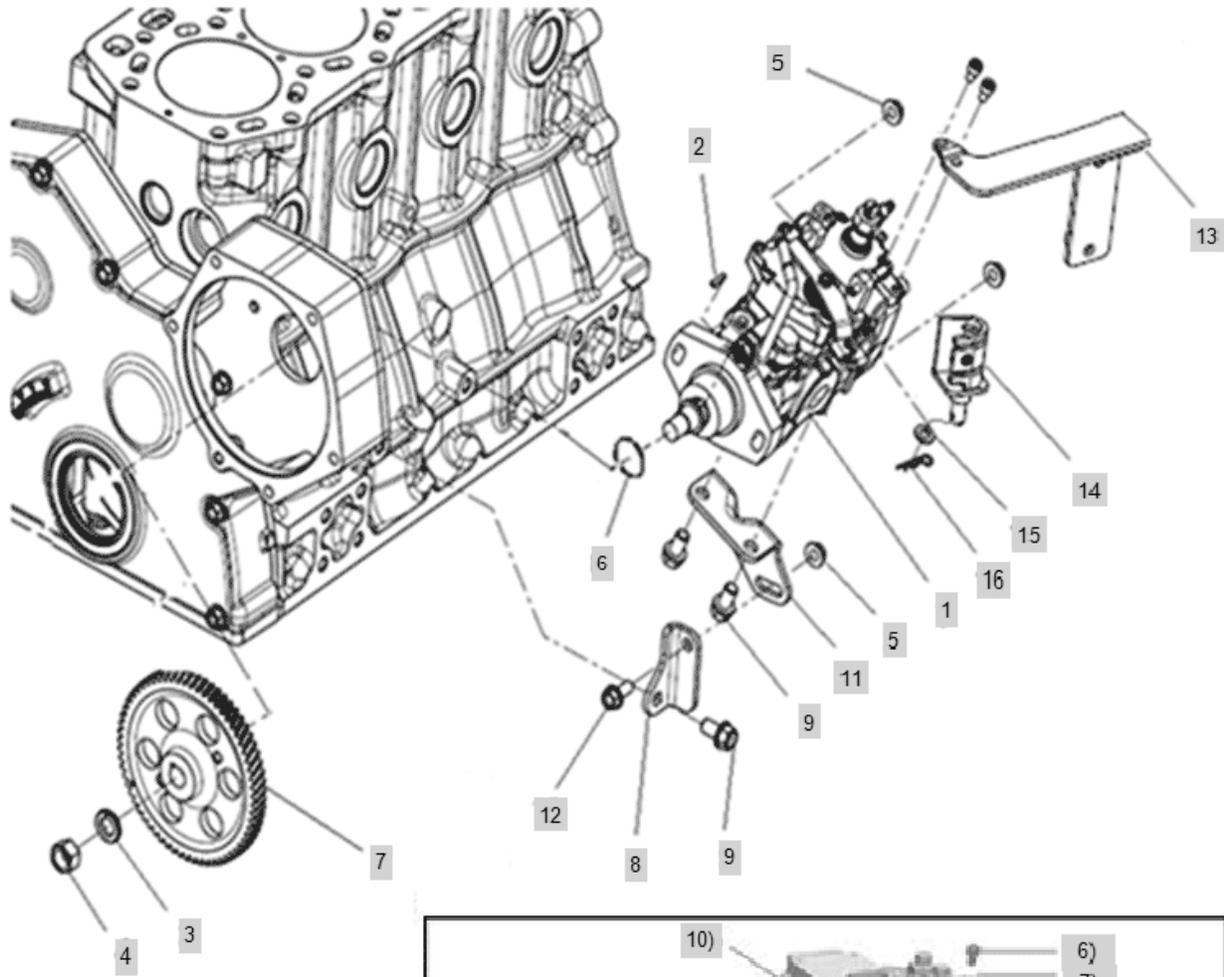

A

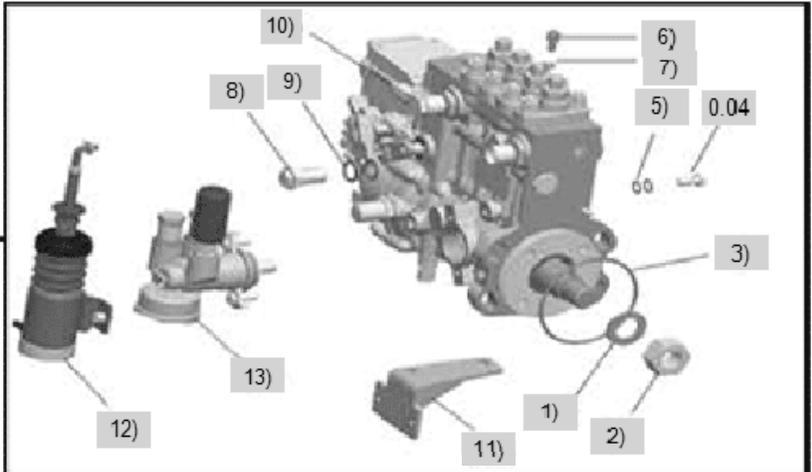




FIG E017

Branson 7845RP(US)

PLUMBING, FUEL

Year/Month

2020/02

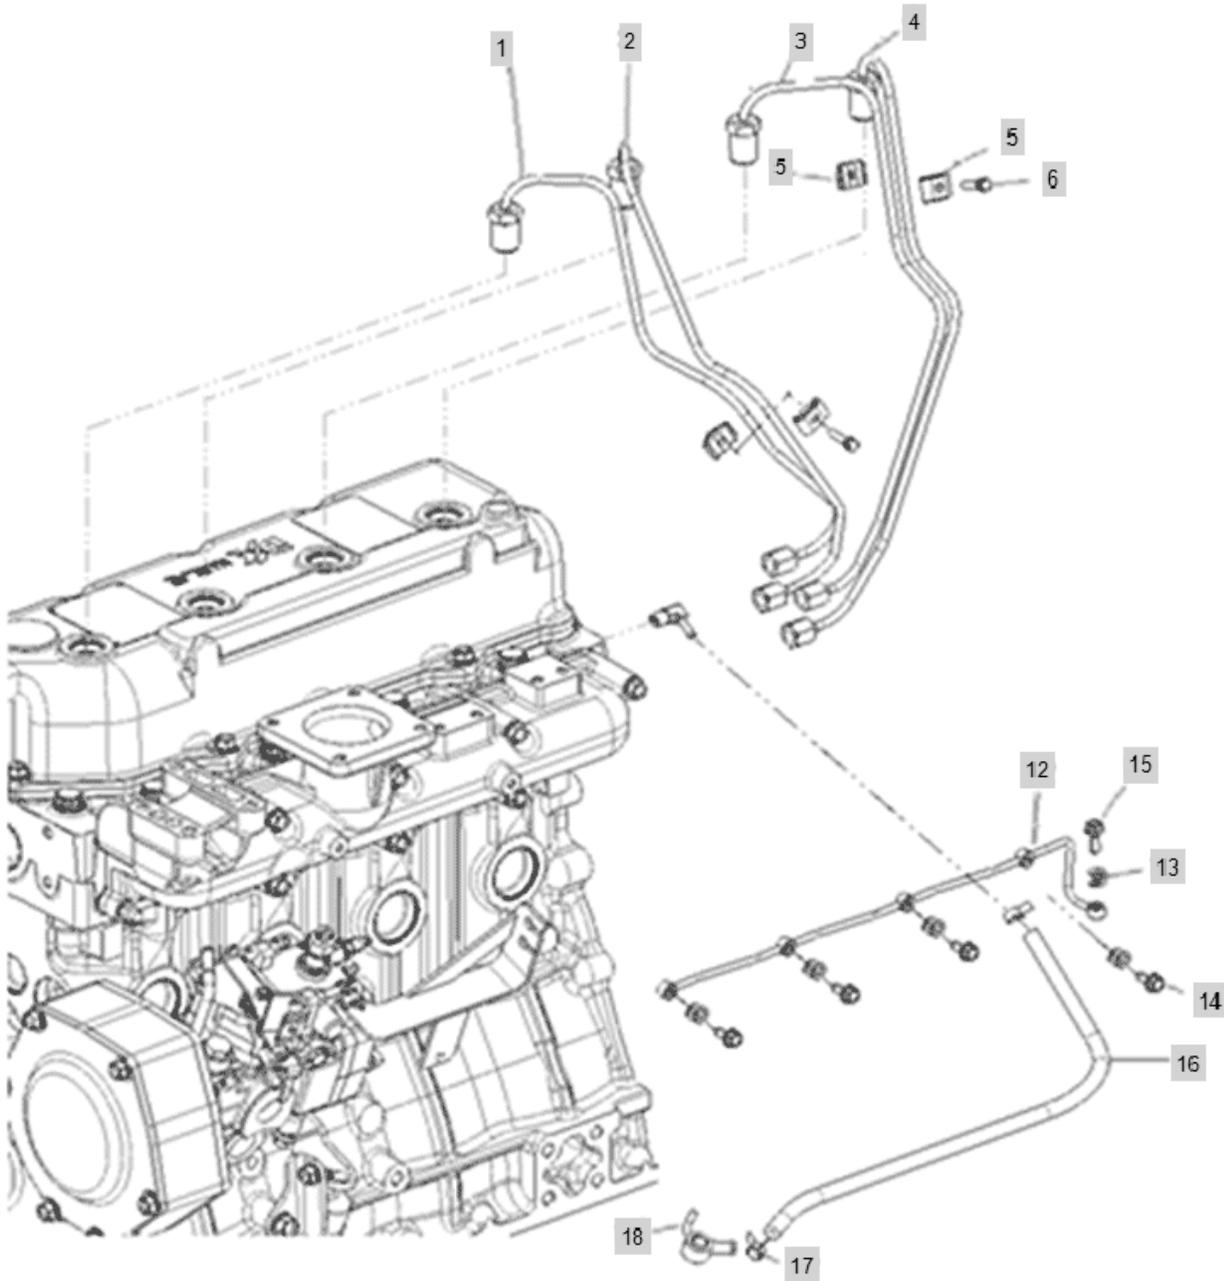




FIG E018

Branson 7845RP(US)

FLYWHEEL

Year/Month

2020/02

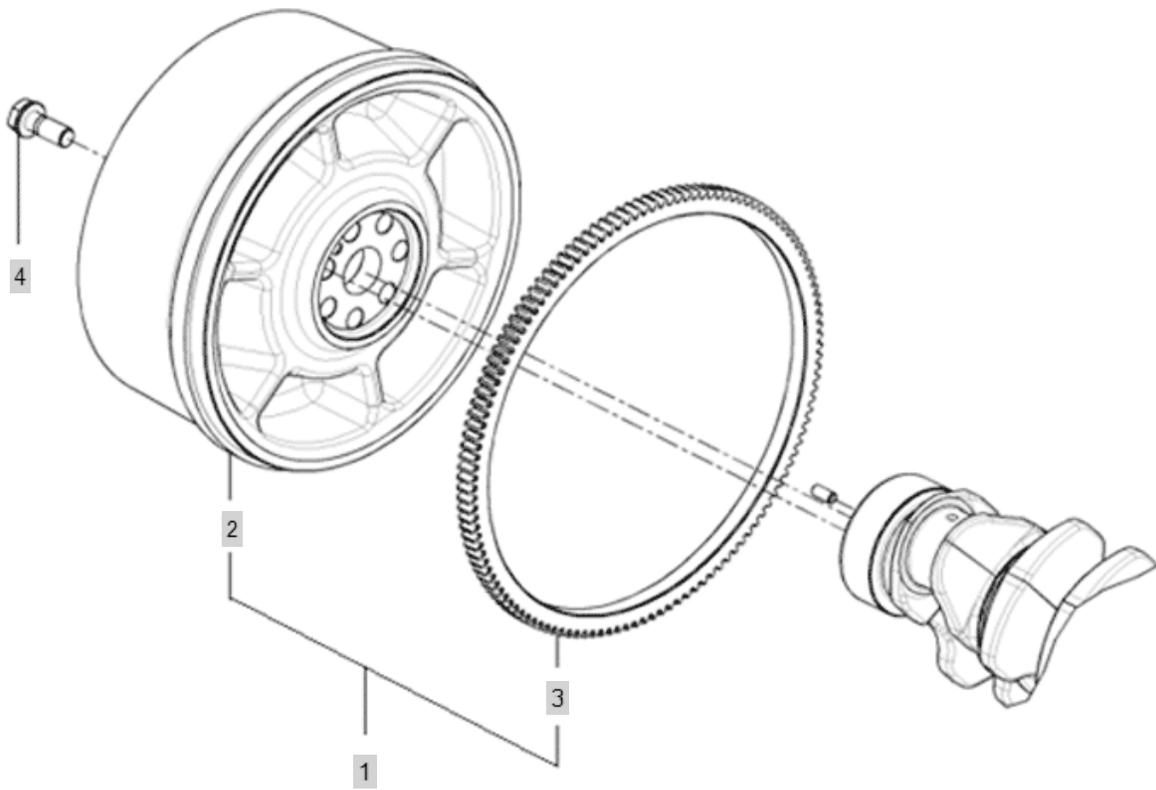




FIG E019

COVER, FRONT GEAR

Year/Month

Branson 7845RP(US)

2020/02

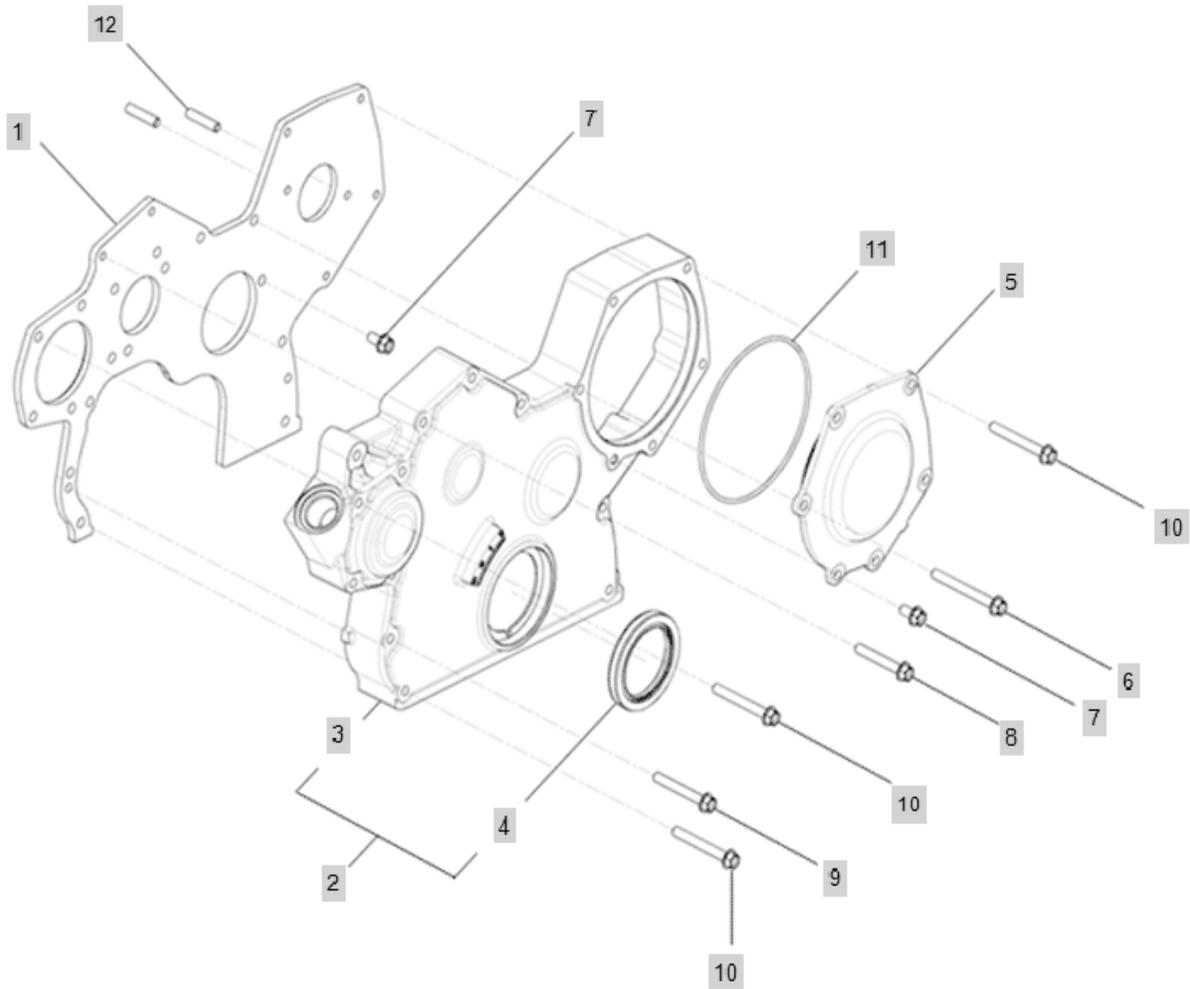




FIG E020

Branson 7845RP(US)

HEAD, CYLINDER

Year/Month

2020/02

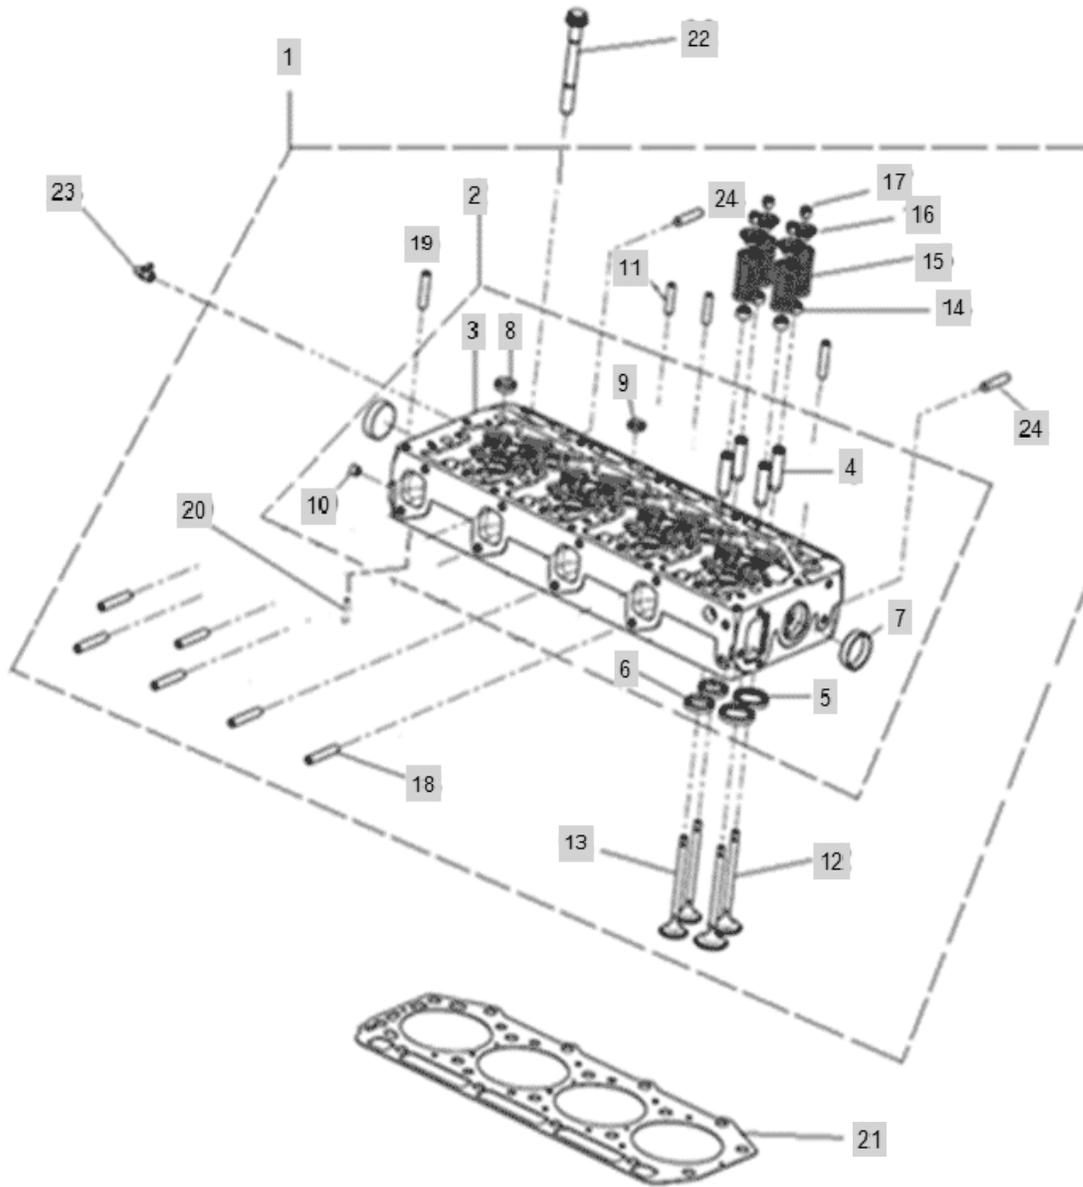




FIG E021

Branson 7845RP(US)

MANIFOLD, INTAKE

Year/Month

2020/02

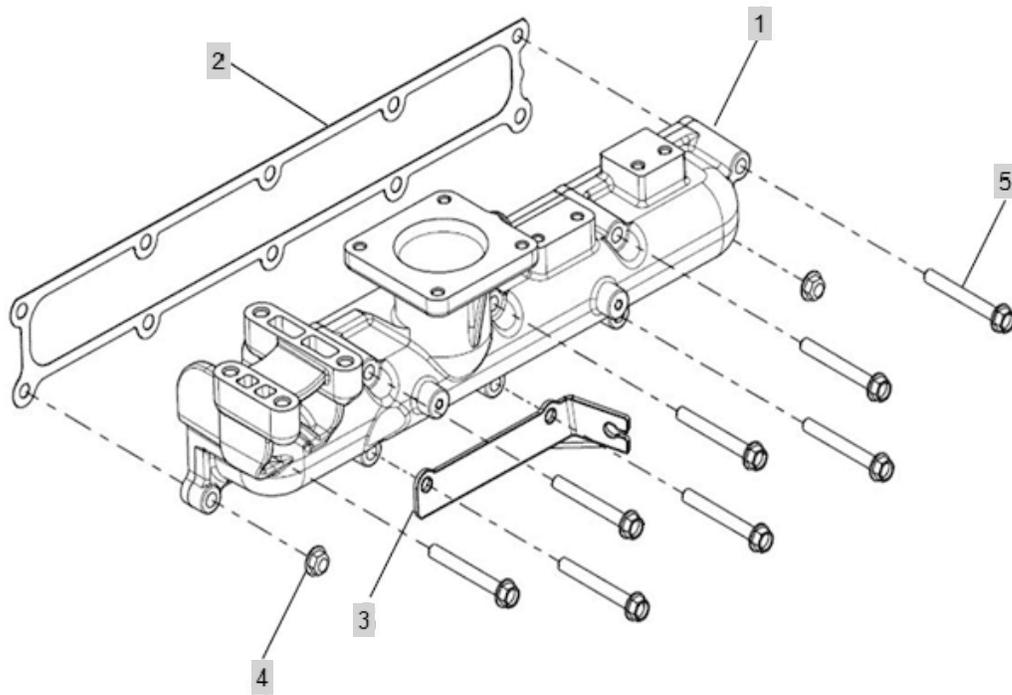




FIG E022

Branson 7845RP(US)

# INJECTOR

Year/Month

2020/02

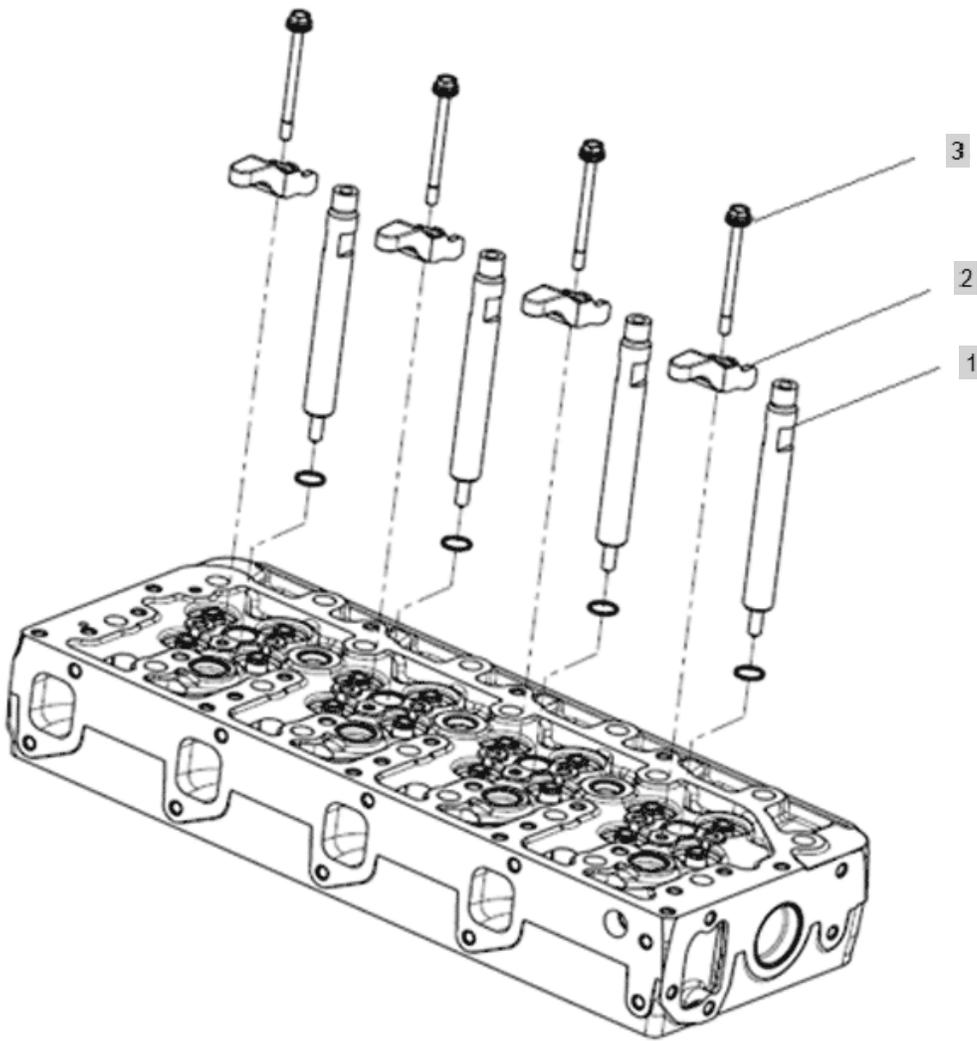




FIG E023

Branson 7845RP(US)

ARRANGEMENT, LIFTING

Year/Month

2020/02

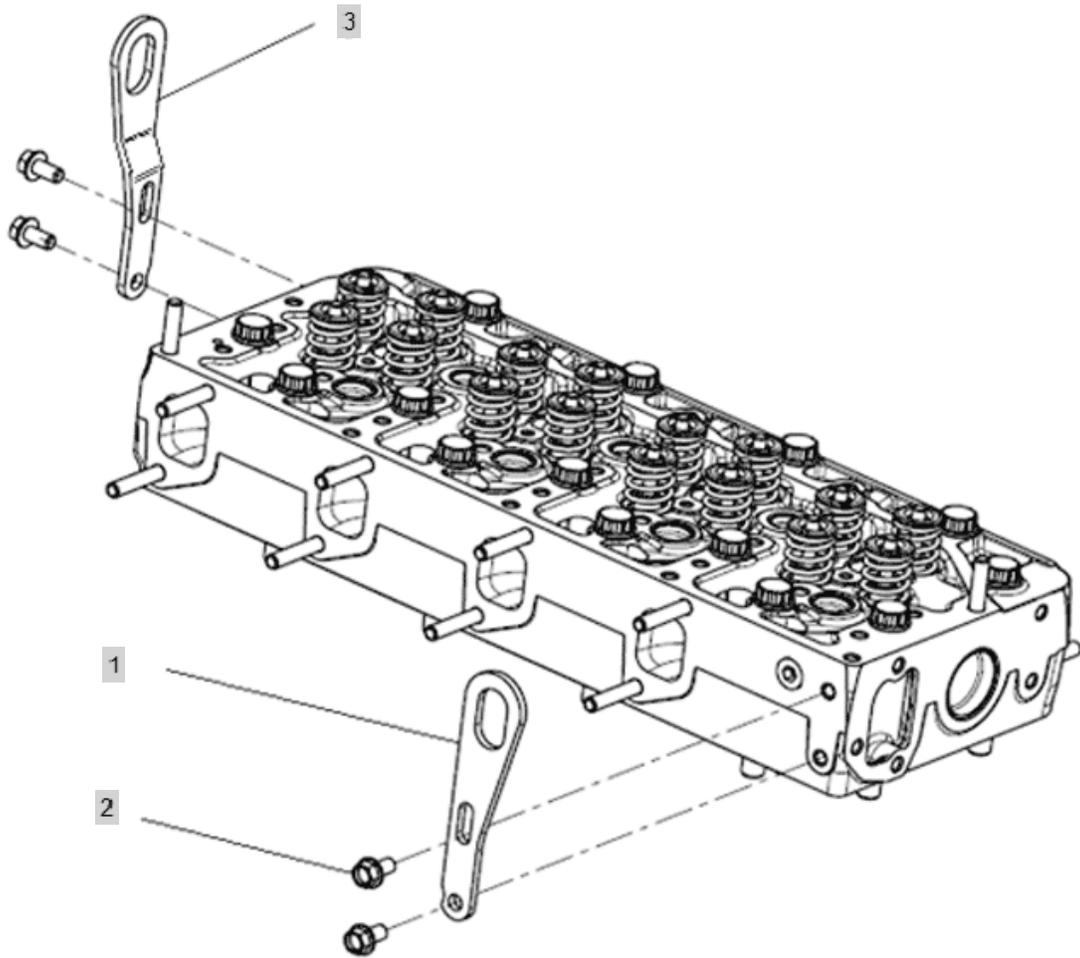




FIG E024

COOLER, ENGINE OIL

Year/Month

Branson 7845RP(US)

2020/02

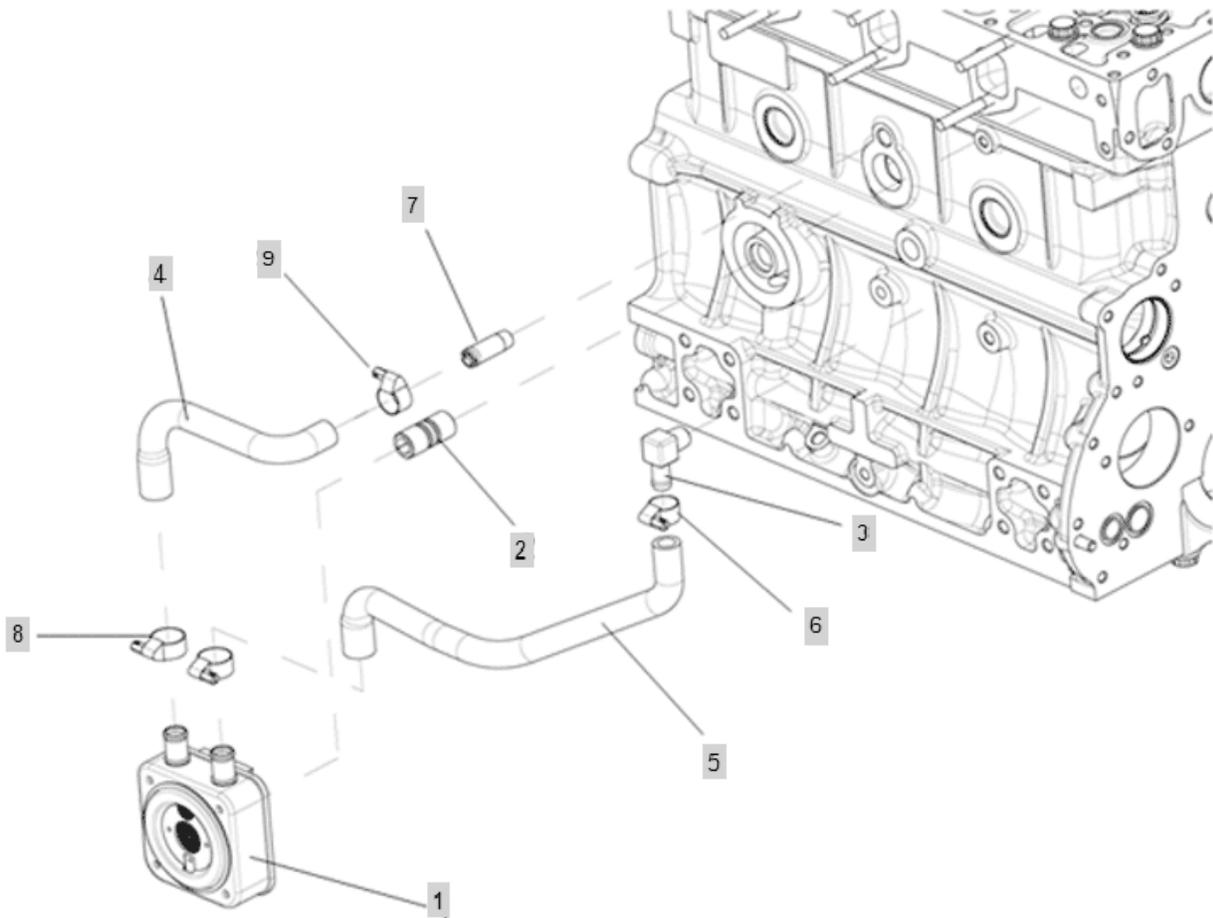




FIG E025

Branson 7845RP(US)

FILTER, LUBRICATING OIL

Year/Month

2020/02

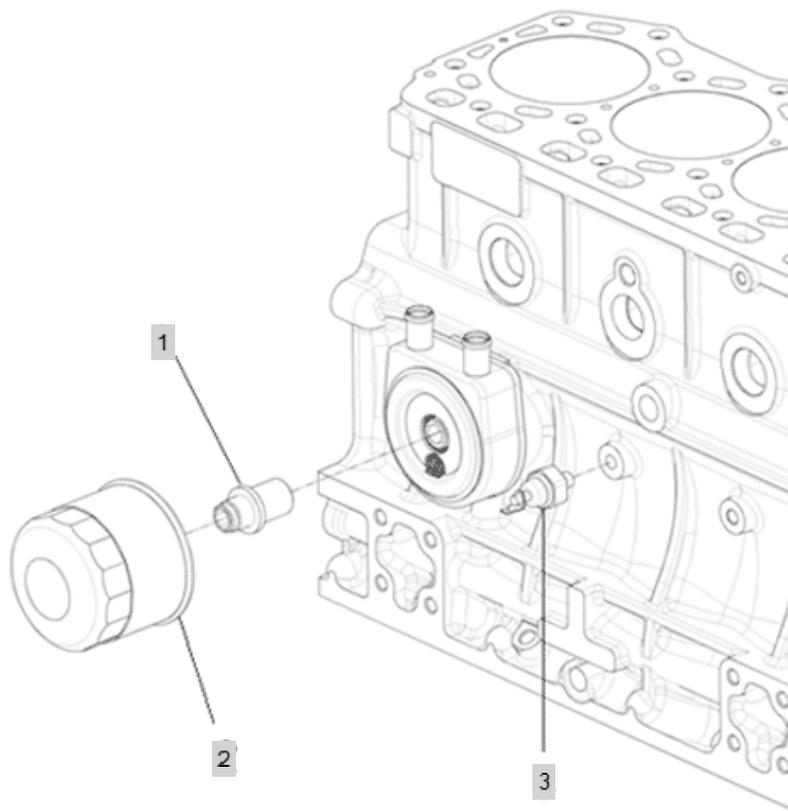




FIG E026

GAUGE, OIL LEVEL

Year/Month

Branson 7845RP(US)

2020/02

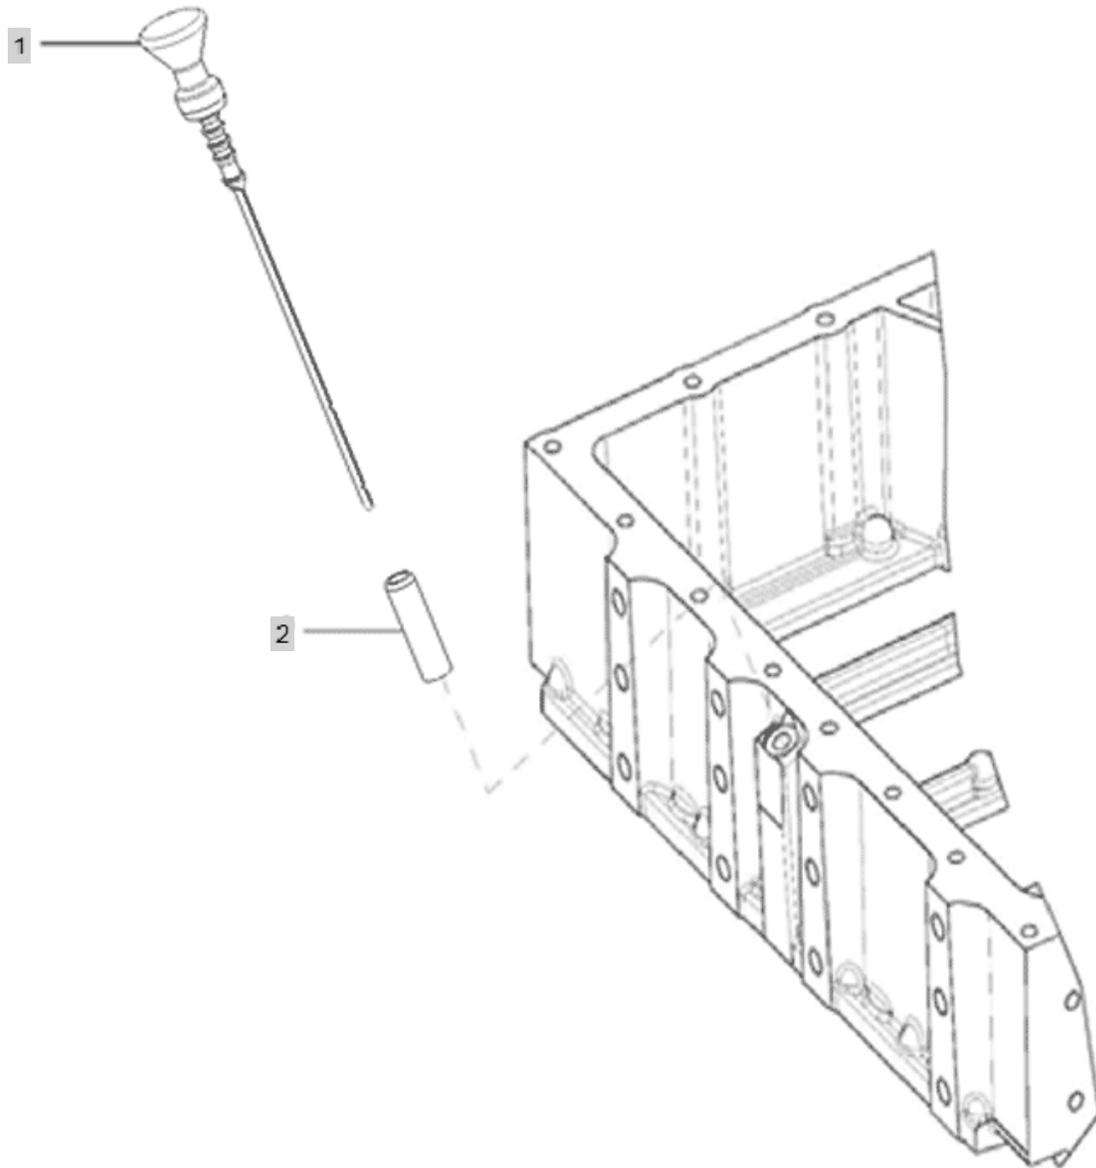




FIG E027

Branson 7845RP(US)

PUMP, LUBRICATING OIL

Year/Month

2020/02

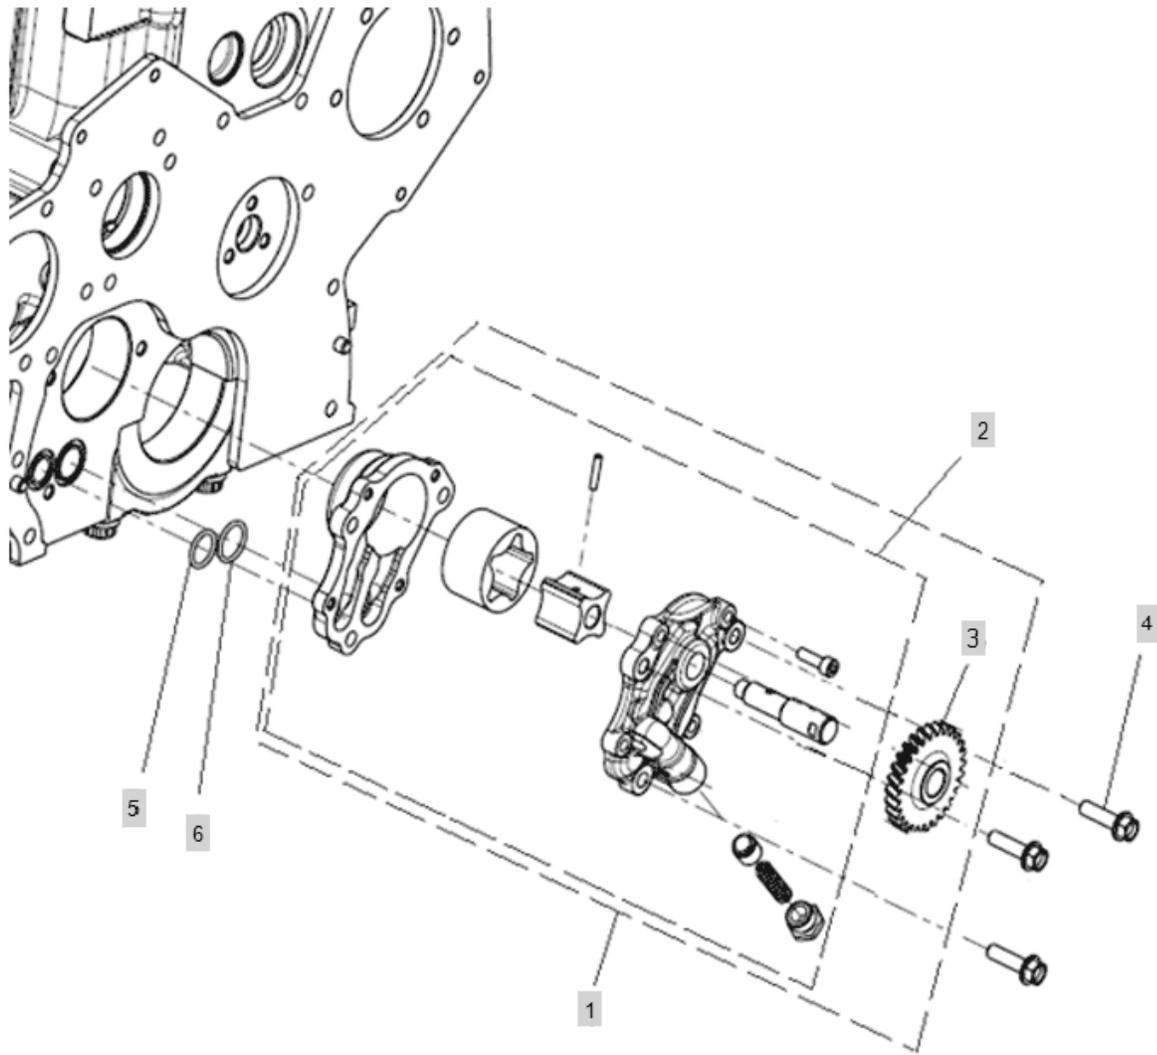




FIG E028

NOZZLE, PISTON COOLING

Year/Month

Branson 7845RP(US)

2020/02

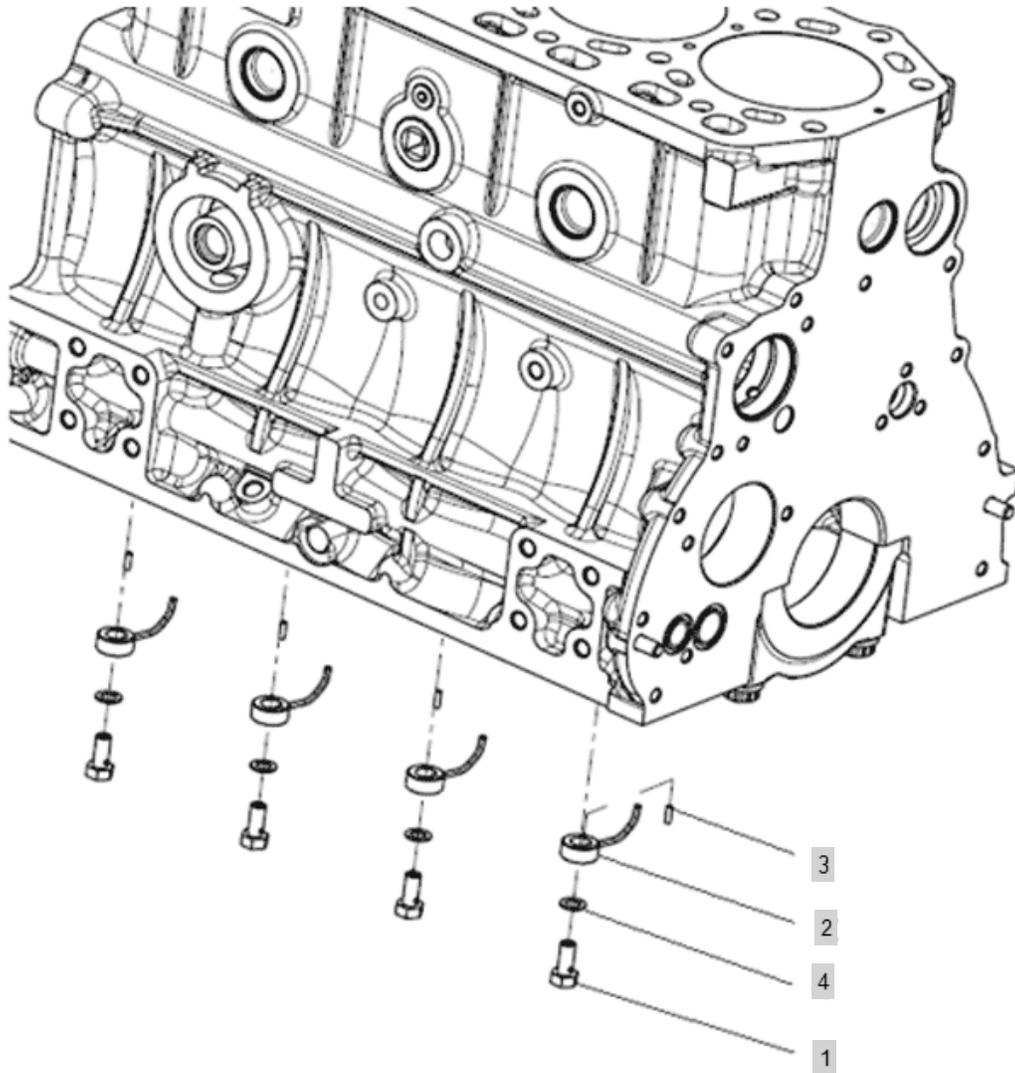




FIG E029

Branson 7845RP(US)

ARRANGEMENT, OIL FILL

Year/Month

2020/02

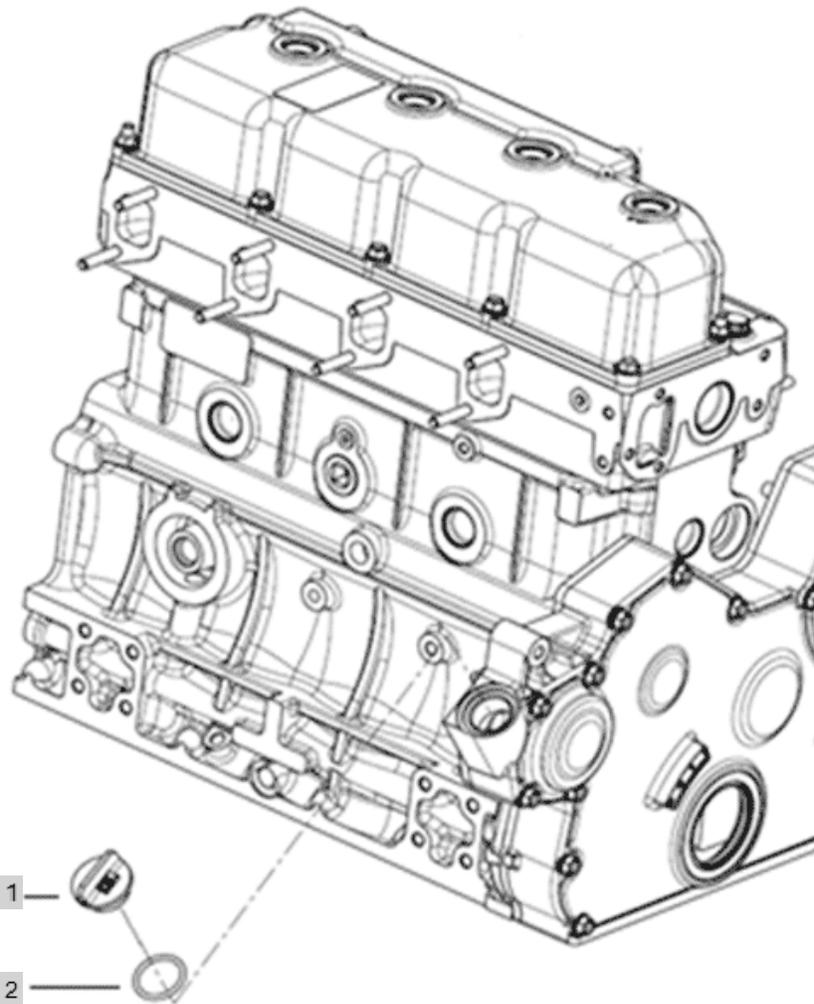




FIG E030

Branson 7845RP(US)

OIL PAN

Year/Month

2020/02

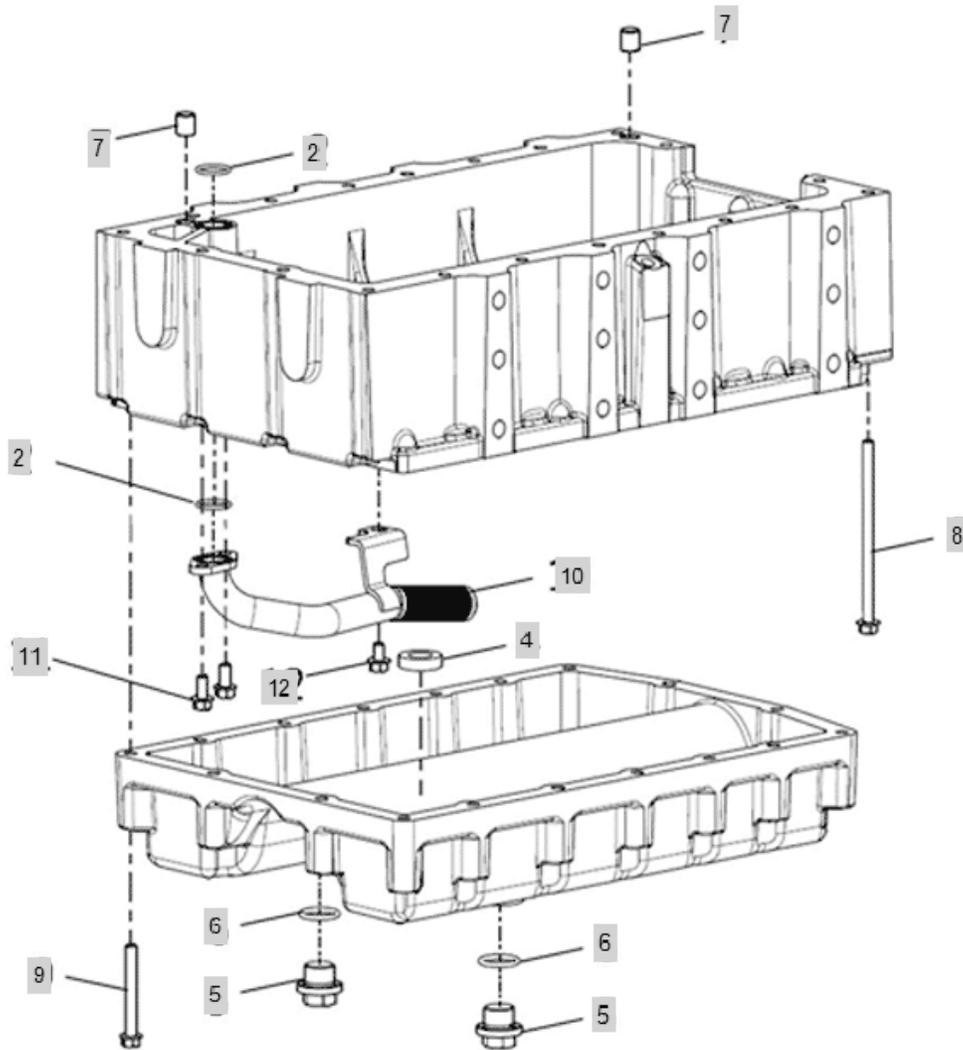




FIG E031

Branson 7845RP(US)

PISTON

Year/Month

2020/02

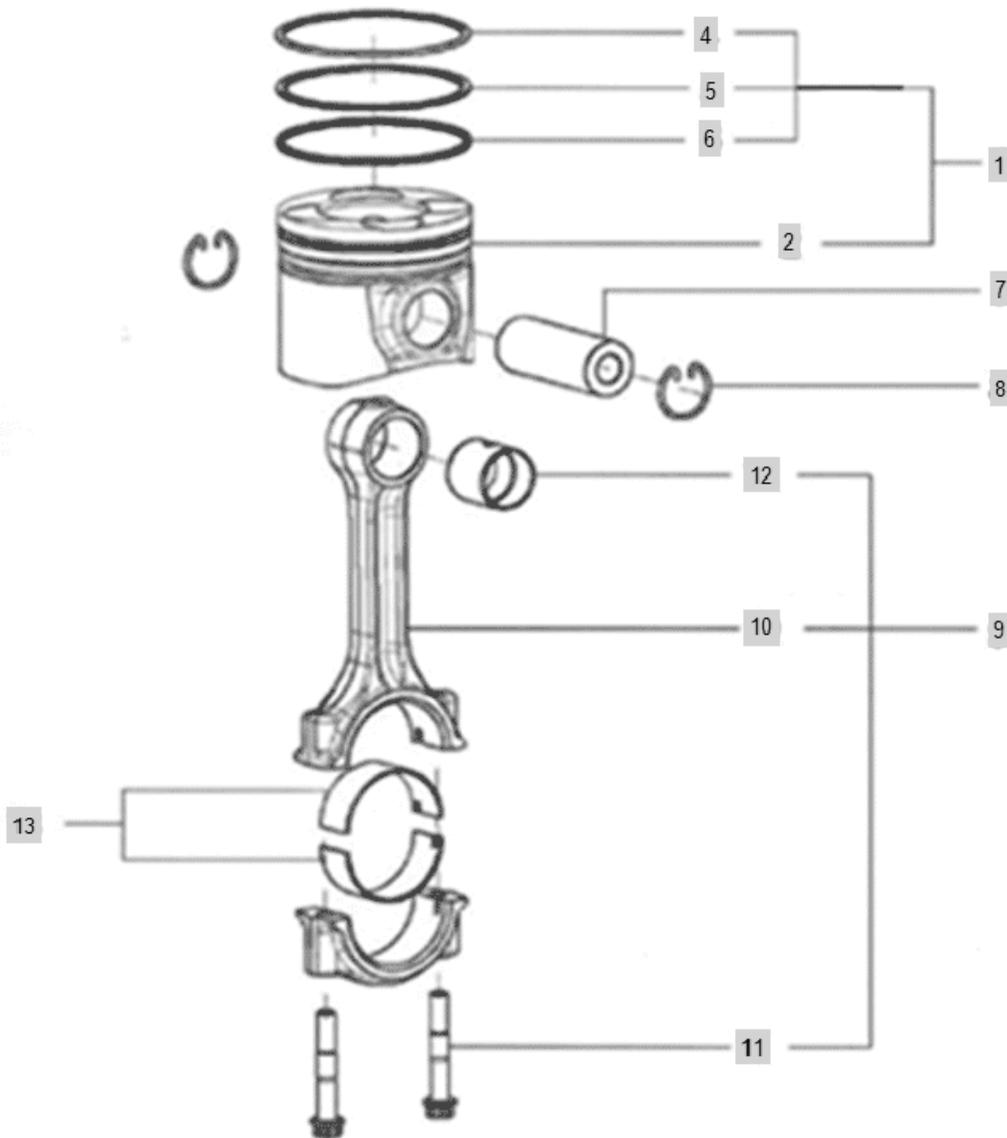




FIG E032

Branson 7845RP(US)

LEVER, LOCKER

Year/Month

2020/02

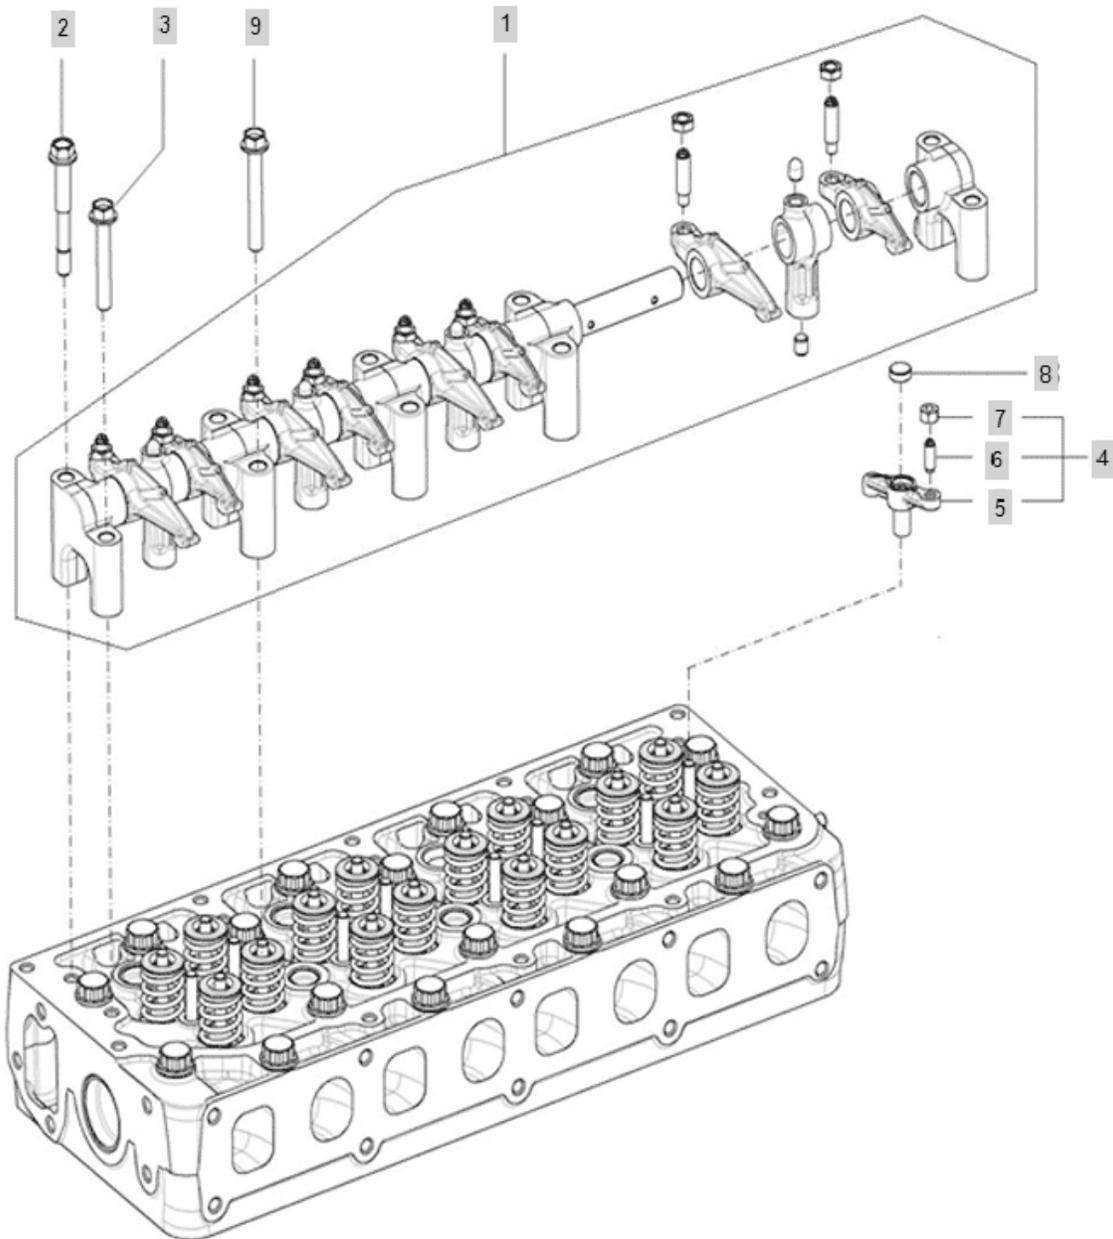




FIG E033

Branson 7845RP(US)

MOTER, STARTIONG

Year/Month

2020/02

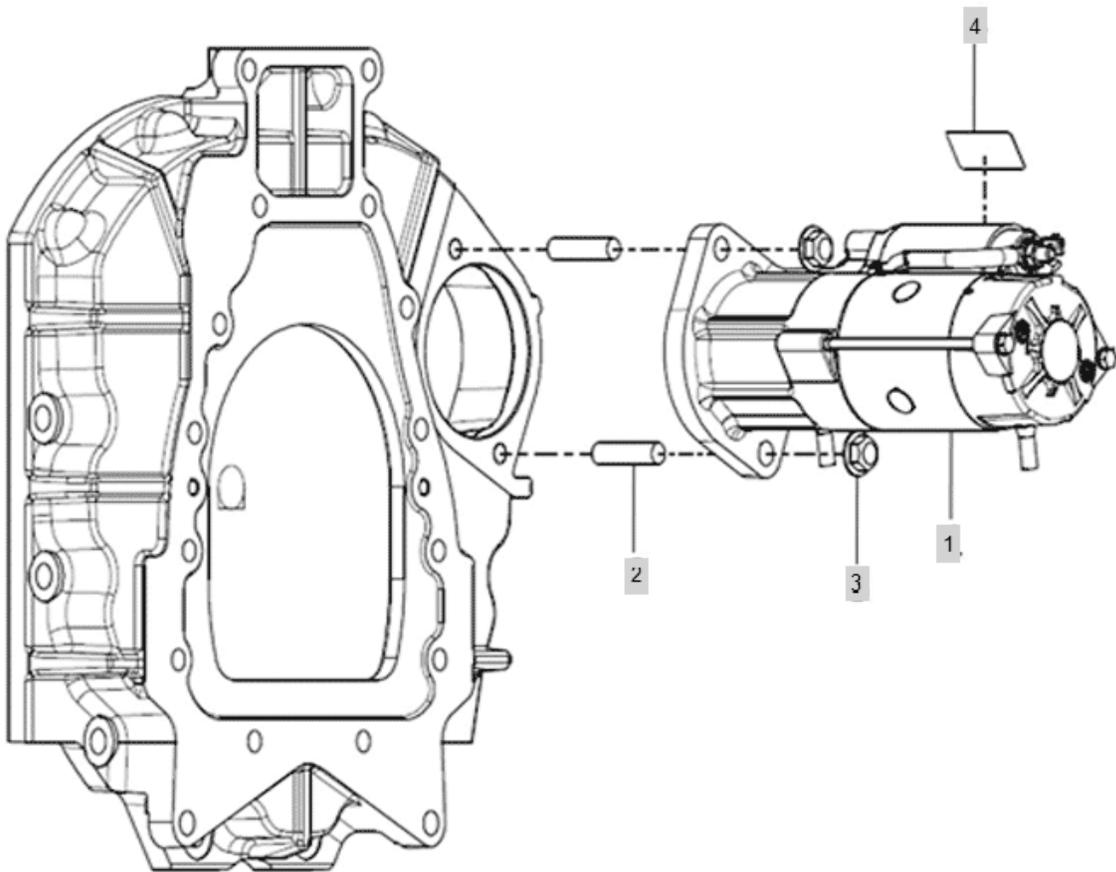




FIG E034

PLUMBING, TURBO CHARGER

Year/Month

Branson 7845RP(US)

2020/02

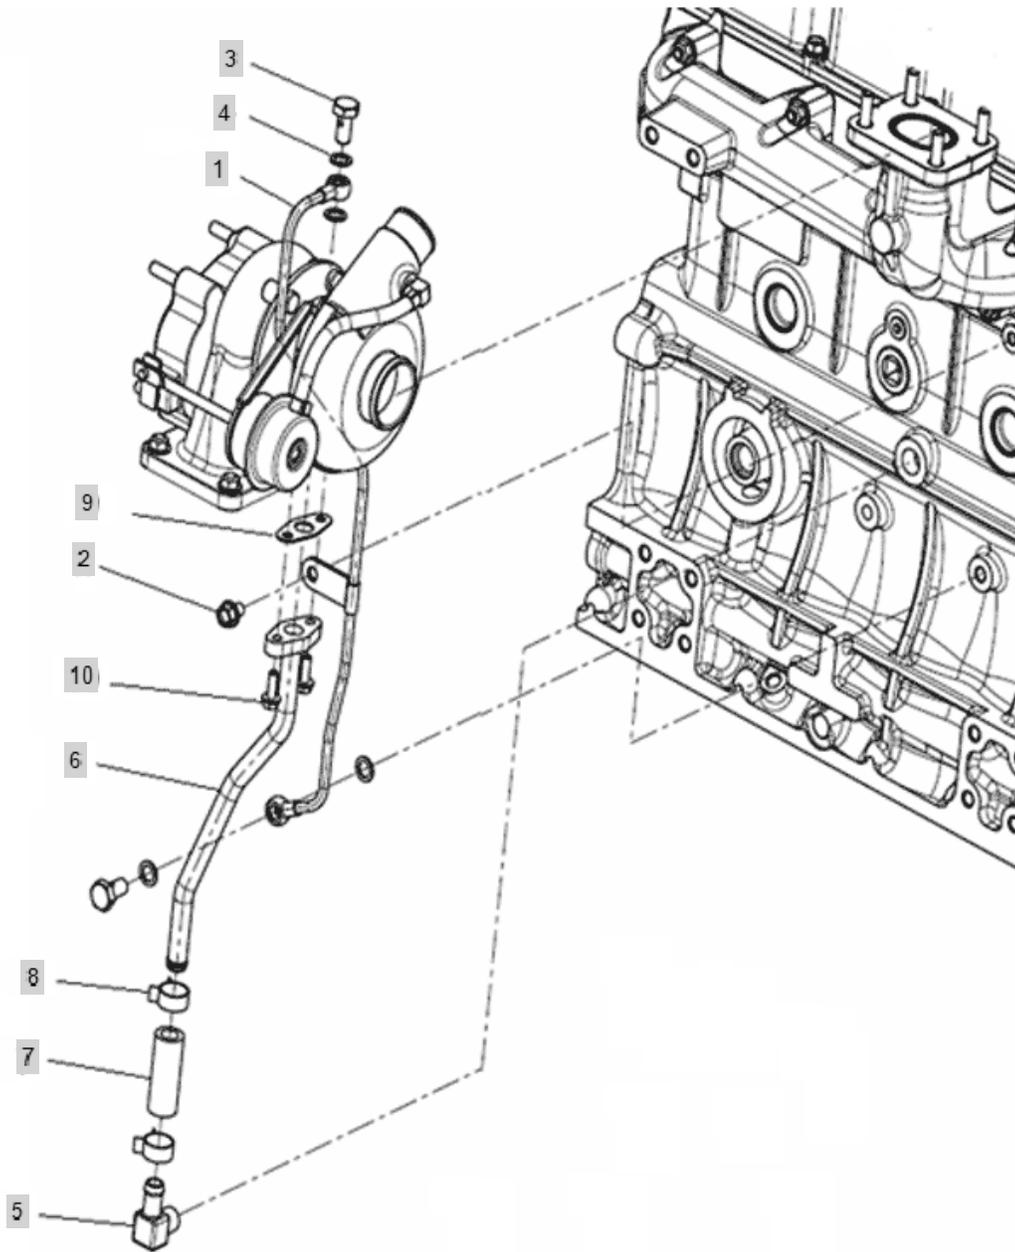




FIG E035

Branson 7845RP(US)

TURBO CHARGER

Year/Month

2020/02

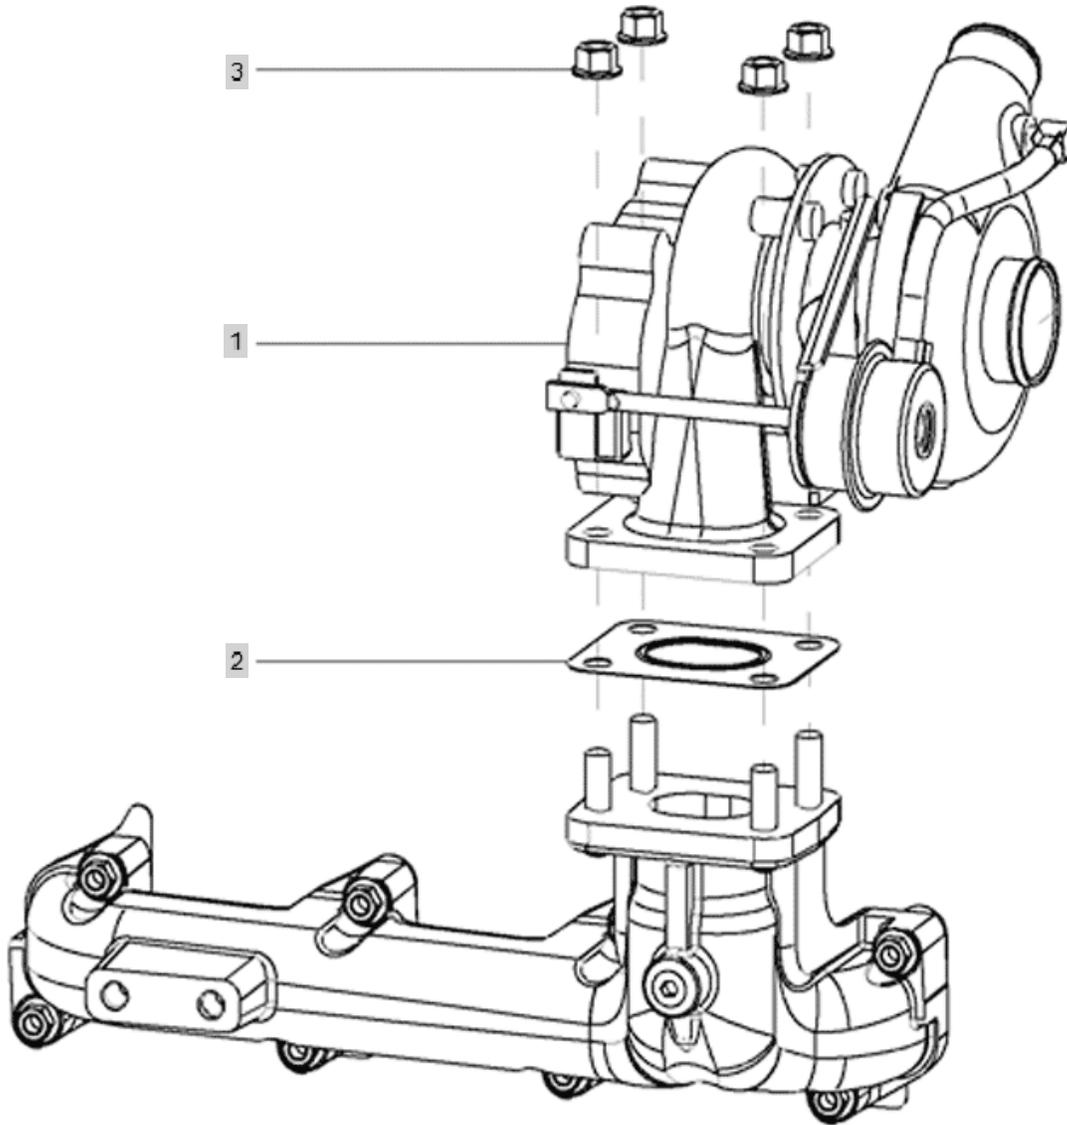




FIG E036

COVER, VALVE

Year/Month

Branson 7845RP(US)

2020/02

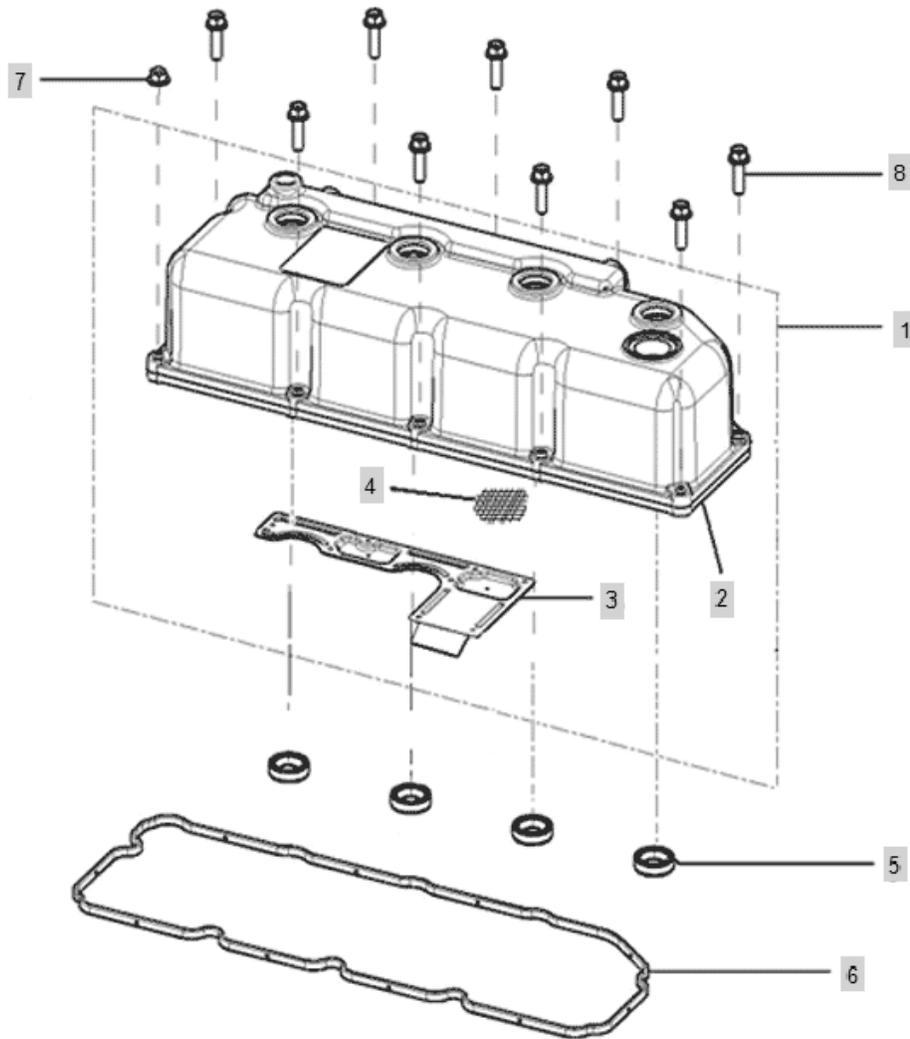




FIG E037

Branson 7845RP(US)

PUMP, WATER

Year/Month

2020/02

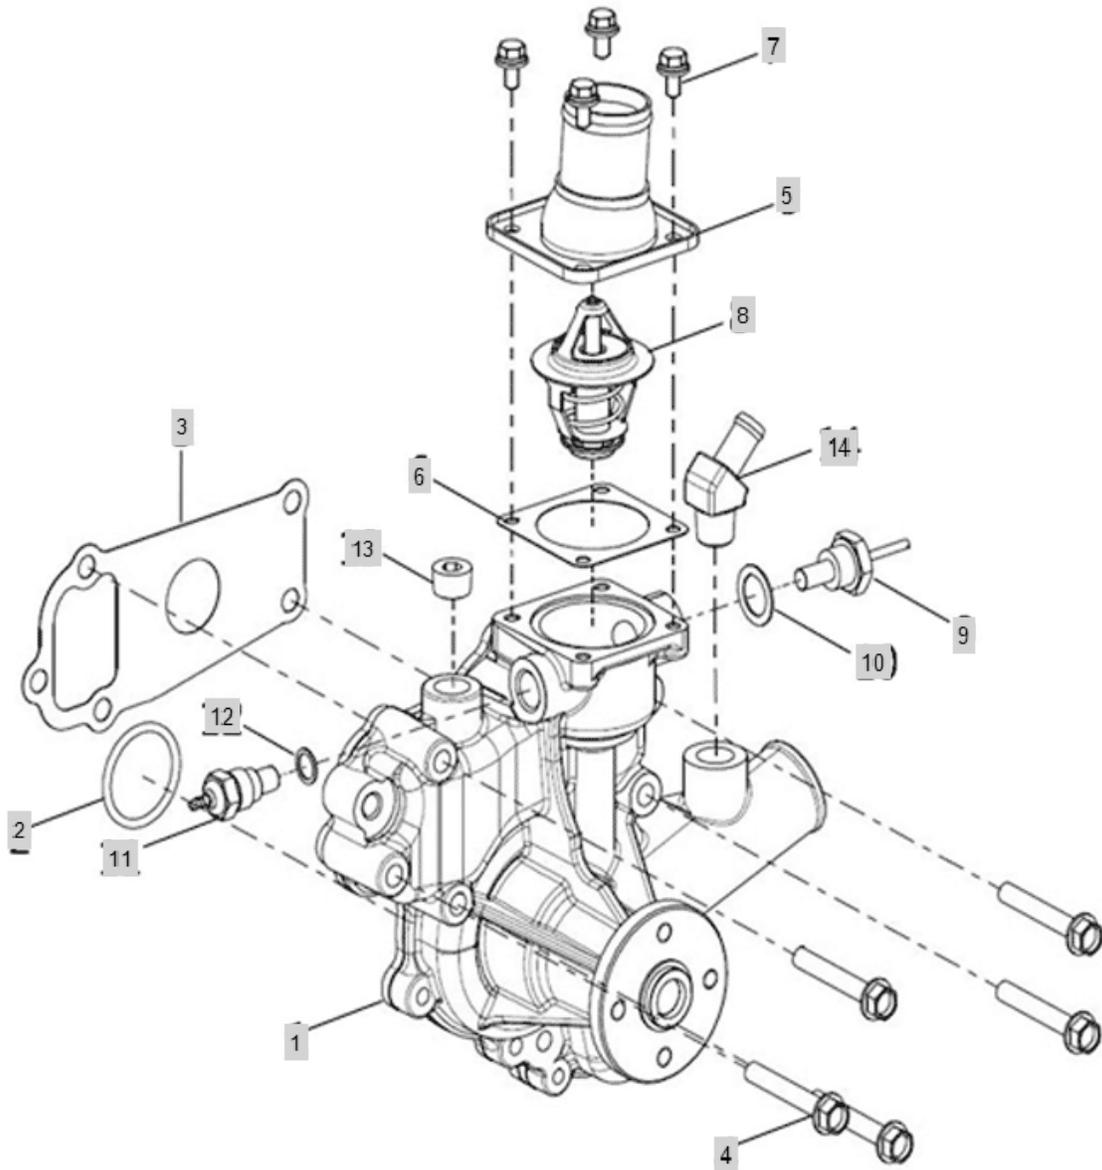




FIG E038

Branson 7845RP(US)

MANIFOLD, EXHAUST

Year/Month

2020/02

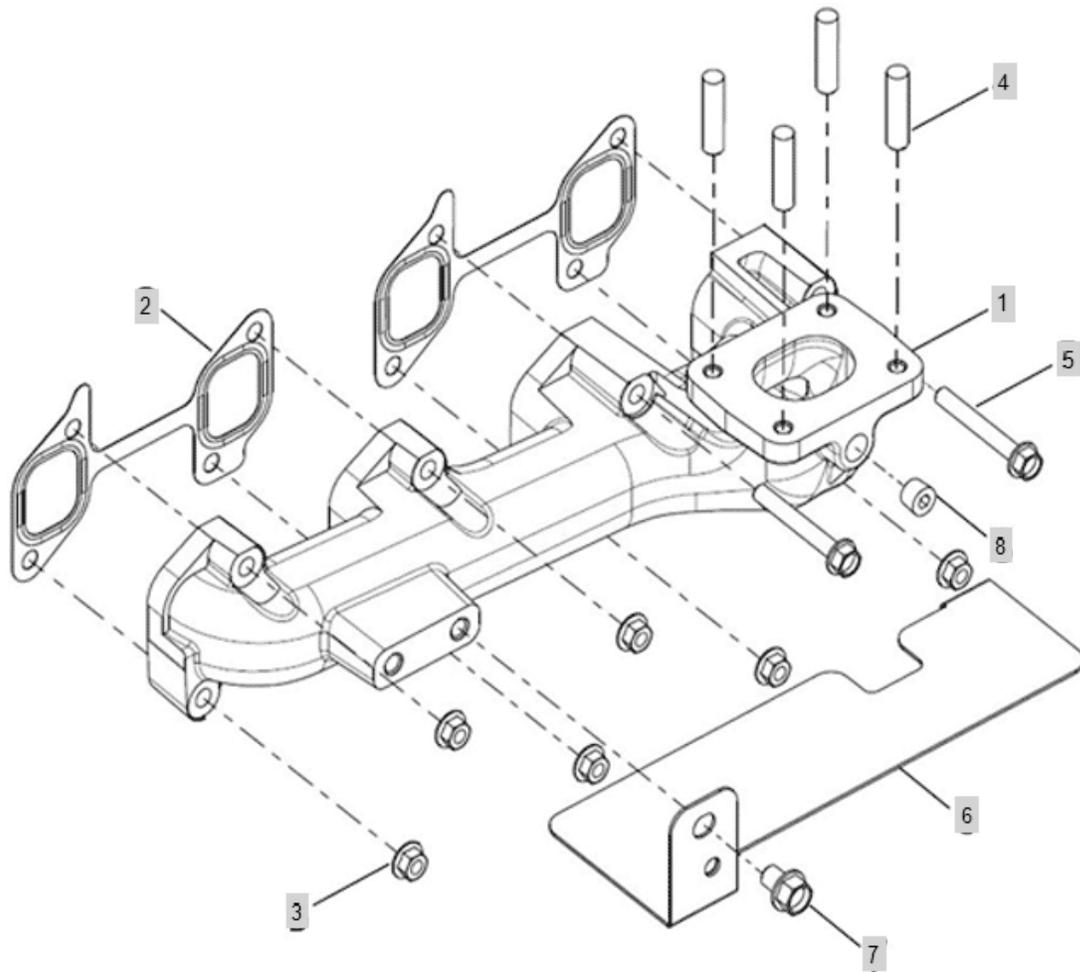




FIG E039

DPF

Year/Month

Branson 7845RP(US)

2020/02

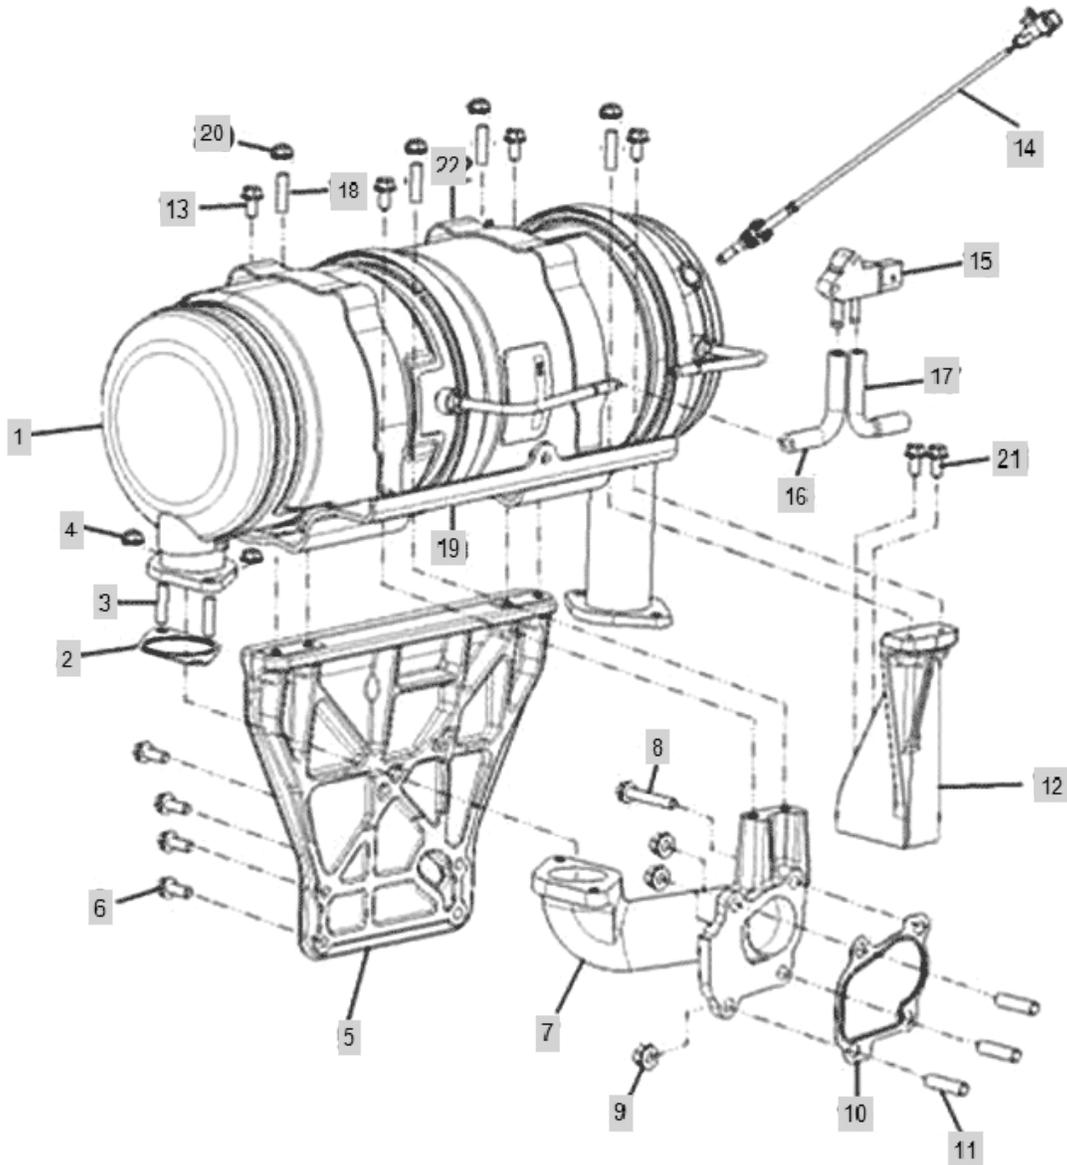




FIG E040

Branson 7845RP(US)

CONNECTION, AIR INTAKE

Year/Month

2020/02

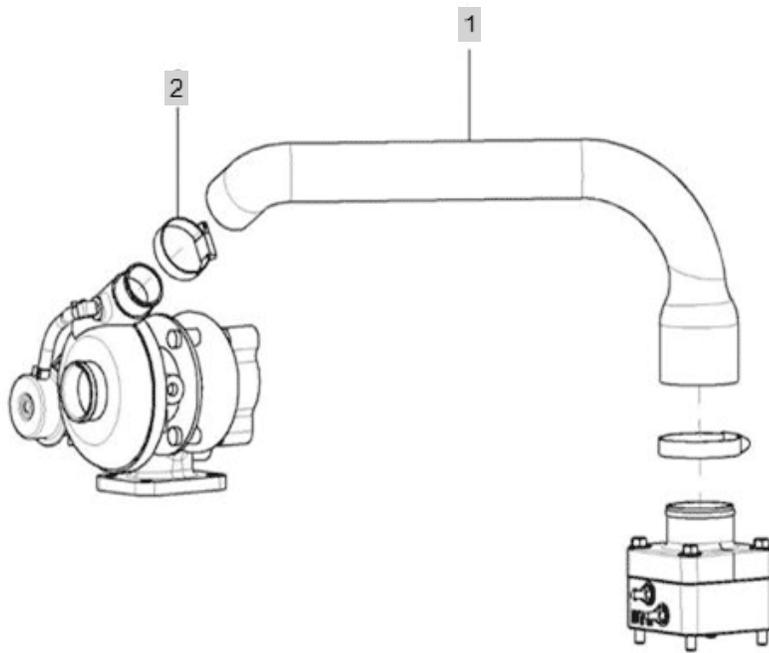




FIG F001

FRONT AXLE HOUSING

Year/Month

Branson 7845RP(US)

2020/02

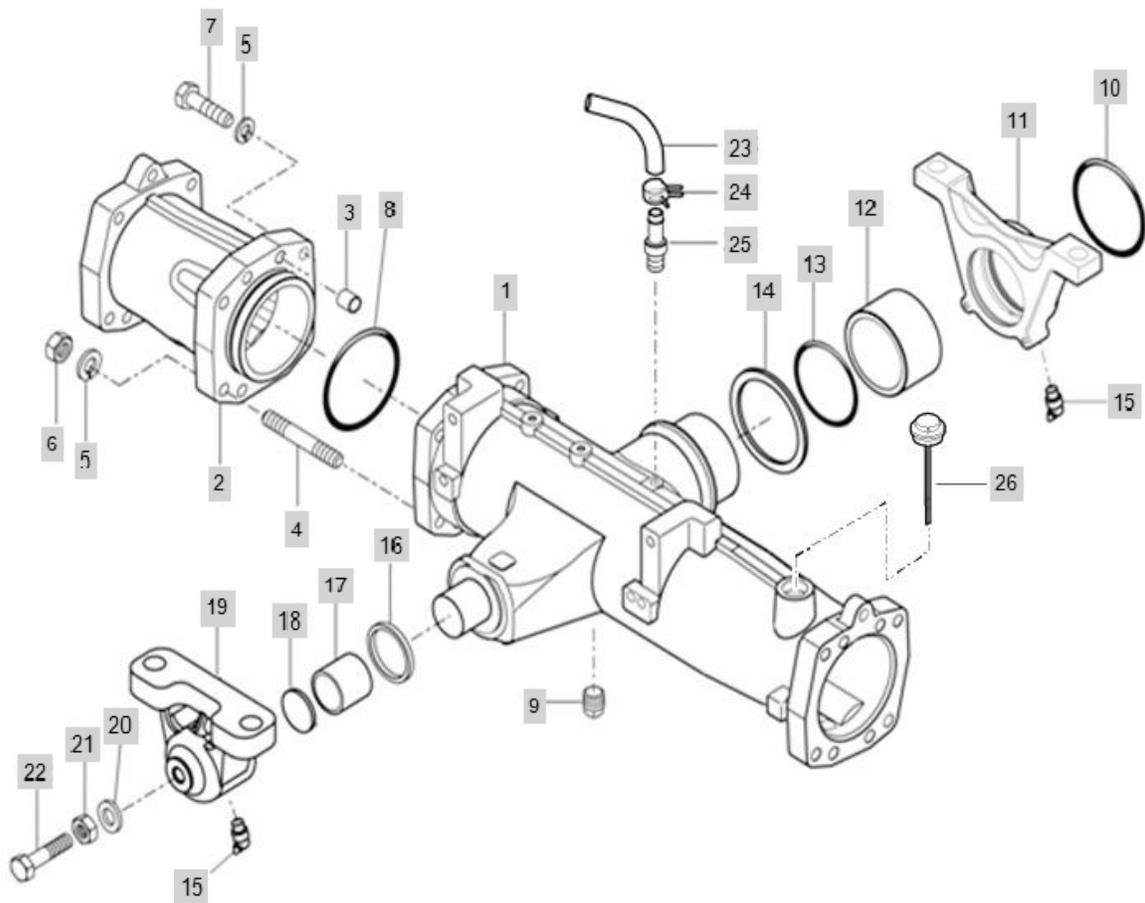




FIG F002

Branson 7845RP(US)

FRONT DIFFERENTIAL GEAR

Year/Month

2020/02

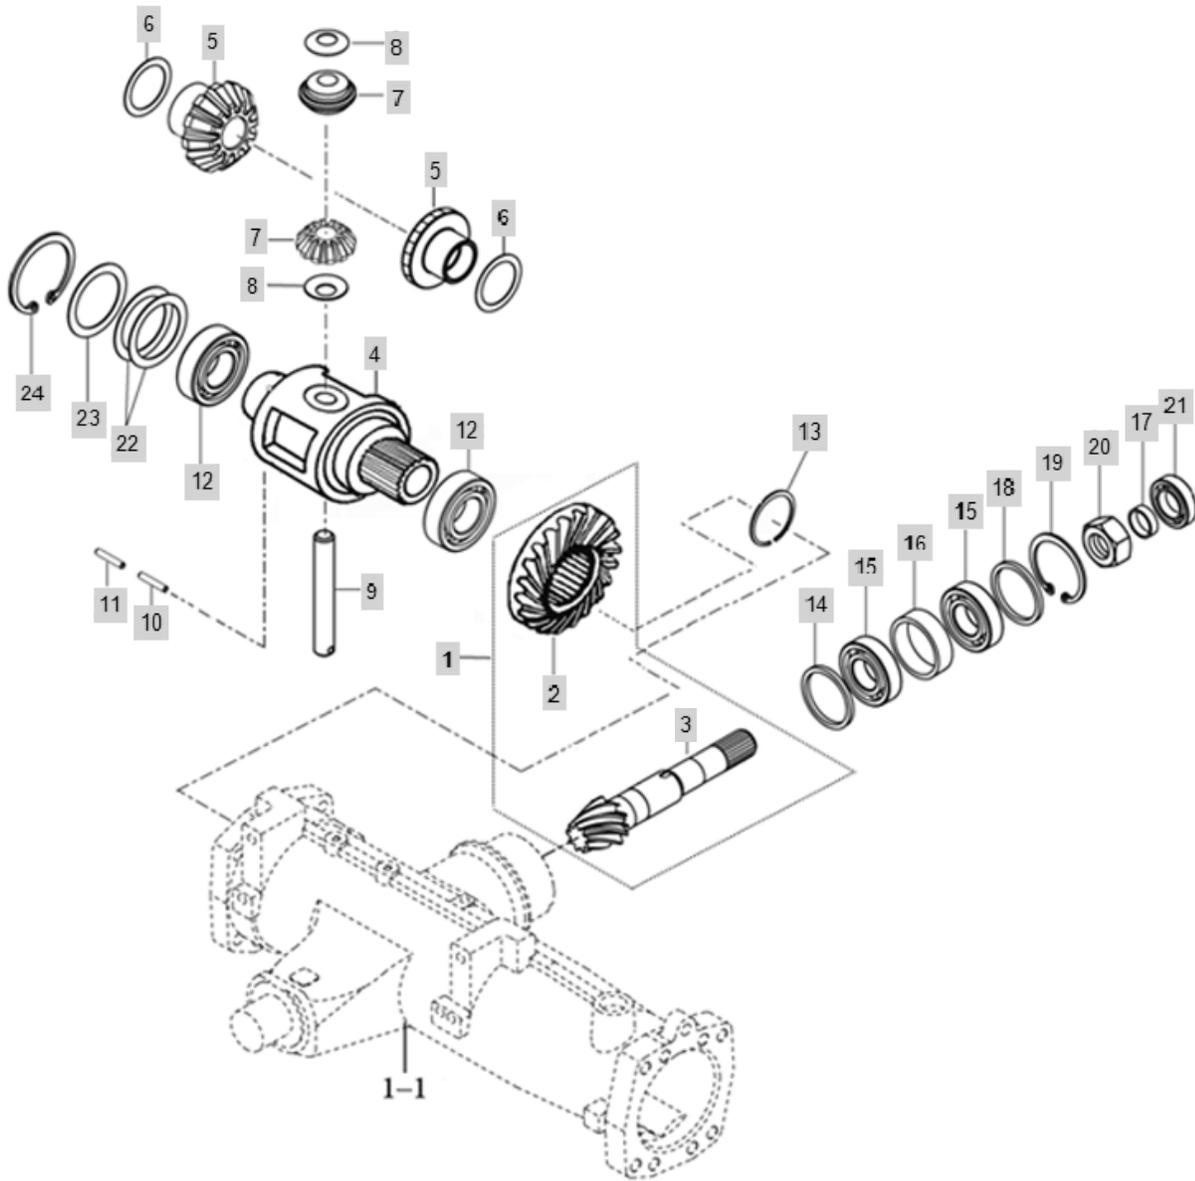




FIG F003

FRONT GEAR CASE I

Year/Month

Branson 7845RP(US)

2020/02

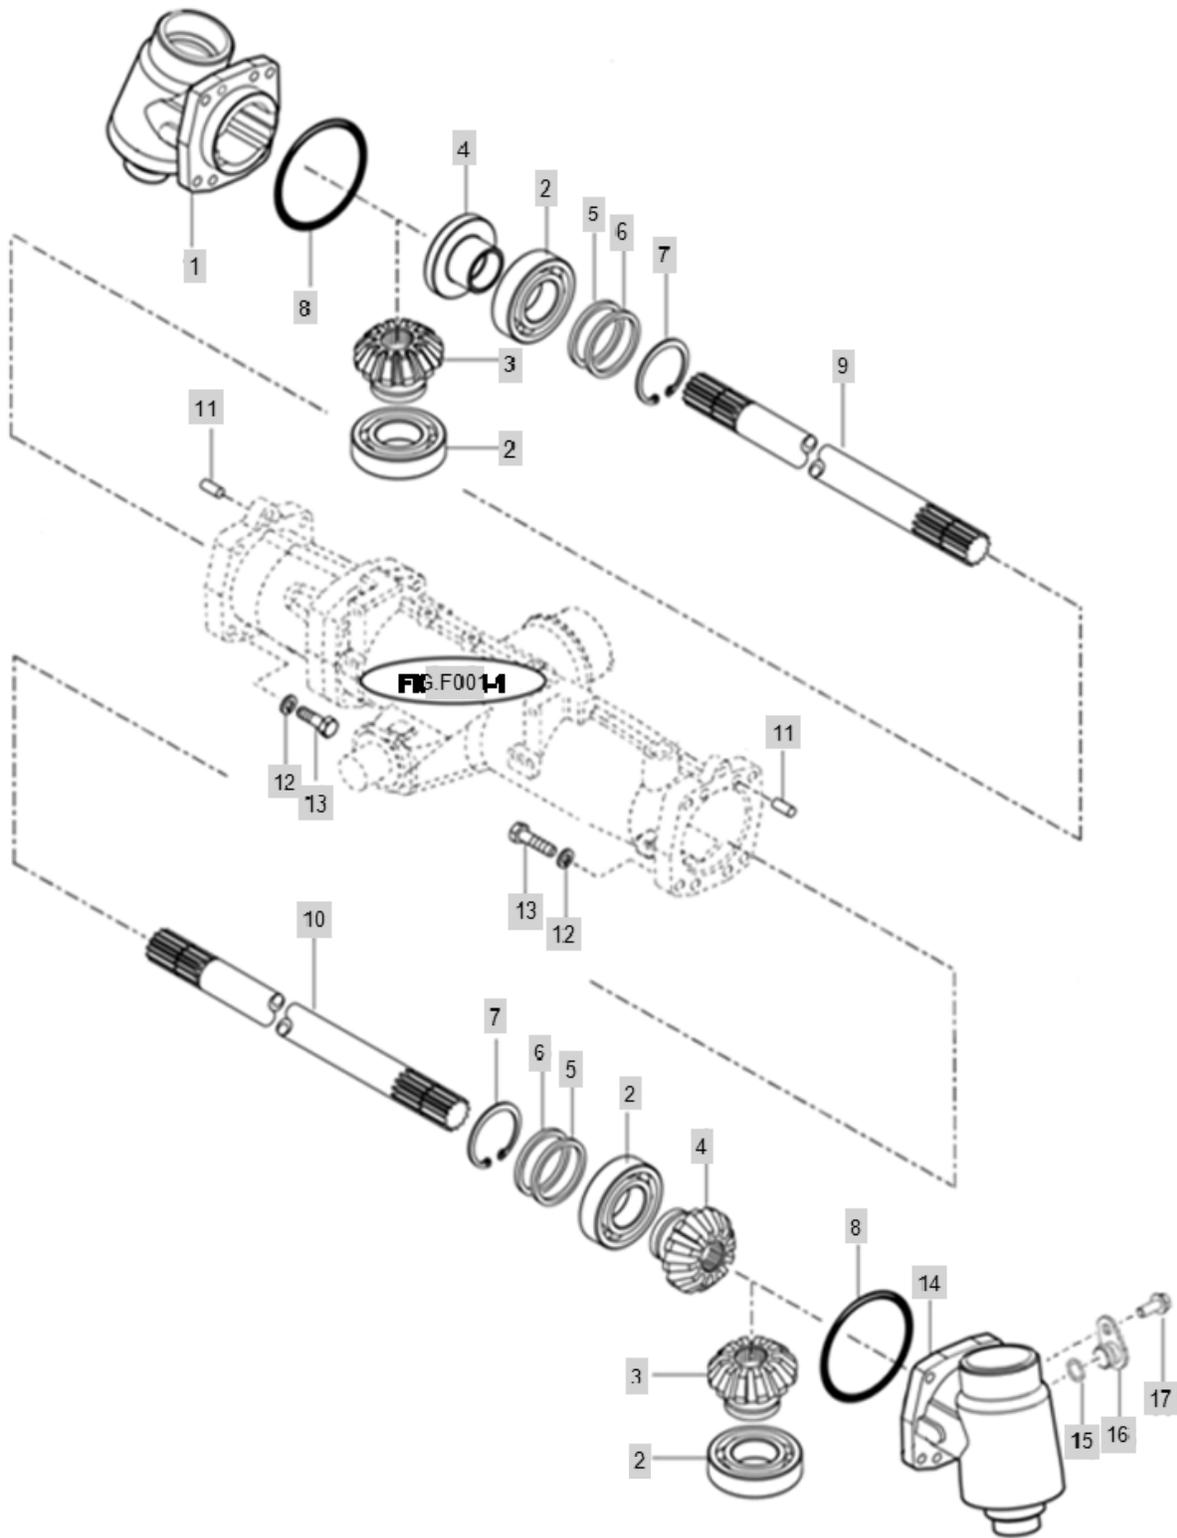




FIG F004

Branson 7845RP(US)

FRONT GEAR CASE II

Year/Month

2020/02

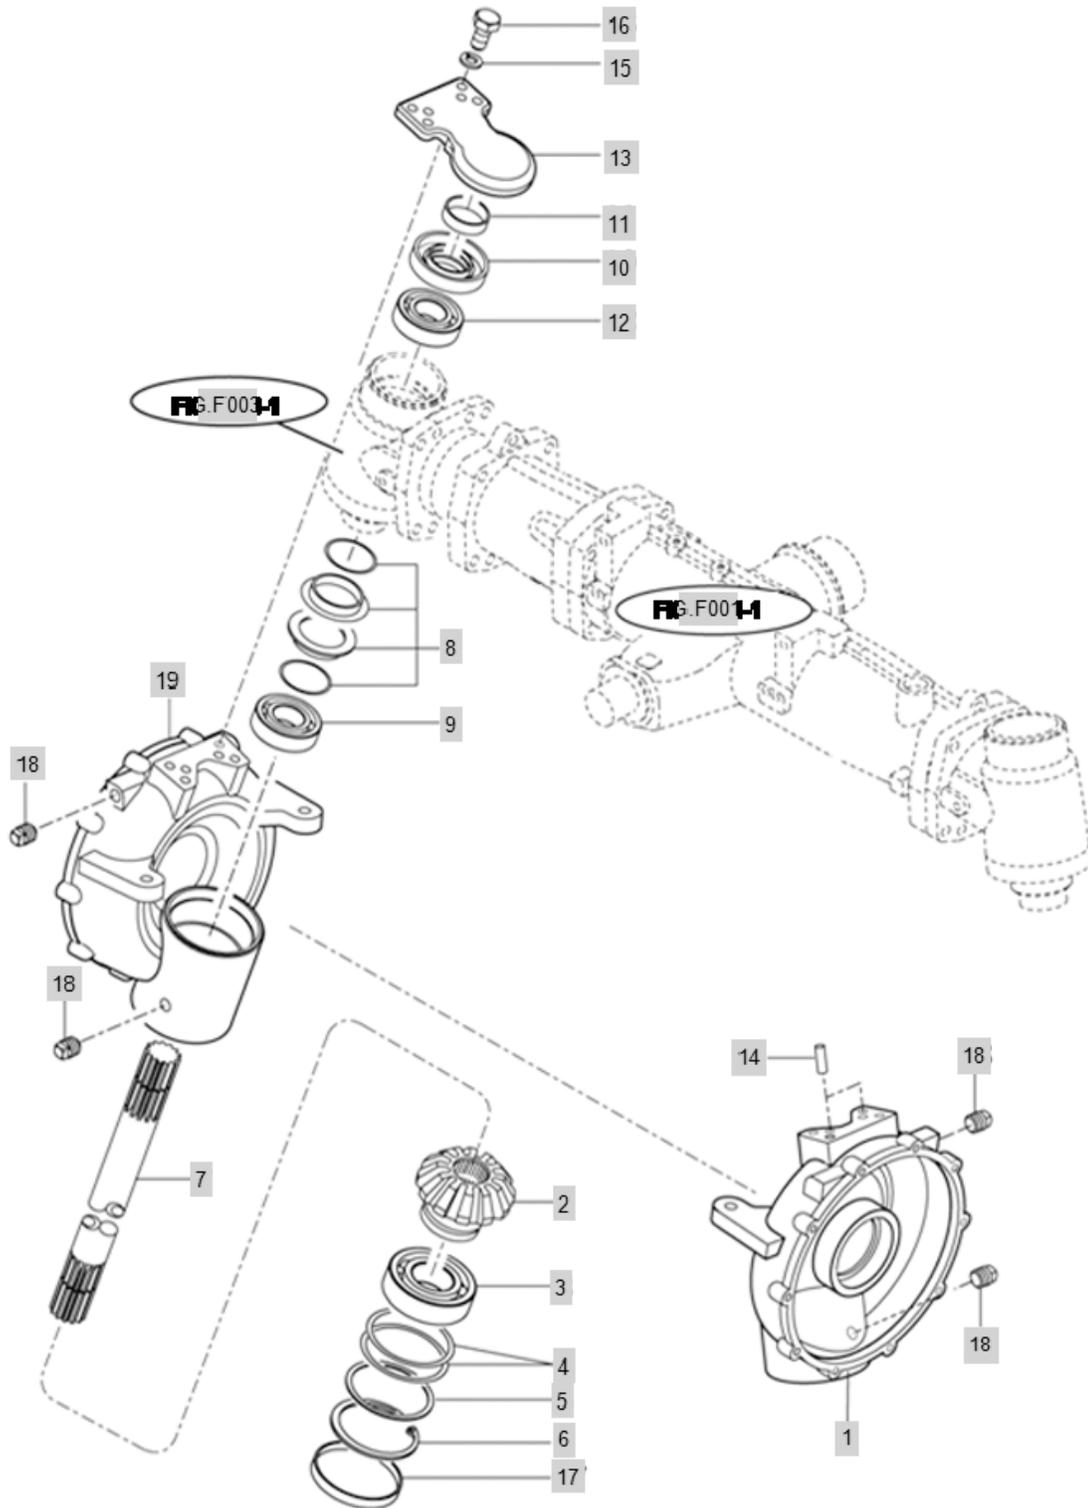




FIG F005

FRONT GEAR CASE III

Year/Month

Branson 7845RP(US)

2020/02

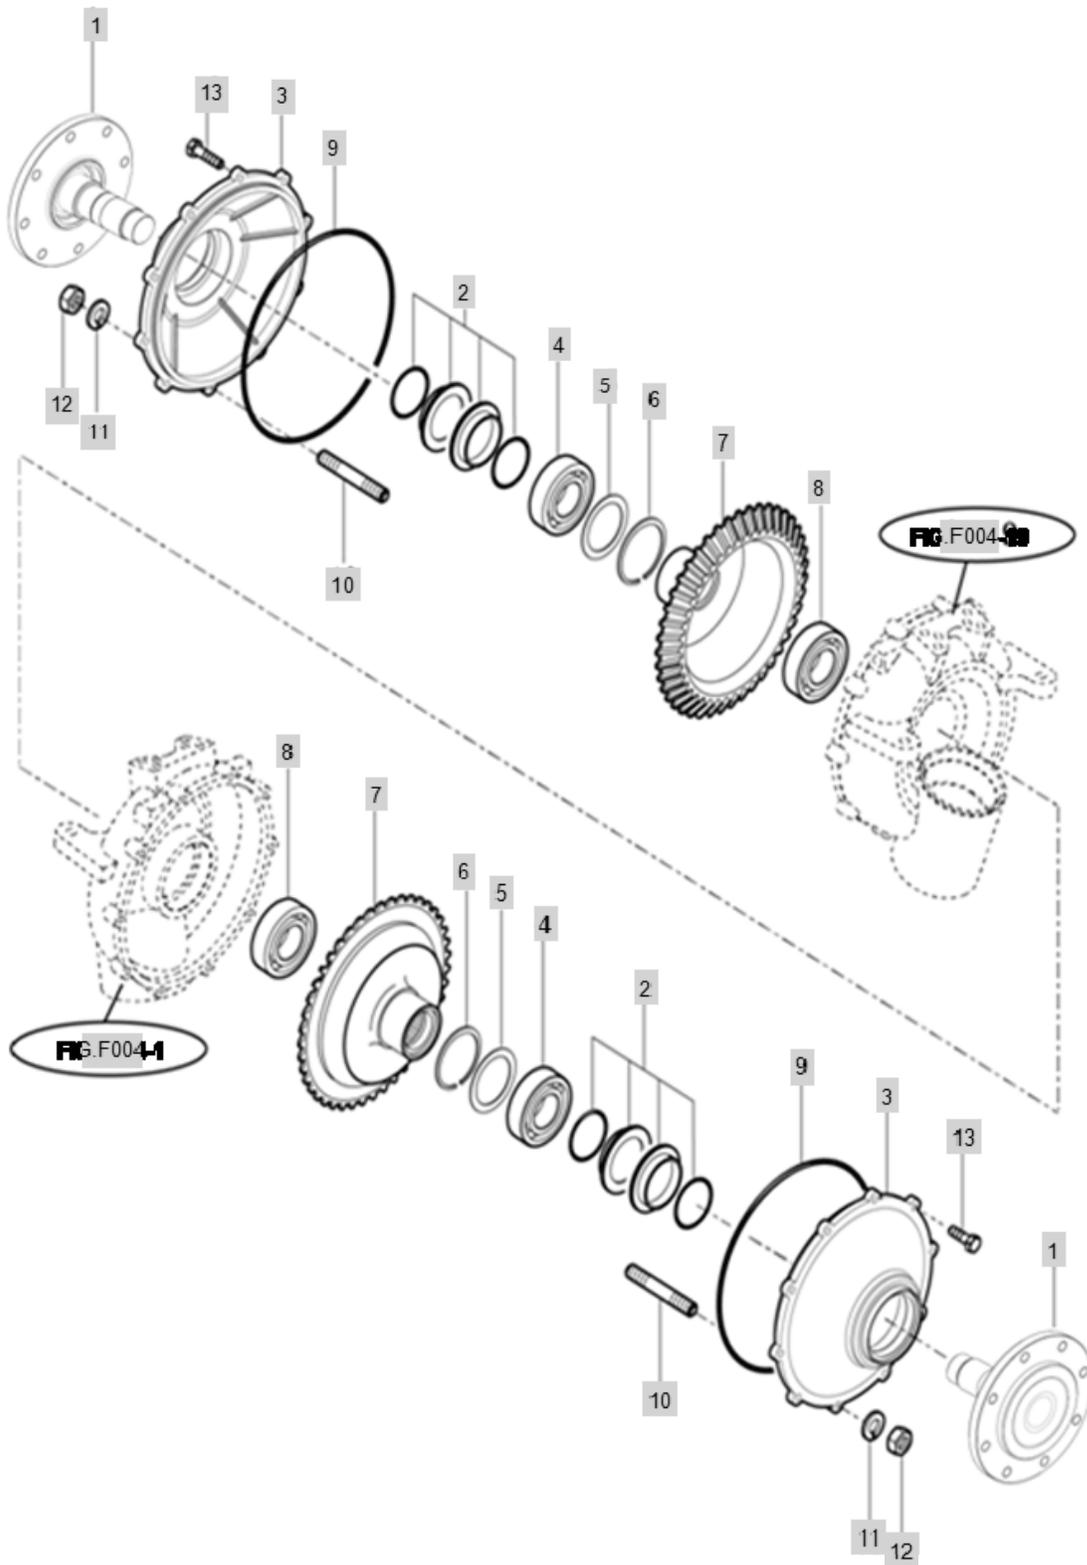




FIG F006-1

POWER STEERING CYLINDER

Year/Month

Branson 7845RP(US)

2020/02

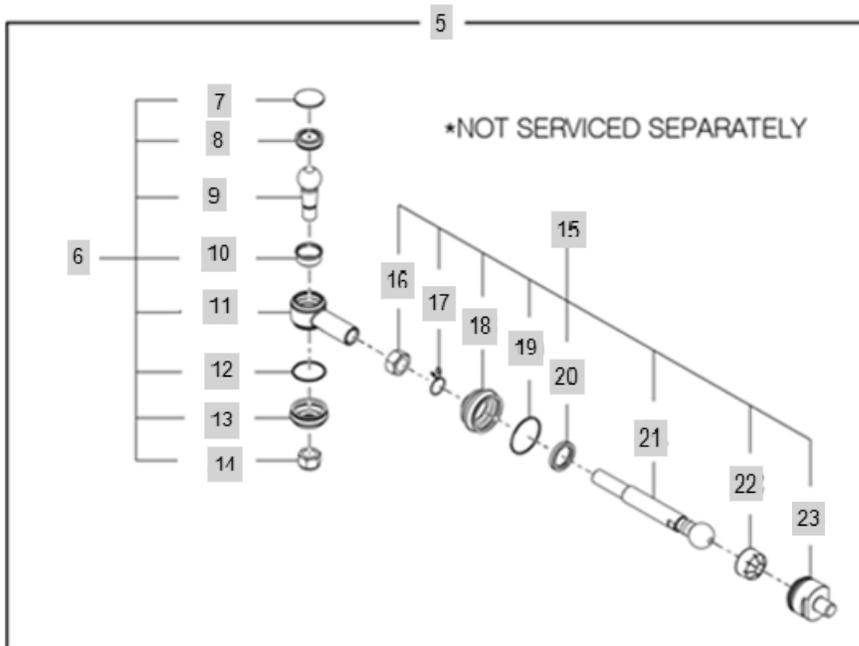
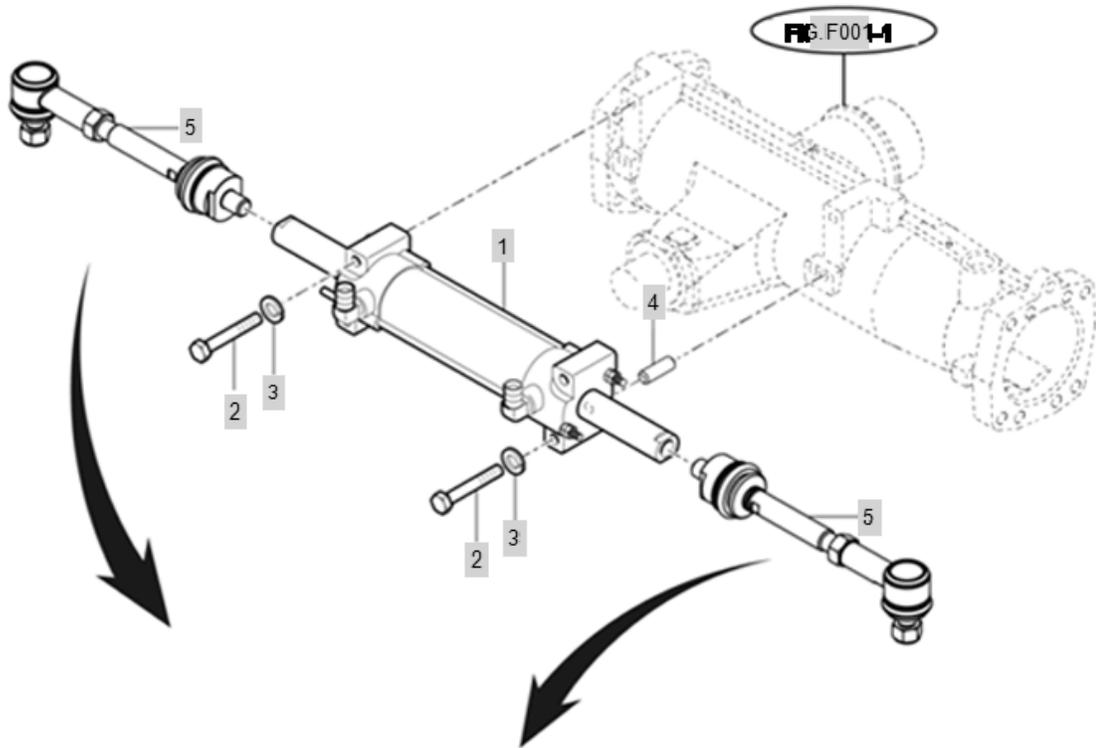




FIG F006-2

POWER STEERING CYLINDER(2019.04~)

Year/Month

Branson 7845RP(US)

2020/02

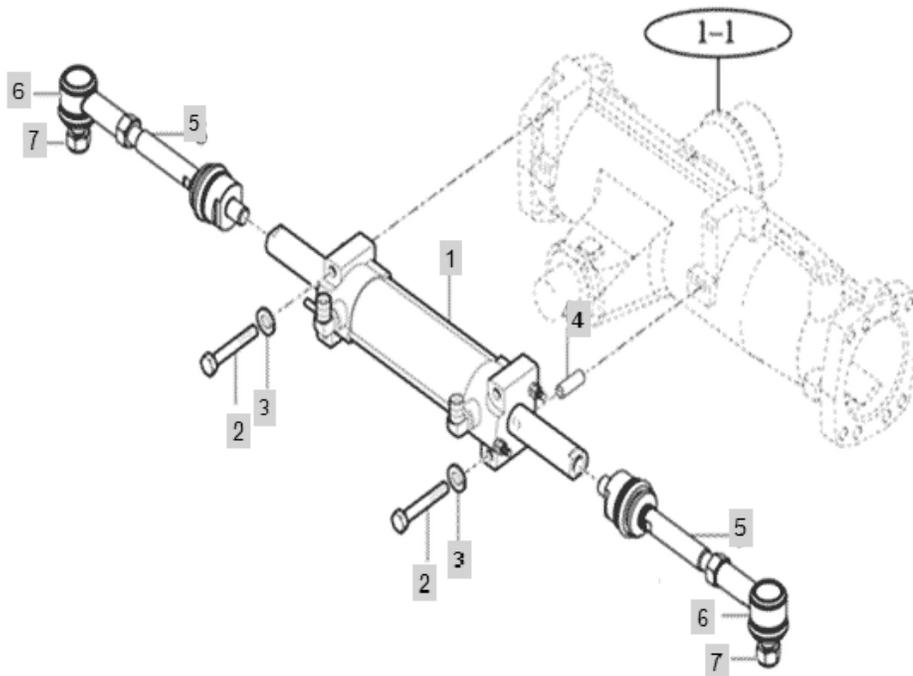




FIG T001

MAIN DRIVE SHAFT ASS'Y

Year/Month

Branson 7845RP(US)

2020/02

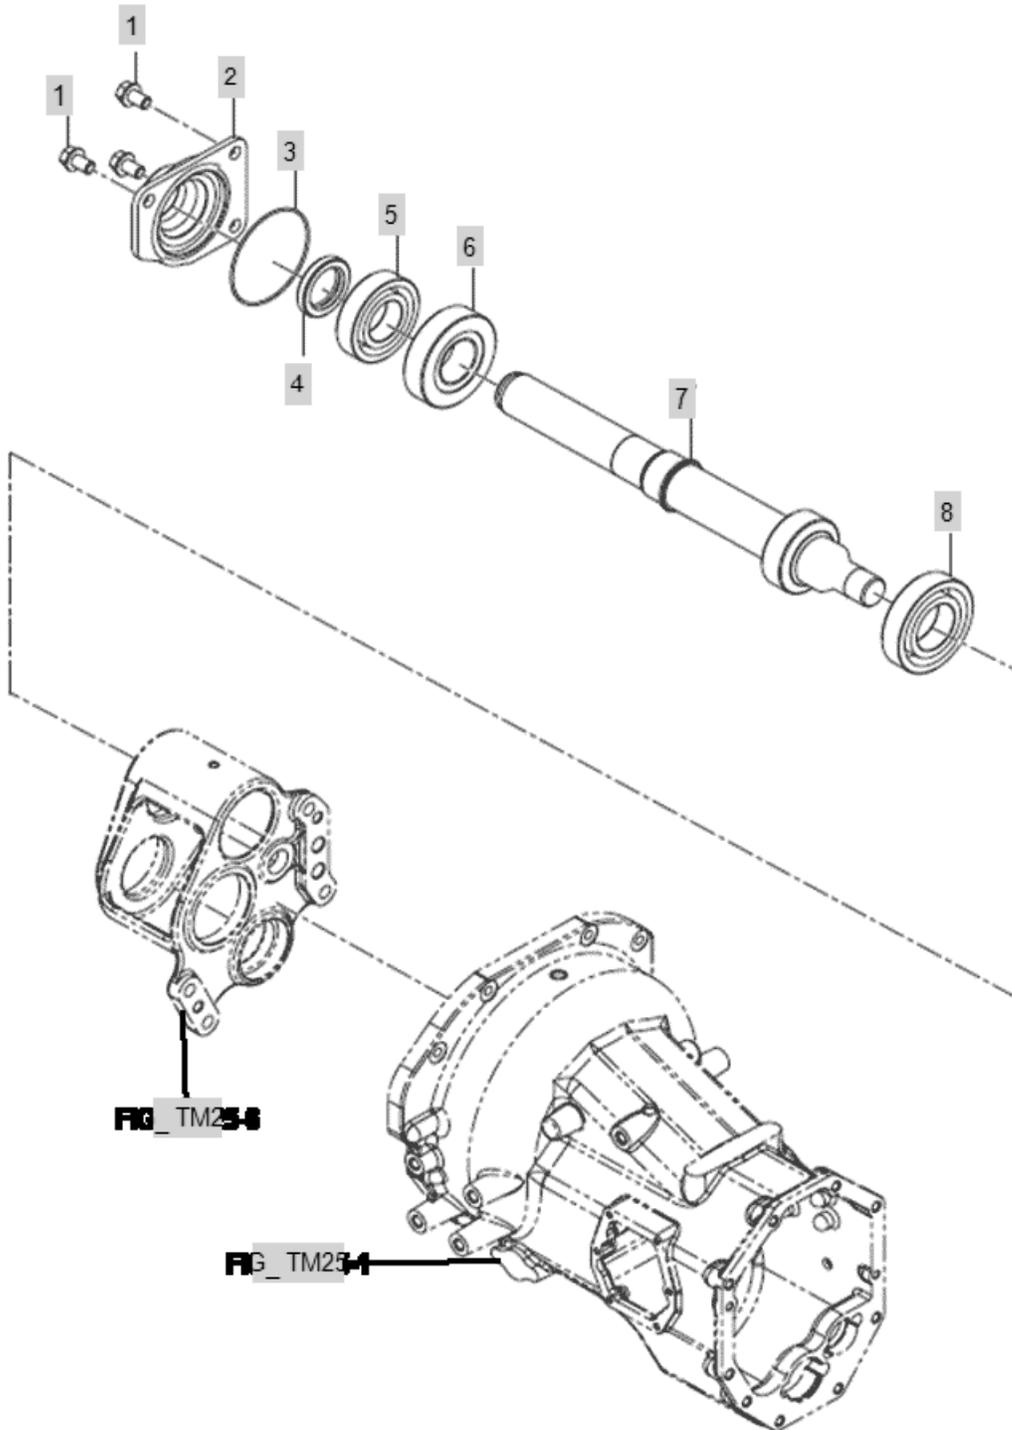




FIG T002

Branson 7845RP(US)

MAIN DRIVEN SHAFT ASS'Y

Year/Month

2020/02

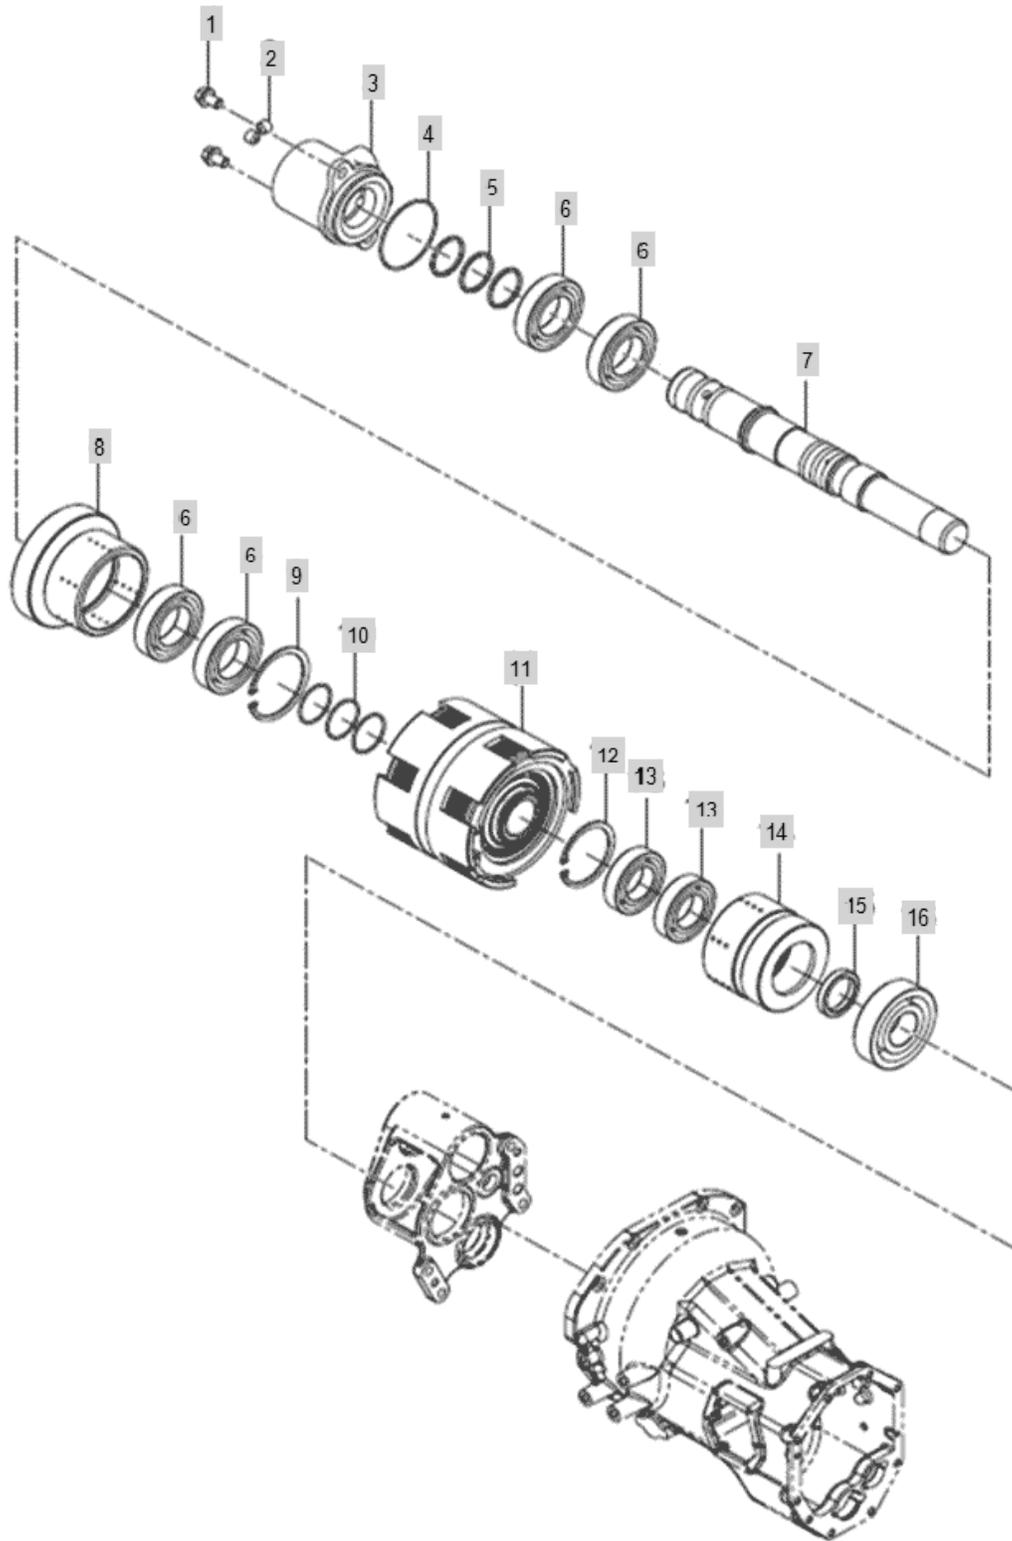




FIG T003

Branson 7845RP(US)

IDLE SHAFT ASS`Y

Year/Month

2020/02

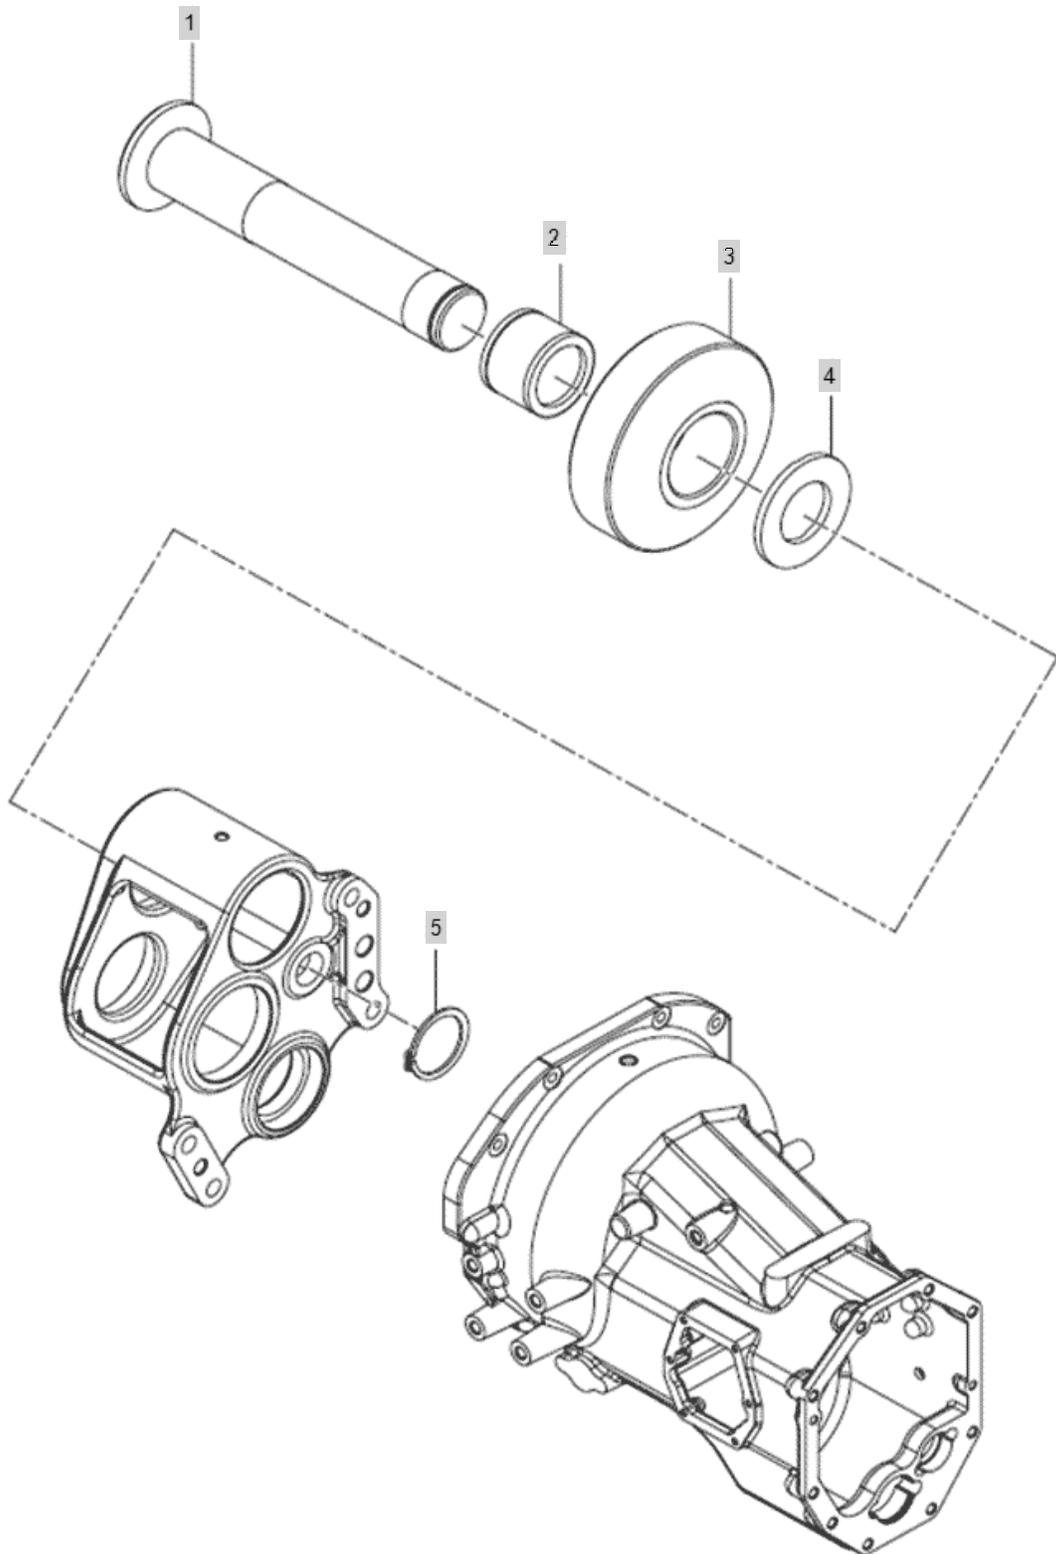




FIG T004

MAIN SHIFT DRIVE SHAFT ASS`Y

Year/Month

Branson 7845RP(US)

2020/02

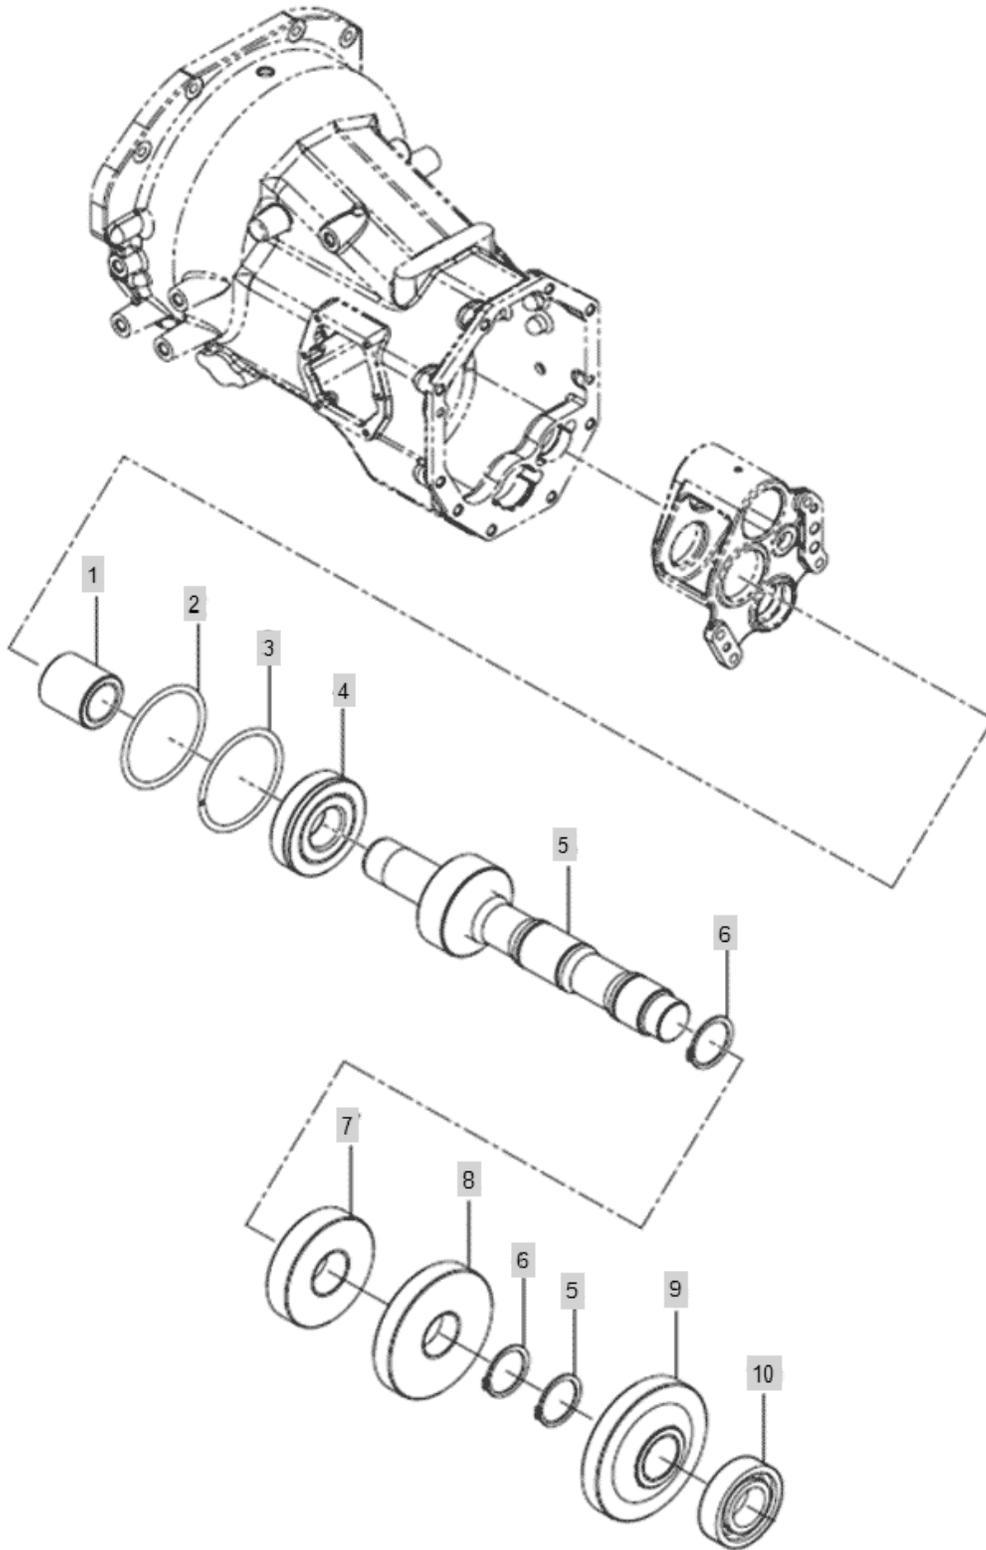




FIG T005

MAIN SHIFT DRIVEN SHAFT ASS'Y

Year/Month

Branson 7845RP(US)

2020/02

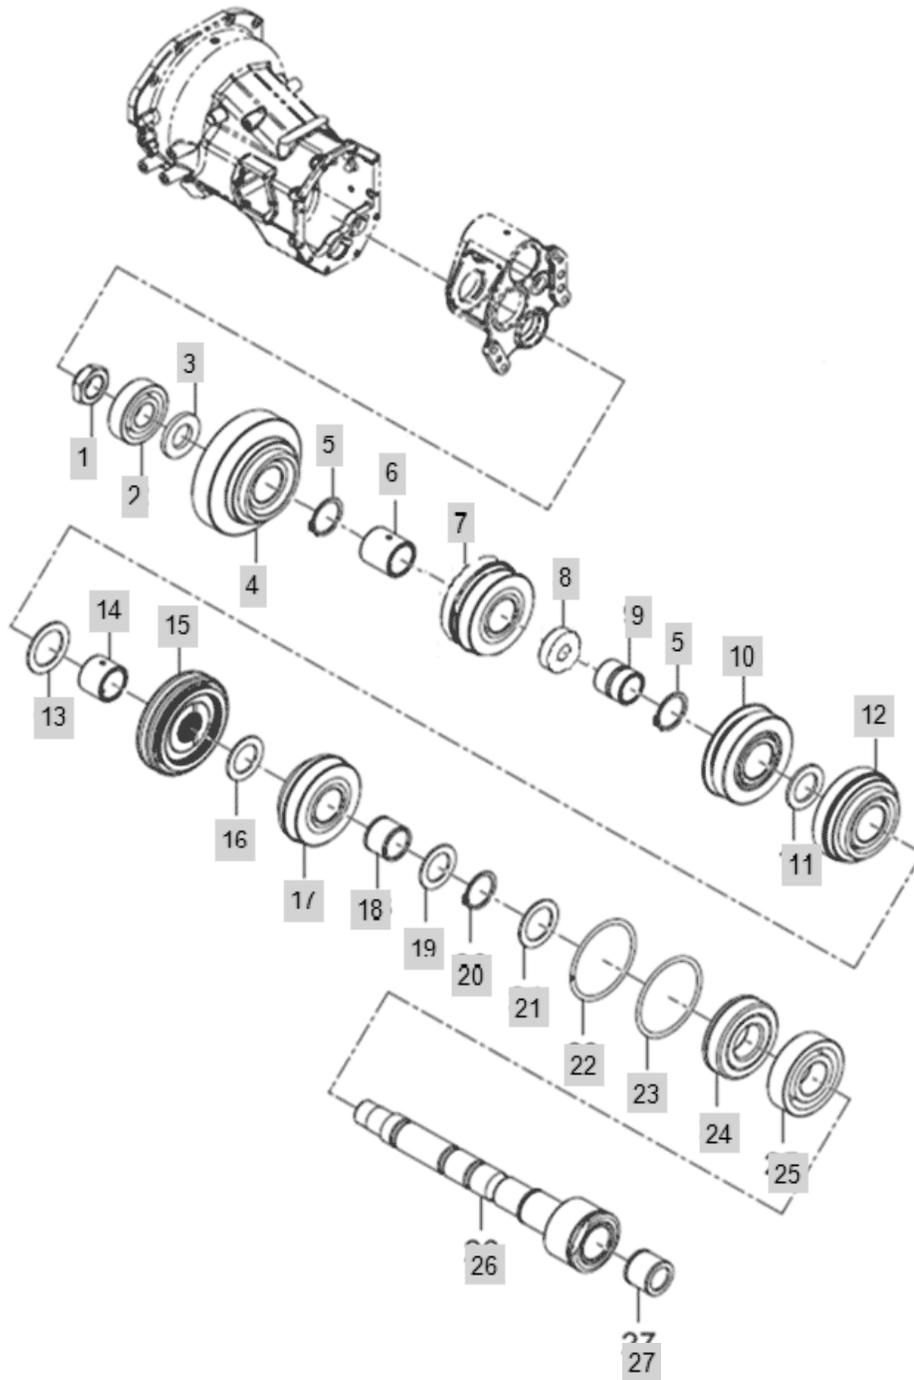




FIG T006-1

Branson 7845RP(US)

RANGE SHIFT DRIVE SHAFT

Year/Month

2020/02

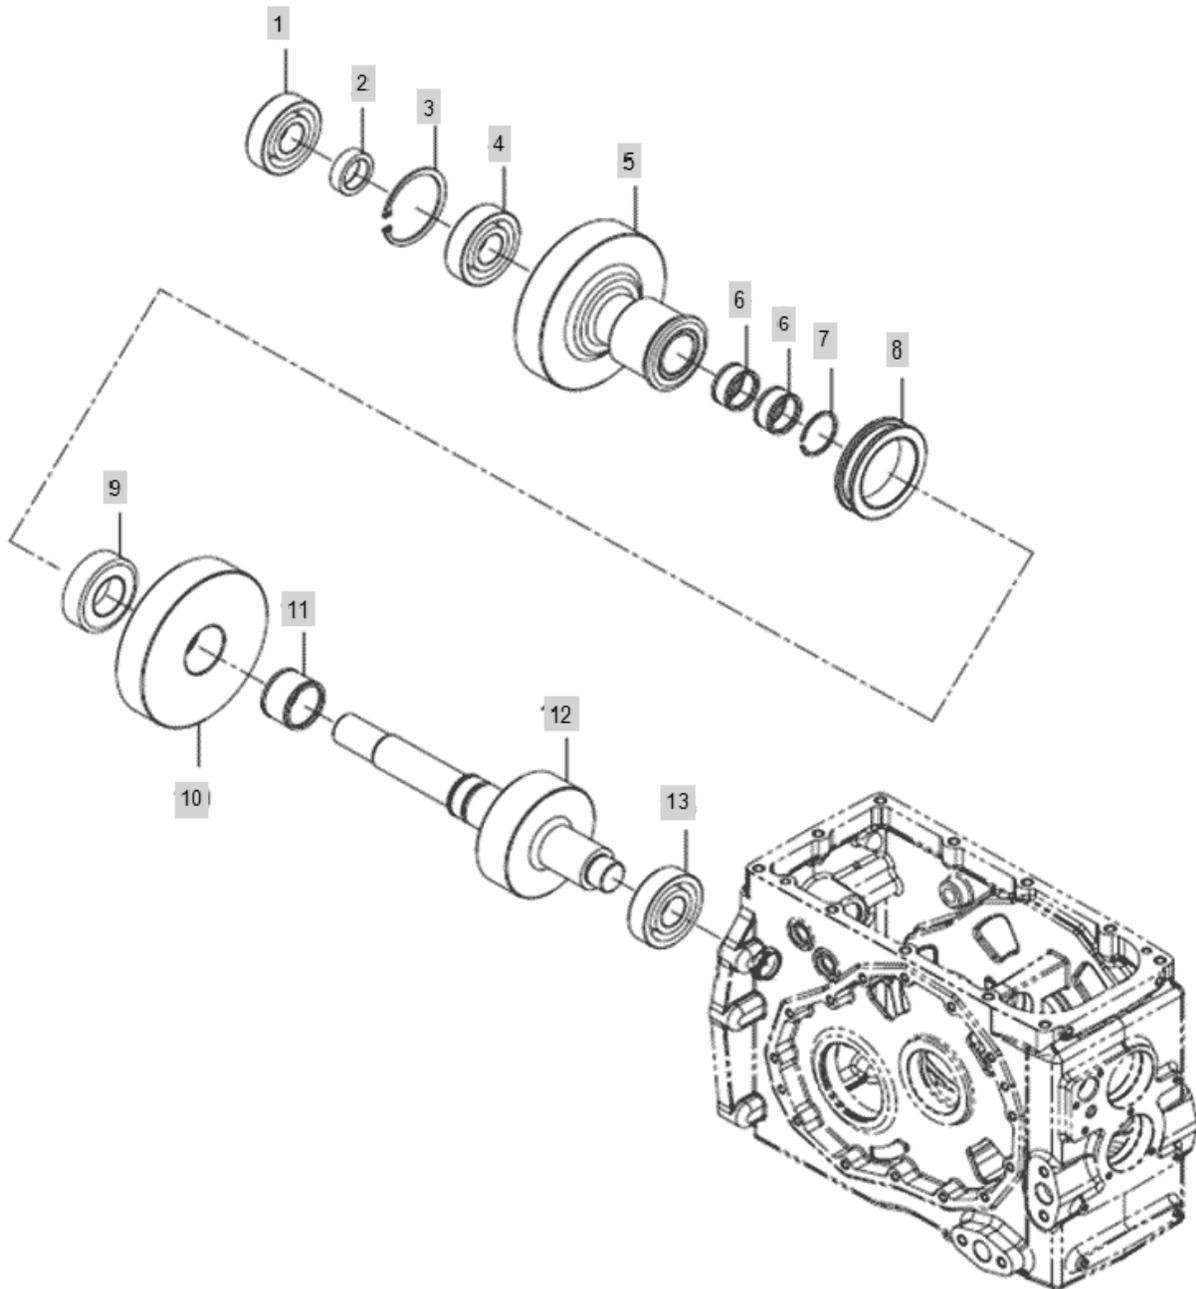




FIG T006-2

Branson 7845RP(US)

RANGE SHIFT DRIVE SHAFT(2019.04~)

Year/Month

2020/02

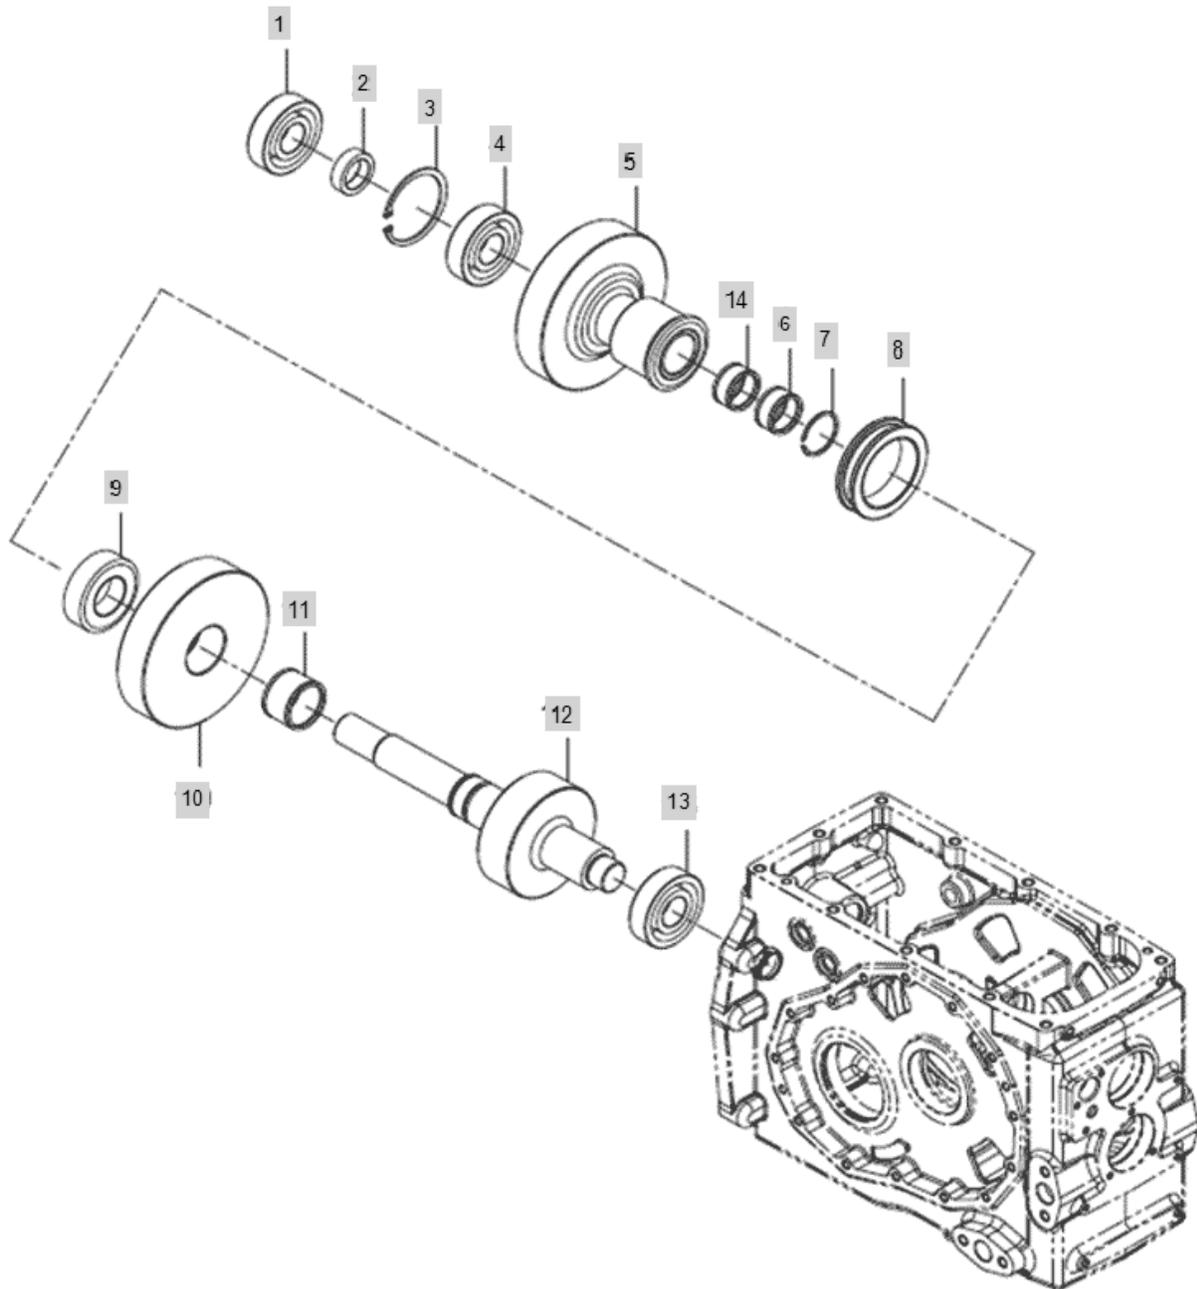




FIG T007

RANGE SHIFT DRIVEN SHAFT ASS'Y

Year/Month

Branson 7845RP(US)

2020/02

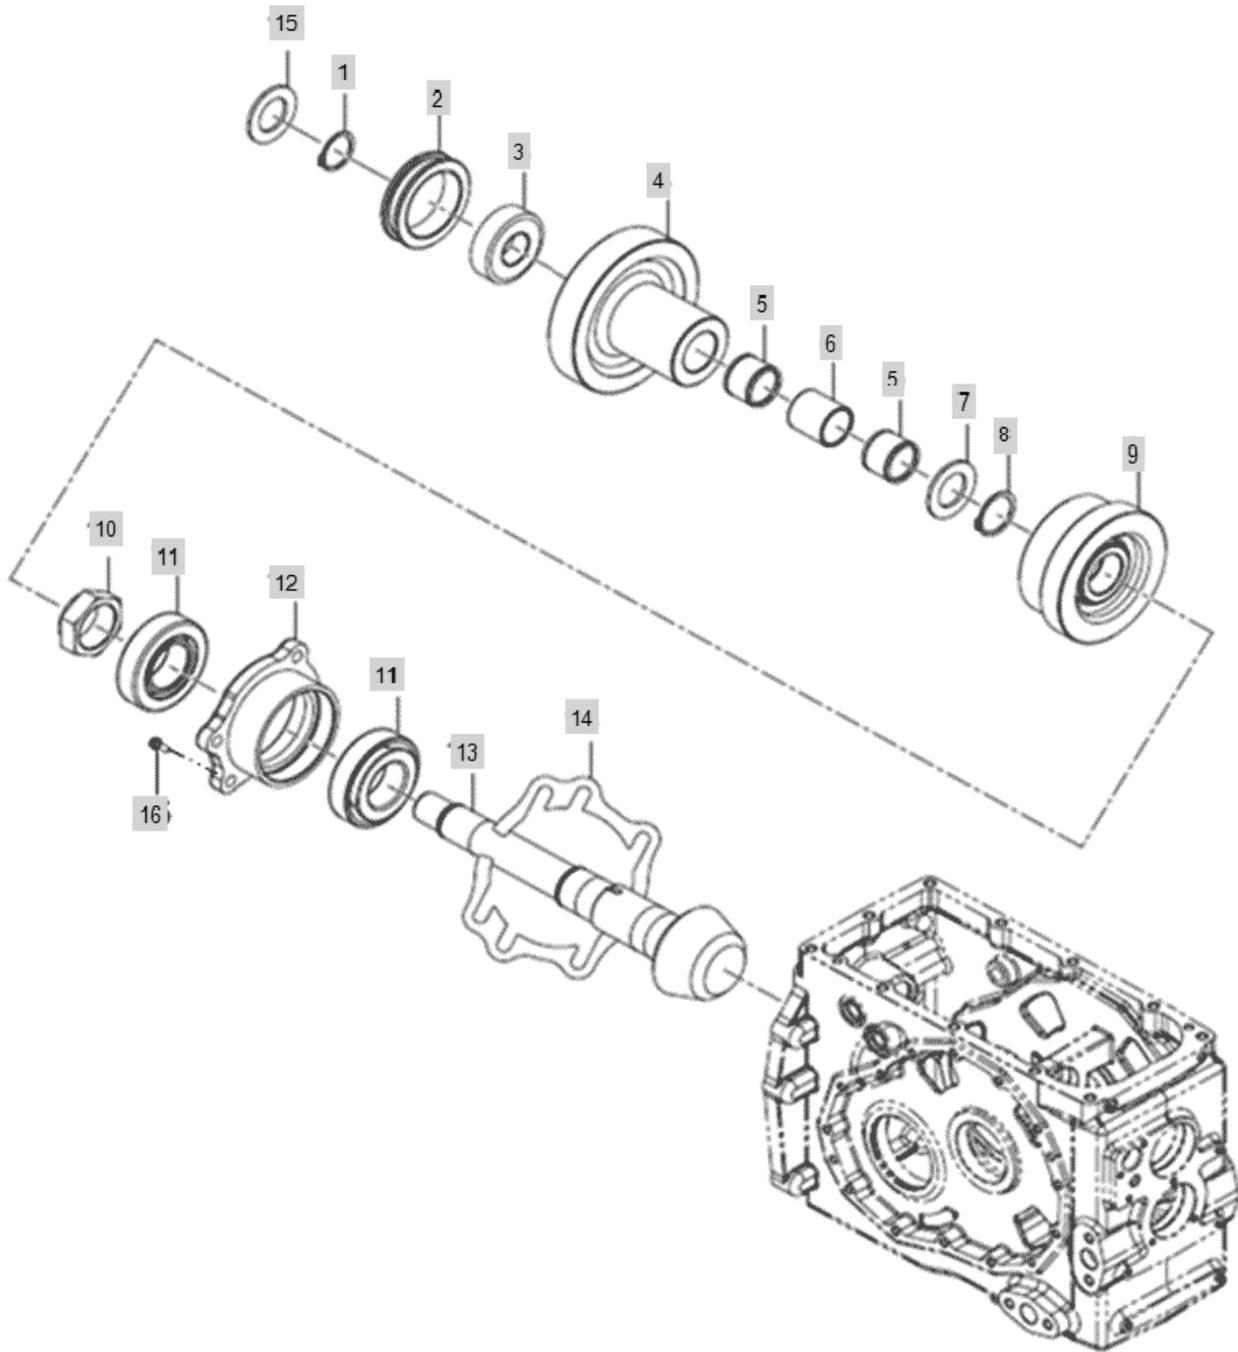




FIG T008

Branson 7845RP(US)

FRONT DRIVE CONNECTING SHAFT ASS'Y

Year/Month

2020/02

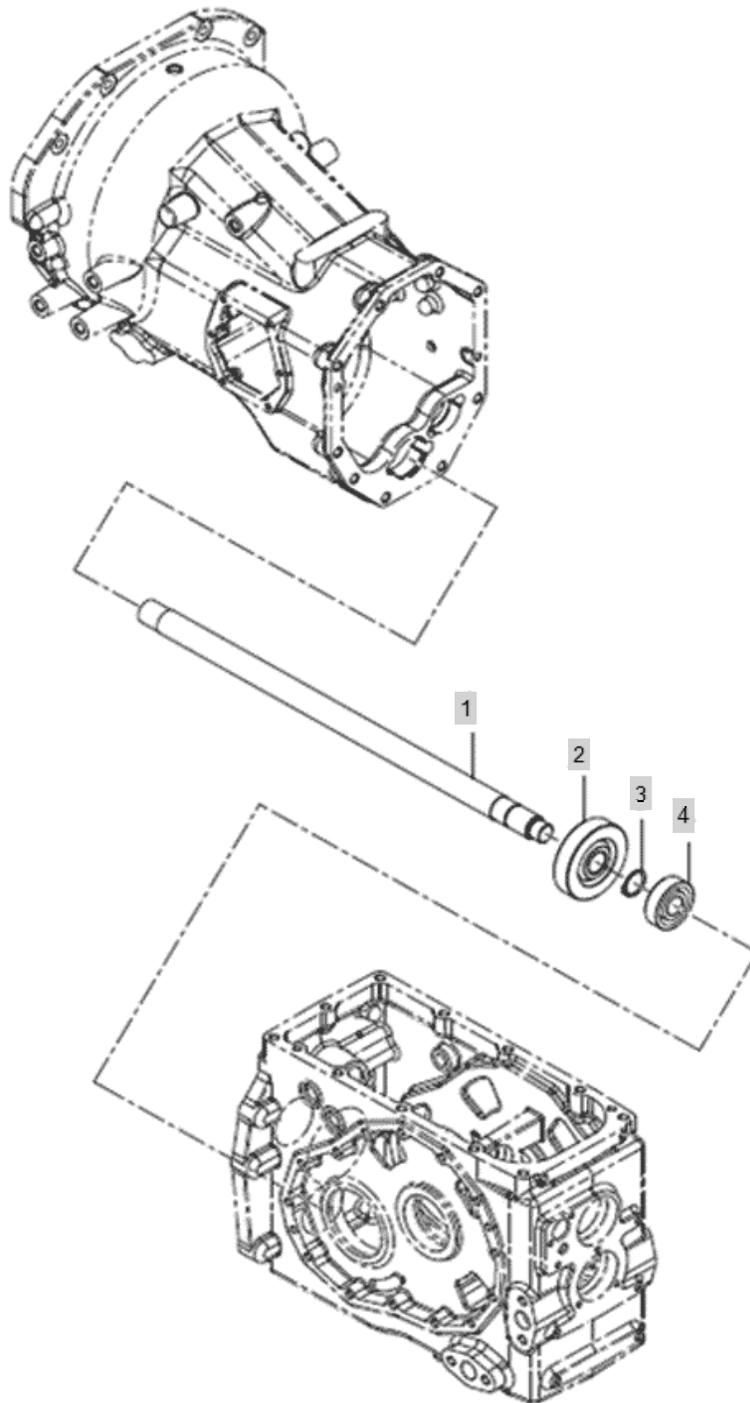




FIG T009

FRONT DRIVE SHAFT ASS'Y

Year/Month

Branson 7845RP(US)

2020/02

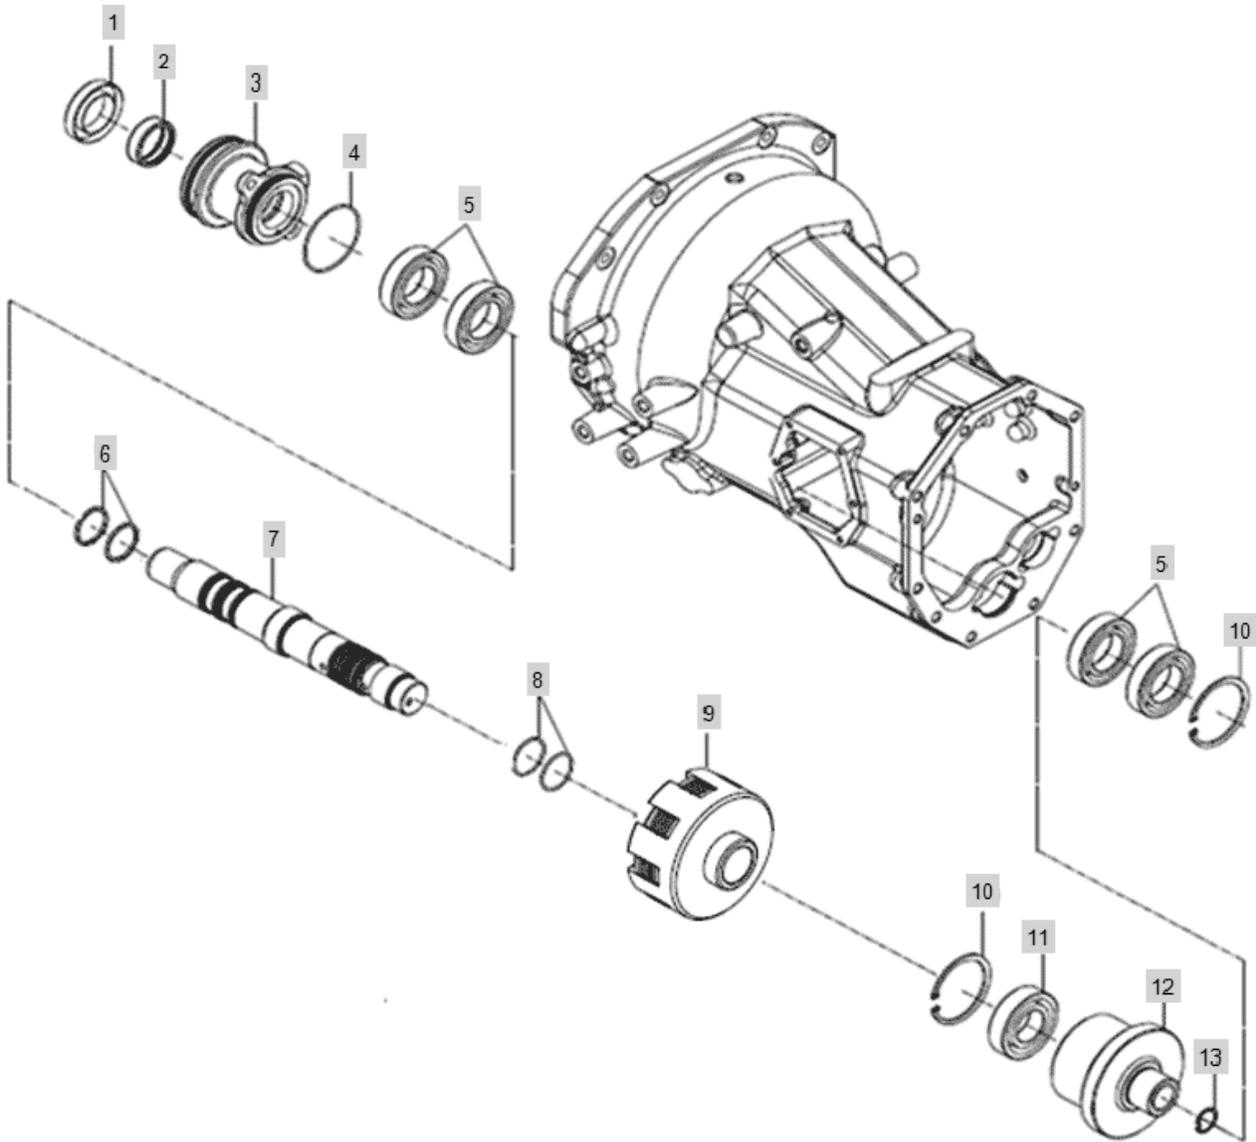




FIG T010

Branson 7845RP(US)

FRONT DRIVE IDLE SHAFT ASS'Y

Year/Month

2020/02

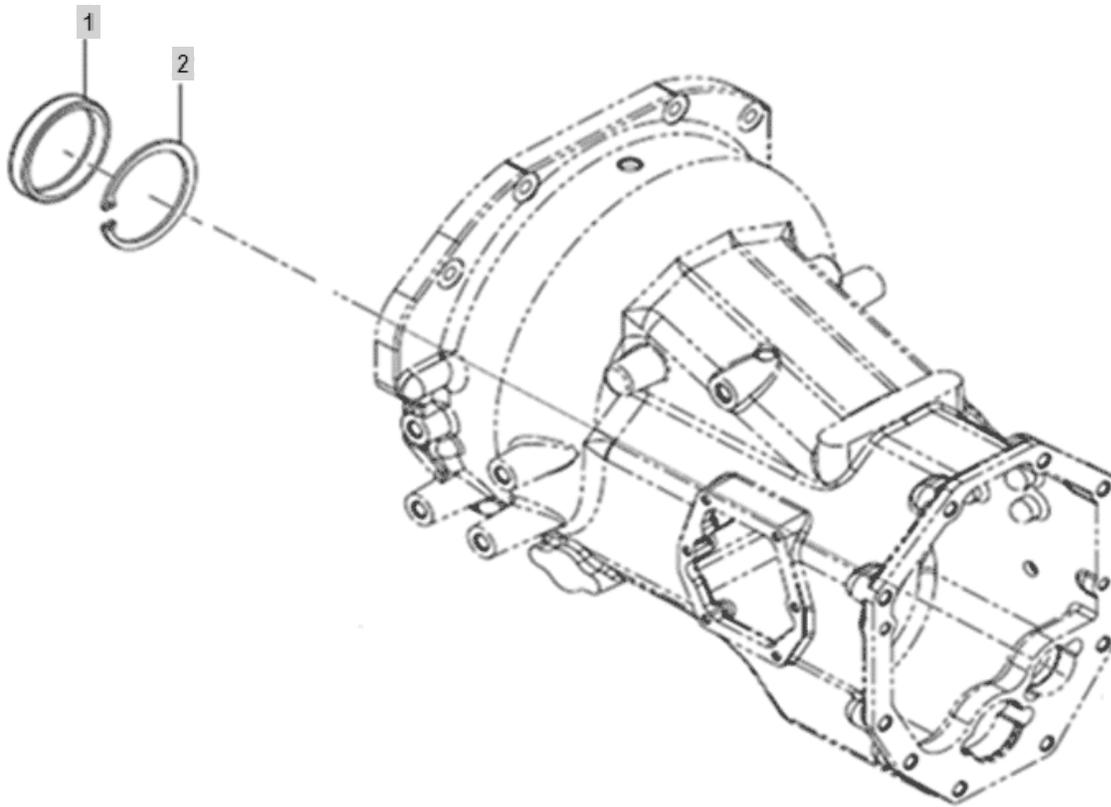




FIG T011

Branson 7845RP(US)

PTO CONNECTING SHAFT ASS'Y)

Year/Month

2020/02

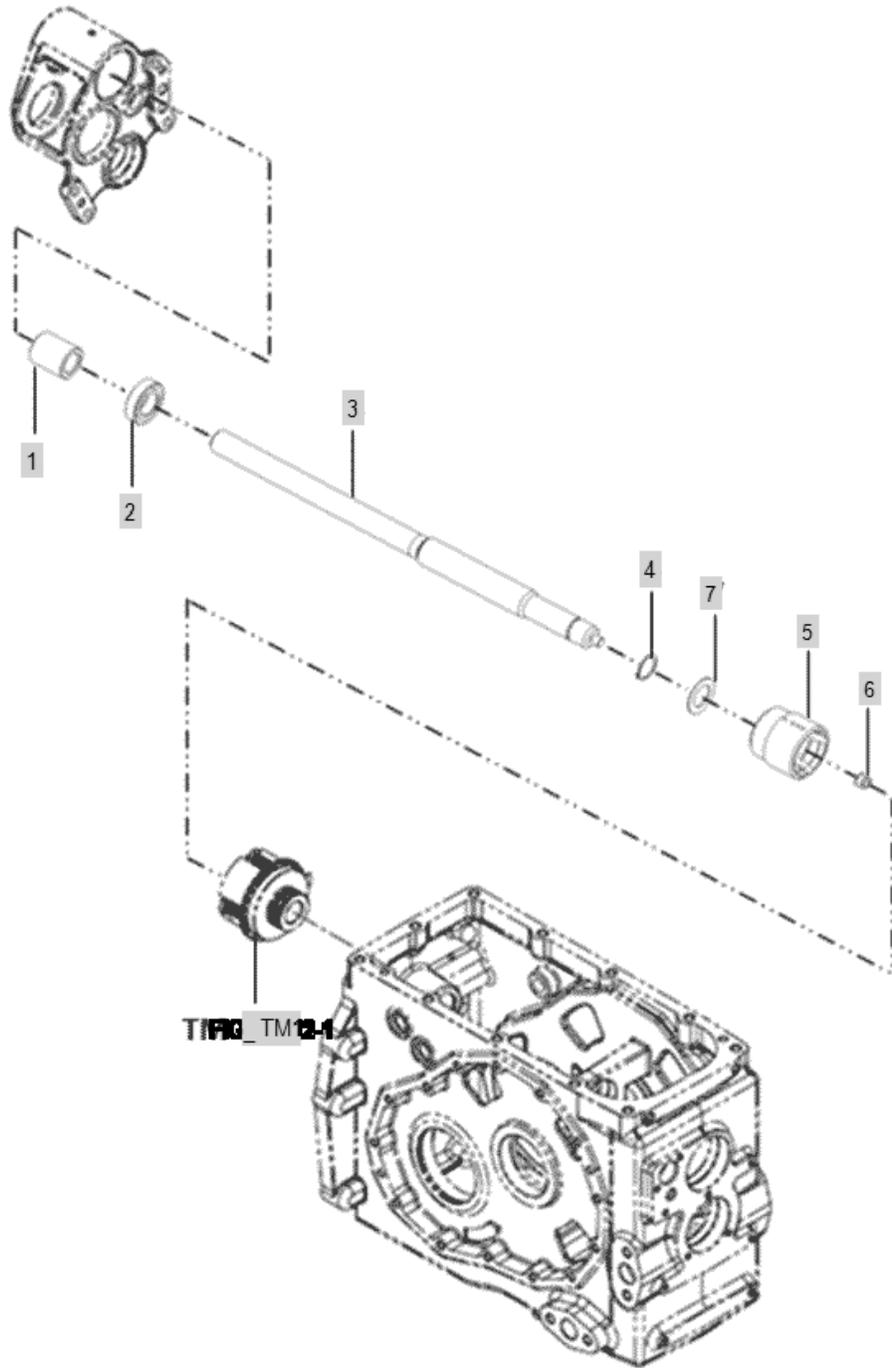




FIG T012

Branson 7845RP(US)

PTO CLUTCH SHAFT ASS'Y

Year/Month

2020/02

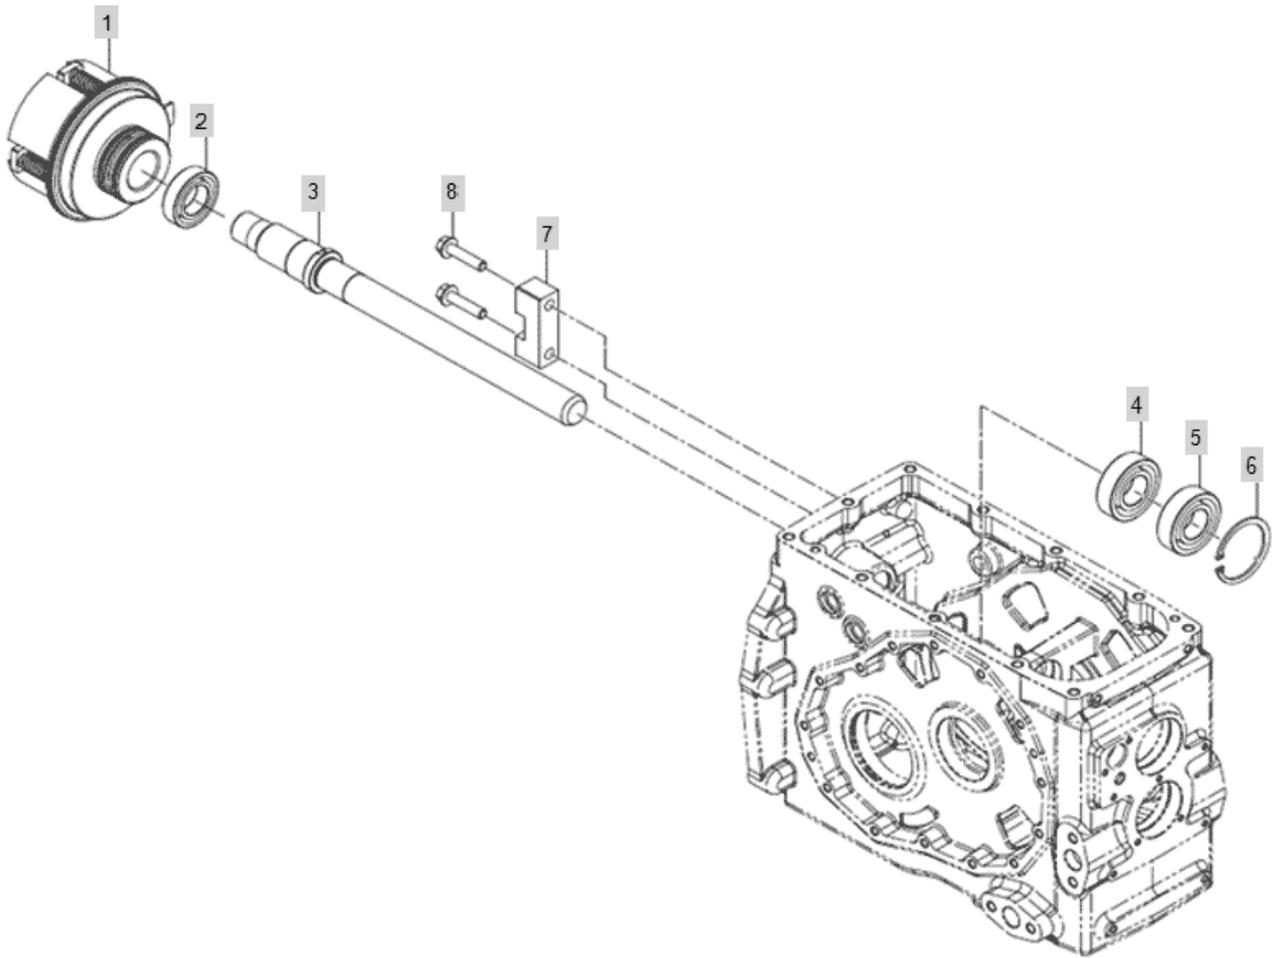




FIG T013

Branson 7845RP(US)

PTO DRIVE SHAFT ASS'Y

Year/Month

2020/02

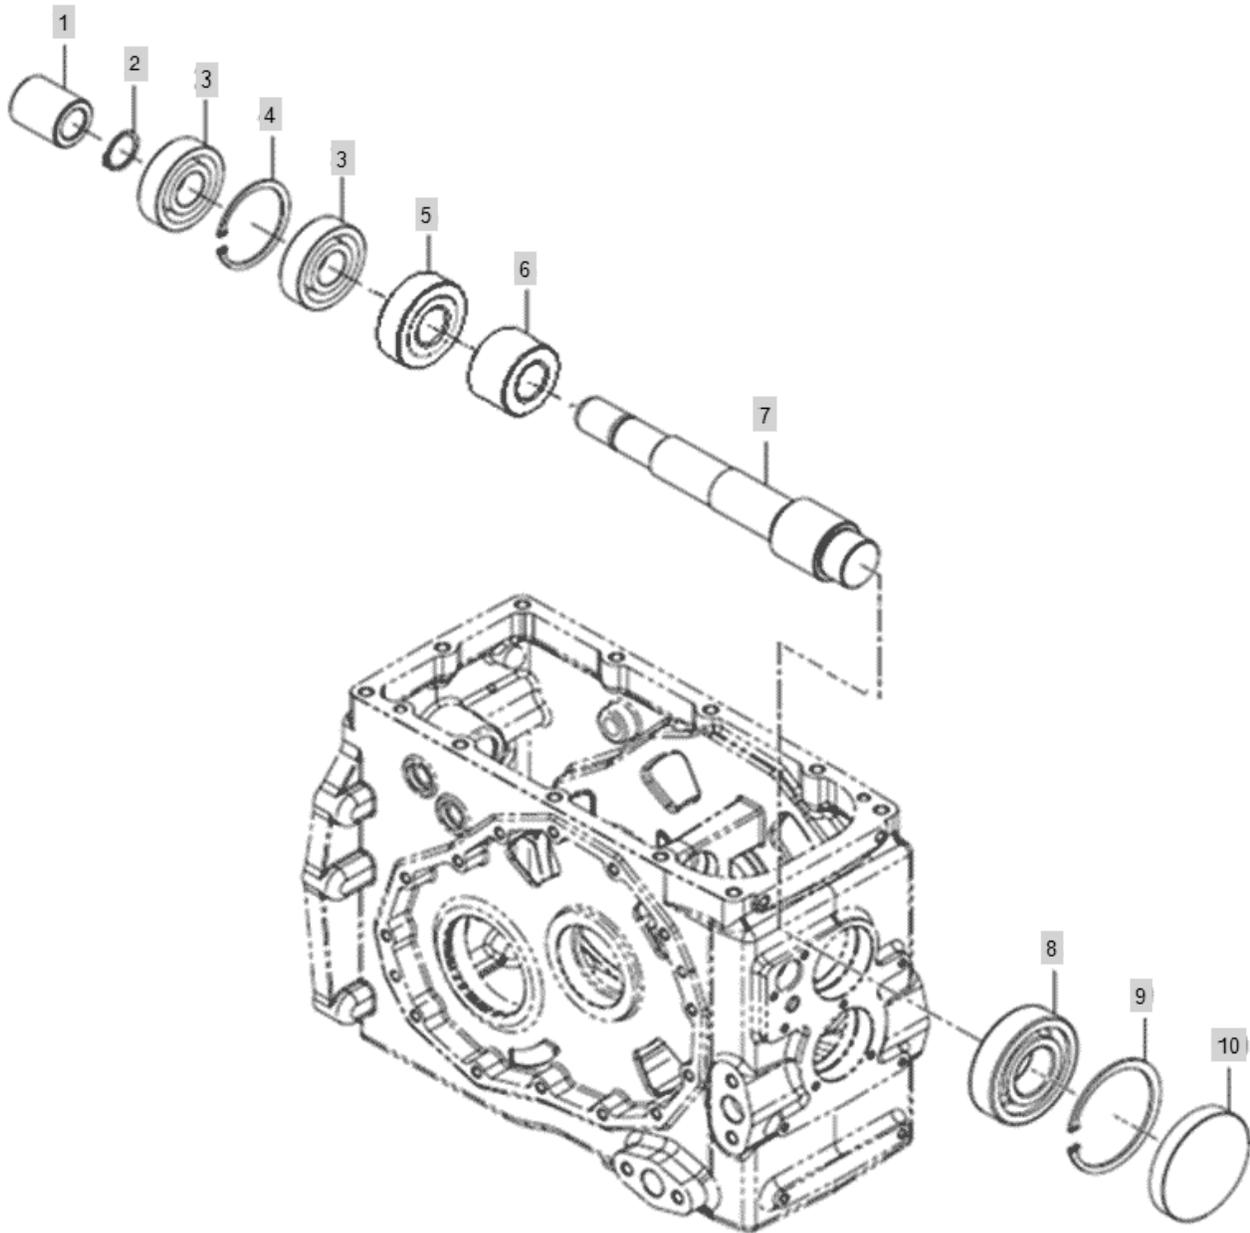




FIG T014

Branson 7845RP(US)

PTO DRIVEN SHAFT ASS'Y

Year/Month

2020/02

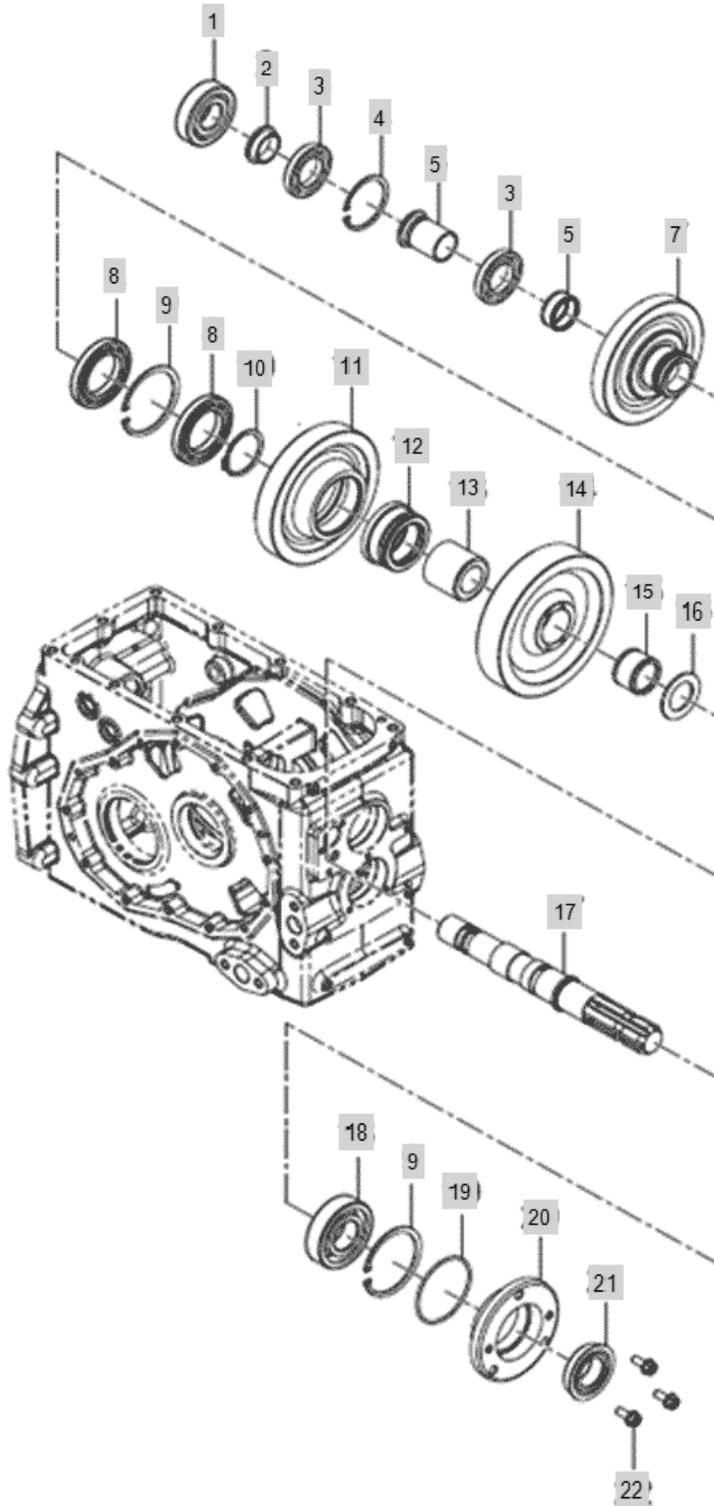




FIG T015

DIFFERENTIAL ASS'Y

Year/Month

Branson 7845RP(US)

2020/02

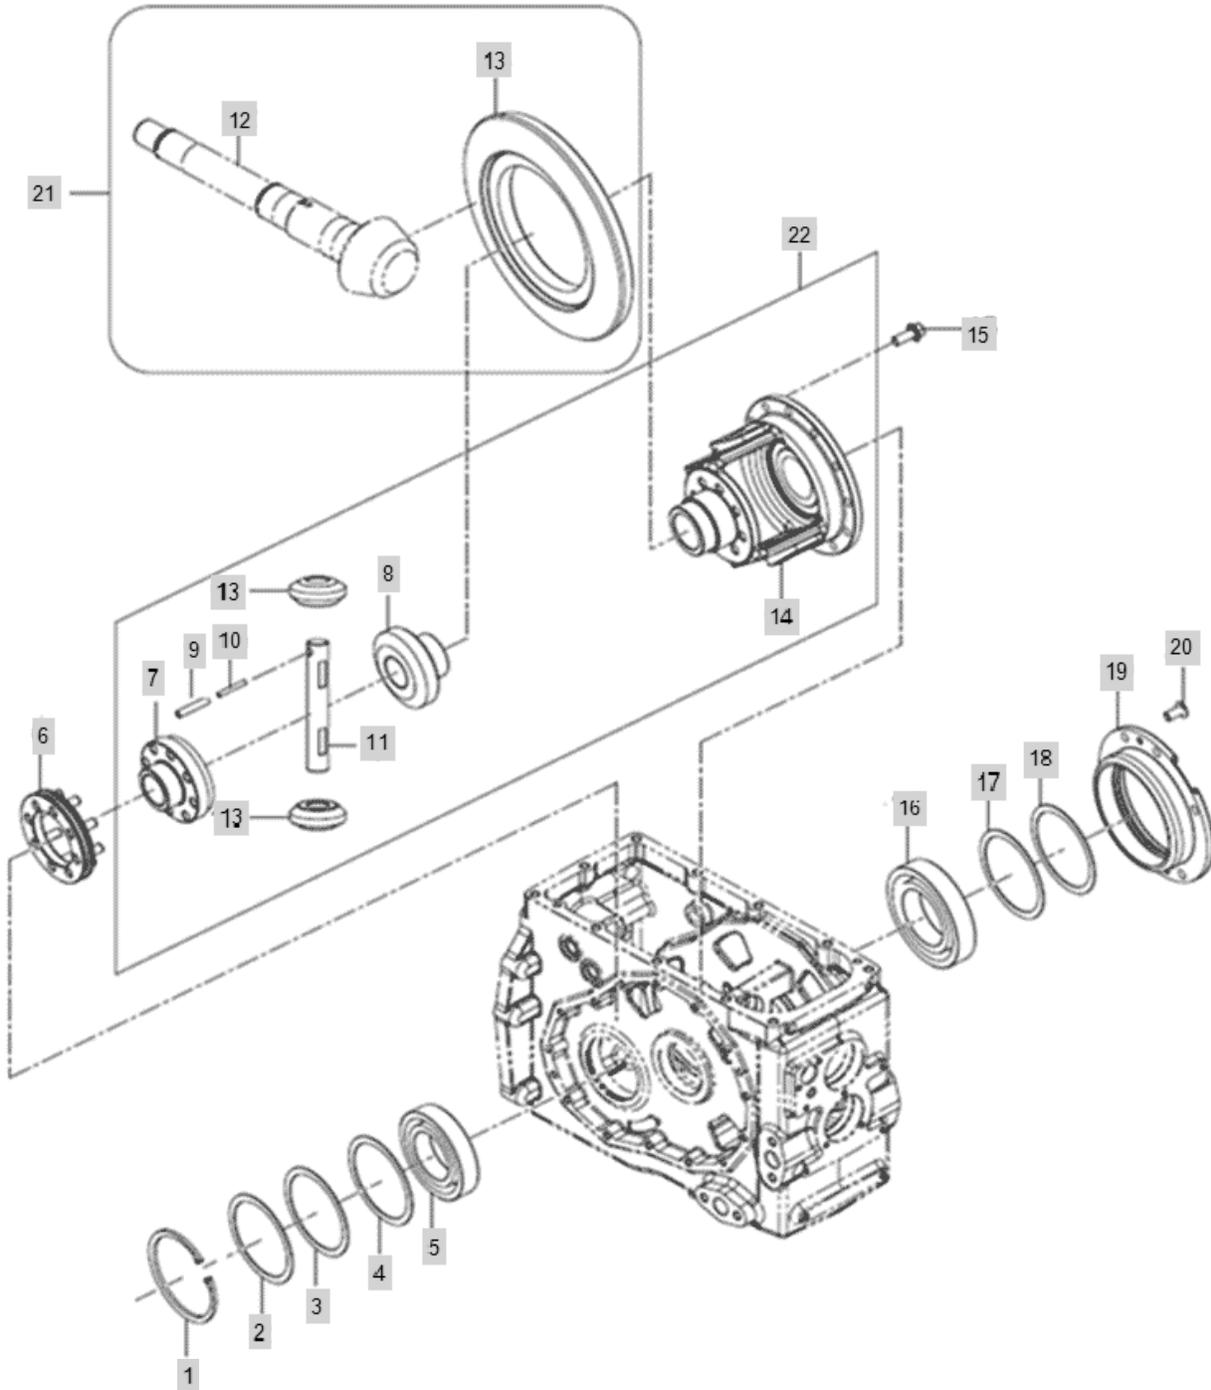




FIG T016

Branson 7845RP(US)

REAR AXLE HOUSING ASS'Y

Year/Month

2020/02

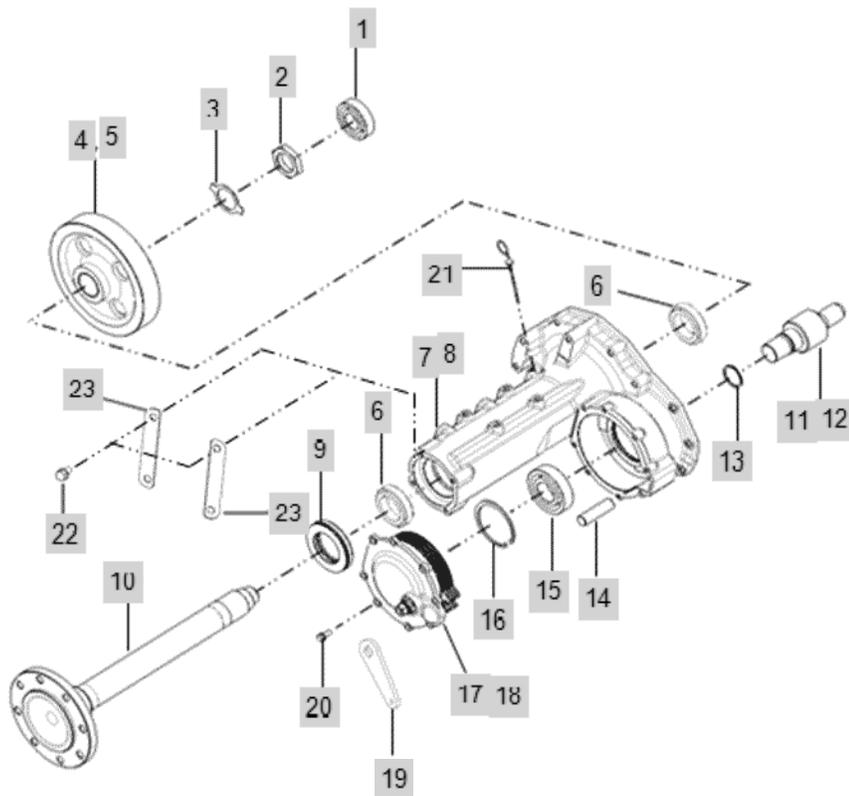




FIG T017

Branson 7845RP(US)

HYDRAULIC CYLINDER CASE ASS'Y -AP

Year/Month

2020/02

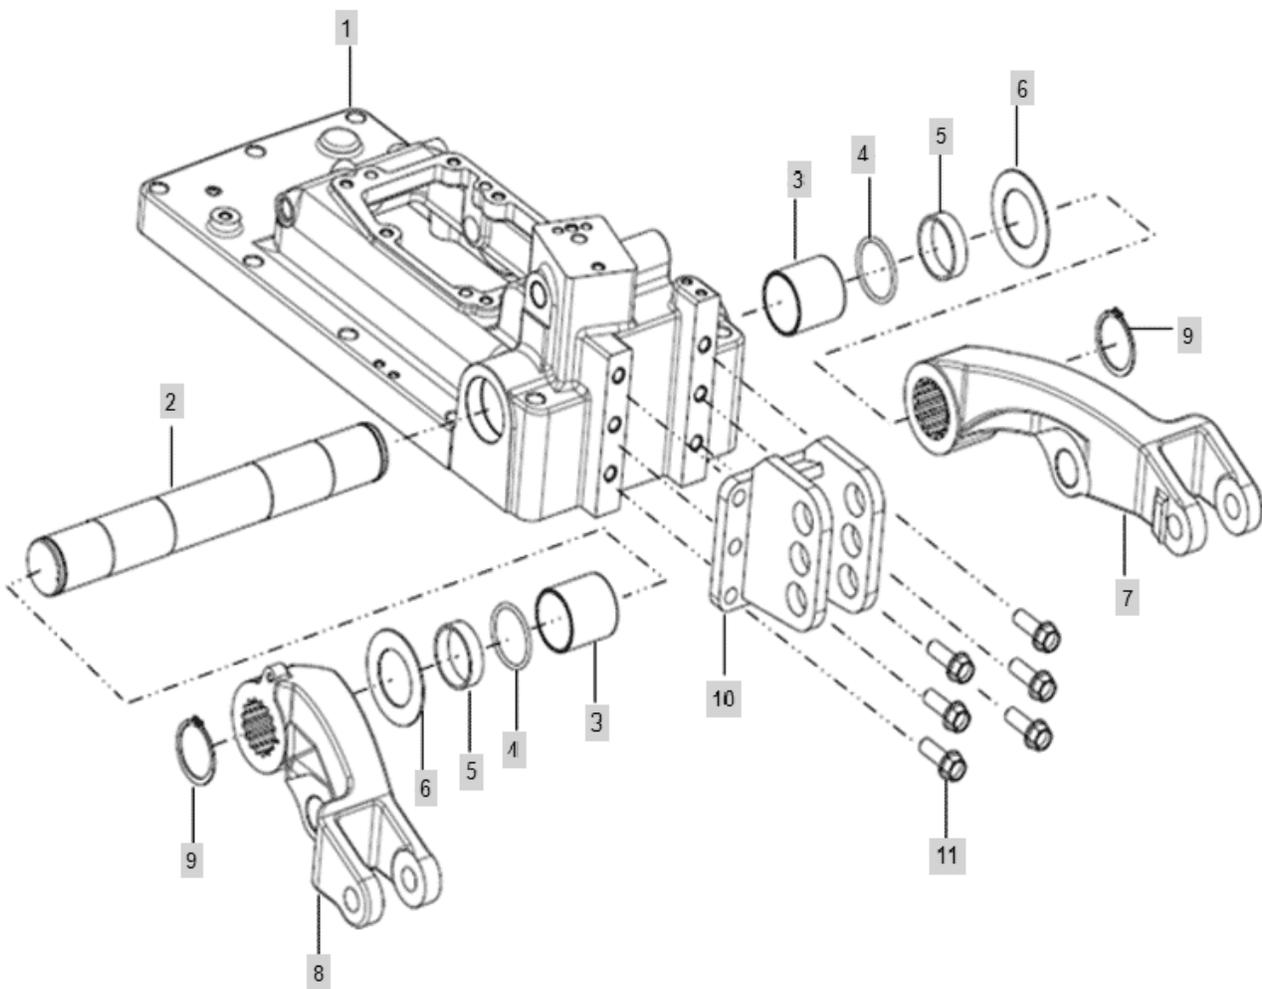




FIG T018

Branson 7845RP(US)

MAIN SHIFT CASE ASS'Y

Year/Month

2020/02

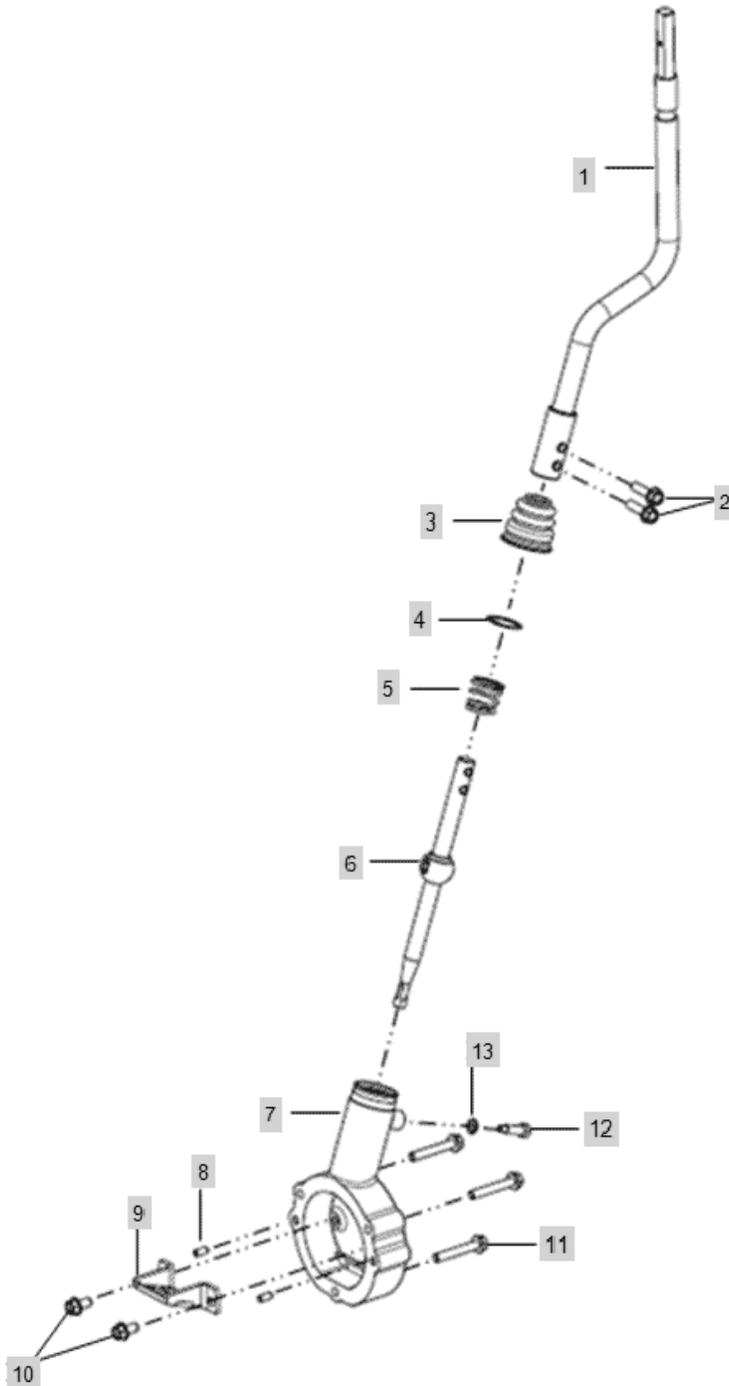




FIG T019

Branson 7845RP(US)

RANGE SHIFT CASE ASS'Y

Year/Month

2020/02

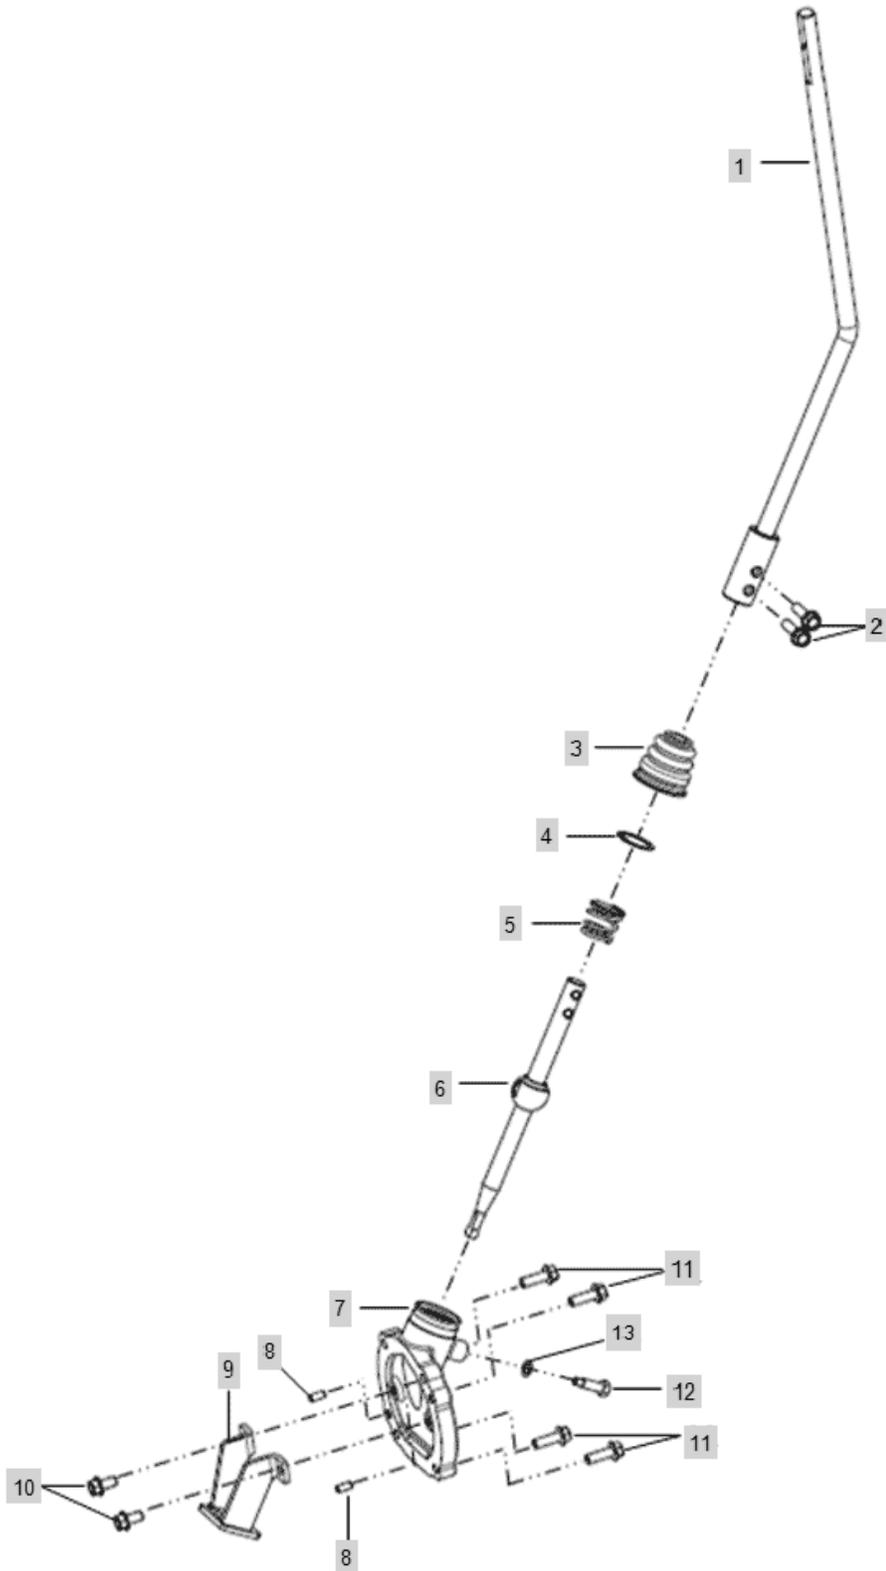




FIG T020

Branson 7845RP(US)

HYDRAULIC CYLINDER ASS'Y

Year/Month

2020/02

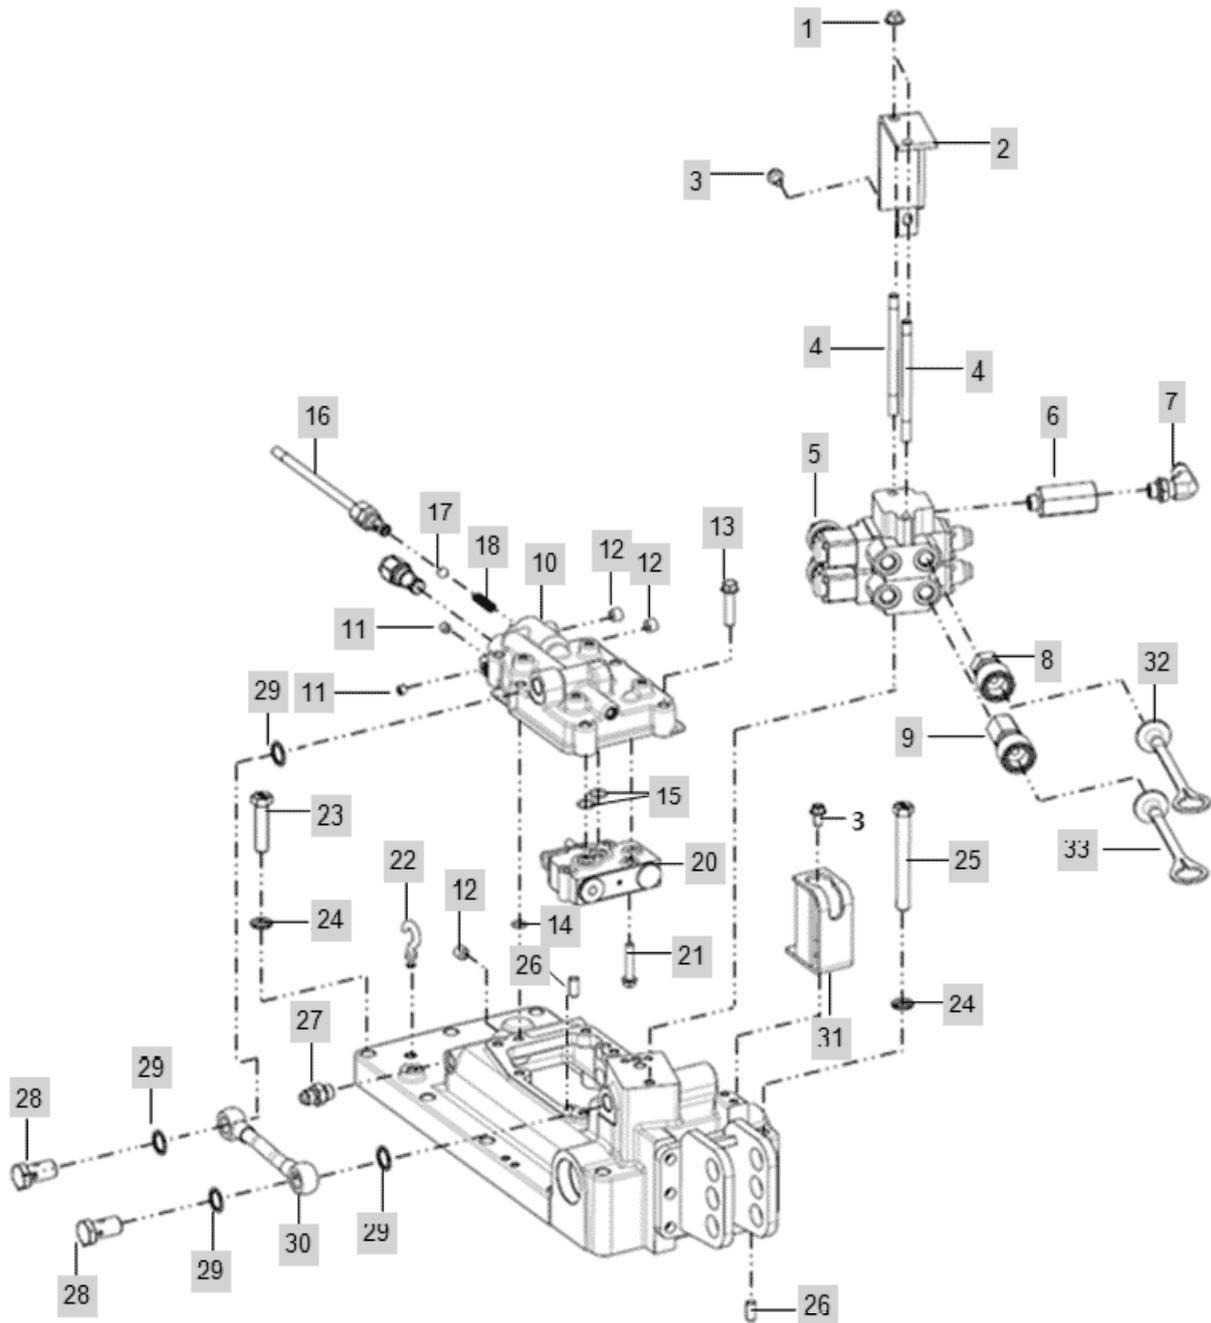




FIG T021

MAIN SHIFT RELATION

Year/Month

Branson 7845RP(US)

2020/02

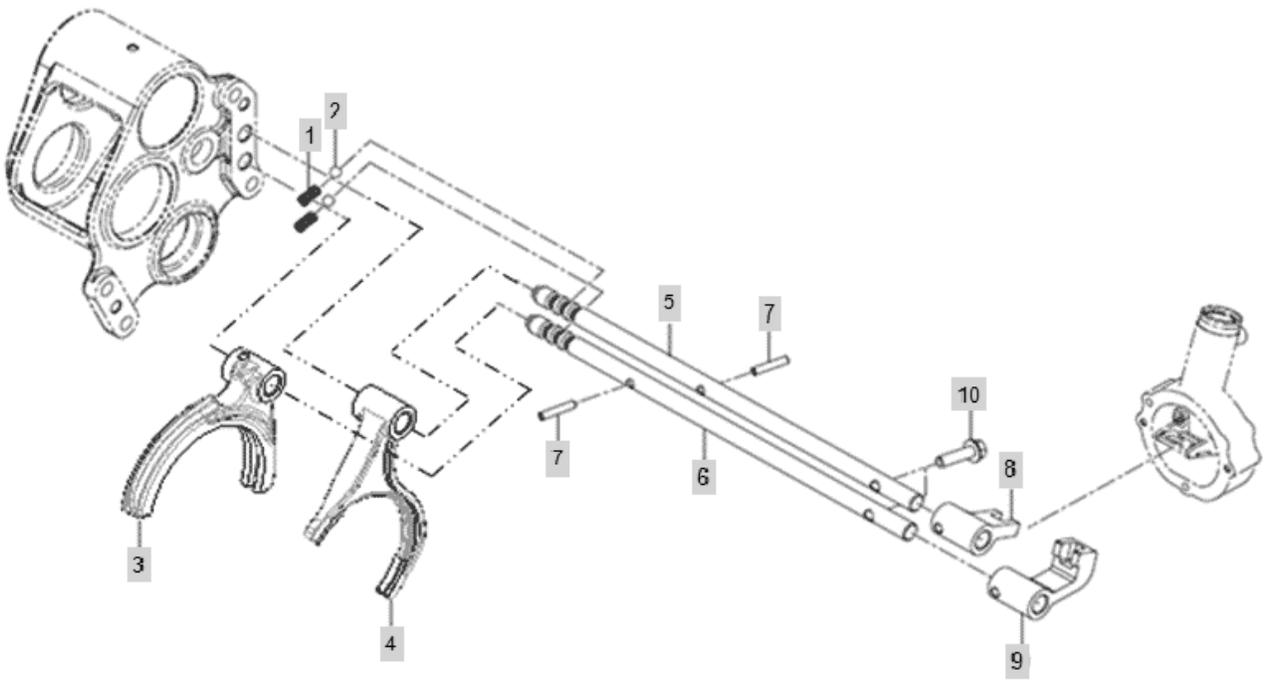




FIG T022

Branson 7845RP(US)

RANGE SHIFT RELATION

Year/Month

2020/02

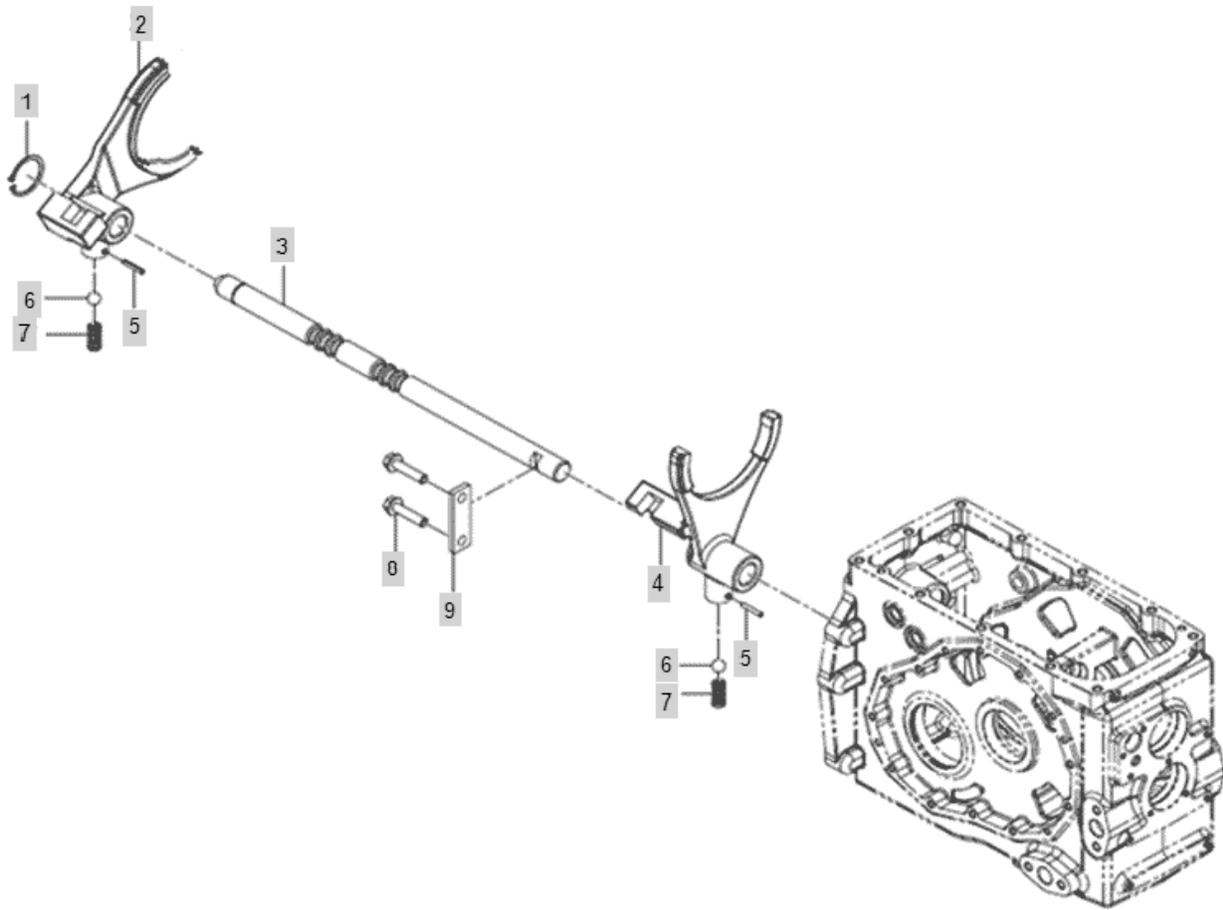




FIG T023

Branson 7845RP(US)

DIFFERENTIAL SHIFT ASS'Y

Year/Month

2020/02

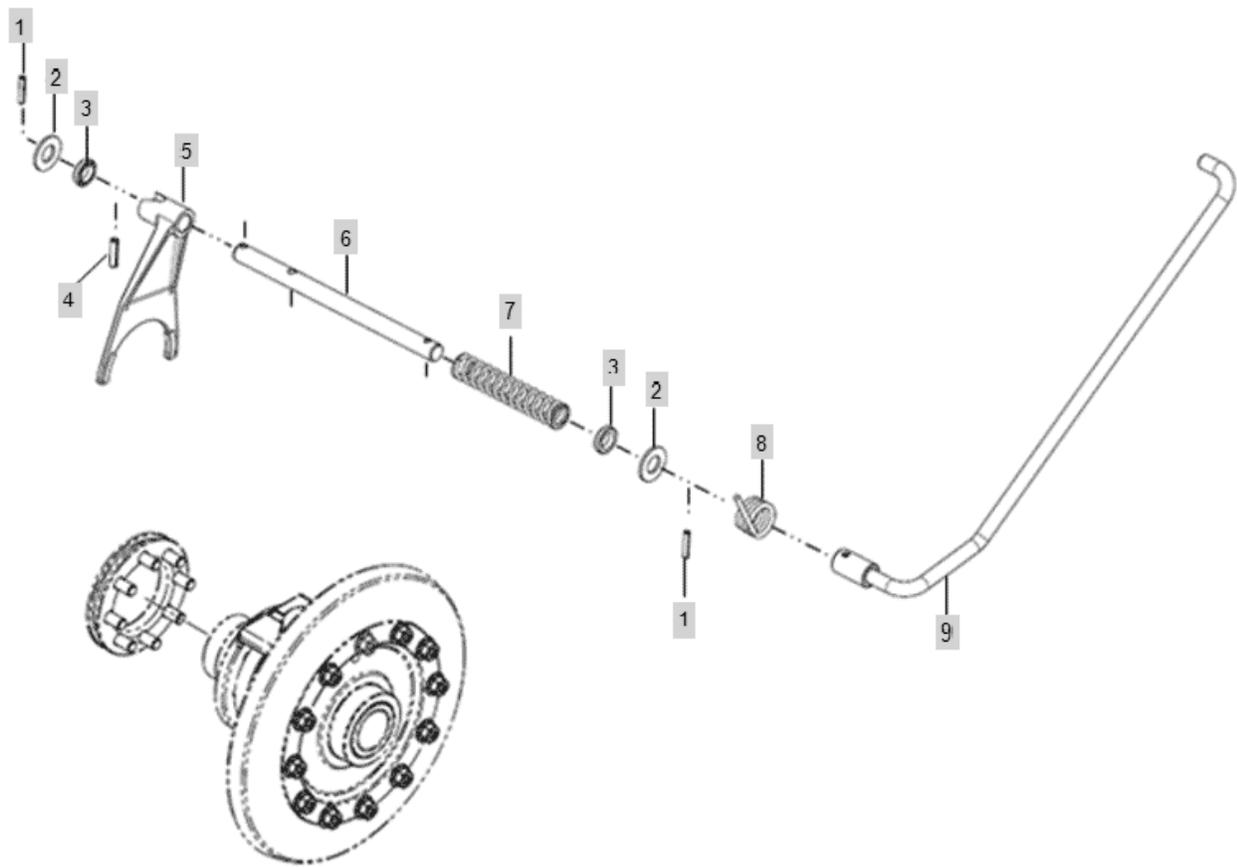




FIG T024

Branson 7845RP(US)

PTO SHIFT LEVER)

Year/Month

2020/02

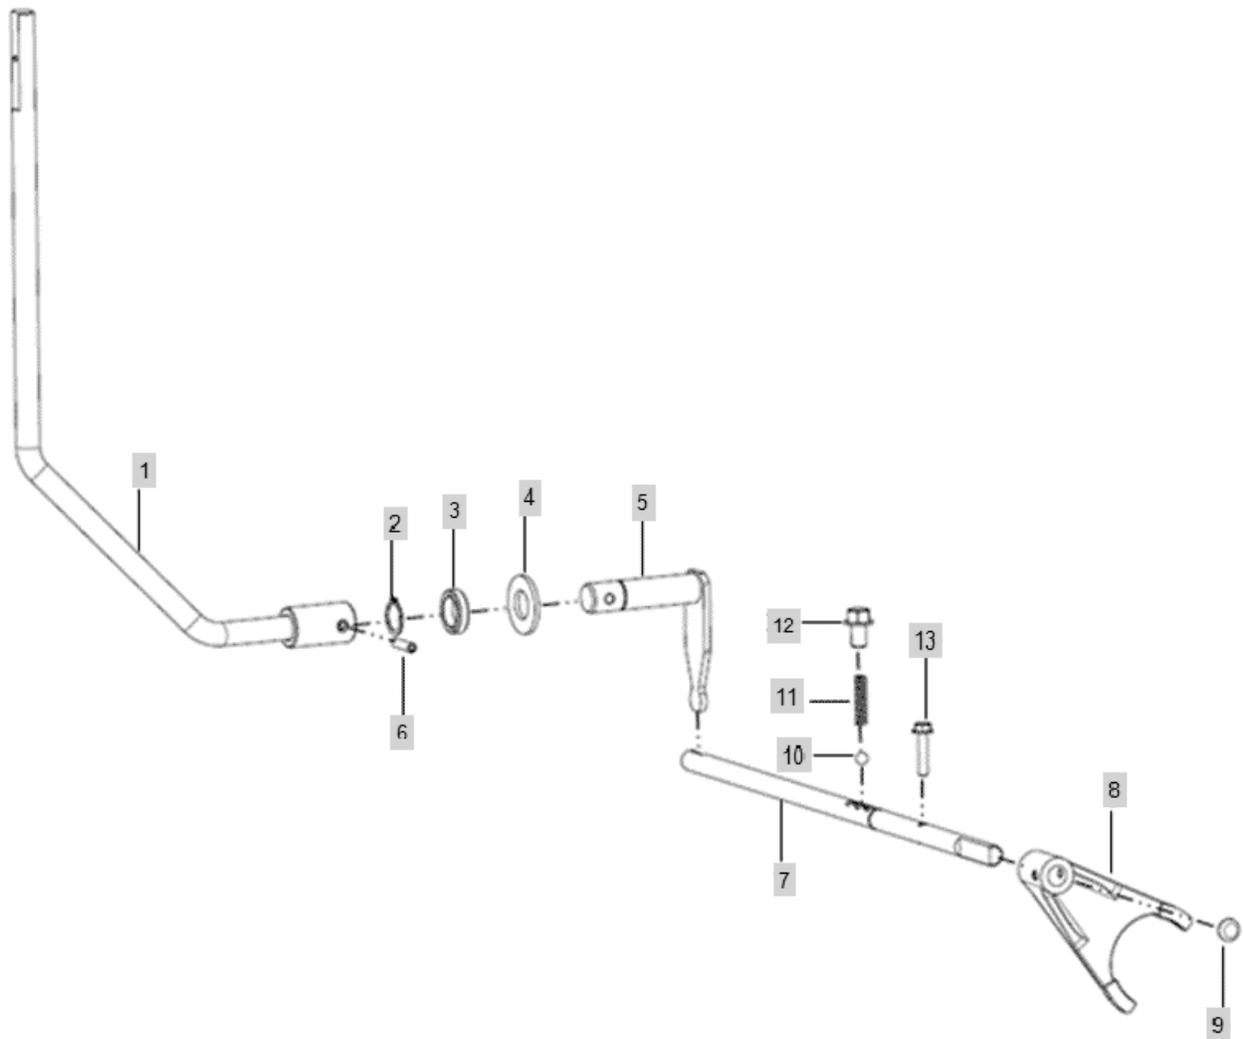




FIG T025

Branson 7845RP(US)

CASE ASS'Y

Year/Month

2020/02

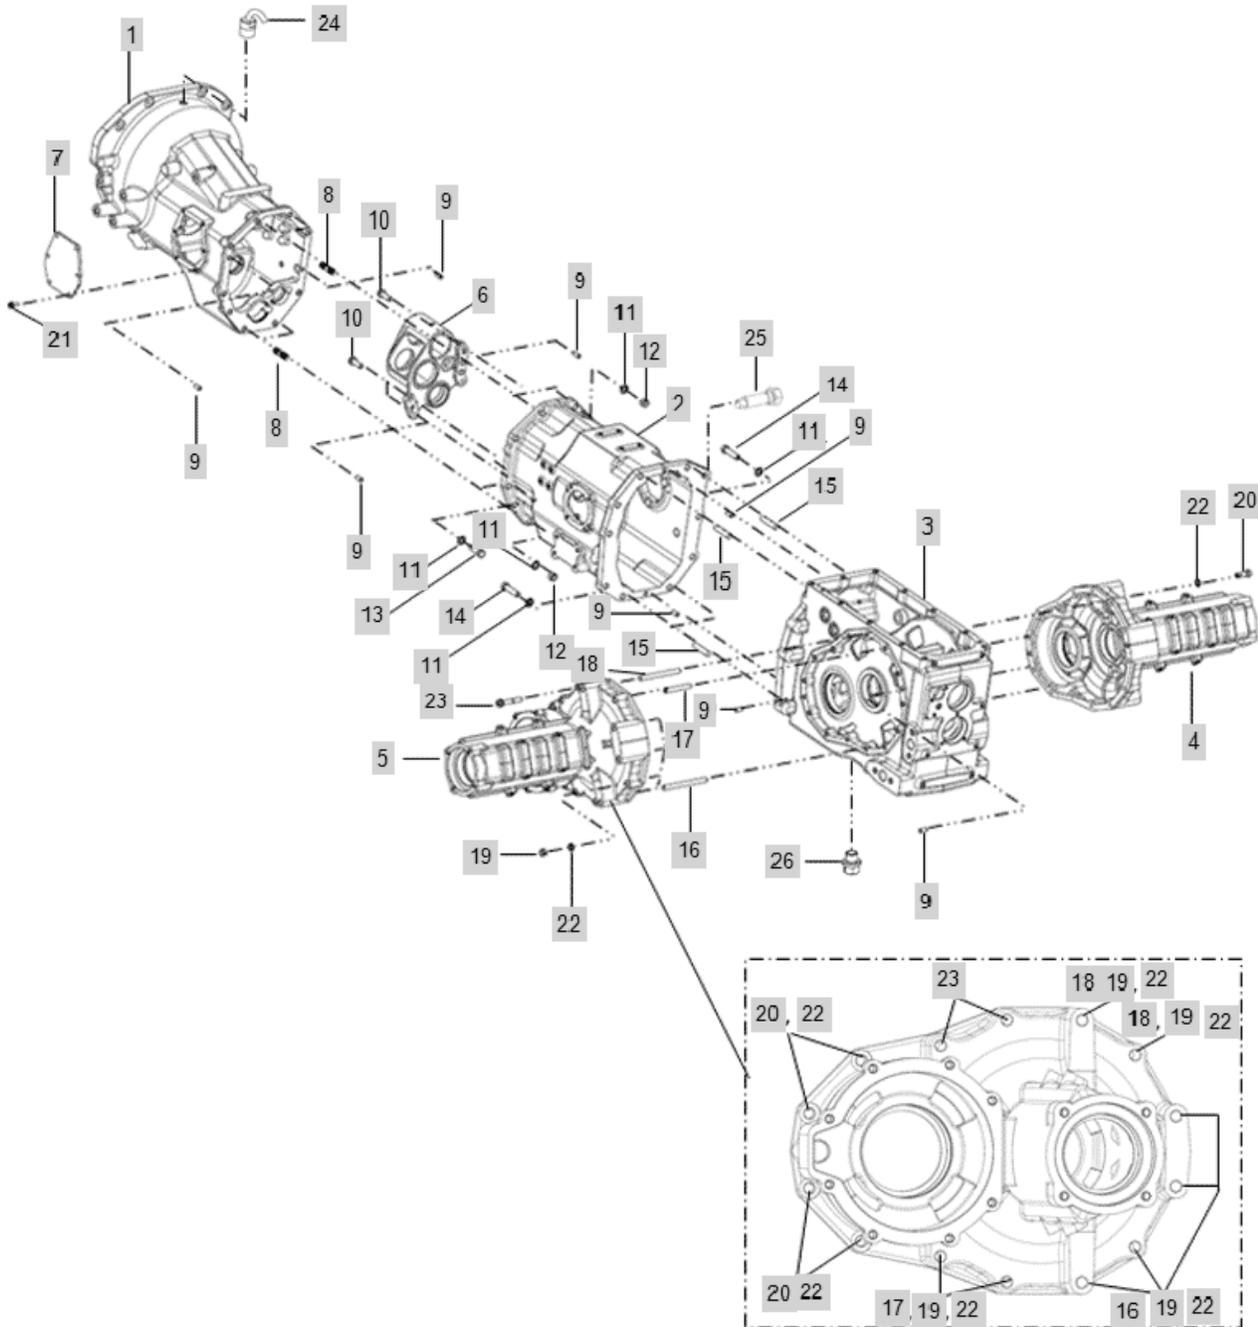




FIG T026

HYDRAULIC ASS'Y RELATION

Year/Month

Branson 7845RP(US)

2020/02

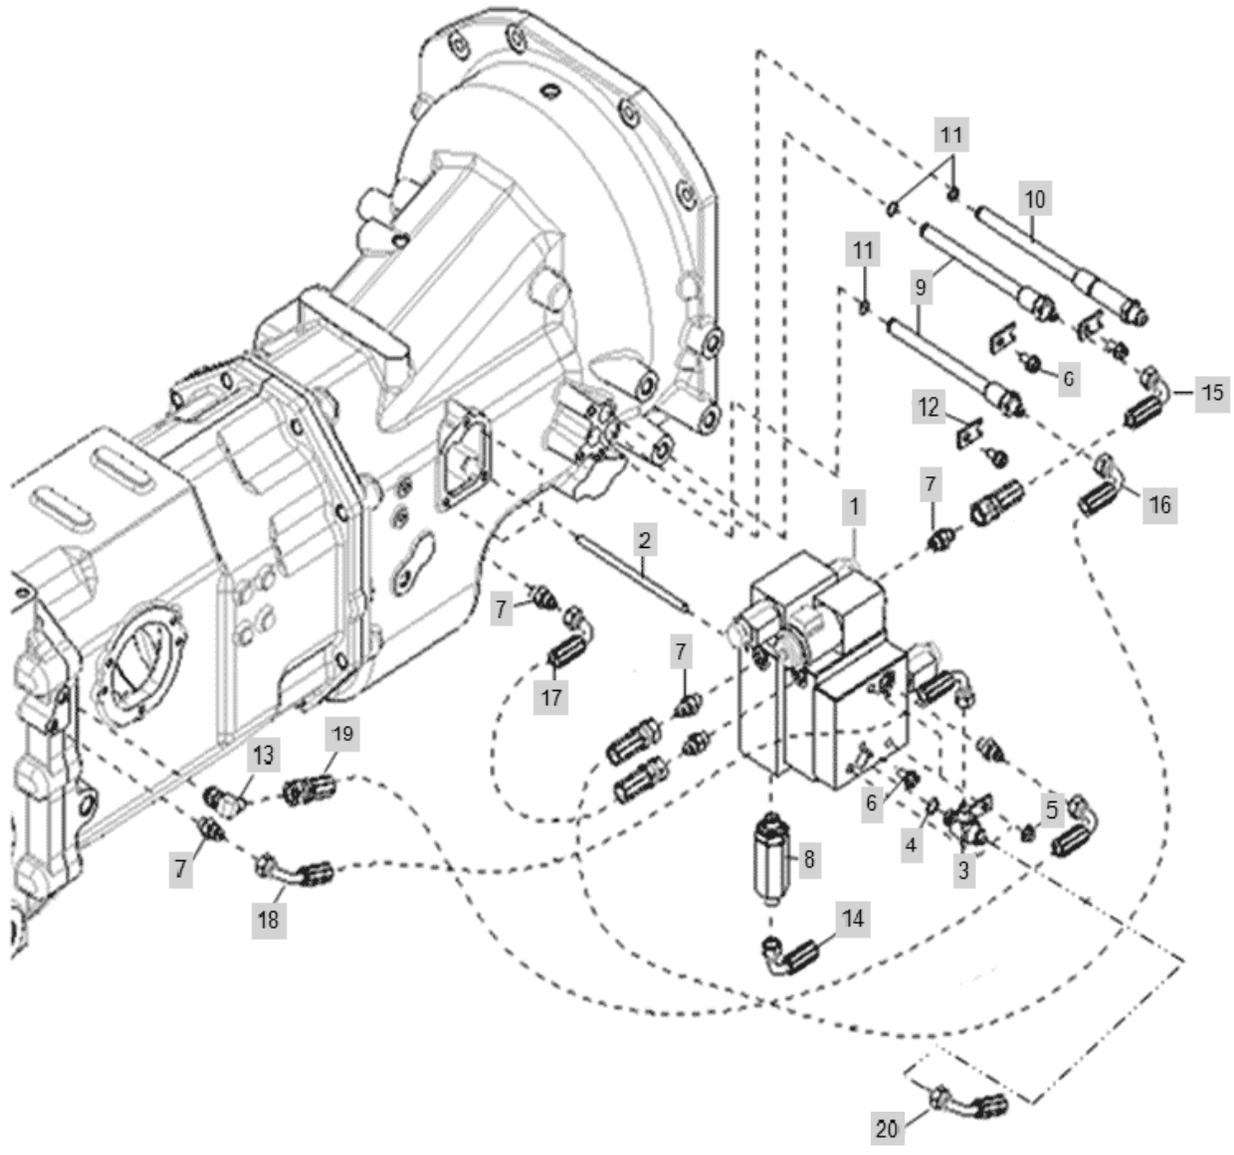




FIG T027

Branson 7845RP(US)

P-D LEVER ASS'Y RELATION

Year/Month

2020/02

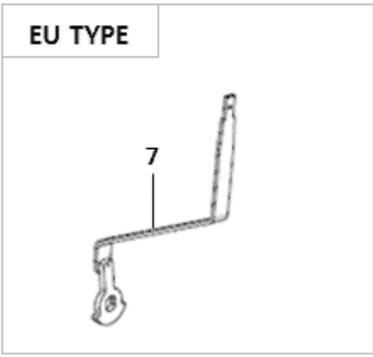
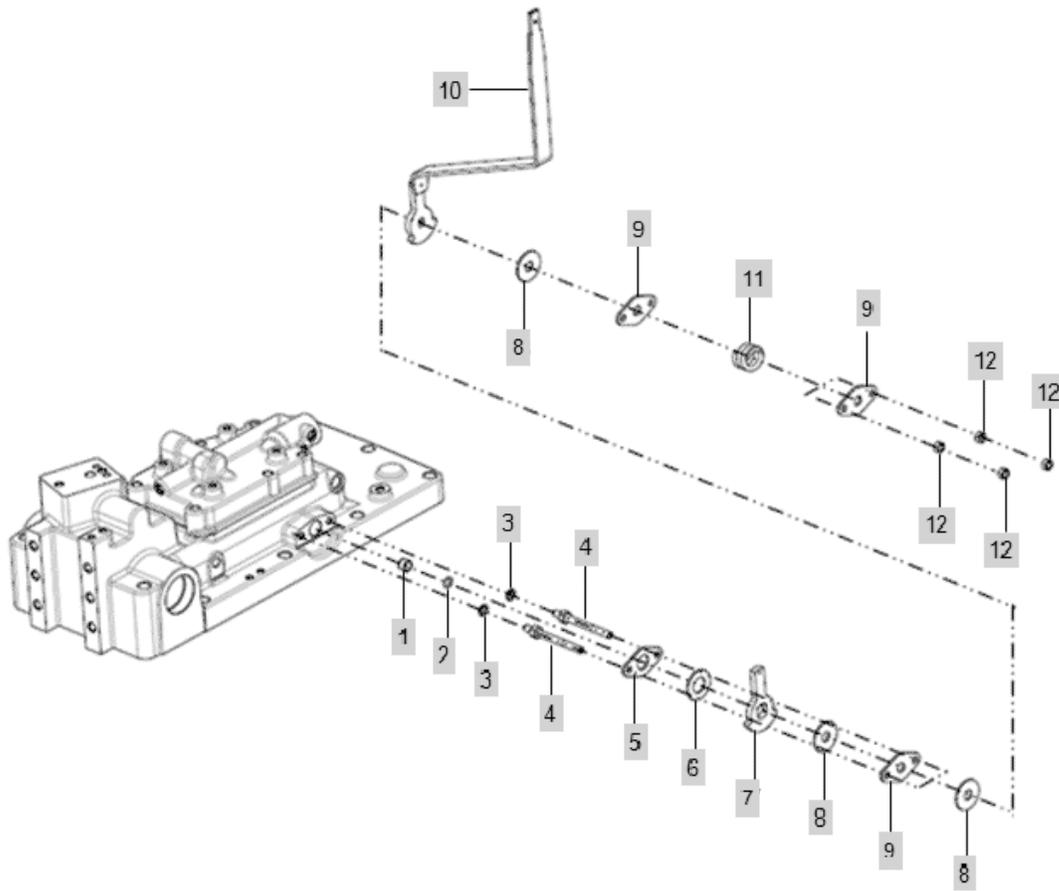




FIG T028

POSITION, DRAFT CONTROL ROD RELATION

Year/Month

Branson 7845RP(US)

2020/02

