


## Step 5. Remove temporary screws to allow gate to swing open

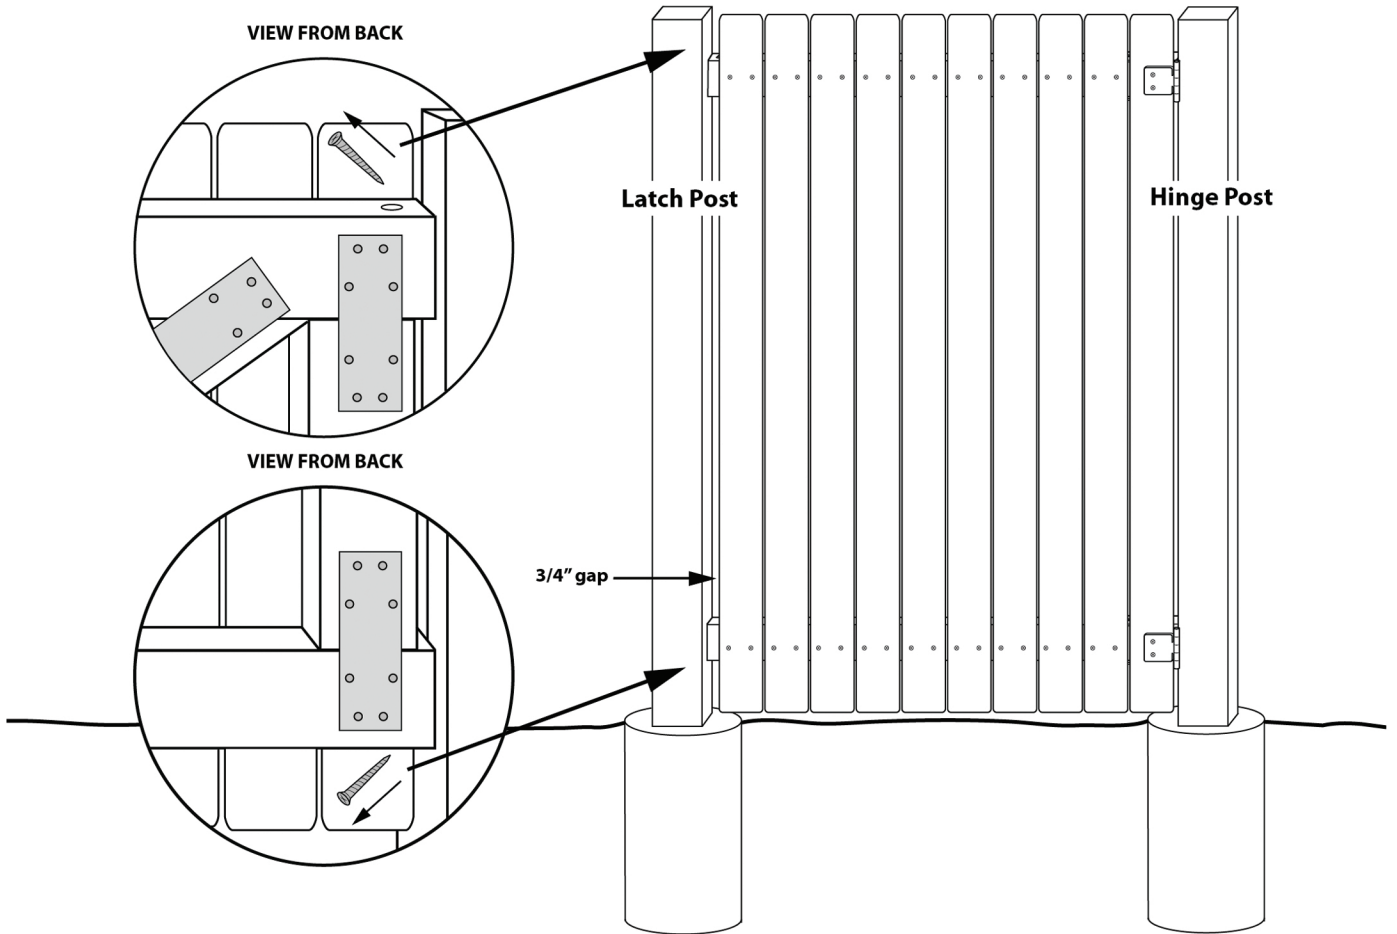

## To install double gate

