 
 


THERMOSTAT QUICK GUIDE


This is intended as a quick guide, but if you have any difficulty following these instructions and would like further help, please call the estate office on 0207 633 0255 - staff will be happy to help.

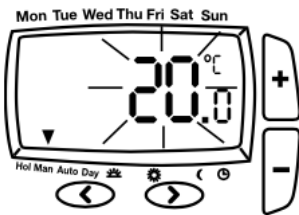

The room thermostat controls the temperature in your flat throughout the day and night. It does not have an on/off switch, but is fitted with a realtime clock. You never have to alter the time settings.

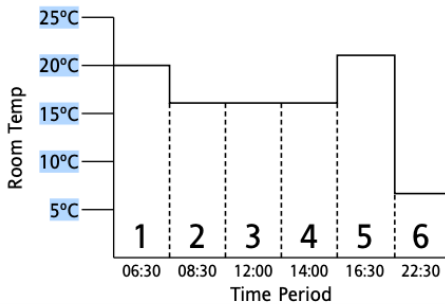


The standard programme on your thermostat is set for the temperature to rise to 20C at 6:30 in the morning, drop to 16C between 9am and 4:30pm, rise to 21C from 4:30pm to 10:30pm, then drop down overnight.

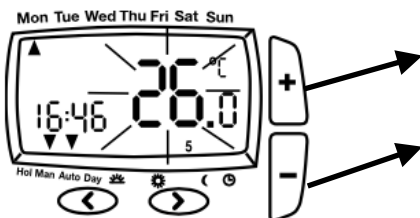


You can raise or lower these pre-set temperatures at any time simply by pressing the + or - buttons to the right of the temperature display. The temperature you select will flash for 5 seconds, then show the actual room temperature. Your new temperature will be maintained until the next period in the programme, when it will revert to the factory settings. You can then change the programmed temperature again in the same way.


You can also change the pre-set programme if the pre-set temperatures of the standard one don't suit you (perhaps you are generally at home during the day and would prefer it warmer then). To change the pre-set temperatures, complete the following steps:

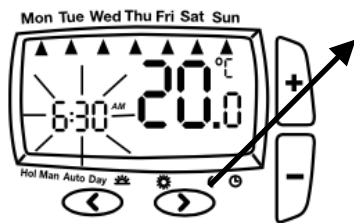


1. Press this arrow twice. The time will flash. Press the arrow again to confirm this is the time period you're changing the temperature for.

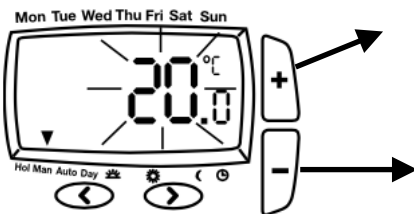


2. Now the temperature will flash. Press the + or - buttons to get to the temperature you want. When you've done this, press the arrow again to confirm.

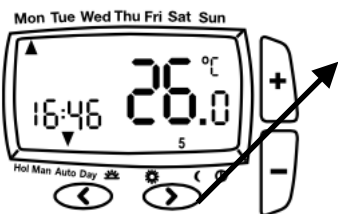

3. You can repeat these steps to change the temperature for the other periods in the day. When you have finished, press the arrow again until the thermostat is showing auto mode

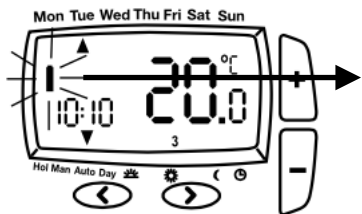

The thermostat is battery operated. When the battery is running low, the battery icon will flash. When the batteries have completely run down, the thermostat will not work or display anything. The thermostat uses 2 x AA (1.5 v) batteries.

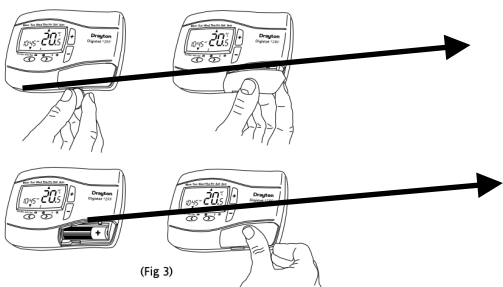

(Fig 3)

You can replace these by removing the battery cover with a coin.

Make sure the new batteries are facing the right way.

Replace the battery cover securely.