

# Securam Electronic Lock Changing Instructions

(Change combination with safe door open)

1. Enter "0" six times. Two beeps will sound to indicate the entry is valid and it is awaiting the code change
2. Enter the current six digit code. Two beeps will sound to indicate that it is valid.
3. Enter new six digit code one time, one beep will sound to indicate the entry is valid
4. Re-enter the new six digit code, one beep will sound indicating the codes entered in steps 3 and 4 are the same and the code changing has been successful. If three beeps sound, the code change process has failed.
5. If code change is unsuccessful, the existing code will still be valid, go back and repeat steps 1-3
6. Questions or problems call us 989-879-5477 or email: [sales@ablesafe.com](mailto:sales@ablesafe.com)

