

S&G Electronic Lock Changing Instructions

(Change combination with safe door open)

1. Enter 22 *
2. Then enter the current code followed by the “#”
 - a. Five beeps will sound to indicate the entry
3. Enter new six digit code followed by the “#”
 - a. Three beeps will sound to indicate the code is valid.
4. Enter new six digit code followed by the “#”
 - a. Three beeps will sound to indicate that it is valid and the change was successful.
 - b. If there are not three beeps then the change was unsuccessful and the original code is still valid.
5. Try the original code to make sure it works, then you can restart the process.
6. If everything is successful, you can enter your new code followed by the “#” and it will unlock your safe.
7. Questions or problems call us 989-879-5477 or email: sales@ablesafe.com

