



1. Connect Power Cable & Ground Cable



Warning: Ensure that the battery power switch is off



Note: Each battery should be connected to a Bus Bar when installing multiple batteries.

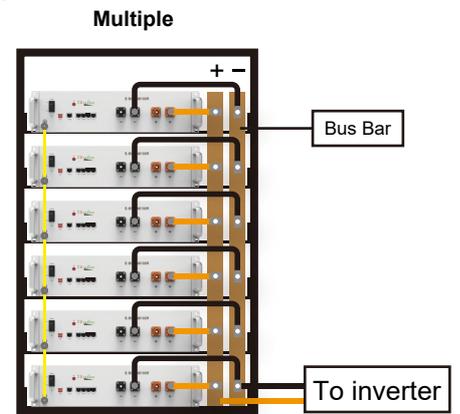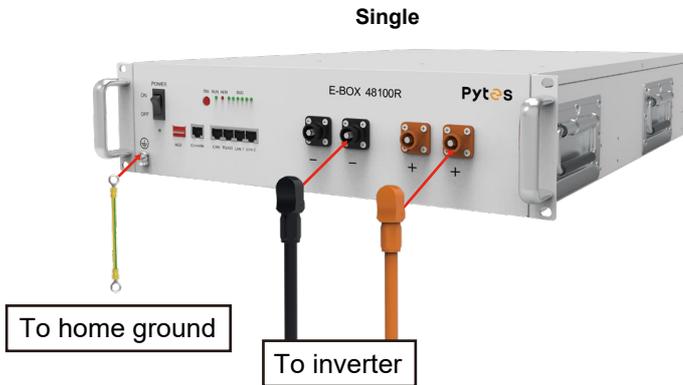



2. Connect Communication Cable



Note: Select CAN or RS485 port based on the communication type of inverter.



Note: Please connect the master battery and the inverter.

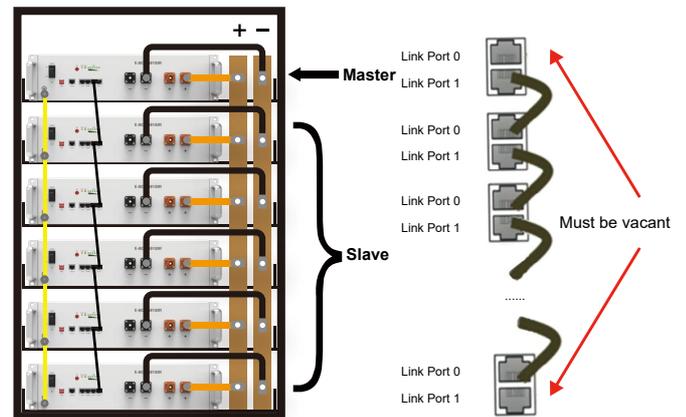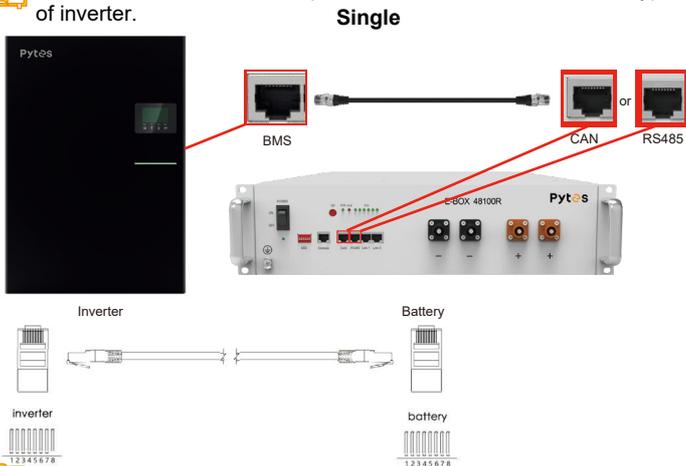

Note: Please refer to installation manual for custom comm cable making

3. Set the DIP Switch

Single



Note: Set the DIP switch based on the inverter you installed.

Multiple




Note: Only the DIP switch of master battery need to be set.



Compatibility list

Victron		Deye		Afore		Solis	
Volttronic		sol-ark		SRNE		Empty	
Goodwe		Studer		SMT		SMA	
Megarevo		KeLong		Empty		Luxpower	
		Growatt					



Graphic: The black part is the lever.

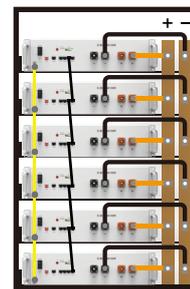

4. Start up the System



Note: Make sure the connection to the inverter is correct before starting the battery.

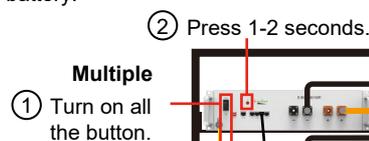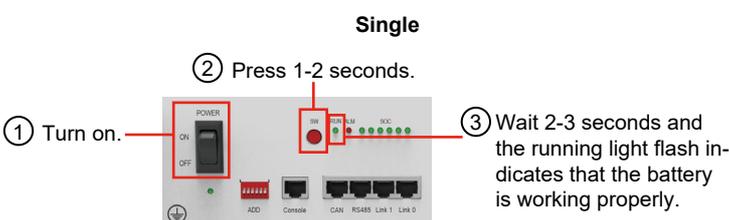

3. Wait a few seconds and the batteries will automatical turn on one by one, until all the running lights flash, indicating that the batteries are working properly.



Scan to view the user manual